 
 




Appendix B. Internal Photographs of EUT





Power ON	Press 	Power LED flashes green
Power OFF	Hold  for 3 secs	All LEDs OFF
Self-Geofence ON/OFF	Press I once	Power LED flash 2/3sec.
Monitor mode ON/OFF	Hold II for 2 secs	Power LED flash 2 orange 1 green
Taxi mode ON/OFF	Press II twice quickly	Power LED flash 3/3sec.
Send SOS	Hold I for 2 secs	Power LED flashes 3 times
Send Help	Hold III for 2 secs	Power LED flashes 5 times
Dial Tel #1	Press III then I	Incoming/outgoing call: Power LED flashes orange;
Dial Tel #2	Press III then II	Call in progress: Power LED is orange.
Dial Tel #3	Press III then III	
Answer call	Press I	
Hang up	Press II	Power LED reverts to normal mode
Vibrate; Ring; Both	Press + for 2 secs	
Change ring sound	Press - for 2 secs	
Power LED : Green = normal; red = Low Batt		
GPRS LED : Flashing = has signal; OFF=no GPRS; ON=GSM		
GPS LED : OFF=no signal; ON=GPS signal; flashing=searching		





