


4180075TI MANUAL

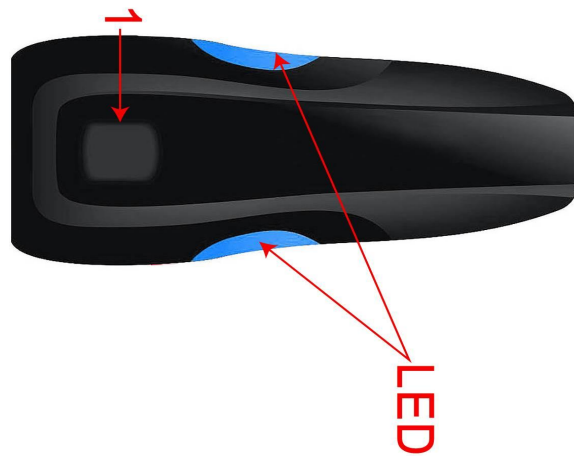

1. Antenna Model : 4180075TI
2. Technology: SST 2-WAY
3. Max Range : 1800M
4. LED : status indication
5. Button: setup key
- 6 Connect to Host (To plug Weblink or RF-Decoder/Antenna)

pin1- Rx (Data from antenna, 0-5 Volts)

pin2- Tx (Data from Host, 0-5 Volts)

pin3- GND (Ground from Host)

pin4- 12V (Power from Host, 12V)

The Control Center, typically located on the upper part of the front windshield. It consists of:

The In-vehicle system antenna.

The Status LED, as a visual indicator of the system's status.

The Control button, for placing the system into Valet Mode and to perform the Emergency Override operation.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 25cm between the radiator and any part of your body.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.