MC9000ex – Series Mobile Computer MC92NOex RuBee



1. Table of contents

1.	TABLE OF CONTENTS		2
2.	ASSEMBLY BOTTOM HOUSING		3
	2.1 2.2		
3.		LLATION RUBEE READER EXTERNAL (BRICK/GUN)	

2. Assembly bottom housing

2.1 RFID/RuBee external Brick

1)	Drill 7 holes (1,0mm) and 4 holes (5,5mm) with the fixture in the lower housing. Press 4 inserts into the big holes.
2)	Lead the 7 wires (each with different colour) through the drillings. (LiY 0.08mm², d _{iso} > 0.2mm)
3)	Fill the RFID upper housing with Sikaflex as shown in the picture.
4)	Insert the pin with the hand strap into the recess. Fix the pin with UV glue.
5)	Fix the RFID lower housing with 4 screws and 4 washers with the top housing of the mobile computer.


6)	Seal the screw heads and the wire openings with Sikaflex.
7)	Seal accomplished wires and inserts with Sikaflex.

2.2 RFID/RuBee external Gun

1)	Drill 7 holes (1,0mm) and 4 holes (5,5mm) with the fixture in the lower housing. Press 4 inserts into the big holes.
2)	Lead the 7 wires (each with different colour) through the drillings. (LiY 0.08mm ² , d _{iso} > 0.2mm)
3)	Fill the RFID upper housing with Sikaflex as shown in the picture.

4)	Fix the RFID lower housing with 4 screws and 4 washers with the top housing of the mobile computer.
5)	Seal the screw heads and the wire openings with Sikaflex.
6)	Seal accomplished wires and inserts with Sikaflex.

3. Installation RuBee Reader external (Brick/Gun)

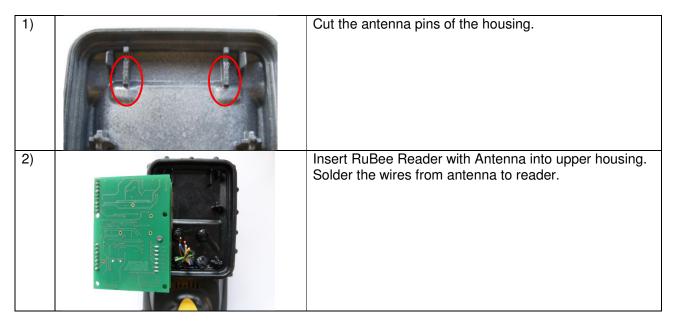

BARTEC

3)	Solder appropriate wires on RuBee Reader as shown in the picture and fix them with UV glue.
4)	Position the reader on the according 4 pins and glue with UV glue.
5)	Apply Sikaflex in the sealing area of the housing.
6)	Put the RFID/RuBee lower housing on the upper housing and press them together.
7)	Fill the resin into the RFID/RuBee housing (without empty space) and apply the opening of the lower housing with Sikaflex.



Lock the opening with the according cover.