

**Need more help
getting started?**

go.roku.com/rthelp



Video
tutorials




Wireless
help

**Stay up to date
with Roku**

blog.roku.com



Roku Blog

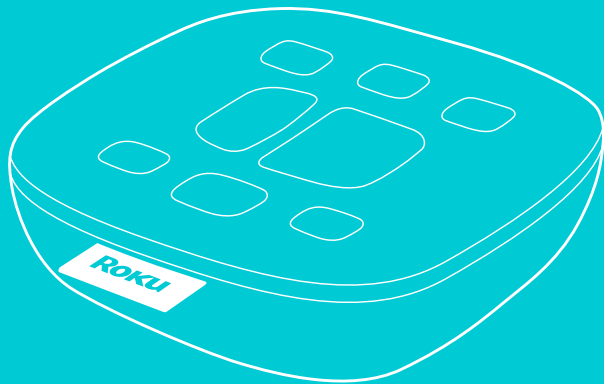

ROKU

© 2018 Roku, Inc. All rights reserved. ROKU, ROKU TOUCH and the ROKU logo are the trademarks or registered trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective owners.



ROKU Touch™
Quick Start Guide

Meet your new Roku Touch

Top view



Pair - Press to pair to your Roku device.

Microphone button - Press and hold while saying a command.

1

2


Programmable presets

 
To set: Give a command using the microphone button. Then, press and hold a preset button until you hear a tone.

To use a saved command: Press the button once.



1. Prepare to pair

- Turn on your Roku TV™.
- Using your existing remote, press and hold  for 5 seconds to get to the pairing menu.
- Select **Remote**.

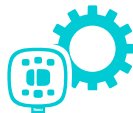

2. Set it up

- Insert the batteries into your Roku Touch.
- Press and hold the pair button for 5 seconds.
- The TV will automatically begin pairing.



3. Enjoy your Roku Touch tabletop remote!

Pairing to a Roku player? Visit go.roku.com/rt to learn more.

Roku Touch™ (“Remote”)

Important Product Information Safety Precautions/ Use & Handling

The Remote which accompanies this Important Product Information is compatible with Roku TVs that are running Roku® Operating System 8.2 or higher. Current generation Roku players may also be compatible. For a list of current compatible TVs and players and their specific applicable features, visit go.roku.com/rtdevices.

To help ensure safe and enjoyable operation of the Remote, please follow these guidelines:

- Observe all warnings, precautions and instructions.
- Keep the Remote out of the reach of small children.
- Do not allow liquid, small particles or other foreign objects to get into the Remote.
- Do not expose the Remote to liquid, smoke or steam.
- Do not expose the Remote to high temperatures, high humidity or direct sunlight.
- Do not place the Remote on the floor or in a place where they may cause someone to trip or stumble.
- For more information on product safety and troubleshooting, please go to www.roku.com/support.

Important Tips About Battery Handling

Replacing batteries: Always replace dead batteries with two brand-new batteries from the same battery manufacturer. Never use damaged batteries.

Disposal of batteries: Always dispose of batteries following federal guidelines or local ordinances. Do not dispose of used batteries in an open fire.

Warning Signs: If your Remote gets warm/hot during use, discontinue use and contact Roku Customer Support immediately at www.roku.com/support. There is a risk of explosion if a battery is replaced by an incorrect type.

Limited Warranty & Warranty Service Process

For any Remote purchased and delivered to end users in the US, go to www.roku.com/support for the warranty terms and conditions. You may also request a copy of such terms by mail by contacting us at 150 Winchester Circle, Los Gatos, CA 95032.

Additional Legal Notices

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by Roku, Inc. could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

www.roku.com/support



4100000489_2