

Everex Communications, Inc


WR-11 User's Manual:

WR-11 is a 2.4Ghz wireless transceiver which is used by an Air Conditioning/Heating (AC/Heating) unit to communicate with wireless based thermostat and occupancy sensor. WR-11 should be mounted the vertical metal wall of the AC/Heating unit and connected to the AC/Heating controller board via a 4 wire cable.

Installation

With one end of the 4 wire cable plugged into the connector inside WR-11, mount WR-11 on the side of the AC/Heating unit metal bracket with 2 screws. Plug in the other end of the cable into the connector on the AC/Heating controller board. Please refer to the picture below.

WR-11

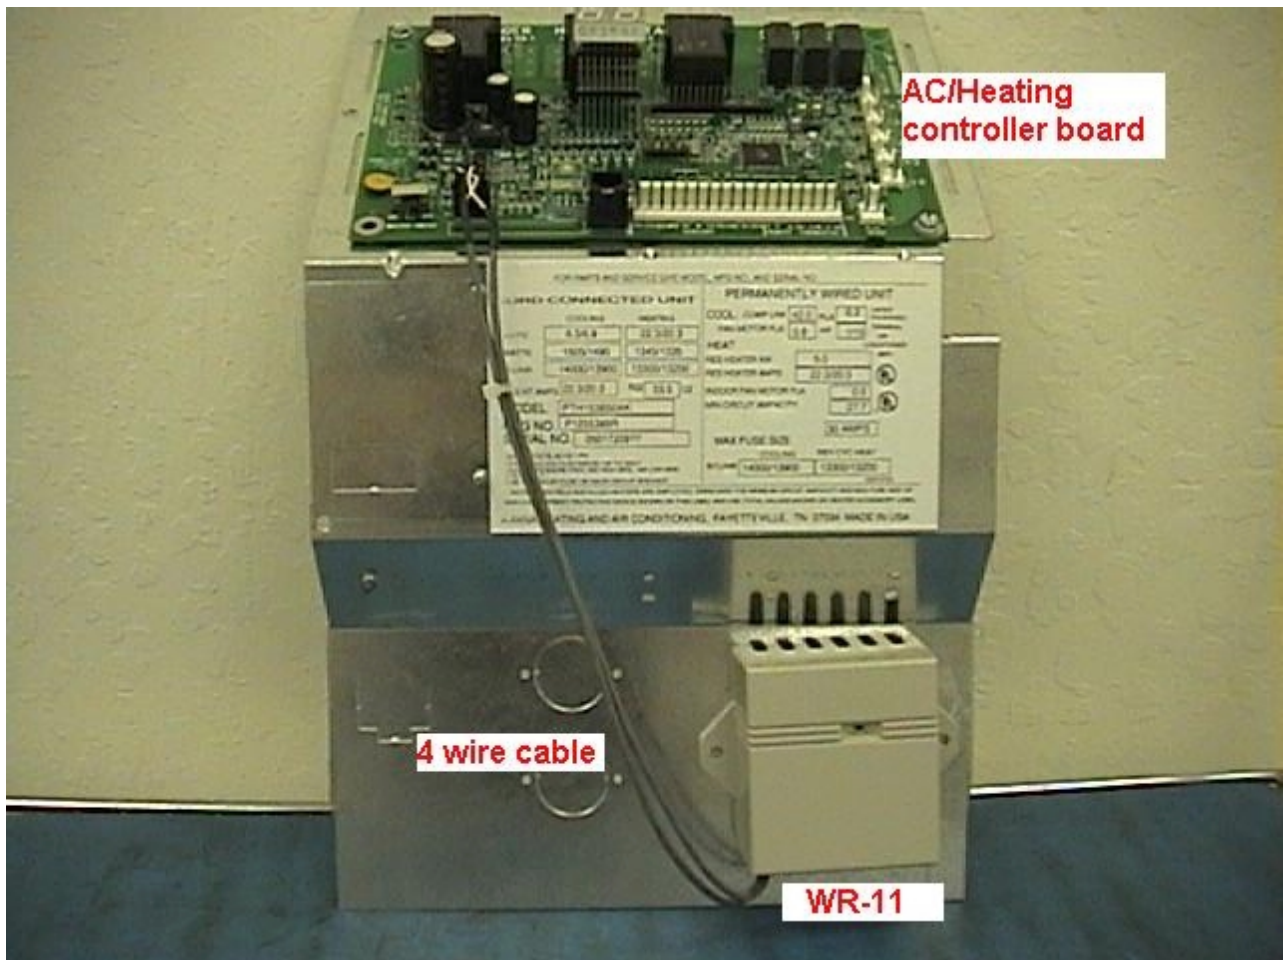

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-

Caution: This equipment is authorized for use under the United States Federal Communication Commission Rules and Regulations, Code of Federal Regulations Chapter 47 part 15 and must be installed in accordance with the instructions provided in this document. Failure to install or operate this equipment as instructed in this document could void the user's authority to operate the equipment. This equipment contains no user serviceable parts. Any modification or repairs to the internal components or to the antenna configuration of the equipment without the express written consent of Everex Communications, Inc. could void the user's authority to operate the equipment.

Note: To comply with FCC RF exposure requirements in section 1.1307, a minimum separation distance of 20cm (8 inches) is required between the equipment and all persons.

Copyright © 2005 Everex Communications, Inc.

Everex Communications, Inc. reserves the right to change the content of this user's manual without notification