
External Photograph

(1) EUT Photo (TS890G with Battery(Optional))

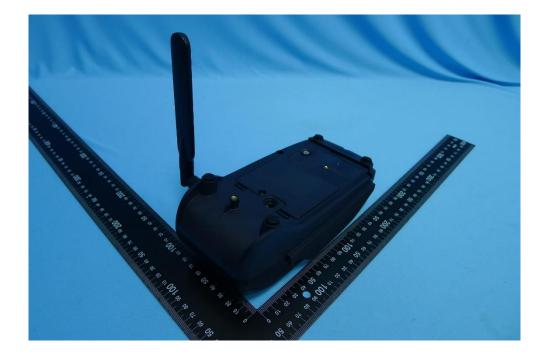

(2) EUT Photo (TS890G with Battery(Optional))



(3) EUT Photo (TS890G with Battery(Optional))



(4) EUT Photo (TS890G with Battery(Optional))



(5) EUT Photo (TS890G with Battery(Optional))



(6) EUT Photo (TS890G with Battery(Optional))



(7) EUT Photo (TS890G with Battery(Optional))



(8) EUT Photo (TS890G with Battery(Optional))



(9) EUT Photo (TS890G without Battery)



(10) EUT Photo (TS890G without Battery)



(11) EUT Photo (TS890G without Battery)




(12) EUT Photo (TS890G without Battery)



(13) EUT Photo (TS890G without Battery)



(14) Adapter (BA048-090500MCX)

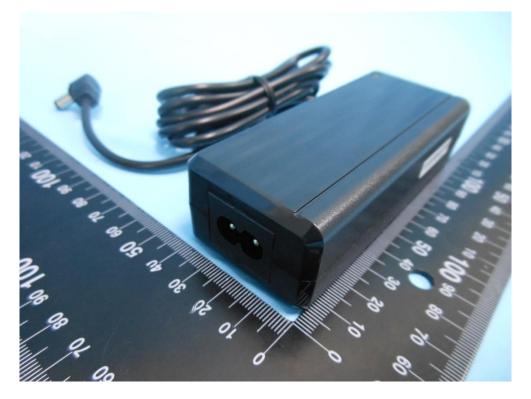

(15) Adapter (BA048-090500MCX)



(16) Adapter (BA048-090500MCX)



(17) Adapter (PA 1065-090T2B600)



(18) Adapter (PA 1065-090T2B600)



(19) Adapter (PA 1065-090T2B600)



(20) Adapter (PA 1065-090T2B600)

