



H40

说明书成品尺寸：73X93mm128铜版纸覆哑膜钢琴折

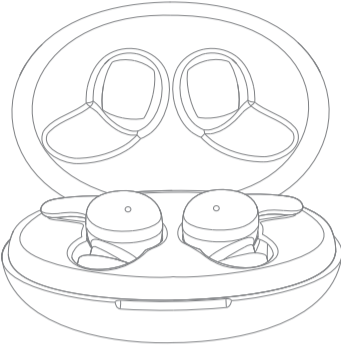


H40
TRUE WIRELESS EARBUDS
Instruction Manual


Packing list




Earphone x 2 (with M size eartips & earfins)




Charging CaseX1



USB-C Charging CableX1



Eartips (S size)



Manual

Tips

- Except for the operation methods specifically marked in the manual, please do not try to disassemble or replace any parts in the earbuds.
- Don't put the earbuds in the water or any others liquid. These earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect and remove the connection immediately.
- Please make sure that there is no water on your hands when installing or uninstalling the product to avoid electric shock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Earphones specifications

Bluetooth version : V5.3
Transmission distance : 10M
Music time : About 5 hours
Horn size : φ6mm
Charging time : 1.5 hours
Battery capacity : 30mAh
Rated input : 5V=30mA

Charging case specifications


Battery capacity : 230mAh
Charging time: 1.5 hours
Battery voltage: 3.7V
Rated input: 5V=300mA
(All technical information is subject to actual performance)

Charge the Earphones

- When the battery of the earphones is too low, the earphones will broadcast a reminder of low battery every minute until the earphone shuts down (Voice prompt: "Battery low"), in this case please charge the earphone in time.
- When the charging case has sufficient charge, put the earphones back into the charging case; the earphones will enter the charging state, the white light of the earphones will turn on. Then the earphones will be full charged about 1.5 hours later, and the white light of the earphone will turn off.

Charge the Charging Case

Use the included USB-C cable to charge the charging case, which will take about 1.5 hours to complete.




LED Indicator

LED Indicator of the charging case


LED Indicator	
Charging with USB-C cable	The charging case flashes red light—in charging
	The charging case red light stays on—fully charged
When put the earphones back into the charging case, the charging case indicator will remind its battery	The charging case white light stays on for 4s and goes off—have charge
	The charging case white light flashes for 4s and goes off—out of charge

Operation Instructions

- Power on**
Method 1: Take both earphones out from the charging case, it will be power on automatically.
Method 2: Long press the left and right earphones touch button for 2 seconds. (Voice prompt: "Power on")
Note: The earphones will shut down automatically when they are either not connected or not in use for 5 minutes.
- Power off**
Method 1: Put both earphones back into the charging case, it will enter charging status and shut down automatically after fully charged.
Method 2: Long press either earphone touch button for 5 seconds, then both the left and right earphones will be turned off at the same time. (Voice prompt: "Power off")
- Pairing**
Step 1: Take out both earphones from the charging case, the earphones will power on and enter pairing mode automatically. (Voice prompt: "Pairing")
Step 2: At this time turn on the Bluetooth function of your device and search for "H40". Then press "pair", the earphones will connect to your device successfully. (Voice prompt: "Connected")



Connection succeeded:
Voice prompt: "connected"



Touch operation

- General mode**
 - Voice assistant: Triple click any earphone touch button
 - Volume up: Single click the right earphone touch button
 - Volume down: Single click the left earphone touch button
 - Switch connected device: Press and hold any earphone touch button for 3 seconds until you hear "du-du du" and release
- Music**
 - Play/Pause: Press and hold any earphone touch button 2 seconds until you hear "du" and release
 - Last song: Double click left earphone touch button
 - Next song: Double click right earphone touch button
- Call mode**
 - Answer a call: Double click any earphone touch button
 - End a call: Double click any earphone touch button
 - Reject a call: Press and hold any earphone touch button for 1.5 seconds

LED Indicator of the Earphones

Power On	The white light stays on for 2 seconds
Power Off	The white light stays on for 2 seconds and then goes off
Pairing	The white light of one earphone flashes quickly and the other one flashes once every 5 seconds
Connected	The white light goes off


WARRANTY CARD

The warranty covers your Bluetooth product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with Bluetooth product.

For further information on product replacement/ refund related queries, please refer to the terms and conditions mentioned in our service hotline: +86-755-2747 2066.



CERTIFICATE
PRODUCTION DATE: 2023-04
INSPECTOR: QC PASSED 02

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.