

# Quick Start Guide

## Multimedia Novel 7”

ANDROID™ Multimedia Tablet & Color eReader



v1.9



---

## Package Contents

- 7" Color Multimedia Novel
- Power Adapter
- Tabletop Stand
- USB Cable
- Quick Start Guide
- User Guide (*loaded in device*)


---

## Device Overview



---

## eReader User Guide

The complete eReader User Guide is loaded in the device. To open it, tap the **BN** application icon → tap on the **eReader**  cover in **My Novel** Library.

### Print the eReader User Guide

If you want to print the eReader User Guide, you need to use **Adobe Digital Editions** (ADE) software.

1. Register a free Adobe account, from the Adobe website: [www.adobe.com/cfusion/membership](http://www.adobe.com/cfusion/membership).
2. Go to [www.adobe.com/products/digitaleditions](http://www.adobe.com/products/digitaleditions) to download **Adobe Digital Editions** (ADE) software to your computer.
3. Follow the prompts to install the ADE software and activate the software with your computer.
4. Activate your device by connecting it to your computer via the USB cable.
5. Wait until ADE detects your device and displays the **Device Setup Assistant**.
6. Click **Authorize Device** → **Finished**.
7. Double-click on the device titled **PD\_Novel**.
8. Double-click on the **eReader User Guide** file to open it in ADE.
9. At the top of the application window, click **READING** → **Print**.



---

## Getting Started

- \* If you tap an application icon or a function button multiple times without waiting for the process to finish, a message may appear stating the application is busy now. Select **Force close** to stop the process, or select **Wait** to allow the process to finish.

### 1 Charge the Device

- \* You cannot charge the device using the USB cable.
- \* You can use the device while the battery is charging.

Plug the power adapter into an electrical wall outlet, and then connect to your device to fully charge the battery before use (*approx. 4 hours*). When fully charged, the battery icon displays as: . While charging, the battery icon displays as: .

## 2 Turn the Device On


Slide the power button and release to turn on.

## 3 Set language



Select your desired language.

## 4 Set Date & Time

**IMPORTANT** - In order to connect with your Barnes & Noble online account or to set up your Email account, the **Date and Time** must be set correctly according to your location.





- 1 Tap **Select time zone** → select the correct time zone for your location (*finger slide vertically to scroll the list*). The date and time should automatically update to the correct setting, but if they do not, tap **Set date** and/or **Set time** to update accordingly.
- 2 Tap  to display the **Home** screen.




## 5 Calibrate the Screen Sensors

- 1 Tap  to display the **Applications** screen →  **Settings** application icon.
- 2 Tap **Sound and Display** → **Touch Calibrate**.
- 3 The screen displays a blank screen with “+” in a specific location. Use a blunt pointed device to accurately tap the “+” in the designated spot.
- 4 Repeat in 3 more screens that appear.
- 5 If successful, continue to **Wi-Fi Network Setup**. Otherwise repeat the calibration.

## 6 Set up Wi-Fi Network


Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

- 1 Tap the  **Wi-Fi Settings** application icon.
- 2 Make sure **Wi-Fi** is selected .  
The device automatically scans and lists all local Wi-Fi Networks found.  
A  indicates secure networks that require login name/password to connect.
- 3 Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.
- 4 Tap  to return to the **Home** screen.


- \* *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*
- \* *The Wi-Fi icon on the top of screens indicates the status as follows:  
 = Connected    = Not connected, Wi-Fi turned ON  
 = Not connected and Wi-Fi turned OFF (power saver)*
- \* *When the device goes into sleep mode, the Wi-Fi disconnects from the local network, but will automatically reconnect when out of sleep mode (may take up to 30 seconds to reconnect).*

## Connecting to Public Wi-Fi Hotspot


If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

- ❶ Follow steps 1-4 above to select the hotspot Wi-Fi network.
- ❷ Tap the  **Browser** application icon.
- ❸ Enter the hotspot login information.

# HOME Screen


















 



- ❶ Return to previous screens or close pop-up windows.
- ❷ Return to **Home** screen at any time, in any application.
- ❸ Display **Application Function Menu** (available options are based on active application).
- ❹ Notification icons (i.e., Email, SD card)
- ❺ Wi-Fi connection status  
Battery charge level status  
Alarm(s) are activated  
Current Date & Time.
- ❻ Widgets and Shortcuts can be added to the **Home** screen.
- ❼ Touch & hold in an empty spot to display the menu for adding application shortcuts, widgets, etc. (tap  to close the option pop-up window).
- ❽ Tap or finger slide up to view the **Applications** screen.




- \* Tap on any application icon to launch it.
- \* Touch, hold and slide icons to reposition them on the screen.
- \* Touch, hold and slide icons onto  to remove them.
- \* To view extensions of the **Home** screen, finger slide the screen horizontally.

# Pre-loaded Applications

Tap or finger slide up on  to access all applications.


	<b>Alarm Clock</b>	Use as alarm clock with scheduled alarms.
	<b>B&amp;N</b>	Use to shop the B&N Bookstore and to access the B&N and My Novel Libraries.
	<b>Browser</b>	Access the Internet and 'surf the web' whenever desired.
	<b>Calculator</b>	Use the calculator for basic math equations.
	<b>Calendar</b>	Display monthly calendar and schedule events.
	<b>Contacts</b>	Create a list of personal contacts, which can be linked with your email.
	<b>Dictionary</b>	Quick access to the built-in dictionary.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>ES File Explorer</b>	Use to install Android™ apps, view and manage files and apps, and to backup files to your SD card.
	<b>ES Task Manager</b>	Use ES Task Manager to kill applications after you exit them to free up resources.
	<b>Facebook</b>	Quick access to the Facebook website.
	<b>Games</b>	Play pre-loaded games for entertainment.
	<b>Music</b>	Play and manage audio files ( <i>MP3, WAV and AAC</i> ).
	<b>OfficeSuite</b>	Use to open DOC, DOCX, TXT, XLS, XLSX, CSV, PPT, PPTX, PPS, PPSX and PDF file formats.
	<b>Photos</b>	View and manage photo files ( <i>JPG, JPEG, BMP, PNG and non-animated GIF</i> ).
	<b>SAM Slide<sup>ME</sup></b>	Market offering third party Android™ applications.
	<b>Settings</b>	Multiple settings for personalizing and enhancing the device.
	<b>Stocks</b>	Check the status of specific company's stock offerings.
	<b>Video</b>	Play and manage video files ( <i>MPEG4</i> ).
	<b>Weather</b>	Check the weather forecasts of locations of your choice.
	<b>Wi-Fi Settings</b>	Quick access to set up & connect to a Wi-Fi network.

\* To move an icon to the **Home** screen, touch & hold on the icon, and then release it when it appears on the **Home** screen. Touch, hold, and then slide icons to reposition them on the screen. Touch, hold and slide icons onto  to remove them from the **Home** screen.



---

# Application Function Menu

On the **Home** screen, tap  to display the **Application Function Menu**.



## Add

Add **Shortcuts**, **Widgets** and **Folders** on your **Home** screen.

## Wallpaper

Assign a different photo as your background image.

## Search

Perform a quick Google search.

## Settings

Set multiple functions and personal preferences that affect the normal usage of the device.

\* Refer to the *eReader User Guide* for complete *Application Function Menu* instructions.


## Barnes & Noble

Use the B&N application to:


- Shop on the Barnes & Noble online store
- Buy and download books
- Buy single issues or subscriptions to newspapers and magazines
- Get free books
- Get sample books
- Support media files copied from SD cards and from computer
- Support Adobe eBooks transferred from Adobe Digital Edition
- DRM-free books downloaded from web browser
- Manage and read books

★ *Your media files must be stored in the **!eBooks** folder of the internal memory or in an **!eBooks** folder at the root of a SD card.*

★ *Media file formats supported: EPUB and PDF*

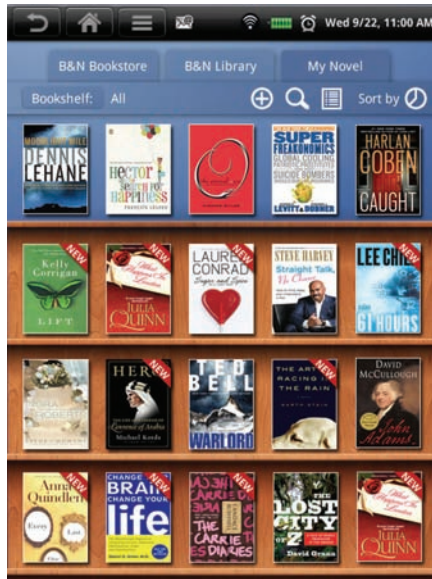

## Overview of Buying & Downloading B&N Media

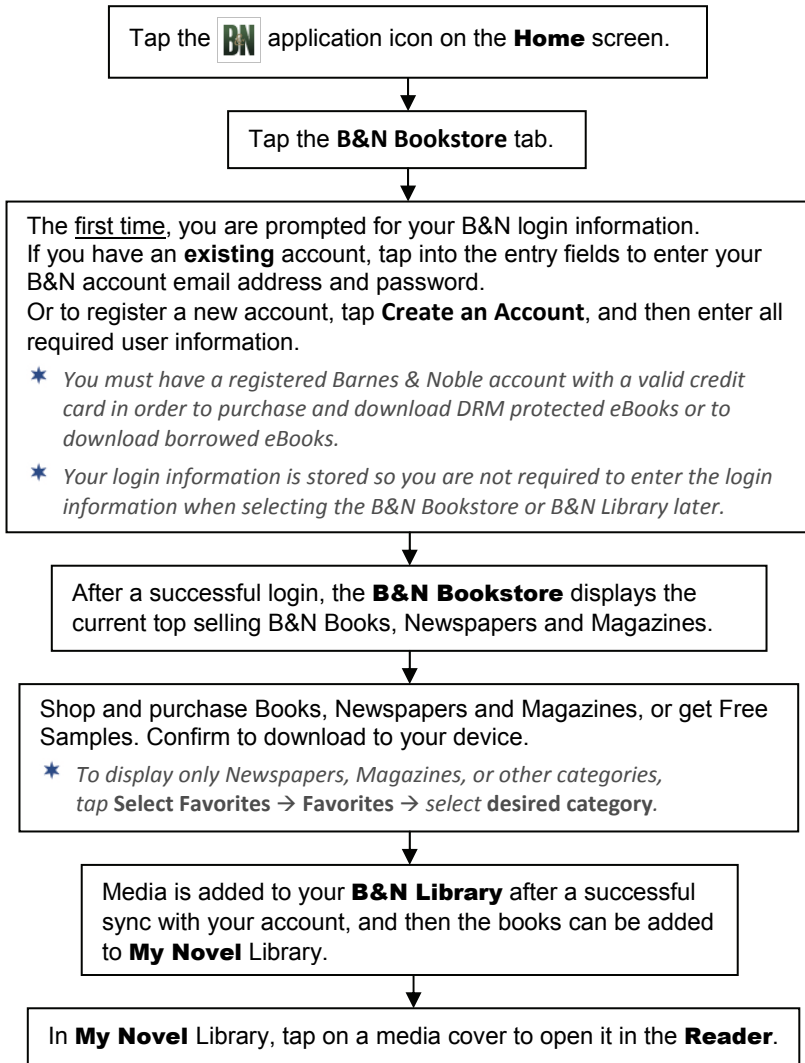


## Sign in to your B&N Account

**IMPORTANT** - In order to connect with your Barnes & Noble online account, the **Date and Time** must be set correctly according to your location.

1. Tap the **BN** application icon → **B&N Bookstore** or **B&N Library** tab.
2. The **first time**, you are prompted for your B&N login information. If you have an existing account, tap into the entry fields to enter your B&N account email address and password → **Sign In**.  
Or to register a new account, tap **Create an Account**, and then enter all required user information.
3. After a successful login, the **B&N Bookstore** displays the current top selling B&N Books, Magazines and Newspapers. The **B&N Library** displays all the media in your B&N online account.  
  
★ *Your login information is stored so you are not required to enter the login information when selecting the B&N Bookstore or B&N Library later.*

## B&N Bookstore

- ★ *You must have a registered Barnes & Noble account with a valid credit card in order to purchase and download DRM protected Books or to download borrowed Books.*
  - ★ *If the Wi-Fi signal is weak, the contents of the Bookstore may not be able to load in the device. Move to a better Wi-Fi signal area and the Bookstore will reconnect and retry to load the Bookstore contents.*
1. Tap the **BN** application icon → **B&N Bookstore** tab.  
The **first** time you are prompted for your B&N login information. After successful login, the **B&N Bookstore** displays the top selling B&N Books, Magazines and Newspapers.
  2. You can re-sort the media by tapping on the icon next to **Sort by** in the upper right corner of the screen.
  3. Tap on **Buy Now**, **Get Sample**, or **Get Book for Free** to add to your B&N online account.  
Or  
Tap on a media listing → select **View Detail** to view a summary of the media, and then you can tap **Buy Now**, **Get Sample**, or **Get Book for Free**.

4. If you select **Buy Now**, you are prompted to confirm the purchase. Tap **Yes** to confirm → **Yes** to download the media to your device.
5. If you select **Get Sample** or **Get Book for Free**, you are prompted to download the media immediately to your device. If you do not, you can download it later from the **B&N Library** tab.
6. Tap  to return to the **B&N Bookstore** screen from a **Detail** screen.

## B&N Library

Use the **B&N Library** tab to sync with and display the media in your online B&N account so you can download it to your device.

1. Tap the **BN** application icon → **B&N Library** tab.
2. If prompted, tap **Yes** to sync with your **B&N Library**.
3. You can re-sort the media by tapping on the icon next to **Sort by** in the upper right corner of the screen. Sort options:  
**Date Added (descending, most current first)** (*Default*)  
**Date Added (ascending, oldest first)**  
**Title A-Z**  
**Title Z-A**  
**Author A-Z** (by last name)  
**Author Z-A** (by last name)
4. Based on the status of media in your library, tap **Download**, **Download Sample**, **Downloading**, **Read**, **Buy Now**, **View Subscription**, **Renew**, **Lend to a friend**, or **Return**.
5. Downloaded media is displayed in **My Novel** library.

## My Novel Library

The **My Novel** library displays all media that you downloaded directly from Barnes & Noble, transferred from Adobe Digital Editions, or copied into your device from your computer.

If you have a SD card inserted with media files stored in a folder titled **/eBooks**, those media files are also displayed in **My Novel** library.

1. Tap the **BN** application icon → **My Novel** tab.
2. The media you have downloaded or copied into the device from your computer or SD card is displayed. Scroll the screen vertically to access all media.

3. You can re-sort the media by tapping on the icon next to **Sort by** in the upper right corner of the screen. Sort options:
  - Date Added (descending**, most recently downloaded listed first) (*Default*)
  - Date Added (ascending**, oldest downloaded listed first)
  - Title A-Z**
  - Title Z-A**
  - Author A-Z** (by last name)
  - Author Z-A** (by last name)
4. Tap on a media listing to open it in the **Reader**.

The media labels signify the status of the media:

  - New** = media has not yet been opened
  - Sample** = free sample of book
  - Borrowed** = borrowed book from another B&N user
  - Lent** = you loaned book to another B&N user
  - Returned** = you returned the borrowed book to lender
  - Expired** = was borrowed more than 14 days ago
5. **Newspapers and Magazines**: Even if multiple issues are available, only one cover is displayed.

Tap on a newspaper or magazine cover to access the available issue list. Tap on an issue to open it.

OR

Touch & hold on a newspaper or magazine cover to display **Go to folder** and **Delete folder** options.


**Go to folder** displays all available issues. You can single tap to open an issue, or touch & hold on an issue to assign it to a bookshelf or delete it.

**Delete folder** deletes all downloaded issues and folder.

 
  - \* *If downloaded books have separate cover files, they are downloaded along with the book. For books that don't have separate cover files, covers are extracted from the book file.*
  - \* *For books imported from other sources, Adobe eBook loaded through ADE or DRM-free book covers are displayed right away. However, Barnes & Noble DRM protected books do not display covers until you have unlocked the file by entering the name and Credit Card number that was used to purchase the media.*
  - \* *Some sections of magazines and newspapers contain linked topic headings; tap on a topic heading to jump to the associated article.*

## Reader

The **Reader** displays your EPUB or PDF media files.

- ★ *When you exit the **Reader**, immediately go into the **B&N Library** and tap  to sync the last read page number with your online account.*

In **My Novel** screen, tap on a media listing to open it in the **Reader**.

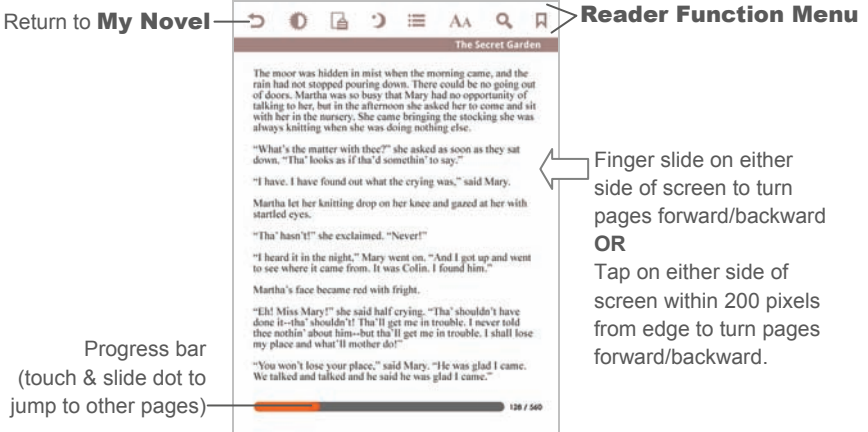

- ★ *If the media file is an Adobe DRM protected file that was copied into the device by a method other than an Adobe Digital Editions (ADE) transfer, you are prompted to load it into the device using ADE. (Refer to the eReader User Guide for ADE instructions.)*
- ★ *If a DRM media file was copied into the device rather than downloaded from your current B&N account, you are prompted for the name and Credit Card number that was used to purchase the media.*
- ★ *Some sections of Magazines and Newspapers contain linked topic headings; tap on a topic heading to jump to the associated article.*

## Adobe® eBooks

eBooks and other digital content can be transferred to your device through the Adobe® Digital Editions (ADE) program. You can also use ADE to transfer books that you have downloaded from public Libraries using global distributors (such as Overdrive.com).

- ★ *If an Adobe eBook has an expiration date, it will also expire on your eReader. If an eBook is returned in ADE before it expires, the next time you connect your eReader to your computer, ADE updates the status of the returned eBook on your eReader, and you won't be able to read it.*

### Register and Download Software

1. Register a free Adobe account, from the Adobe website: [www.adobe.com/cfusion/membership](http://www.adobe.com/cfusion/membership).
2. Go to [www.adobe.com/products/digitaleditions](http://www.adobe.com/products/digitaleditions) to download **Adobe Digital Editions** (ADE) software to your computer.
3. Follow the prompts to install the software.

### Authorize your Device with ADE

1. After registering and installing the ADE software, enter your Adobe account login information to activate your computer with the software.
2. The ADE program opens.
3. Connect your device to your computer using the USB cable.
4. ADE detects your device and displays the **Device Setup Assistant**.
5. Click **Authorize Device**, → click **Finished**.
6. After you authorize your device, it appears as a device in ADE titled **PD\_Novel**.

### Download eBooks into ADE

There are many resources for downloading free and purchased eBooks into ADE, including borrowed eBooks from public libraries.

Adobe has a Sample eBook Library which is a good place to start downloading eBooks to see how ADE works:

<http://www.adobe.com/products/digitaleditions/library/>

Click on the **Download** button on an eBook listing, and when prompted to Open or Save, click **Open**.

The eBook automatically downloads and opens in the ADE program.



## Transfer eBooks from ADE into your device


1. Drag and drop the eBooks from the ADE collection into your device (*PD\_Novel*).
2. Disconnect the USB cable.
3. The **My Novel** Library refreshes and the ADE transferred eBooks are displayed.
4. Tap on the eBook to open in the **Reader**.




---

## Office Suite Viewer


The OfficeSuite application can be used to open files of the following formats: DOC, DOCX, TXT, XLS, XLSX, CSV, PPT, PPTX, PPS, PPSX and PDF

1. Tap the  **OfficeSuite** application icon to open the **File Browser**.
2. For files stored in the internal memory, tap **Device** → **PD\_Novel**.  
For files stored on a SD card, tap **Memory Card**.
3. Tap on the folder containing the file(s) you want to open.
4. Tap on the data file you want to open. The appropriate viewer launches and displays your data file.

- \* *When in the file browser or you've opened a data file, tap  to display menu options.*
- \* *Refer to the eReader User Guide for complete menu option instructions.*

## Upgrade to OfficeSuite Pro Editor

The standard OfficeSuite viewer application included with your device is designed as a viewer only. The **OfficeSuite Pro** version allows you to create new documents and edit existing ones, as well as other features the free viewer application does not offer.




You can purchase a full working version by tapping the  **OfficeSuite** application icon → tap **OfficeSuite Pro** → **Upgrade**. Follow the prompts to complete your purchase and download the application.

- \* *If you do not want to download the application during the purchase process, you can download the apk to your computer from the purchase confirmation email which contains the download link. Save the apk to a SD card or to the root folder of the device and then install using ES File Explorer.*
- \* *Refer to the eReader User Guide for complete Upgrade instructions.*





## SAM (Slide<sup>ME</sup>)

Slide<sup>ME</sup> is a market offering thousands of free and low cost third party Android™ applications.


- \* *If your third party application causes the top function menu buttons    to disappear, press the Volume button on the side of the device to re-display them. However, some applications may designate the volume button for other functions, and you may need to shut the device off in order to exit the application.*
- \* *In order to save memory space, application .apk files are automatically deleted after installation has been completed.*


### Download FREE applications

1. Tap the  **SAM (Slide<sup>ME</sup>)** application icon. The browser launches and displays the market web store.
2. Tap on a category to display the individual applications.
3. Tap on a desired application to view a description.
4. Tap **Compatibility** to view the compatibility requirements.
5. To download to your device, tap **Download** → **Install** → **Install**.
6. Tap **Open** to run the application now, or **Done** to return to the application.
7. Tap  to return to the category listing.

### Purchase Android™ applications




You must have a Slide<sup>ME</sup> account registered with your payment methods in order to purchase applications from Slide<sup>ME</sup>. It is recommended that you sign up/register through your computer by going to <https://slideme.org/user/register>.

- \* *You can download FREE applications without a Slide<sup>ME</sup> account.*
1. Tap the  **SAM (Slide<sup>ME</sup>)** application icon. The browser launches and displays the market web store.
  2. Tap on a category to display the individual applications.
  3. Tap on a desired application to view a description.
  4. Tap **Compatibility** to view the compatibility requirements.


5. To download to your device, tap **Download** → **Approve**.
6. Enter your account login information, → tap **Login**.
7. After successful login, tap **Purchase** → **Install**.
8. Tap **Open** to run the application now, or **Done** to return to the application description screen.
9. Tap  to return to the category listing.

---

## Install Third Party Android Applications


- \* *There are many interesting and free Android™ applications that can be found on the web. Just launch your web browser and do a search for “Android applications”.*
- \* *If your third party application causes the top function menu buttons    to disappear, press the **Volume** button on the side of the device to re-display them. However, some applications may designate the volume button for other functions, and you may need to shut the device off in order to exit the application.*
- \* *ES File Explorer is a third party application designed for phones. **References to phones and multiple features are not applicable to this device.***

### Install using ES File Explorer Application

1. Copy the Android **.apk** file you want to install onto a SD card → insert SD card into your eReader.
2. Tap the  **ES File Explorer** application icon.
3. Locate the folder on your SD card in which the **.apk** application file was saved.
4. Tap on the **.apk** file → **Install**. The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch now, or **Done** to return to the previous screen.


## Install by Downloading Direct from Website

You can download Android™ applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **Browser** application icon to launch the internet browser.
2. Enter the website URL, and tap the download link for the application you want to install on your device.
3. After the download is complete, touch & hold on the download file (*in the **Download history** screen*) → tap **Open** → **Install**.

## Uninstall Android™ Applications

You can also quickly and easily uninstall the Android™ applications that you have installed.

1. Tap  → **Settings** → **Applications** → **Manage applications**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.

---

## Customer Support

Before contacting customer support, you may find the answers to your questions in the **Frequently Asked Questions** section in the User Guide.

For Customer Support, go to [www.panimagemedia.net/support](http://www.panimagemedia.net/support).

---

## Register your eReader

Register your warranty at [www.panimagemedia.net/support](http://www.panimagemedia.net/support).\*

If you must mail your registration rather than register online, check our website for the address to send your name, address, phone number, model, serial number, and when and where you purchased your eReader.

\* The online registration is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

---

## Limited Warranty

The limited warranty set forth below is given by PanImage with respect to the PanImage Novel™ line of products (the “Device”) purchased and used in the United States of America. PanImage warrants this product as follows:

**LABOR:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, PanImage will repair or replace the Device, at its sole option, at no charge. After this one (1) year period, labor charges will be charged on a case by case basis. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer.

**PARTS:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, PanImage will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance will void user’s authority to operate the equipment. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer.

This Limited Warranty does not cover damage or malfunctions caused by accident, disaster, misuse, abuse, negligence or other external causes; third-party products; Internet or telecommunications failures; commercial use; unauthorized opening, use, service, tampering, alteration, repair or modification; or inadequate packing or shipping procedures. This Limited Warranty also does not cover cosmetic damage or normal wear and tear. This Limited Warranty does not apply to Devices sold as used, refurbished or reconditioned. This Limited Warranty does not cover damage caused by third party applications such as viruses, malware or other software. This Limited Warranty will be void if the Serial Number on your Device has been removed, tampered with or defaced or if your Device has been opened or serviced without authorization, tampered with, altered or modified. This Limited Warranty applies to your Device only (i.e., the hardware), and not to the software within your device. Similarly, this Limited Warranty does not cover downloaded data or materials, or accessories and peripherals, except as expressly provided above. This warranty is valid only in the United States.

The Device must be accompanied by a copy of the original retail purchase receipt for the warranty to be valid. If no proof of purchase is attached, the warranty will not be honored and repair costs incurred will be the responsibility of the end user. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty does not provide protection for the loss of data, regardless of format or cause. PanImage reserves the right to modify and change the design of this Device without prior notice, written or otherwise.

Limitations. TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

All content included on the PanImage website as well as PanImage Devices, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and

software, are the property of PanImage or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from PanImage and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

To obtain warranty service or customer support, go to [www.panimagemedia.net/support](http://www.panimagemedia.net/support).

## FCC Notices

### FCC ID: TLZ-NU706

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT INFORMATION TO THE USER

**WARNING: Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

---

## License Agreement & Terms of Use

By activating and using this device, you hereby consent and agree to our License Agreement and Terms of Use as outlined in the User Guide. Please see the User Guide for more information.

Contact Information: For communications concerning the Agreement, you may contact PanImage by writing to PanImage, Attn: Legal Department, 6375 Clark Avenue, Suite 100, Dublin, CA 95468.

© 2011 PanImage, Inc. or its affiliates. All rights reserved. PanImage and the PanImage logo are trademarks of PanImage Inc. All rights reserved.



QSG-E\_v1.9\_03-11

PRD07T10WWH7, PRD07T10WWH756, R70D200, R70D256