 




Integrated HEART-RATE MONITOR Transmitter

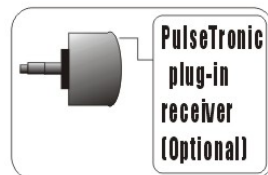

INSTRUCTIONS

ONE-PIECE TRANSMITTER

  This product includes Pulse Tronic's new integrated transmitter/belt. This device is water resistant and may be used for all water related exercises.

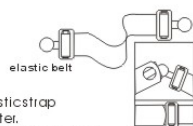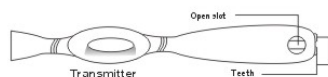

Attach the elastic strap to the transmitter. Observe that each end of the transmitter has an open slot and two "teeth" extended slightly from the end. With the elastic strap's round buckle head, enter the transmitter's open slot from behind, rotate the round head and firmly "lift & lock" the buckle to the transmitter. You will feel a "snap" as the buckle locks over the two teeth extended from the transmitter.

Freely moisten the two grooved electrode areas located on the back side of the transmitter. Wrap the belt around your chest and secure the remaining buckle head.

IMPORTANT: The PulseTronic logo should be centered on the chest, right-side-up so someone standing in front of you can correctly read the logo. Position the transmitter just below your breasts/pectoral muscles-directly against the skin.

Adjust the elastic straps so it fits snugly, but comfortably.

Maintenance

If you have difficulty obtaining a heart rate display, the grooved electrodes may need to be re-moistened or the transmitter may need to be repositioned on the chest. Some individuals, i.e., Cardiac rehab patients, may need to position the transmitter more to the left side of the torso-slightly higher or lower-until the heart rate is detected.

Change the battery

Remove the four screws securing the stainless steel "battery-hatch" located on the backside of the transmitter. Remove the old battery and replace it with a new battery, model CR2032, with the (+) side facing up. Replace the stainless steel hatch and carefully tighten the screws.

Note: Ensure that the rubber O-ring is properly seated before replacing the stainless steel hatch; and be careful not to over tighten or strip any of the four screws.

Clean and Store

Always dry the transmitter after use and never store it wet. Wash and dry the transmitter regularly with mild soap/water and rinse it with regular tap water. Promptly dry the transmitter. Store the transmitter in a dry place and avoid extreme temperatures. Do not fold or bend the transmitter especially when storing.

- User-replaceable batteries
- water resistant
- compatible with fitness equipment supporting built-in heart rate display

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Any changes or modification not expressly approved by the party responsible could void the user's authority to operate the device.