

Bluetooth Headset



User Manual

U&ITM

Item No.:U&I-02

User Manual

 
Specifications	1
Headset Features	2
Replacing Battery	3
Replacing the Headset Battery	3
Replacing Battery Step	4
Replacing Faceplate	5
How to Take off the Faceplate	5
How to Put the Faceplate	6
Wearing Headset	7
Wearing Your Headset	7
Changing for Wearing on the Left Ear	8
Paring Headset	9
Paring Your Headset and Phone	9
Function Statement	10
Function Statement under Paring Mode	10
Using the Headset Indicator LED	11
FCC Warning	12

■ Specifications


Bluetooth Version:	1.2
Operation Range:	up to 10 meters(33 feet)
Frequency:	2.4GHZ-2.4835GHZ ISM Band
Connection:	Point to Point
Dimension:	L68mm, W25mm,H22mm
Weight:	13g without battery,23g including battery
Output Power:	0dBm (class II)
Security:	128 bits encryption
Battery:	AAA battery
Talking Time:	up to 22 hours (1.5V AAA Battery) up to 8 hours (1.2V Rechargeable battery)
Standby Time:	up to 25 days (1.5V AAA Battery) up to 10 days (1.2V Rechargeable battery)
Operating Temperature:	-10-55℃
Storage Temperature:	-20-60℃
Headset Passkey:	0000

■ Headset Features

Front View

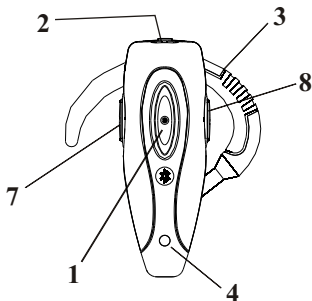

Back View

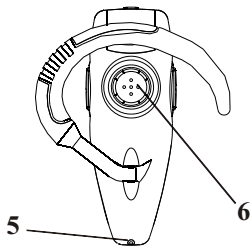 

1. **Multifunction Button(MFB)**— Controls multiple headset functions
2. **Battery Cover** —Allow you to change the battery
3. **Ear Hook**—Attaches headset to ear
4. **Headset Indicator LED**—Provides a visual cue about the headset status
5. **Microphone**—Picks up your voice input
6. **Speaker**—Plays the sound you receive on the call
7. **Volume Control Button**—"▽" key (Lower)
8. **Volume Control Button**—"△" key (higher)

■ Replacing Battery

Replacing the Headset Battery

Battery Using Scope and Safety:

The Bluetooth headset can use the 1.2V AAA rechargeable battery or 1.5V AAA environmental battery.

Warning: Never dispose of batteries in a fire because they may explode.

Note: 1. Please take out the battery if you don't need to use the headset for a long time.

 
2. Do not open batteries, install them backwards, or expose batteries to water, fire or high temperatures. These activities may cause a battery to explode or leak, resulting in personal injury or property damage.



■ Replacing Battery

Replacing Battery Step:

1. Open the battery cover at the back of the headset. Remove the old battery, if necessary.
2. Insert a new battery and make the “+” and “-” inside markings match the ones in the battery compartment.
(Please refer to the picture showed)
3. Close the battery cover.

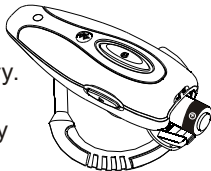

A fresh 1.5V AAA battery provides approximately:

- 22 hours talking time
- 25 days standby time

A fresh 1.2V AAA rechargeable battery provides approximately:

- 8 hours talking time
- 10 days standby time


■ Replacing Faceplate

Replacing Headset Faceplate Step:

How to Take off the Headset Faceplate:

1. Loosen the left faceplate from the joint which connects the left Volume key and faceplate by the opening tool, to separate the left faceplate from the headset itself. The same way to loosen the right faceplate.
2. Then take off the whole faceplate from the headset when both sides of the faceplate are loose.


(Please refer to the following pictures showed)

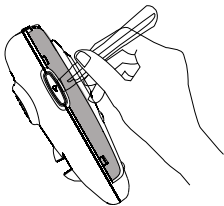 


Opening Tool



 Left Side

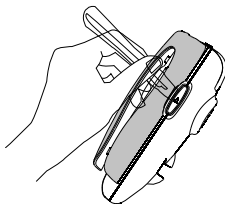

Right Side

 

Take Off

Warning: Never take off the whole faceplate by force if only loosen one side of the faceplate. This activity may damage the faceplate.


■ Replacing Faceplate

Replacing Headset Faceplate Step:

How to Put the Headset Faceplate:

Just put the faceplate in the right place of the headset board, then press the faceplate.


Pls refer to the following picture showed:

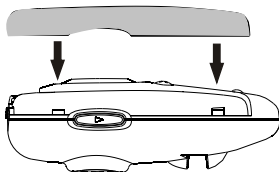 

■ Wearing Headset

Wearing Your Headset

 When packaged, the headset is originally set up to wear on the right ear. And the ear hook can be adjusted to suit the different ear size and make you feel comfortable.

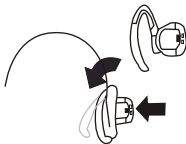


Warning: Make sure not to distort the ear hook always for a long time with large extent while adjusting the hook, otherwise may damage the ear hook.

■ Wearing Headset

Changing for Wearing on the Left Ear:

 Open the ear hook, then turn 180 degree from the headset, please refer to the following pictures showed:

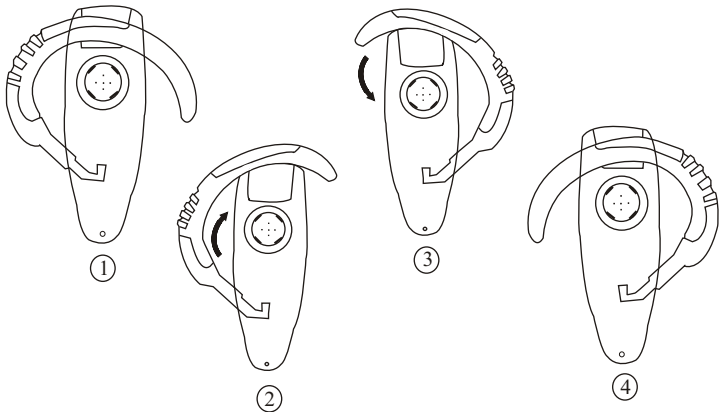

■ Pairing Headset

Pairing Your Headset and Phone

Note: You must pair your headset and phone before you make a call.

“Pairing” creates a link between devices with Bluetooth wireless technology and allows the phone to remember the headset's unique ID. When your headset and phone are paired, your headset automatically connects to your phone.

Pairing

Put the headset and phone close together:

Step:

1) With the headset on, hold the Volume “△” Button for 2 seconds until LED flash red and blue color in turn.

2) Perform a device discovery from the phone.

- For details on device discovery for your phone, refer to the phone's user's guide.

- When the scan is completed, the phone displays the devices found.

3) Select the U&I-02 from the discovered devices list and confirm following the screen prompts.

4) When prompted by the phone, enter the passkey 0000 and confirm to pair the headset with the phone. (The device ID is now stored in the phone's memory. Pairing is successful when the headset indicator flashes rapidly.)

■ Function Statement

With the headset and phone are paired:

- 1) Turning on the Headset: Press the MFB button until LED flash blue color.
- 2) Answering a Call: When a call comes, press the multifunction button to answer a call.
- 3) Ending a Call: Press the MFB button to end the call.
- 4) Making a Voice Dial Call: Shortly press MFB button, speak the name to make the voice dial call.
- 5) Redialing a Call: Long press Volume “▽” button until you hear the beep, then release the button to redial out a call.
- 6) Rejecting a Call: Long press the MFB button until you hear the beep, then release the button to reject the call.
- 7) Adjusting Headset Volume:

To increase speaker volume, repeatedly press “△” button until you reach the desired volume level.

To decrease speaker volume, repeatedly press “▽” button until you reach the desired volume level.

Notice for Making and Receiving Calls:

1. Your headset supports both Handsfree and Headset Profiles. Accessing call functions depends on which profile your phone supports.
2. If the link abnormally disconnects (for examples, out of range), the headset tries to reestablish the link.

■ Function Statement

Using the Headset Indicator LED

Headset Indicator LED	Status
Blue flashing	Standby mode before pairing
Red and blue flashing in turn	Pairing mode
Blue flashing for continued 3 times	Standby after successful pairing
Blue flashing for continued 4 times	Connected (on a call)
Red flashing	Indicating low battery

■ FCC Warning

CAUTION:

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

NOTE:

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.