

 
 
 
# GRAND VIDEOKE

## ***SYMPHONY*** **SE** PRO **PLUS**




Beyond Videoke.

**USER'S MANUAL**

[www.grandvideoke.com](http://www.grandvideoke.com)



Ver.1

   



## **Table of Contents**

|   |       |
|---|-------|
| FCC DECLARATION OF CONFORMITY .....   | 4     |
| Packing Guide .....   | 5     |
| Quick Guide .....   | 6-10  |
| - Basic Functions, Secondary Functions, Channel Settings  |       |
| Introduction .....  | 11    |
| How to use the keys .....   | 12    |
| How to take care of your GRAND VIDEOKE .....  | 13    |
| Package Contents .....  | 14    |
| Product Overview .....  | 15-19 |
| - Main player   |       |
| - Remote control  |       |
| - Microphone  |       |
| Installation Guide .....  | 20-21 |
| - Main Unit to HDTV Connection  |       |
| - Main Unit to Standard TV Connection   |       |
| How to operate the GRAND VIDEOKE .....  | 22-26 |
| - Power on/off  |       |
| - Search and reserve songs by remote control and microphone control buttons                         |       |
| - Play, Pause, Stop, Music Volume, Mic volume, Echo, Melody, Tempo adjustment, Key adjustment, Skip |       |
| Additional menu function & configuration settings .....   | 27-30 |
| - Search Menu   |       |
| - Favorite Menu   |       |
| - Record Menu   |       |
| - Repeat Menu   |       |
| - PERFECT PITCH   |       |
| - MTV/ Multiplex/ RealSound/ Chorus/Duet Menu   |       |
| - Configuration Menu  |       |
| - How to use your photos or videos saved in a USB storage/memory device as background               |       |
| - Howto use your photos which is saved in your player as background                                 |       |
| Troubleshooting guide .....   | 31    |
| Q&A - other .....   | 32    |
| Product Specification .....   | 33    |



Trade Name : TJ media

Model : TKR-372MP PRO PLUS

Address : 23, Hwagok-ro 64-gil, Gangseo-gu, Seoul, Korea

Telephone : +82-2-3663-4700

 
### **Notice for customers in the U.S.A.**

Use of TJ media wireless devices is regulated by the Federal Communications Commission as described in Part 74 subpart H of FCC regulations and users authorized thereby are required to obtain an appropriate license.

**IMPORTANT NOTE :** To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate this device.

## PACKING GUIDE

### Top View

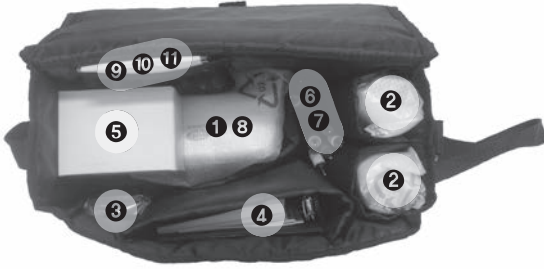


1. Main Unit(Player)
2. Wireless Microphone x 2
3. Remote Control
4. Song list & Manual & Quick Guide
5. Auto-Volt Power Adaptor
6. Audio/Video Cable(RCA cable)
7. HD Output Cable
8. USB Wi-Fi Adapter
9. 4 x AA Batteries(Wireless Microphone)
10. 2 x AAA Batteries(Remote Control)
11. MIC Cover




## BASIC FUNCTIONS

### SONG SELECTION & PLAYBACK

METHOD 1. By entering song number directly.

- Key in the song number using the alphanumeric keypad, then press .


METHOD 2. By searching the song.

- (1) To Open the Song List : Press .
- (2) Input the Title or Artist by typing on the alphanumeric keypad.
- (3) To Sort by Title, Artist : Press .
- (4) To Select : Press the Arrow keys, then press .


### STOP

To stop a song while playing, press .


### PAUSE

1. To pause a song while playing, press .
2. To continue, press .

### RESERVATION

Select a song, then press .

### CANCEL THE RESERVED SONG

Press Reserved song number, then press .

## BASIC FUNCTIONS

### VOLUME(MUSIC, MIC, ECHO)

1. Volume : Press .
2. Type selection(MUSIC, MIC, ECHO) : .
3. Adjustment : , .

### KEY, TEMPO, MELODY, BGV, VOCAL

1. Adjustment : Press .
2. Type selection(KEY, TEMPO, MELODY, BGV, VOCAL) : .
- \* VOCAL : Multiplex Only
3. Adjustment : , .

## SECONDARY FUNCTIONS

### SKIP

METHOD 1. Prelude/Interlude skip.

Press  (While playing), .




METHOD 2. Rewind a tune, Forward a tune.

Press  (While playing), , .

METHOD 3. Verse skip.

Press  (While playing), .

### FAVORITE SONGS

1. To Add: Select a song, press .
2. To Remove: Select a song that has been added, press .
3. To Search: Press , then select "FAVORITE".



## SECONDARY FUNCTIONS

### RECORDING

You can record a song in 5 ways :

METHOD 1. **MENU**, Select "REC", Select "Recording Song",

Select a song, press **S**<sup>START</sup>.

METHOD 2. **REC**, Select "Recording Song", Select a song, press **S**<sup>START</sup>.

METHOD 3. Open the Song List, Select a song, press **REC**.

METHOD 4. While playing music, press **REC** . :

Record the playing song.

METHOD 5. Key in the song number using the alphanumeric keypad,

then press **REC** .

### SEARCHING RECORDED SONGS

You can record a song in 2 ways :

METHOD 1. **MENU**, Select "REC", Select "Listen/Download".

METHOD 2. **REC**, Select "Listen/Download".

### SONG REPEAT

Press **MENU**, Select "REPEAT".

### PERFECT PITCH FUNCTION

METHOD 1. Press **PERFECT PITCH**.

METHOD 2. Press **MENU**, Select "PERFECT PITCH".

## CHANNEL SETTINGS

 
TKR-372MP PRO PLUS has eight(8) available channels.

Please take note that microphones and main player should be on the same channel.

In case of channel interference (either one or two of the microphones cannot be detected by the main player), please follow the step by step instructions below for re-channeling.

### [STEP 1] Change the channel on the main unit by using the remote control.

1) Turn on the main unit. Make sure no song is playing.

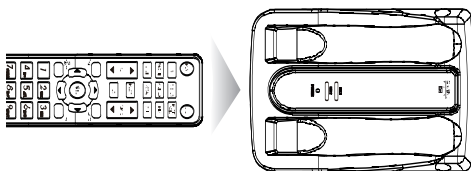

2) Go to channel select menu:

Press **MENU** button +

choose "Config" → "System" → "MIC Channel Setup" + **SEL** button.



3) Select one channel number from 1 to 8 and press that specific number on the remote.



4) Press **START** button.

5) Press [Power off] → [Power on] to save.

## CHANNEL SETTINGS

[STEP 2] Set the channel of the two microphones using the microphone's keypad.

For the first(1st) microphone:

1) Turn on the microphone by pressing the **POWER** button.

2) Press **CANCEL** **C** → **VOL** → **MENU** → **RES** button in order.

The microphone LED will be turned on and off twice.

3) Press the same channel number that you set in the main player.

The microphone LED will be turned on and off twice.

4) Press **REC** button. Microphone LED will be turned on and off twice.

5) Press **MENU** button to save. →

Microphone LED will be turned on and off 6 times.

For the second (2nd) microphone:

1) Turn on the microphone by pressing the **POWER** button.

2) Press **CANCEL** **C** → **VOL** → **MENU** → **RES** button in order.

Microphone LED will be turned on and off twice.

3) On the alphanumeric keypad, press the same channel number that you have set in the main player. The microphone LED will be turned on and off twice.

4) Press **PERFECT FITLH** button. Microphone LED will be turned on and off twice.

5) Press **MENU** button to save. →

Microphone LED will be turned on and off 6 times.

● Check if both microphones are now working.

If not, try again. Contact our Customer Service for other concerns.



## Introduction

Thank you for purchasing the GRAND VIDEOKE SYMPHONY 2 PRO PLUS (TKR-372MP PRO PLUS).

- The GRAND VIDEOKE SYMPHONY 2 PRO PLUS is the first portable videoke system equipped with the highly-advanced Perfect Pitch scoring system. Experience professional-grade scoring in real-time while singing, rating your key/rhythm, vibrato, upband, and downband.
- The GRAND VIDEOKE features a smartphone/tablet companion app called the GV Smart App for Android and iPhone/iPad. The app features special functions such as Direct Song Download, GV™ Smart Card Authentication System, One-Touch Pairing, Voice Command+, Remote Control, Screenshots Sharing, and Live Messaging.
- The GRAND VIDEOKE is pre-loaded with various kinds of Full HD 1080p Background Videos (BGVs) including WOW Philippines, World Tour, 3D Anime Dance, Motion, K-Pop M/V, K-Drama, and OPM MTVs.
- The GRAND VIDEOKE is equipped with a built-in 16GB flash internal storage for storing Direct Song Download (song pack) volumes purchased via the GV™ Smart App. Add thousands of songs to your main unit without the hassle of purchasing and using physical song packs. The internal storage can also be used to store photos and music files for viewing and playback.
- The GRAND VIDEOKE features HD+ Sound powered by Dream® Sound Module. With 414 instruments, 16-bit PCM, and 48 kHz sampling rate, experience audio performance that is better than CD-quality.
- The GRAND VIDEOKE can play five (5) types of music content - all of which were remastered for even better sound quality compared to previous Grand Videoke models.
  - **3D RealSound** is the enhanced version of TJ Media's exclusive MP3-based format for karaoke use with orchestral accompaniment, real instruments, and backup singers.
  - **MIDI (Musical Instrument Digital Interface)** is music produced through a synthesizer to generate all the sounds of all instruments for a specific song.
  - **Multiplex** is music with full-length backup vocals than can be turned on or off.
  - **Chorus** is music with backup vocals overlaid on MIDI music.
  - **MTV** is original music video with original singer's voice and music.
- The GRAND VIDEOKE features multimedia playback capability that supports most popular media formats including advanced HD formats such as H.265. Media files such as movies, music, and photos can be played back from USB flash drives and hard drives of up to 1TB (full compatibility may depend on storage media brand and model).

# GRAND







## VIDEOKE

### HD





### How To Use The Keys

The keypad of the GRAND VIDEOKE is an alphanumeric keypad similar to a cell phone. You can key-in letters into the screen when searching for songs.

The **POWER** in the GRAND VIDEOKE Microphone is used to power on the Microphone, while the POWER button on the GRAND VIDEOKE is used to turn the GRAND VIDEOKE on and off.

| Button/Key  | Play  | Standby                   | Search Mode                                 |
|---|---|---------------------------|---|
|  | Skip  | "0"                       | "SPACE"→"0"                                 |
|  | Move to Music, MIC, Echo Volume   | Move to Music, MIC Volume | Sort(Title, Artist)                         |
|  | Move to Key, Tempo, Melody Levels, BGV, VOCAL ON/OFF (Only for Multiplex) | BGV                       |   |
|  | Menu  | Menu                      | Adds the highlighted song to favorites list |
|  | Record the playing song   | Record Menu               | Record the song                             |
|  |   | Run Perfect Pitch         | Run Perfect Pitch                           |

### Icons and Symbols

-  : When reserved song is repeated, the icon is indicated in the screen.
-  : When all songs are repeated, the icon is indicated in the screen.
-  : When mic is on, the battery power is indicated in the screen.
-  : When multiplex is played, the vocal status is indicated in the screen.

### Icon the song list, the icon indicates as following.

-  Realsound song : Song with orchestral accompaniment, real instruments and back-up vocals.
-  MTV song : Original music videos.
-  Chorus song : Song with back-up singers.
-  Multiplex song : Song with full-length vocals.
-  Duet song : Song for two singers.
-  Favorite song : User-selected song tagged as favorite.
-  : Realsound + Duet.
-  : MTV + Duet.
-  : Chorus + Duet.
-  : Multiplex + Duet.



### **How to take care of your GRAND VIDEOKÉ**

1. Do not attempt to open the GRAND VIDEOKÉ. This will void the warranty.
2. Use only the power adapter included with your GRAND VIDEOKÉ.  
Using other power adapters could cause serious damage to the product and there by void its warranty.
3. Do not cover the product or any of its accessories while the GRAND VIDEOKÉ is turned on. Always allow air to move freely around the GRAND VIDEOKÉ and the microphones in order to prevent overheating.
4. Avoid bending or twisting the cord.
5. Do not place heavy or sharp objects on top of the cables to prevent punctures or cuts.
6. Do not put the product near an object containing water (such as a vase) to avoid damage or electric shock. In case water or any liquid substance enters the product, immediately unplug the power adapter, then bring your GRAND VIDEOKÉ to the nearest dealer or service center to check for damage and for repair, if necessary.
7. Do not place the product on an unstable surface, near flammable substances, under direct sun light, or in a wet and dusty place.
8. In order to prevent malfunctions, do not place the product near devices that generate strong electric and magnetic fields such as transformers, mobile phones, back portion of TV's, etc.
9. Make all the necessary connections before powering up the GRAND VIDEOKÉ.
10. Make sure to place the batteries of the remote control in the correct polarity to prevent possible damage to the remote control.

### **Maintenance & Cleaning of your GRAND VIDEOKÉ**

1. During thunderstorms, do not use the product and unplug the power adapter from the wall socket.
2. If you will not use the product for a long time, unplug the power adapter.
3. Do not use strong solvents (such as alcohol/benzene/thinner) to clean the product. This could damage the product's paint work; use only cloth dampened with water and mild detergent.
4. Before cleaning or moving the device, unplug the power adapter and all cables.

# GRAND

## VIDEOKÉ

### HD

### Package Contents

Your GRAND VIDEOKÉ is packaged with following items:

Main Unit(PLAYER) & Wireless Microphone x2



Carry Bag



Quick Guide



Song List & Manual



Mic Cover



Remote Control



2xAAA Batteries



4xAA Batteries



USB W-Fi Adapter



HD Output Cable



RCA Cable

 
 


Auto-Volt Power Adapter






**Product Overview (Main Unit & Microphone)**

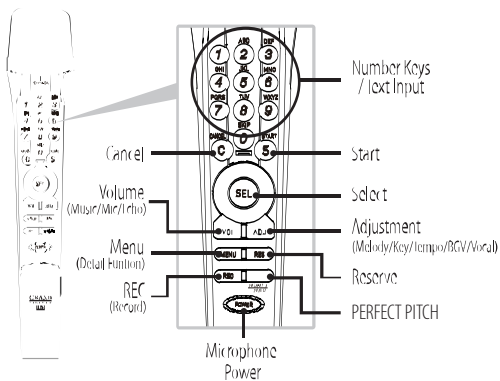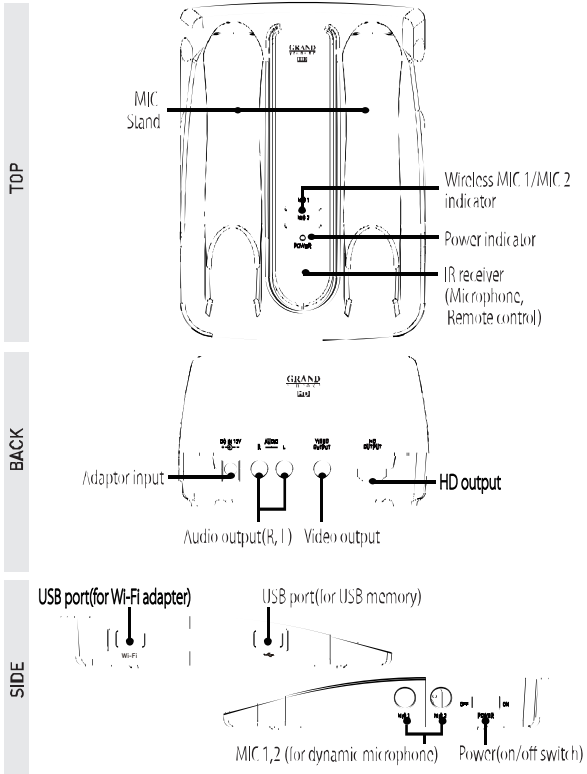





**Product Overview (Remote Control)**

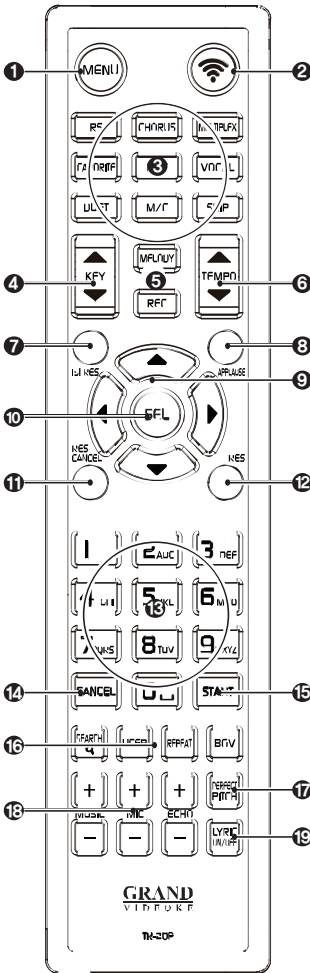 



### Product Overview (Remote Control)

| NO | FUNCTION       | SUBSTANCES   |
|----|----------------|--|
| 1  | MENU           | Display menu window.   |
| 2  |                | Open Wi-Fi network set-up menu.  |
| 3  | RS             | Display the list of RealSound songs.   |
|    | CHORUS         | Display the list of Chorus songs.  |
|    | MULTIPLEX      | Display the list of Multiplex songs.   |
|    | FAVORITE       | Display the list of Favorite songs.  |
|    | MTV            | Display the list of MTV songs.   |
|    | VOCAL          | Vocal assist AUTO/ON/OFF for Multiplex songs.                                    |
|    | DUET           | Display the list of Duet songs.  |
|    | M/F            | Change song key to male or female voice.   |
|    | SKIP           | Jump to a prelude/interlude, a tune, or a verse of a playing song.               |
|    | 4              | KEY ▲, ▼   |
| 5  | MELODY         | Select the volume of melody on the playing song.<br>(None - Low - Middle - High) |
|    | REC            | Display recorded song list; start recording song.                                |
| 6  | TEMPO ▲, ▼     | Control the speed of playing song.   |
| 7  | 1st RES        | Activate first reservation.  |
| 8  | APPLAUSE       | Activate applause sound effect.  |
| 9  | ▲, ▼, ◀, ▶     | Move up, down, left, right in the list or display function.                      |
| 10 | SEL            | Select.  |
|    |                | View lyrics(on song list window).  |
| 11 | RES CANCEL     | Cancel reserved song.  |
| 12 | RES            | Reserve a song on song list window; Display Reserved Song List.                  |
| 13 | 0~9/A~Z        | Number/Text.   |
| 14 | CANCEL         | Cancel.  |
| 15 | START          | Play, Pause.   |
| 16 | SEARCH         | Song search by Title or Artist.  |
|    | USER           | Open user videos, music and photo files (multimedia player mode).                |
|    | REPEAT         | Normal → Continuous → All song repeat.   |
|    | BGV            | Select background video type.  |
| 17 | PERFECT PITCH  | Run PERFECT PITCH.   |
| 18 | MUSIC/MIC/ECHO | Control the volume of music, echo and microphone.                                |
| 19 | LYRIC ON/OFF   | Turn lyrics display on or off.   |



### **Product Overview (Remote Control)**

 
#### **To avoid electric discharge or damage of battery:**

- When putting the batteries in the remote control, check if the polarities are correct (+/-).
- Make sure that you use AAA size batteries.
- When changing the batteries, change both batteries at the same time. Do not mix old and new batteries.
- If you will not use the product for a long time, take the batteries out of the remote control.


#### **When to change the batteries(2 x AAA Batteries)**

- If the remote control does not work even within a short distance from the main player, the batteries must be changed.


#### **How to change the batteries:**

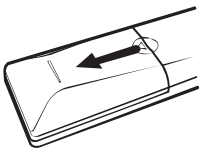

 1. Push and slide the battery cover tab to open the battery compartment.

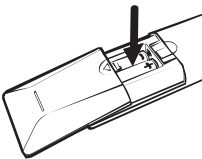

 2. Insert the batteries correctly.

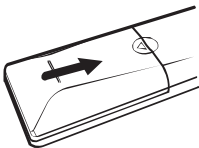

3. Close the cover.



### **Product Overview (Microphone)**

 
#### **To avoid electric discharge or damage of battery:**

- When putting the batteries in the microphone, check if the polarities are correct (+/-).
- Make sure that you use AA size batteries.
- When changing the batteries, change both batteries at the same time.
- If you will not use the product for a long time, take the batteries out of the microphone.


#### **When to change the batteries:**

- If the microphone does not work even within a short distance from the main player, the batteries must be changed.


#### **How to change the batteries:**



 1. Please push down and pull up to uncover.



 2. Insert the batteries correctly.




3. Close the cover.




## Installation Guide
 
### Main Unit to HDTV Connection

- Please connect the main unit to the HDTV using an HD Output cable as shown in the image below.

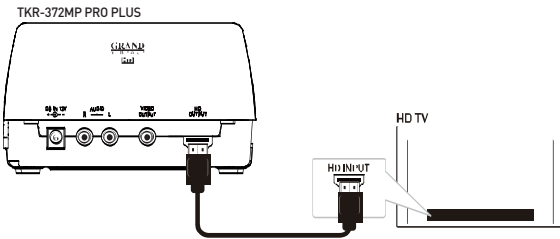

 - If a speaker system is available:  
Please connect the audio output of the main unit to the audio input of the speaker system as shown in the image below.

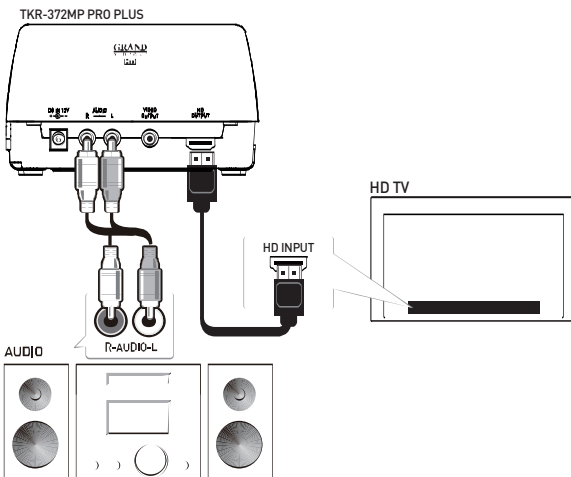





## Installation Guide

### Main Unit to Standard TV Connection

 - Please connect the main unit to the TV using an RCA cable as shown in the image below.

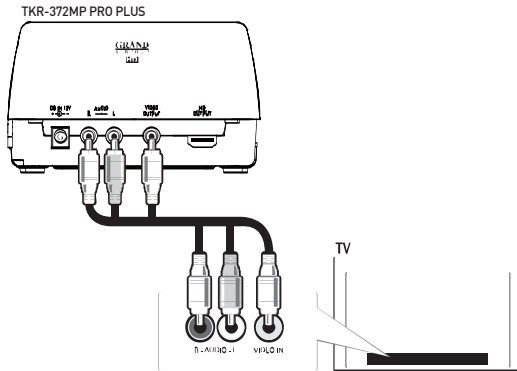

 - If a speaker system is available:  
Please connect the audio output of the main unit to the audio input of the speaker system as shown in the image below.

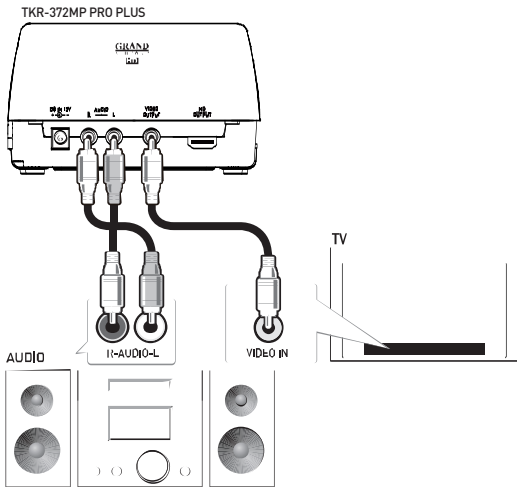




## How to operate the GRAND VIDEOKE

### Power On/Off

#### Power ON - Grand Videoke Main Unit

 1. Connect the main unit and all its accessories accordingly.  
(Refer to Installation Guide for connection instructions.)
2. Turn on your TV set and select the AV source where the device is connected.
3. Turn the Grand Videoke main unit on through the rear panel power switch (as seen on illustration below).
4. Check if the POWER LED on the front panel of the main unit is turned on to confirm that the product is powered on.

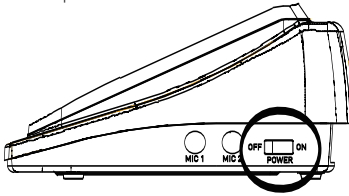

#### Power OFF - Grand Videoke Main Unit

1. Turn the GRAND VIDEOKE microphone(s) off first before turning off the main unit.
2. Turn the Grand Videoke main unit off through the rear panel power switch (as seen on illustration above).
3. Check if the POWER LED on the front panel of the main unit is turned off to confirm that the product is powered off.

#### Power ON/OFF - Microphone

The **POWER** button turns the microphone(s) on and off. The main unit will not be turned on and off through this button.

1. Press **POWER** button to turn the microphone(s) on.
2. Check if the POWER LED of the microphone is lighted up to confirm that it is turned on.
3. Check if the microphone icon is indicated on the TV screen.
 
  - To check the icon, the main unit must be turned on.
  - If icon did not appear, the microphone is not connected properly and it must be reconnected.

Please refer to "CHANNEL SETTINGS" section of this manual for rechanneling instructions.
4. To turn off the microphone, press the **POWER** button for two(2) seconds.
5. Check if the POWER LED of the microphone is not lighted up to confirm that it is turned off.



## How to operate the GRAND VIDEOKE

### Search and reserve songs by remote control and microphone control buttons

Be sure to read the introduction on the "How to use the keys" section found at the beginning of this manual.

#### Unified Search Screen-Title or Artist



In the illustration above, the song "Life Is A Flower" is highlighted.

You can reserve it by pressing **RES**.

Move the ▲, ▼ keys to highlight and reserve more songs.

1. Title/Artist – This is the current sort mode. To change to another sort mode, press [VOL].
2. Song numbers – Index number of the song in GRAND VIDEOKE songbook.
3. Type - Indicates the type of the song.
4. 0005/0011 – Current page over the total number of pages for the whole GRAND VIDEOKE HD library.  
If you add a new song, the total number of pages will change accordingly.
5. Search input box. (Enter title or artist name.)
6. Favorite symbol – Activates when the song has been added to the Favorite list.





## How to operate the GRAND VIDEOKE

### Selecting Songs by Title or Artist

1. Press **SEL** to enter the Unified Search function.
2. The search function contains the list of songs available on the GRAND VIDEOKE.
3. Key-in the equivalent text character(s) of the song title or artist that you're looking for. As you enter the first letters of the song title or artist, the songs with the same beginning letters appear will also in the screen.  
Continue to key-in letters until your song comes up on the screen.
4. Press **▲**/**▼** to scroll to the song title or artist that you want to select. If the title or artist is not visible on the current screen, press (left/right) to move to the next or to the previous page.
5. Press **RES** to reserve the highlighted song.
6. Simply follow the procedure above to add more songs to the reservation list. You can reserve a maximum of 100 songs.
7. Songs in the reservation list are erased once the GRAND VIDEOKE is turned off.
8. If you want to make a list of songs that is retained even after the unit is turned off, please see instructions regarding the "Favorite Menu".
9. In case you made an error, you can cancel the previously reserved song by pressing **C**.
10. If you are ready to play the songs you selected, press **C** until the search disappears from the screen. Then press **S**.
11. During playback, you can still press **RES** to access the search function in order to reserve additional songs. However, during playback, the search window will be smaller and will display a list of five (5) titles at a time. Press **◀**/**▶** to move from page to page.

### Reservation

- The song reserved is displayed on your screen.
- The GRAND VIDEOKE plays the reserved songs one after the other. The user doesn't need to press the **S** button to play each reserved song.
- You can cancel the reserved songs by pressing **C**.
- If you key-in the reserved song number and press the **C** button, you will cancel the reserved song.

# GRAND

## VIDEOKE

### HD

## How to operate the GRAND VIDEOKE

### Play, Pause, Stop

#### Play

- To play a song, select from the list on the song search screen and press **S** on the microphone or on the remote control. You can also select songs from the song list.
- Use the arrow key ◀, ▶, ▲, ▼ and press **S** to play.
- Once you finish singing, your score will be shown on the screen.
- If a Real Sound song is playing, the 'REAL' icon will be displayed on the left side of the screen.
- If a Multiplex song is playing, the 'Multiplex' icon will be displayed on the left side of the screen.
- If a Chorus song is playing, the 'Chorus' icon will be displayed on the left side of the screen.
- If a MTV song is playing, the 'MTV' icon will be displayed on the left side of the screen.
- If a Duet song is playing, the 'DUET' icon will be displayed on the left side of the screen.

#### Pause

- If you want to pause the song for a while, press **S** to pause.
- Press **S** to start again.

#### Stop

- Press **C** to stop the song.

### Music Volume / Mic Volume / Echo

Music, microphone, and echo levels can be adjusted by pressing **VOL**. However when the menus or search screen is on display, you cannot use **VOL** to adjust the music, mic, echo volume; you have to exit to the main screen by pressing **C**. It is best to pause the songs by pressing **S** to make any adjustment so that it does not interfere with your singing.

#### Music Volume Control

- Press **VOL** to adjust the music volume level.
- When the music volume bar is displayed on top of the screen, you can adjust the volume level using the arrow keys ◀, ▶.

#### MIC Volume Control

- Press **VOL** 2 times to adjust MIC volume level.
- When the MIC volume bar is displayed on the top of the screen, you can adjust the MIC volume level using the arrow keys ◀, ▶.

#### Echo Volume Control

- Press **VOL** 3 times to adjust ECHO volume level.
- When the echo volume bar is displayed on the top of the screen, you can adjust the echo volume level using the arrow keys ◀, ▶.



## How to operate the GRAND VIDEOKÉ

### Melody / Tempo adjustment / Key adjustment

Melody, key, and tempo can only be adjusted when a song is playing. However, when the menus and search screen are on display, you cannot use **ADJ** to adjust melody, key, and tempo; you have to exit to the main screen by pressing **C** until the menus or search screen disappear. It is best to pause the songs by pressing **S** to make any adjustment so that it does not interfere with your singing.

#### Melody

- Press **ADJ** until the Melody control bar appears.
- When the melody bar is displayed on the top of the screen, you can adjust melody volume level, using the arrow keys ◀▶. Melody volume can be set 4 in levels (None - Low - Middle - High).

#### Tempo

- Press **ADJ** until the Temp control bar appears.
- Press the arrow key ◀▶ to adjust the tempo level.  
◀ is to slow down the music; and ▶ is to speed it up.
- Tempo can be set from -6 level to +6 level.

#### Key

- Press **ADJ** until the Key control bar appears.
- Press the arrow key ◀▶ to adjust the key setting.
- Key can be set from -6 level to +6 level.
- These controls are only available while the unit is playing a song.

### Skip Menu

The Skip function allows the user to skip the current prelude (instrumental, intro, interlude), line, or verse. This function can be compared to the fast forward or rewind function in music players.

- Press **O** while playing, and select the arrow key ▲ to skip prelude or interlude.
- Press **O** while playing, and select the arrow key ▶ to skip BAR.  
Skipping the bar lets you move to the next line of lyrics.
- Press **O** while playing, and select the arrow key ◀ to skip BAR.  
Skipping the bar lets you move to the previous line of lyrics.
- Press **O** while playing, and select the arrow key ▼ to skip VFRST.

The Skip function may vary from each song to song. It is best to use Skip "Prelude" and "Bar" because some songs have long verses or are not divided according to verse and skipping the verse might end the song.

# GRAND VIDEOKE HD

## Additional Menu Functions & Configuration Settings

 
To access menu functions and configuration settings, press [menu]. You can navigate through the menu items by pressing ◀, ▶, ▲, ▼. To enter a menu function, press **[SEL]**.

### Search Menu

See the instructions entitled “Search Screen”, “Search Function”, and “Song Reservation” on this manual for more information.

### Favorite Menu

The Favorite Songs list contains user selected songs that are stored in the GRAND VIDEOKE'S memory. This list is retained even after the GRAND VIDEOKE is turned off.

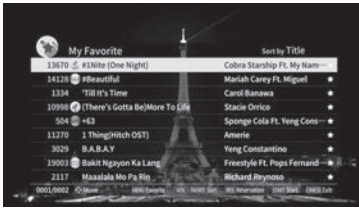

To add songs to the favorite list :

- Select a song on the search screen and press **[MENU]**.
- A {STAR} icon will be added after the artist column, which means the song is in your favorite list. If you press **[MENU]** again, the {STAR} icon will disappear and the song is removed from the favorite list.

Managing the favorite list :

- In your favorite song list, you can sort the songs in terms of the song title or artist. If you want to remove a song in the list, select a song and press **[MENU]**.
- Press **[S]** to play a song from the Favorite Songs list.
- You can also reserve the songs in your favorite list to cue them to play. Just highlight the song and press **[RES]**.
- You can sort your favorite songs by Title and Artist. Press **[VOL]** to change the sort mode.



## **Additional Menu Functions & Configuration Settings**

### **Record Menu**

The record function allows the user to record his/her own voice on a song. Both the instruments and the user's voice are recorded and can be played back. Recorded songs are stored in the GRAND VIDEOKÉ's built-in memory. Recorded time is up to 5 minutes per song. If exceeded, it may not be properly recorded.

To use the recording shortcut: from the search screen, highlight a song and press **REC** until recording is activated, or you can use the Record Menu.

- Press **MENU**, and select "REC".
- Select "Recording Song".
- Select the song, and press **S** to record.
- As recording starts, the recording symbol is displayed on the screen.
- After recording, you can see the recorded song list on the "Listen/Download" menu and play the recorded songs.
- Select the recorded song, and press **S** to play.

### **Repeat Menu**

You can select any of the repeat functions as follows;

- {None} : Plays the reserved songs in order of reservation.
- {Continue} : Plays the reserved songs repeatedly.
- {All} : Plays all songs in order of song number repeatedly.

### **PERFECT PITCH**

The 'Perfect Pitch' feature allows you to check the beat and pitch in real time with enjoyment of singing as a game.

- GAME MODE : Select from SINGLE / BATTLE mode.
- PLAY TIMES : Select the number of songs to be played (1-3 times).  
Feature only on Battle Mode.  
\* 'Select song → Play' is repeated until 'Perfect Pitch' mode is cancelled in 'Single Mode'.
- CHARACTERS : Select from four characters or one of your photos as the character.
- RANKING CHART : Displays the ranking of singers singing in SINGLE mode.  
The record is retained even when the device is turned off and on.
- HELP : Simple manual of the Perfect Pitch feature.
- START : After selecting settings on Perfect Pitch such as Play Times and Character, selecting this will let you choose song(s) to sing.
- EXIT : Exit/cancel Perfect Pitch mode.

### **MTV/ Multiplex/ RealSound/ Chorus/ Duet Menu**

- This menu provides the list of different types (formats) of songs.
- If you select an item, a song format on the remote, the list will be displayed.



## Additional Menu Functions & Configuration Settings

### Configuration Menu

The Configuration menu enables you to change some of the settings of the GRAND VIDEOKE like lyrics alignment and difficulty level of the scoring. Here is the list of the default values for each configuration option.

| Configuration Option |                    | Default  | List of Possible Values    |
|----------------------|--------------------|--|----------------------------|
| System               | System Information | Current version of the program   |                            |
|                      | MIC Channel Setup  | The current channel  | Channel 1 ~ Channel 8      |
|                      | Reset              | —  | —                          |
| Sound                | MIC/Music Setup    | MASTER VOLUME : MIC/ECHO/MUSIC<br>MIC GAIN : MIC1/MIC2<br>MIC 4Band EQ : LOW/MID LOW/MID HI/HI<br>ECHO CONTROL : TIME/FEEDBACK |                            |
|                      | Key                | Original   | Original/-1/-2             |
|                      | Melody             | Middle   | None, Low, Middle, High    |
|                      | Button Effect      | Normal   | Normal, Electronic, None   |
| Display Option       | Lyric Array        | Center   | Left-Right/Center          |
|                      | MIC Input Check    | Off  | On/Off                     |
| Score                | Score Check        | Amateur  | Amateur, Professional, Off |
|                      | Real Time Score    | Off  | On, Off                    |
|                      | Score Display      | Normal   | Normal(100~0)/Grade(S~F)   |
| Smart Phone Setup    | HOT SPOT           | HOT SPOT   | —                          |
|                      | AP                 |  |                            |
| TV Setup             | PAL                | NTSC   | —                          |
|                      | NTSC               |  |                            |
| New Song Management  | Delete New Song    | —  | —                          |

To change any of the configuration options, highlight it by pressing ◀, ▶, ▲, ▼ then press ▲, ▼ to change the values until your desired value is displayed. When you're done with the change the value, press **SEL**. To exit the menu screen press **C** once.

#### Sound Setup

- To adjust the master volume, microphone 1/2 gain, equalizer and echo control, press the song number, then press **S** button.
- If you want to adjust without song, press **C** button to adjust.
- It is available to adjust the volume of each microphone.
  - Microphone 1 : It is available to adjust both of the first wireless microphone and wired dynamic microphone.
  - Microphone 2 : It is available to adjust both of the second wireless microphone and wired dynamic microphone.



## **Additional Menu Functions & Configuration Settings**

### *Button Effect*

- When enabled, the GRAND VIDEOKE will output sound whenever a button is pressed.

### *Score check*

- This selects the difficulty level of scoring.



### *Lyric Array*

- Lyric Array allows the two lines of the lyrics to be aligned either to the center or to the left and right.





### *TV Setup*

- Switches the GRAND VIDEOKE's video system output between NTSC and PAL.

## **How to use your photos or videos saved in a USB storage/memory device as background**

1. Save the photo or video file you want to use as background to USB memory.
2. Please insert your USB memory to the front side USB port, only.
3. Press the MIC  button or  button on the remote control to select "Ext.Photo" which will display your pictures in USB memory as the background.
4. If you select "Ext.Video" in the same way, as described above your video stored in the USB memory will be displayed as background.
5. Pictures or videos in the USB memory will not be displayed as background when you remove the USB memory from the player.

## **How to use your photos which is saved in your player as background.**

1. Insert the USB memory with your personal pictures to the USB slot of the GRAND VIDEOKE.
2. Press the mic  button, then "USER" or the  button on the remote control to select "Ext.Photo".
3. Move the highlight using the direction key, and press the  button when highlight is placed on the picture you want to use as background.
4. When you have finished selecting pictures, press the  button to save the selected picture to the player.
5. Your photos in the player will be displayed as a background when you select "My.Photo" in the background category.
6. Pictures in the player can be deleted from the "USER" → "My.photo" menu.



### **Troubleshooting Guide**

1. The GRAND VIDEOKÉ does not turn on.
  - a. Make sure that the DC output plug of the adaptor is firmly plugged to the unit, and that its AC input plug is likewise firmly plugged into the AC outlet.
  - b. Please turn on the GRAND VIDEOKÉ through the power switch on the rear panel of the main unit.
2. The screen displays video but there is no sound.
  - a. Check if a headphone is connected to the TV, the amplifier, or speaker system and if so, disconnect the headphone.
  - b. Increase the volume of TV, amplifier, or speaker system.
  - c. Also increase the volume of main player.
  - d. If the main player is connected to the HD TV, check if the HD Output cable is connected to the HD terminal between TV and main player.  
If there is an external speaker system or amplifier, or if the GRAND VIDEOKÉ is connected to an SD TV via RCA, check if the red and white RCA cables are correctly to the speaker system, amplifier or TV.
3. The screen does not display video.
  - a. If the main player is connected to the HD TV, check if the HD Output cable is connected to the HD terminal between TV and main player.  
If the main player is connected to the SD TV, check if the yellow RCA cable is connected between TV and main player.
4. The volume of the MIC is low.
  - a. Press the {vol} button then press {right} button to increase the volume of the mic.
5. Real time score is displayed even if there is no person singing on the MIC.
  - a. Realtime score is designed to respond even to soft sounds, which includes surrounding noise.
6. The Main Unit does not turn off even after turning off the MIC.
  - a. The power switch of the MIC is designed to turn off the MIC. It does not control the power of the main unit.
  - b. Please turn off the power with the main unit's power switch.
7. Distance of the remote control is short.  
The remote control does not operate well.
  - a. Check battery of the remote control.
  - b. Is the product being used near a strong light source (direct ray of light or bright electric lights)? Avoid bright light sources as much as possible.
  - c. Remove any obstruction between the remote control and the main unit.





### **Q&A-Other**

1. How do you set the TV system?
  - You can select between NTSC and PAL. Enter the [Config] Menu, then enter |TV Setup| then select either NTSC or PAL.
  
2. How to use wired microphone.
  - It is possible to use wired microphone in case that wireless microphone is defective or lost.
  - If you using wireless microphone 1, please use wired microphone through MIC 2 on the main unit.
  - If you using wireless microphone 2, please use wired microphone through MIC 1 on the main unit.
  - It is possible adjust the volume of microphone through the configuration menu:  
Config → Sound → MIC Setup → "GAIN MIC1/2".



### Product Specification

| Microphone               |                            |
|--------------------------|----------------------------|
| Microphone Type          | Analog Wireless Microphone |
| RF Frequency / RF Type   | 494MHz~505.2MHz / F3E      |
| Unit Type / Impedance    | Dynamic / 600Ω             |
| RF Transmission Range    | Up to 10m (30-ft)          |
| Battery Spec             | 1.5V(AA) x 2               |
| Audio Frequency          | 50Hz ~ 15kHz               |
| Operating Temperature(L) | 0℃ ~ 40℃                   |
| Weight (g)               | 204g(without battery)      |
| Dimension(WxHxD)         | 47 x 250.5 x 49.7 (mm)     |

| Main Player      |           |                      |
|------------------|-----------|----------------------|
| Audio            | Output    | 2.2Vrms              |
|                  | Frequency | 20Hz ~ 20kHz         |
| Video            | Input     | 75Ω 1.0Vpp           |
|                  | Output    | 75Ω 1.0Vpp           |
| Adaptor          | Input     | AC100~240V (50~60Hz) |
|                  | Output    | DC12V, 1A            |
| Input            |           | DC12V, 1A            |
| Consumption      |           | 12W                  |
| Weight (g)       |           | 412g                 |
| Dimension(WxHxD) |           | 140 x 95 x 187(mm)   |

Specifications are subject to change without prior notice for product improvement.

**GRAND**  
V I D E O K E  
**HD**