

## FCC Compliance Statements

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Warning : Your are cautioned that any change or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate such equipment.

1-1. Product Characteristic

• Designed for the people who are blind, visually impaired, partially sighted and illiterate to access to information in all printed matters

• Revolutionary and versatile substitute for all kinds of visual and reading aids, such as Braille, screen readers, magnifiers, and audio books

• Completely portable reading device for decoding and reciting text and audible data encoded in

Voiceye symbol

## Take advantage of Voiceye mate's many capabilities

- $\odot\,$  Advanced real-time Text to Speech reader
- $\odot\;$  Audio book
- O Built-in voice recorder
- ◎ FM radio
- $\odot~$  Talking clock
- $\odot\,$  Name card and address book

# .Voiceye Player layout

1-1. Product Characteristic

## VOICEYE Mate enhances your reading ability by giving you the following features and advantages:

- Completely portable device for decoding and reciting text
- Economical tool for listening to text and music
- High quality voice production natural-sounding, human-like speech
- Multi-language available
- Stand-alone recording capacity no PC required
- Stylish and universal design
- Quick and easy smart navigation controls including talking manu
- Fast forward/reverse controls
- 160 x 128 , 4096 Color STN LCD
- Plug-and-play USB connection for transferring files from PC using the supplied PC software
- USB2.0 compatible
- Firmware upgradeable
- Built-in speaker
- Built-in lithium polymer rechargeable battery

# 1.Voiceye Player layout

1-2. Components in the package

Voiceye Player

Voiceye Scanner

Earphone

AC Adapter


Install CD

User's manual

String

# I.Voiceye Player layout



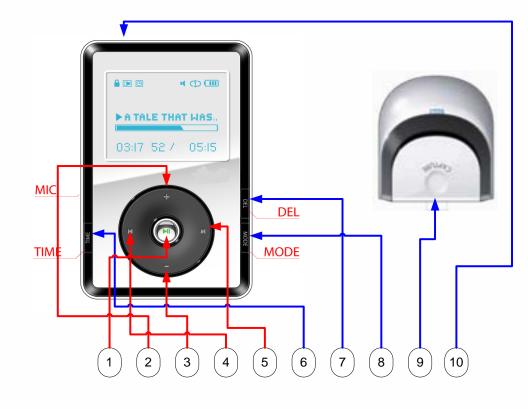

No.	Button Name	Description
1	Play	Power On / Off , Play , Pause, Enter
2	Up	Select Up, Volume Up
3	Down	Select Down, Volume Down
4	Left	Rewind, Folder Up, Left Channel Scan
5	Right	Fast Forward, Folder Down, Right channel Scan,
6	Time / Save	Talking Clock, Save
7	Del / Stop	Delete, Stop, Radio Record
8	Mode	Mode Change, Radio Channel Save
9	Capture	Quick Mode Change
10	Reset	Reset

## .Voiceye Player layout

1-4. Player Mode

## 1) Set up Mode

- Default setting for player

- A. Menu : TTS on / off
- B. Booting option : BGM / TTS / Beep
- C. Battery remainder : TTS / Beep
- D. Setting for TTS pitch
- E. LCD display : on / off
- F. Option for file sorting : Time / File name
- G. Option for bookmark play : Random / Sequence

## 2) Play Mode

Select / play text file which has been saved in the player

## 3) VOICEYE Mode

- Auto capture / play / save the VOICEYE symbol

## 4) FM Mode

- FM tuner / Automatic channel scan / 6 channels saved
- MP3 record


## 5) Voice record Mode

- Quick recoding by one-click

## 6) MP3 Mode


Will be available later

## 2.Boot System

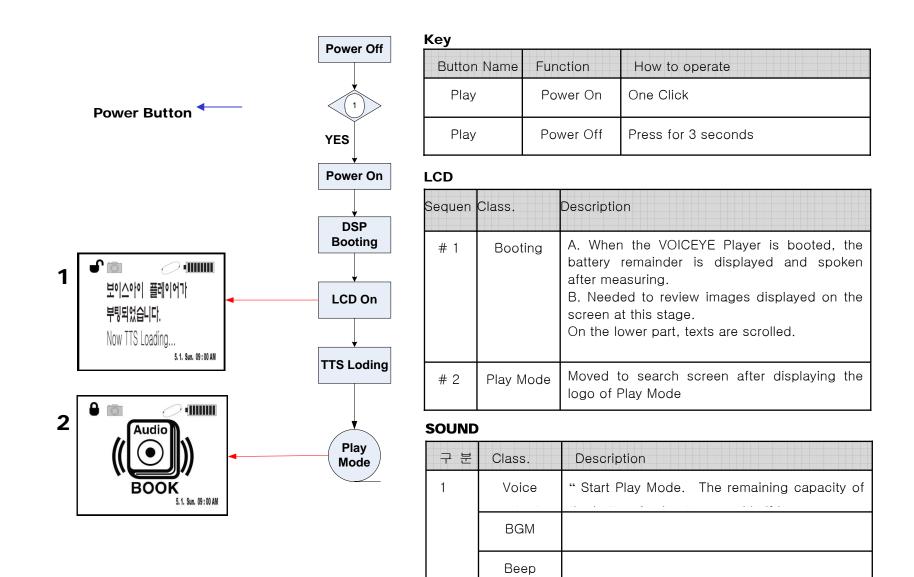



## 3. PLAY Mode

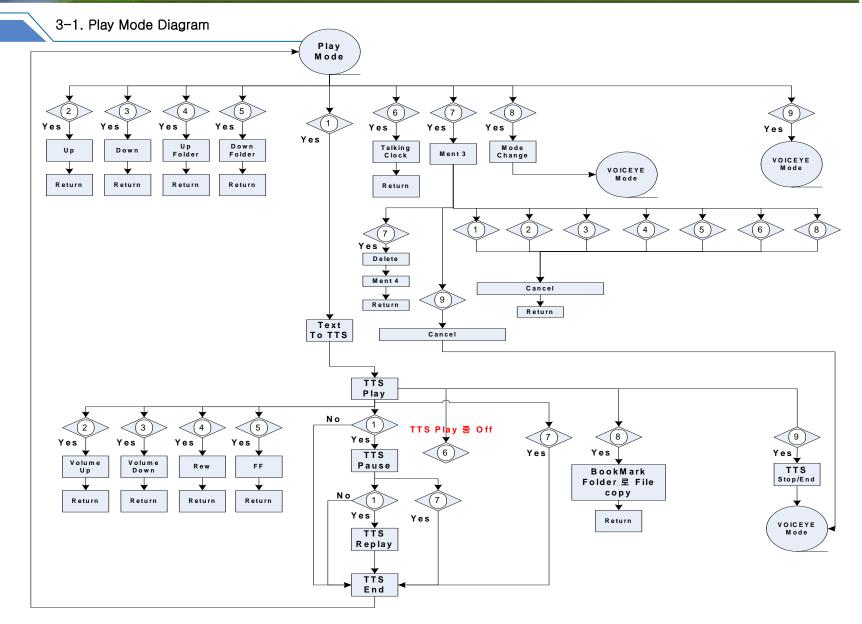



3-2. Play Mode Key Function
-----------------------------

Mode	Class.	Function Key	Function	Description
		Play	Enter	Select the desired File
		Up	Select Up	Move focus up
		Down	Select Down	Move focus down
		Left	Up Folder	Move to the higher folder
	Search	Right	Down Folder	Move to the lower folder
	Function	Time / Save	Talking Clock	Display the current time and read it aloud
		Del / Stop	Delete Yes/No , Delete	Delete the desired file / delete after voice output for confirmation
		Mode	Mode Change	Change mode
		Capture	Quick Voiceye Mode Change	Change to VOICEYE Mode
Play		Reset	Reset	Reset
Mode		Play	Pause / Replay / Pause	Toggle Play and Pause
		Up	Volume Up	Press briefly to increase volume by 1 volume unit.
		Down	Volume Down	Press briefly to decrease volume by 1 volume unit.
		Left	Rewind	Back to the location of past 5 seconds
	TTS Play	Right	Fast Forward	Forward to the location of coming 5 seconds
	ПЗгіау	Time / Save	None	Does not work while playing TTS
		Del / Stop	Stop	Move to the search screen when pressing while playing TTS
		Mode	Book Mark	The played file is set into book mark folder when pressing for a second.
		Capture	Quick change to Voiceye mode	Change to VOICEYE Mode
		Reset	Reset	Reset

# 3. PLAY Mode



3-3. Play Mode Function

#### SOUND

Sequ ence	Case	Class.	Description
		Voice output	" Nine O'clock a.m./p.m. "
2	Time Button Click	BGM	None
		Веер	None
	Play Mode	Voice output	Voice output for the File/Folder Name selected
3	Search screen	BGM	None
		Веер	None
	When pressing the	Voice output	" If you are sure to delete, press delete key."
4	delete key on the search screen	BGM	None
		Веер	None
		Voice output	" Deleted "
5	When pressing the delete key again	BGM	None
	after delete key	Веер	None
		Voice output	" Canceled "
6	When pressing any key after delete key	BGM	None
		Веер	None
	At the last stage	Voice output	None
7	after pressing 2,3,4,5, key on the	BGM	None
	search screen	Веер	None




5.1. San. 19:10 AH

## LCD

Sequence	Class.	Description	
# 2	Play Mode	Display for 2 seconds after entering play mode	
# 3	Talking Clock	Press the time button to display the current time.	
# 4	Navigation	Search screen	
# 5	TTS Play	Display texts which are spoken by TTS	

5.1. Sun. 19:00 AM

## 4. VOICEYE Mode

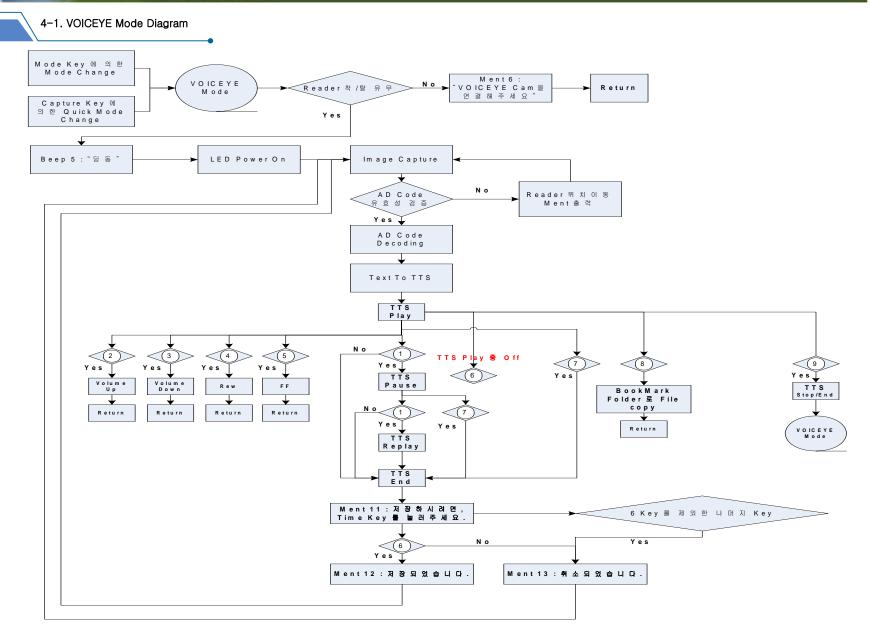



|--|

Mode	Class.	Function Key	Function	Description
			Pause / Replay / Pause	Toggle Play and Pause
		Up	Volume Up	Press briefly to increase volume by 1 volume unit.
		Down	Volume Down	Press briefly to decrease volume by 1 volume unit.
	After	Left	Rewind	Back to the location of past 5 seconds
	capture operati	Right	Fast Forward	Forward to the location of coming 5 seconds
VOICEYE Mode	on / While	Time / Save	None	Does not work while playing TTS
	playing	Del / Stop	Stop	Move to the search screen when pressing while playing TTS
	TTS	Mode	Book Mark	The played file is set into book mark folder when pressing for a second.
		Capture	Quick change to Voiceye mode	Change to VOICEYE mode
		Reset	Reset	Reset
VOICEYE	After finish of TTS play	Time / Save	Save	The file saved in buffer is saved according to the value of header information when pressing the time key.
Mode		Others	Cancel	"Canceled" spoken

#### Differences from Play Mode

- In Play mode, the file which has been saved already is set as bookmark. Thus, the only address where the file has been saved already is saved.
- In VOICEYE Mode, the text file, which has been saved in random of memory and is output, is set as bookmark. Thus, the all of the text is moved and saved into bookmark folder.


# 4. VOICEYE Mode


## 4-3. VOICEYE Mode Function

#### SOUND

Sequ ence	Case	Class.	Description
	When the	Voice-output	" Connect the Voiceye Scanner "
8	scanner is not connected in	BGM	None
	VOICEYE Mode	Веер	None
When the wrong capture of 9 symbol after checking the		Voice-output	"Move to left side" "Move to right side." "Move to upside." "Move to underside"
	availability of	BGM	None
	AD code	Веер	None
	After finishing	Voice-output	" Press the time key to save "
10	TTS operation / when pressing	BGM	None
the	the delete (stop) key while playing TTS	Веер	None
	When pressing	Voice-output	" Successfully saved "
11	the time key / when pressing the time key after delete Key	BGM	None
		Веер	None
	When pressing any key after	Voice-output	" Cancelled "
12		BGM	None
	delete key	Веер	None



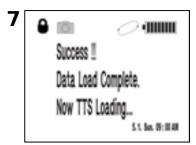

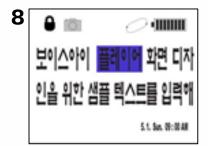


## LCD

Sequence	Class.	Description
# 6	VOICEYE Mode	Display for 2 seconds after entering Voiceye mode
# 7	Decode Success	After symbol capture or successful decoding
# 8	TTS Play	Display texts which are spoken by TTS



## 5-1. FM Mode Diagram

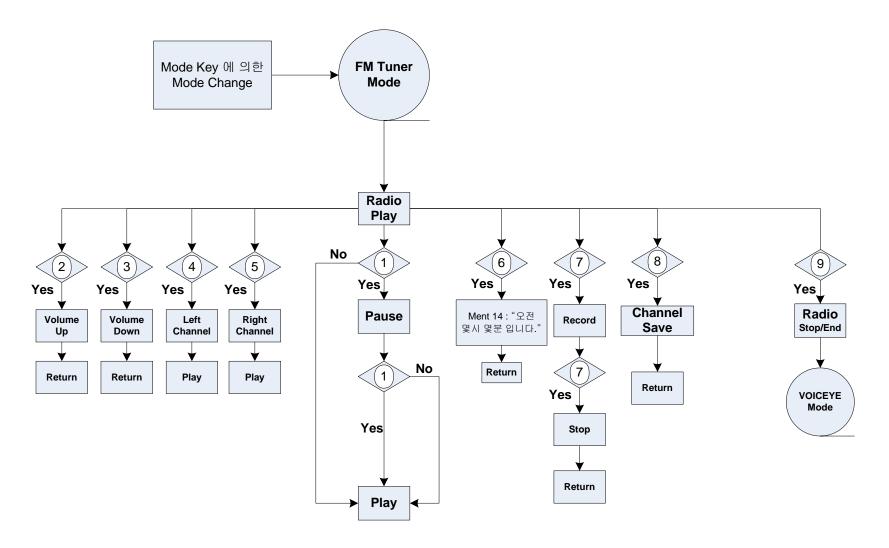

# 5. FM Mode

## 5-2. FM Mode Key Function


Mode	Class.	Function Key	Function	Description
		Play	Pause / Replay / Pause	Toggle Play and Pause
		Up	Volume Up	Press briefly to increase volume by 1 volume unit.
		Down	Volume Down	Press briefly to decrease volume by 1 volume unit.
		Left	Left Channel Scan	Left Channel Scan (When you briefly press the button while listening to FM radio, the frequency moves by 0.1 KHz. / When you press the button for a second, the Voiceye automatically searches for the nearest station with good reception.)
FM Mode	While listening to FM radio	Right	Right Channel Scan	Right Channel Scan (When you briefly press the button while listening to FM radio, the frequency moves by 0.1 KHz. / When you press the button for a second, the Voiceye automatically searches for the nearest station with good reception.)
		Time	Talking Clock	Voice output for current time "Nine O'clock a.m."
		Del	Radio Recording	To record FM broadcasts while listening to FM radio station, press the delete button for a second.
		Mode	Save channel	Press for a second to add the current radio station to presets.
		Capture	Quick change to Voiceye mode	Stop listening to radio / Change to VOICEYE mode
		Reset	Reset	Reset
VOICEYE	While recording	Del	Stop recording	When you press the delete key again while recoding, the Voiceye player stops recording.
Mode	operation	Others	None	The button is not responded.


# 5. FM Mode

5–3. FM Mode Function

#### SOUND

Seque nce	Case	Class.	Description
		Voice output	" 95.3 MHz for channel number 1 "
13	After entering FM Mode	BGM	None
		Веер	None
	When informing	Voice output	None
14 on th radio re	When informing on the start of radio recording by	BGM	None
	the delete key	Веер	None
	When stop it by	Voice output	None
15	pressing the delete key while	BGM	None
	recording FM broadcasts	Веер	None
on savir 16 radio sta pressin	When informing	Voice output	None
	on saving the radio station by pressing the	BGM	None
	mode key	Веер	None

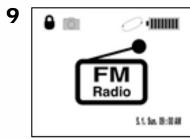

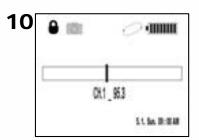



## LCD

Sequence	Class.	Description
# 9	FM Mode	Display for 2 seconds after entering FM mode
# 10	Channel Bar	Display the frequency which is currently scanned
# 11	Talking Clock	Display the current time

### Specifications

#### **\* VOICEYE Player**

1

Audio	Channel	Stereo (right/left)
	Frequency Range	20Hz ~ 20KHz
	Earphone Output	(L)15mW + (L)15mW, 16Ω
	Speaker Output	(L)250mW + (L)250mW, 8Ω
FM Tuner	FM Frequency	87.5MHz ~ 108MHz
	Range	
File Support	File Type	Text
Power Supply	Power Adapter	USB or Adapter (5V/0.5A)
	Charge Time	2 hours
	Battery Type	Lithium ion Polymer
General	Dimension	102 x 65 x 23 mm
	Weight	125g (incl. Battery)
	LCD Size	1.89″
	LCD Display	160 x 128 STN/4096 color
	Operating	0 ~ 40°C
	Temperature	
	Memory	512MB internal memory(TTS DB 200MB)
	USB	USB 2.0
	Max. Play Time	3 hours (under the condition of play mode)
	Voice Recording	Sampling Frequency 16kHz , 16 bit mono



#### **\* VOICEYE Scanner**

Dimension	43 x 48 x 67 mm
Weight	80g
Image Sensor	1/2 inch CMOS Color SXGA
Color	24 bit RGB Color
Pixel Array Size	1280 x 1024
Exposure	Auto & Manual Control
S/N Ratio	54 dB
Max. Image Transfer Rate	15 FPS (Frame Per Sec)
Interface	24 pin Port
Length of USB Cable	1.2 m