

J3238WA & BH1020

Home Theater Sound Bar



User's Manual

Warning

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

For Customers in Europe



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely.

Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Table of Contents

Accessories	5
Illustrations	5
Units & Function	6
Bluetooth Pairing Process (Pairing from control panel)	8
Bluetooth Pairing Process (Pairing from remote control)	8
Reconnecting	9
Listening to TV sound from the soundbar	9
Selecting the sound field	10
AUX Input	10
Precautions	11
Specifications	13

Accessories

 
- Operating instruction (1)
- Remote control (1)
- CR2025 battery (1)
- Audio cable – RCA to 3.5mm stereo plug (1)

Illustration


Front




Back




Remote Control

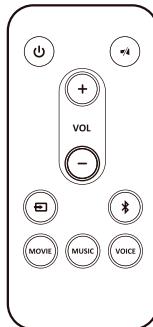

Units / Function

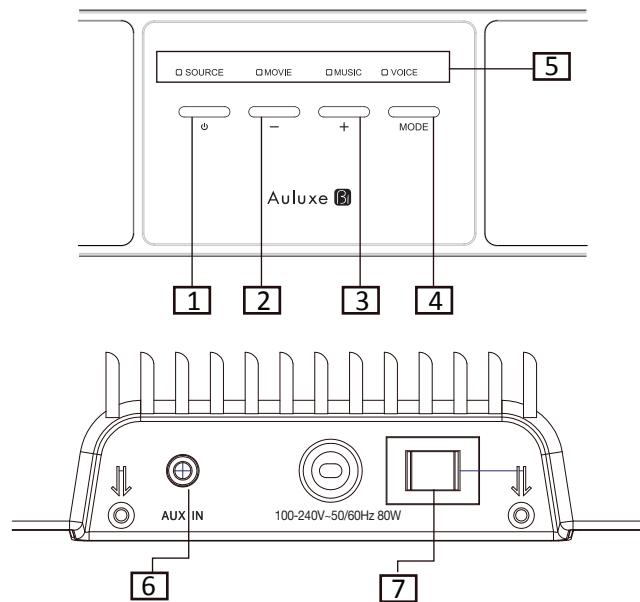

- 1 Power / Source
- 2 Volume Down
- 3 Volume Up
- 4 Mode (press to change mode)
- 5 Source LED indicator
- 6 Audio IN jack
- 7 Tact switch

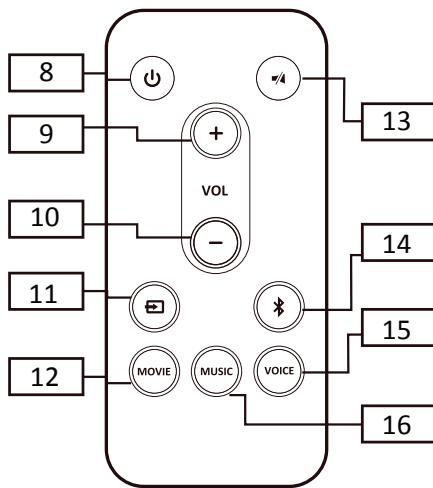

- 08 Power On/Off
- 09 Volume Up
- 10 Volume Down
- 11 Change Mode (AUX-Bluetooth mode)
- 12 Movie Mode
- 13 Silent Mode
- 14 Bluetooth pairing
- 15 Voice Mode
- 16 Music Mode

Bluetooth Pairing Process (Pairing from control panel)

1. Press  on front panel for 3 secs to switch the source to Bluetooth Mode. LED changes from Green light to RED light.
2. Press MODE for 2 secs to have the system entered pairing mode. The RED LED light starts breathing.
4. Turn on the Device Bluetooth connect. Select the Bluetooth domain name [SP-201].
5. The system is successfully connected when the RED light turns steady.

Bluetooth Pairing Process (Pairing from remote control)

1. Press  on remote control to switch the source to Bluetooth Mode.
2. LED changes from Green light to RED light.
3. Press  button on remote control to activate pairing mode. The RED LED light starts breathing.
4. Turn on the Device Bluetooth connect. Select the Bluetooth domain name [SP-201].
5. The system is successfully connected when the RED light turns steady.

Reconnecting

1. Connection of new Bluetooth device:

Make sure that the previous paired device has either Bluetooth disabled or that the device has deleted the connection (We refer to the user guide for your audio device to do this).

Follow the steps Bluetooth pairing to connect a new device.

2. Reconnection of current device:

The current device will automatically connect to the speaker if Bluetooth is activated and the speaker is powered on. If device is not automatically connected please choose [SP-201] on the list of available devices.

Listening to TV sound from the soundbar

Connecting TV to speaker

1. Connect your soundbar to the TV audio out through Audio cable.(Please refer to the user guide for your TV to choose suitable audio output).
2. Turn on your TV.
3. Choose correct audio input on the speaker by pressing the SOURCE button for input as wish ,and then adjust volume.