

Control the volume of the unit by adjusting the TV volume

If the sound output jack of the TV can be set to “Variable”, the volume of the soundbar can be changed by adjusting the TV volume. For TV settings, refer to the operating instruction of the TV.

1. Set the sound output jack of the TV to “Variable”.
2. Adjust the volume of the unit according to the TV.
3. Adjust the volume of the soundbar.

Selecting the sound field

Press mode to choice one of the sound field buttons you want to use.

Sound field	Effect
Movie	Suitable for use for a wide range of sources of any type.
Music	Provides dynamic sound and realistic sensation.
Voice	Features easy-to-hear dialogue and clear sound.

AUX Input

1. Connect an audio device using a 3.5mm audio cable.
2. Press the  button until AUX is chosen. AUX IN LED will light Green.
3. Play music from your connected audio device.

Precautions

On safety

Should any solid object or liquid get into the unit, unplug the unit, and have it checked by qualified personnel before operating it again.

On power sources

- Before operating the unit, check that the operating voltage is identical with your local power supply.
- Do not plug the AC power cord (mains lead) for the unit into an electrical outlet until you have made all other connections. Make sure the TV or other equipment is unplugged from the electrical outlet prior to connecting it to the unit.
- Do not connect the AC power cord (mains lead) to a voltage transformer or inverter. Connecting the AC power cord (mains lead) to a voltage transformer for overseas travel or an inverter for use in an automobile may cause heat to build up in the AC adaptor and may cause burns or a malfunction.
- Do not use an AC adaptor or AC power cord (mains lead) other than the supplied AC adaptor and AC power cord (mains lead). Do not modify the cord.
- Do not touch the plug of the AC power cord (mains lead) with wet hands.
- Do not touch the AC power cord (mains lead), AC adaptor or the unit, if connected to an electrical outlet, during an electrical storm.
- Do not place heavy items on the cord.
- Do not place the AC power cord (mains lead) near heating equipment and do not expose the cord to heat.
- Completely disconnect the AC power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.

- Do not place the unit in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the unit on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.

On heat buildup

- Heat buildup on the unit during operation is normal and is not a cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

On cleaning

Clean this unit with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzine, or alcohol.

Specifications

1. Speaker: 20w*2 (2.0ch)	7. Input Source: Analog 3.5mm
2. Amplifier: Class D	Phone Jack
3. Sound effect: Movie/	8. User Interface key: Button (4Keys)
Music/Voice	9. Gradually Volume Control:
4. IR Remoter: Yes	Power ON/Source Change
5. LED indicator: Yes	10. Output Gain: -∞dB, -40dB ~ +4dB
6. Operate indicate: LED	

FCC Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité d'rf.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme à l'exposition aux rayonnements IC limites établies pour un environnement non contrôlé.

Cet appareil numerique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

"This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numerique de la classe B est conforme à la norme NMB-003 du Canada. This Category II radiocommunication device complies with Industry Canada Standard RSS-310. Cet dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING :

The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Commodity Guarantee Certificate

Your free one year warranty begins on the date of purchase. We will do our best to serve you, as outlined in the guidelines within this warranty.

The following two actions will ensure the product warranty is officially valid:

1. Request that the retailer stamp this warranty and fill in the date.
2. Keep your proof of purchase with this warranty.

Name of buyer		Product model number	
Mailing address		Product serial code	
E-mail		Date of purchase	
Contact number		Retailer store stamp	

Contents of warranty

Free repair service will be available for malfunctions of this product for a period of one year starting on the date of purchase, as long as product has not been damaged by the user and was used under normal conditions (in accordance with the usage instructions detailed in the operation manual and warning labels affixed to the machine).

Conditions outside the scope of the warranty

 
 
1. Replacement of consumable parts within the device: for example the recording/playback head, battery, stylus, belt, vacuum tubes and panel.
2. Accessories other than the main device: for example the remote control, power supply adaptor, power cord, line-in cable, antenna, and other accessories.

Free repair services will not be available under the following circumstances, even if the product is still within the warranty period

1. Machine malfunction due to improper installation or to other equipment, machine has been disassembled or altered by unauthorized persons.
2. Machines which have been altered or damaged by external force or damaged by use.
3. Malfunction or damage caused by fire, earthquake, wind, lightning, abnormal voltage, or other natural disaster or elements of the environment.

Repair services will not be available to those who cannot provide a warranty, or if the warranty does not match the model numbers or serial codes, incorrectly entered information, changes to the text or if the text of the warranty is illegible.

- As this warranty will not be reissued, please store it in a secure location. Thank you for your cooperation.



IMPORTANT SAFETY INSTRUCTIONS

01. Read these instructions.
02. Keep these instructions.
03. Heed all warnings.
04. Follow all instructions.
05. WARNING – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
06. Clean only with a dry cloth.
07. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
08. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
09. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Operate this product only from the type of power source indicated on the back panel. For products using an external power supply, use an exact replacement if lost or damaged. For products operating from battery power, refer to the user manual.
16. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled or objects have fallen into the product.
 - c. If the product has been exposed to water or rain.
 - d. If the product does not operate normally by following the operating instructions.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinctive change in performance.
17. Keep this product a safe distance away from naked flame, such as a lit candle.



18. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

19. When replacement parts are required, be sure your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. Upon completion of any service, ask the service technician to perform safety checks to confirm the product is in proper operating condition.

21. The recommended operating temperature range is 5°C to 40°C (41°F – 104°F).

22. WARNING – The mains are not disconnected in the off position, but the circuits are de-powered.

23. The power cord plug serves as the disconnect device and should remain readily accessible.

This product can be recycled. Products bearing this symbol must NOT be thrown away with normal household waste.



At the end of the product's life, take it to a collection point designated for recycling of electrical and electronic devices. Find out more about return and collection points through your local authority. The European Waste Electrical and Electronic Equipment (WEEE) Directive was implemented to dramatically reduce the amount of waste going to landfills, thereby reducing the environmental impact on the planet and on human health. Please act responsibly by recycling used products. If this product is still useable, consider giving it away or selling it.