

OPERATING INSTRUCTIONS
JS1219WA speaker system

Important Safety Instruction

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized-type plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
15. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The MAINS plug is used as the disconnect device and shall remain readily operable.



Outdoor use or wet location applications:

An apparatus that does not comply with the requirements(Outdoor Use and Wet Location Apparatus) shall be marked or the instruction manual packed with the word "WARNING" and the following or equivalent. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

A Class II APPARATUS shall be permanently marked with the words "DOUBLE INSULATION" or "Double Insulated" and "When servicing use only identical replacement parts."



THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS"




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE BACK, NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS.

Preview of the Product

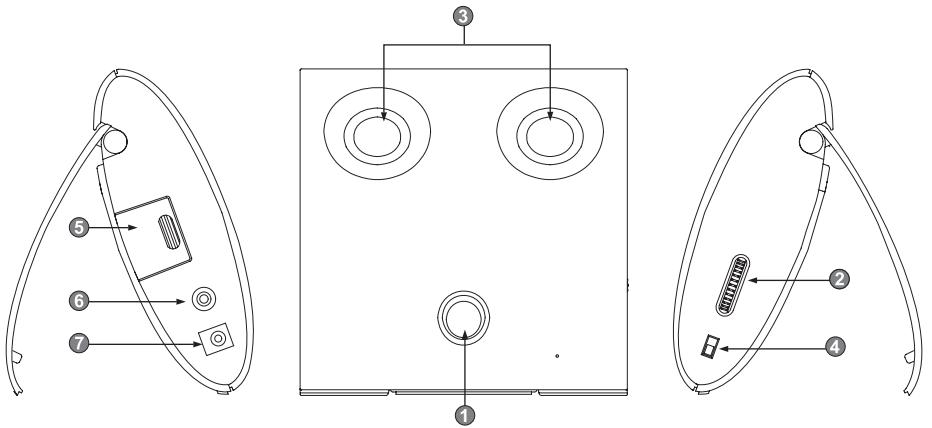

1. Operation LED Indicator (red/blue LED): When the operation LED indicator lights up (red and blue indicators flash alternatively), it indicates that the power is on and the Bluetooth is working normally.
2. Volume Control: Adjust the volume level by turning the volume knob or the volume wave-band switch.
3. Speaker unit with high sensitivity and high quality sound
4. Power ON/OFF
5. Battery jack and battery lid.
6. Audio In (AUX IN): For a 3.5mm audio input.
7. Power In (AC IN): Please connect to the appropriate power source consistent with the product.

Specifications

1. To use the Bluetooth built-in 2-channel stereo sound speaker, the audio output must be Bluetooth SIG 1.2 A2DP compliant.
2. Average Output Power (R.M.S): 4W (2W x2)
3. Dimensions of Speaker Unit: 34 x 34 mm Full Range Driver
4. Resistance: 4
5. Frequency Response: 250 Hz ~ 20 KHz
6. Power Input: AC 110V/60Hz or AAA-size Alkaline Battery x 4
7. Magnetically Shield: YES
8. Form Factor (W x H x D): 140 x 146 x 50mm
9. Operating Range: Up to 10m without interference
10. Bluetooth Specification: Bluetooth SIG 1.2 A2DP profile

(This product is subject to change without prior notice.)

Instruction on Operating Procedures

1. Please insert 4 AA-size batteries into the battery jack and reinstall the battery lid, or plug the power cable into a power outlet. Turn on the power. The LED indicator will flash in red and blue alternatively, indicating that the power is on and the Bluetooth is working normally.
2. The operation LED indicator keeps flashing in red and blue alternatively to indicate that the speaker is in pairing mode.
3. Please get a device ready for entering Bluetooth pairing or searching mode. The device may be one of the following: 1) a mobile phone, PDA, PC/NB or other device that supports the standard Bluetooth A2DP profile; or 2) a PC, MP3 player, iPod or other device with an external Bluetooth adapter (Bluetooth Dongle or Bluetooth TX).

*Note: Please refer to the Bluetooth user manual for how to pair and search your Bluetooth device of the music source.

4. After the pairing or searching succeeds, the LED indicator on the Bluetooth speaker will blink blue (4 times every 4 seconds) and the Bluetooth device of the music source will display successful connection to the Bluetooth speaker.
5. You may need to enter a password while two Bluetooth devices are pairing. The initial password of the Bluetooth speaker is □0000□.
6. When there is an incoming call from the connected mobile phone while the music is playing, the music will stop; and the Bluetooth speaker will resume the music if the call is finished.
7. The Bluetooth speaker also supports the input for external wired audio source. When the signal is received from an input of external wired audio source, the blue LED indicator on the Bluetooth speaker will be permanently ON and the Bluetooth mode will be deactivated. If you wish to activate the Bluetooth mode, just disconnect the external input to restore the Bluetooth mode.
8. If the pairing or searching fails, please repeat Steps 2 - 5.
9. The Bluetooth transmitter (Bluetooth Dongle or Bluetooth TX) is also available from the company.

*Note: When the LED indicator blinks red, it indicates that the power is low. Please replace with new batteries immediately; otherwise, it might cause the Bluetooth to work abnormally.

Package Contents

1. Speaker x 1
2. Input Signal Cable x 1
3. User Manual x 1
4. Adaptor (optional)

Notice

1. Changes or modifications are not expressly approved by the manufacturer could void the user's authority to operate the equipment. Changes or modifications to the device may void FCC and CE compliance. In frequently used radio links should be tested regularly to protect against undetected interference or fault
2. This device complies with EMC Directive 89/336/EEC, Low Voltage Directive 76/23/EEC and R&TTE Directive 1995/5/EEC. This product has been approved for upper directives and covers the following countries.
3. Avoid exposing speakers to environments that are excessively warm and humid (particularly in unventilated spaces or nearby heaters) or dusty.
4. Do not set speakers near windows exposed to direct sunlight or in areas prone to water seepage.
5. Avoid excessive vibration of speakers.
6. Clean speaker housing by wiping with mild cleaning solution. Do not use solvents!
7. The speakers incorporate an efficient anti-magnetic architecture, permitting use in close proximity to most television screens. If the use of your speakers cause distortions in your television screen colors, try the following:
Turn off and unplug your television, turn on the speaker(s). After waiting 15 to 30 minutes, turn the television on and increase the distance between screen and speakers until distortion disappears. Also, note whether other magnetic emission sources are in the immediate vicinity. If so, relocate so as to prevent screen distortion.
8. "!" WARNING : Before connecting or disconnecting any cables, make sure that the speaker's power button is in the " OFF " position and the power adapter is unplugged from the power source and not receiving power.
9. All other brand and product names are trademarks or registered trademarks of their respective holders.
10. All specifications subject to change without prior notice.