

## USER GUIDE

# Smart LED Remote System

Server & Web Service with Smart LED Remote System (V0.2)

## Contents

I.	System Administrator .....	4
1	Initializing the administrator system .....	4
1.1	Login .....	4
1.2	Server address settings.....	5
1.3	Setting Users .....	5
1.4	Setting Buildings .....	6
1.5	Setting Floors.....	6
1.6	Add Administrator .....	7
1.7	Identify GW key and edit.....	8
II.	Company Administrator .....	9
1	Initial Setting.....	9
1.1	Login .....	9
1.2	PW Change .....	10
1.3	SMTP set-up .....	10
1.4	Device Allocation .....	10
1.5	Linking Devices .....	12
1.6	Creating a Device Group.....	13
2	Administrator System Basic Functions .....	15
2.1	Dashboard .....	15
2.2	List of Errors .....	19
2.3	User List.....	22
2.4	Schedule.....	25

2.5	System Settings.....	29
2.6	Statistics .....	30
.....	.....	34

# I. System Administrator

## 1 Initializing the administrator system

The lighting control system can be used after the initialization settings have been completed.


Initialization is the process of setting up the necessary information while the system is operating.

### 1.1 Login

1.1.1 Address : <http://localhost/super/login>

1.1.2 Login using administrator's ID and PW


1.1.3 ID : admin@breeze.com, PW : 123456

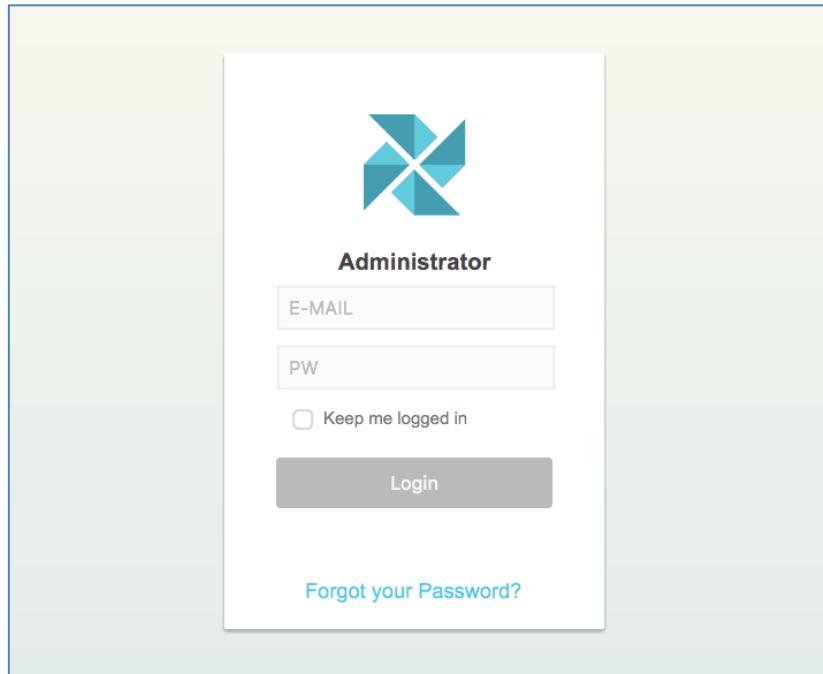

## 1.2 Server address settings



- 1.2.1 When you log in under light control system,  
Enter the domain address or IP address

Ex ) [www.samjin.co.kr](http://www.samjin.co.kr) or 192.168.1.100

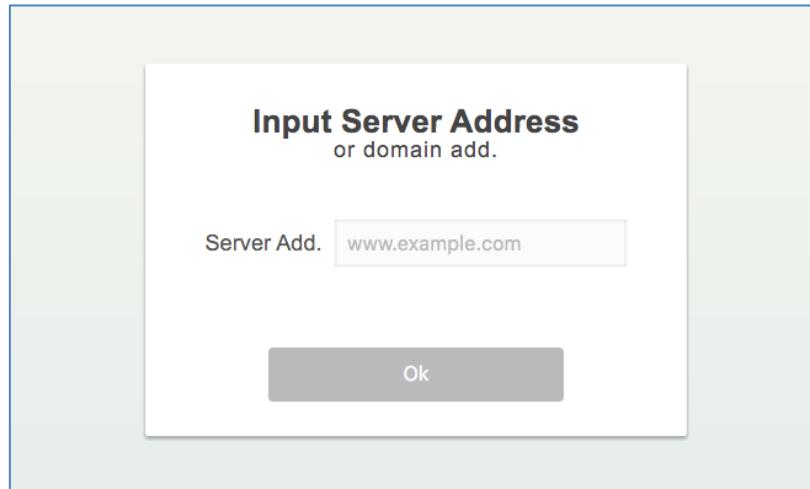


## 1.3 Setting Users

- 1.3.1 Tap **New User** and add a new company name.
- 1.3.2 Tap and add New User button 1
- 1.3.3 Enter company name 2

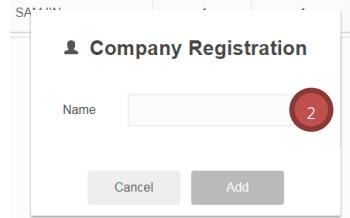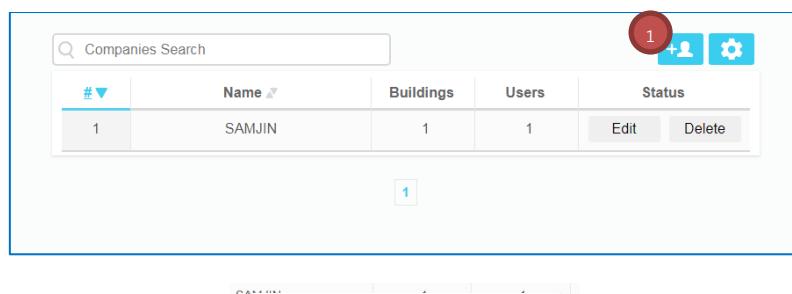


## 1.4 Setting Buildings

### 1.4.1 Tap Building section

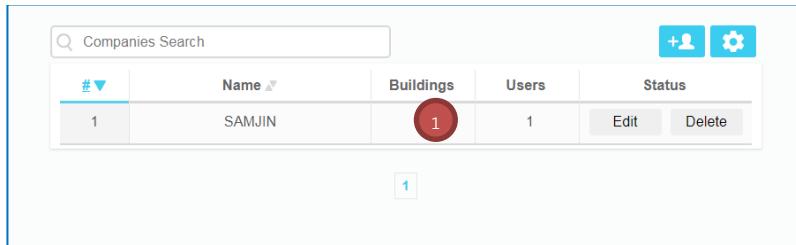


#	Name	Buildings	Users	Status
1	SAMJIN	1	1	<a href="#">Edit</a> <a href="#">Delete</a>

### 1.4.2 Tap & add New Building button

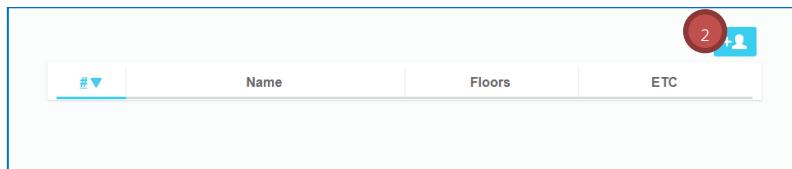

#	Name	Floors	ETC

### 1.4.3 Enter Building name

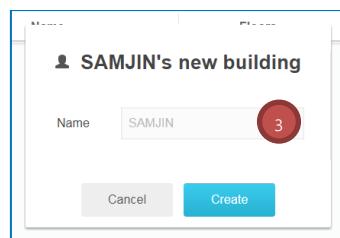


**SAMJIN's new building**

Name: SAMJIN

[Cancel](#) [Create](#)

## 1.5 Setting Floors

### 1.5.1 Tap Floors section

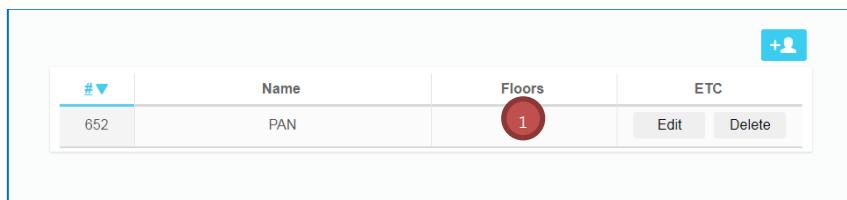


#	Name	Floors	ETC
652	PAN	1	<a href="#">Edit</a> <a href="#">Delete</a>

### 1.5.2 Tap & add New Floor button



#	Name	Level	BluePrint	ETC

1.5.3 Enter each floors' information ( Ex: for 1<sup>st</sup> floor, Name : 1F, Floor : 1 )

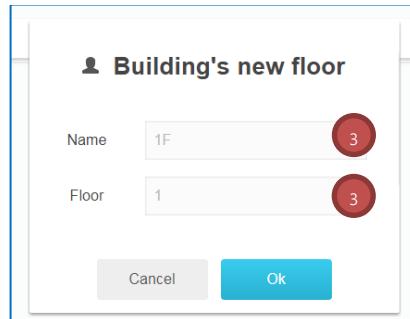


Building's new floor

Name: 1F 3

Floor: 1 3

Cancel Ok

1.5.4 Upload drawings after you tap the Upload button 4

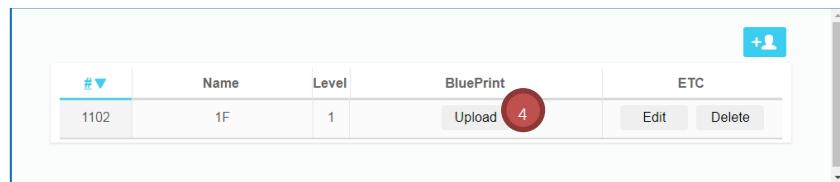

#▼	Name	Level	BluePrint	ETC
1102	1F	1	Upload <span>4</span>	Edit Delete

1.6 Add Administrator


1.6.1 Tap Building User section on Setting building 1



Companies Search


#▼	Name	Buildings	Users	Status
1	SAMJIN	1	1 <span>1</span>	Edit Delete

1.6.2 Tap & add New Administrator 2

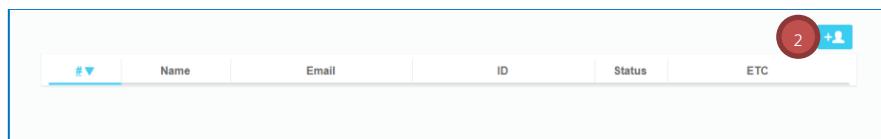

#▼	Name	Email	ID	Status	ETC
----	------	-------	----	--------	-----

#### 1.6.2.1 Enter New Administrator's information

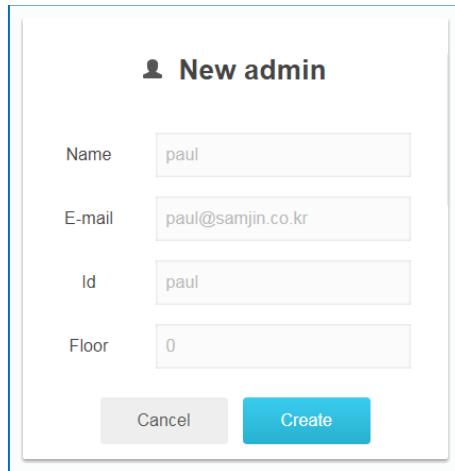

The image shows a modal dialog titled "New admin". It contains four input fields: "Name" (paul), "E-mail" (paul@samjin.co.kr), "Id" (paul), and "Floor" (0). At the bottom are "Cancel" and "Create" buttons.

#### 1.7 Identify GW key and edit


##### 1.7.1 Tap **Edit** button on setting building screen



The image shows a table with a header row: "#", "Name", "Buildings", "Users", and "Status". Below is a single data row: #1, Name SAMJIN, Buildings 1, Users 1, and Status (with an "Edit" button highlighted with a red circle labeled 1).

#	Name	Buildings	Users	Status
1	SAMJIN	1	1	<span>1</span> Edit Delete

##### 1.7.2 Token Key identify and change

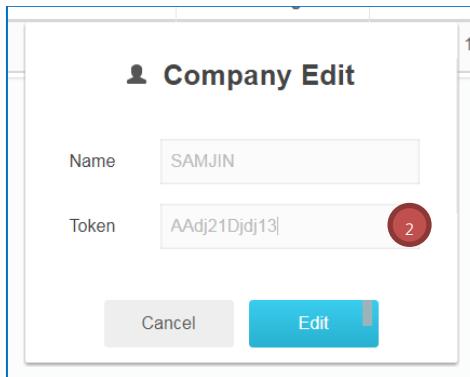

The image shows a modal dialog titled "Company Edit". It contains two input fields: "Name" (SAMJIN) and "Token" (AAdj21Ddj13). At the bottom are "Cancel" and "Edit" buttons. The "Token" field is highlighted with a red circle labeled 2.

## II. Company Administrator


Administrator can use this remote system after completing setting company and administrator.

### 1 Initial Setting

#### 1.1 Login


- 1.1.1 Login using administrator's ID and PW
- 1.1.2 Web address : <http://localhost/company/login>
- 1.1.3 Initial PW is account of email address

Ex.) ID : samjin@samjin.co.kr, PW : samjin

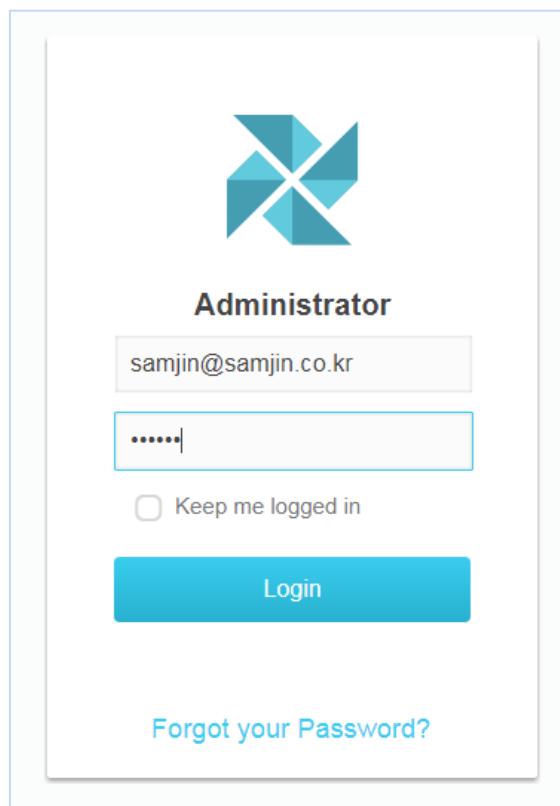

## 1.2 PW Change

### 1.2.1 Enter initial PW

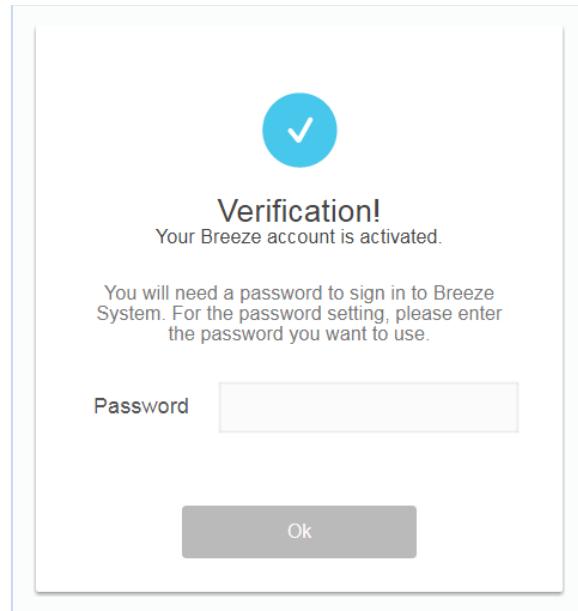

## 1.3 SMTP set-up

### 1.3.1 SMTP Server setting for administrator

**SMTP Server Setting**  
Please enter your e-mail address and  
SMTP details to use as a Sender Email.

Host name	<input type="text" value="smtp.gmail.com"/>
Port	<input type="text" value="465"/>
Email	<input type="text" value="ex) user@gmail.com"/>
Password	<input type="password" value="*****"/>

**OK**


## 1.4 Device Allocation

1.4.1 Choose Device type 1

1.4.2 Tap Device 2

1.4.3 Tap the right position 3


1.4.4 Gateway 는 미리 연결되어 있어야 합니다.

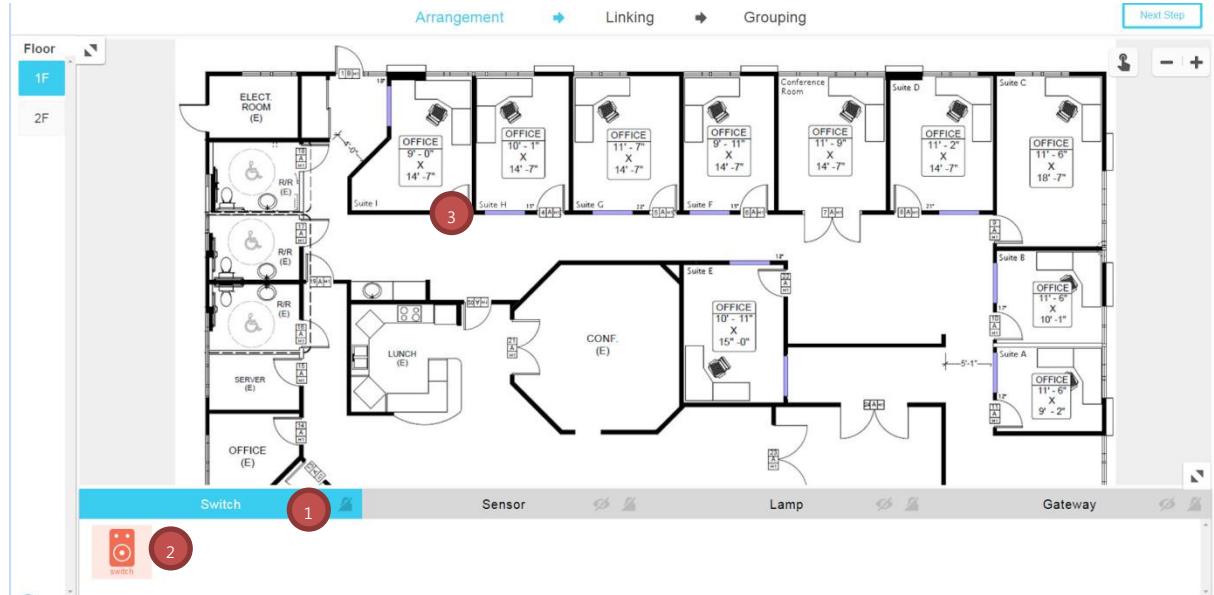


## 1.5 Linking Devices

### 1.5.1 Select gateway located in drawing and click Scan menu 1

### 1.5.2 List of scanned BLE lights from Gateway

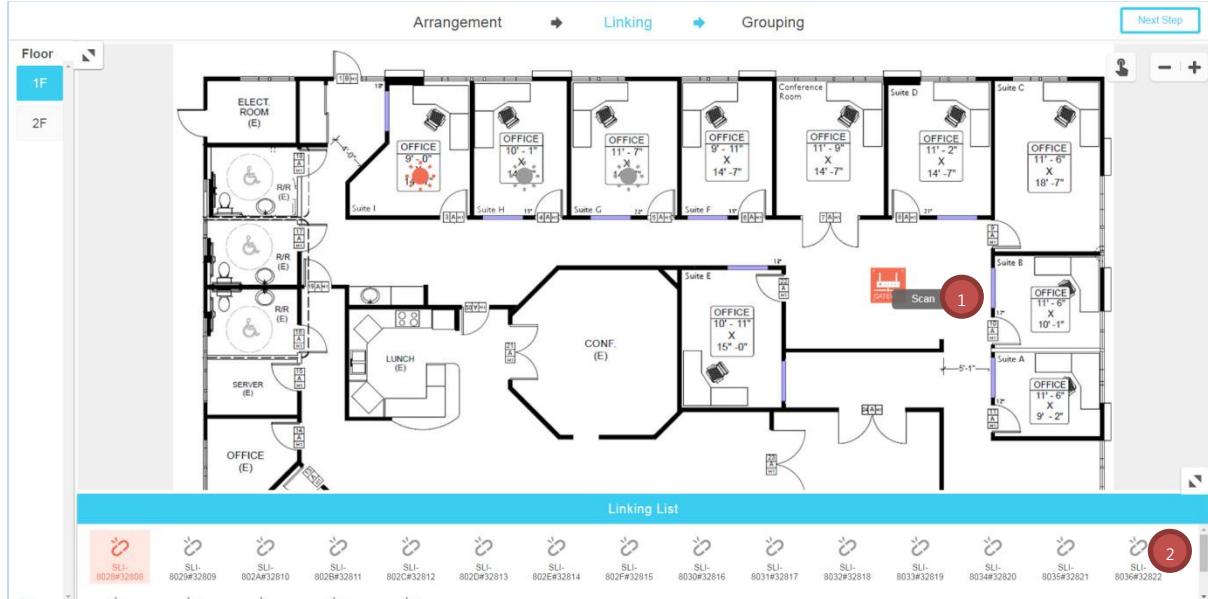

### 1.5.3 After selecting the device to be linked, selecting Linked device exposes Link menu 3

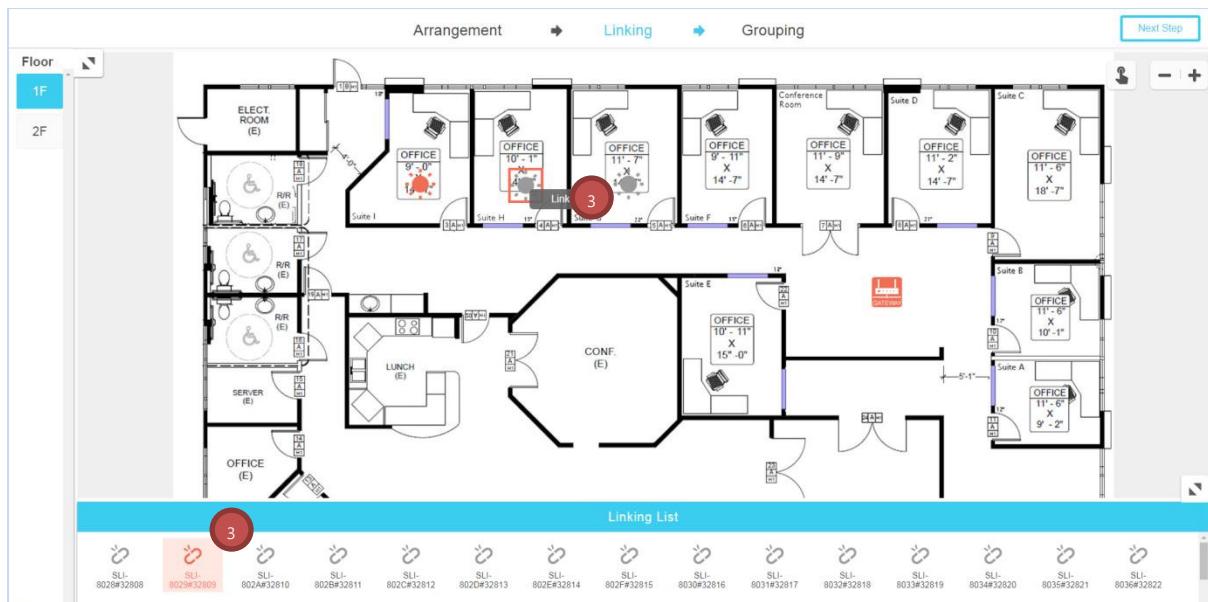

#### 1.5.4 Device Indication by Linking Status

##### 1.5.4.1 Linking required (grayed out)



##### 1.5.4.2 Completed linking (indicated by orange)



##### 1.5.4.3 Unlinkable (black background on device)



### 1.6 Creating a Device Group

#### 1.6.1 Creating Groups

##### 1.6.1.1 Click the "+" button on the right side of group list ①

##### 1.6.1.2 Automatically created after button click and displayed in front of list ②

#### 1.6.2 Adding lighting to a group

##### 1.6.2.1 Selecting the desired group ②

##### 1.6.2.2 Select the lights to include in the group from the lights on the drawing ③

#### 1.6.3 작업 완료 하기

#### 1.6.4 Completing the task


##### 1.6.4.1 After all the operations are completed, click the "Complete" button and go to the main screen ④



## 1.6.5 Renaming Groups

### 1.6.5.1 Selecting Groups to Rename 1


### 1.6.5.2 Enter after Enter Name 2

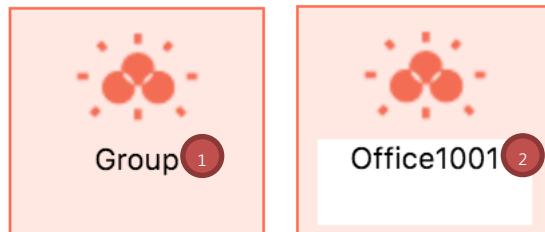

## 2 Administrator System Basic Functions


### 2.1 Dashboard

Dashboards make it easy for administrators to see the complete information of a system and easily navigate to a screen where the desired function is available.

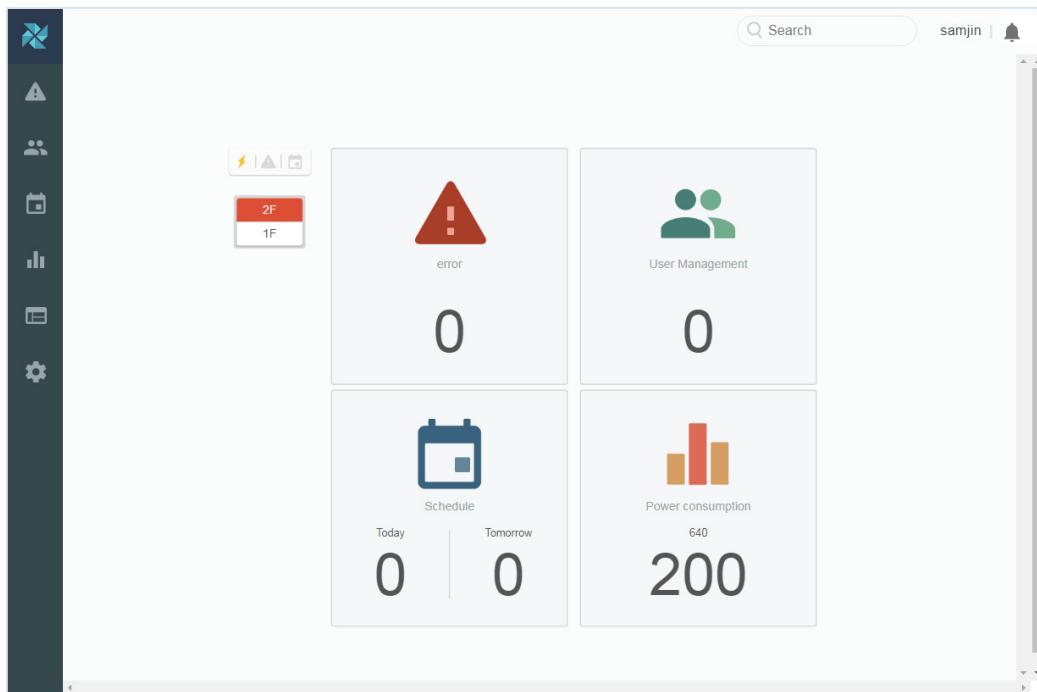

#### 2.1.1 Quick Search

- 2.1.1.1 Quickly check the information you want without moving to the user or schedule screen 1
- 2.1.1.2 If user name or schedule name is entered in the search box, the searched list appears in the list below. 2

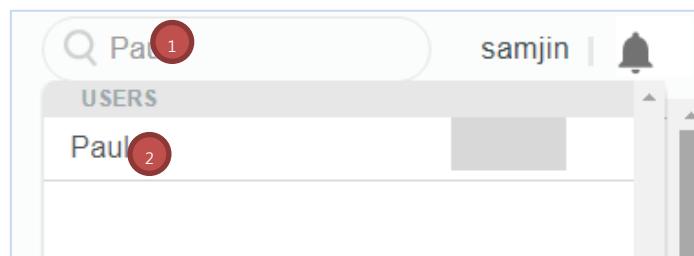


### 2.1.2 Connection User

2.1.2.1 In the top right corner, the user name of the currently logged-in account is displayed. ①

2.1.2.2 Confirmation of personal information by clicking on user name ②

2.1.2.3 Logout ③

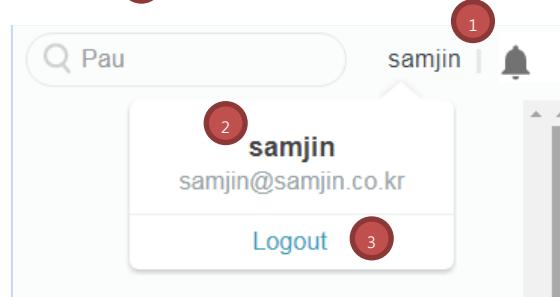

### 2.1.3 Floor Information


2.1.3.1 List of floors registered in current control system

2.1.3.2 Details with Floor Information

2.1.3.2.1 Power-consuming layers ①

2.1.3.2.2 Floor with Fault Generator ②

2.1.3.2.3 Schedule running layer ③

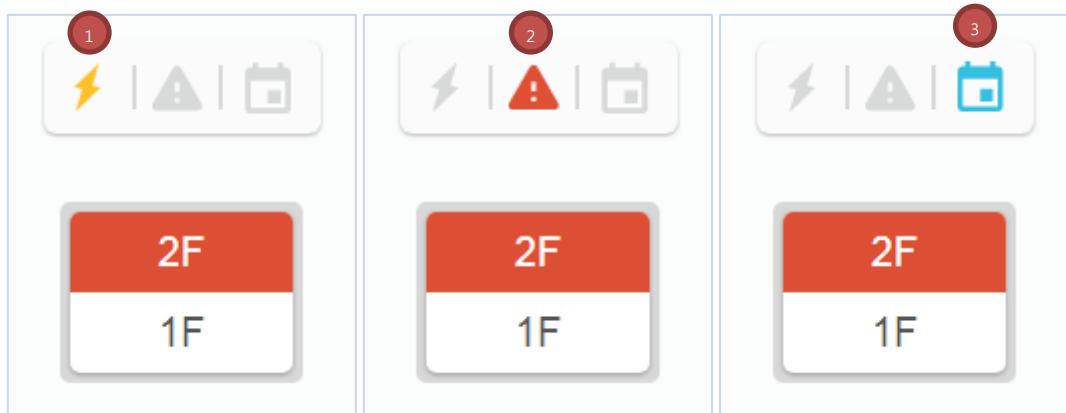

#### 2.1.4 Error Information

2.1.4.1 Number of errors that have not yet been acknowledged


2.1.4.2 Go to error list screen when clicking



#### 2.1.5 Schedule Information


2.1.5.1 A certain number of running or running today and tomorrow

2.1.5.2 Go to the schedule list screen when clicking

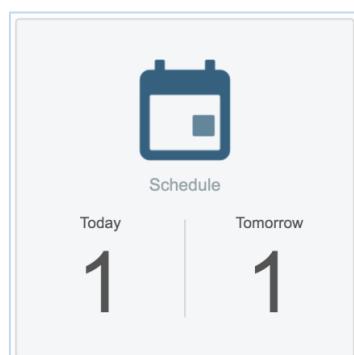


## 2.1.6 User Management Information

- 2.1.6.1 Number of Authorization Requests Generated by General Users after Membership
- 2.1.6.2 Approval or rejection processing is required on the user management screen
- 2.1.6.3 Go to user management screen when clicking

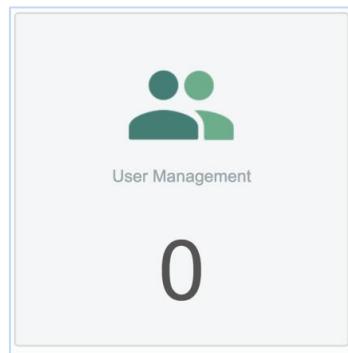

## 2.1.7 Power Consumption

- 2.1.7.1 100% of total current devices Total power
- 2.1.7.2 Indication of Current Power Consumption
- 2.1.7.3 Go to click statistics screen

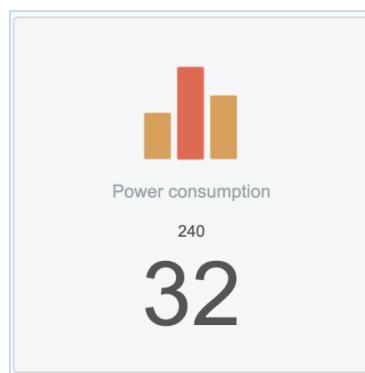

## 2.2 List of Errors

An error is a feature that informs the administrator when the status of the device becomes inaccessible. After the administrator has processed the device that caused the error, it must be resolved.

### 2.2.1 Searching 1

Search for "title, contents" of the error and check the error information you want to check

### 2.2.2 State classification 2

Check the error list by dividing it by "All errors", "Unresolved errors", and "Resolved errors"

### 2.2.3 Checking the error occurrence location 3

Check the location of the error on the drawing 4

The image shows a screenshot of a building management system interface. At the top, there is a search bar labeled "Error Search" with a magnifying glass icon. Below the search bar is a navigation bar with three tabs: "All" (highlighted in blue), "Issues" (highlighted in red), and "Resolved". The "All" tab has a sub-tab "Issues" with a red border. The main table has columns: #, Date, Title, Description, Device, Location, and Status. One row is shown: #3421, Date May 3, 2016, Title "Not connect", Description "it is disconnected", Device "lamp", Location "2F" (with a red circle around it), and Status "Resolved".

Below the table is a floor plan of a building. The floor plan shows various rooms and suites. A specific location is highlighted with a red circle and labeled "CONF. (E)". The floor plan includes room labels such as "ELECT. ROOM (E)", "OFFICE 9' - 0" X 14' - 7", "OFFICE 10' - 1" X 14' - 7", "OFFICE 11' - 7" X 14' - 7", "OFFICE 9' - 11" X 14' - 7", "OFFICE 11' - 9" X 14' - 7", "LUNCH (E)", "CONF. (E)", and "GATE". A red circle labeled "4" is placed on the floor plan near the "CONF. (E)" room.



## 2.2.4 Creating Comments

2.2.4.1 If you select the Description area 1

2.2.4.2 Click Edit to create and modify a Comment 2

All			Issues		Resolved		
#	Date	Title	Description	Device	Location	Status	
1	Mon Jan 29 2018	Not connect	it is disconnected	SLI-8041	2F	<span style="border: 1px solid red; border-radius: 50%; padding: 2px 5px;">1</span> <span style="border: 1px solid red; border-radius: 50%; padding: 2px 5px;">2</span>	

it is disconnected

SLI-8041

2F

**Comment**

Disconnected Edit 2

All			Issues		Resolved		
#	Date	Title	Description	Device	Location	Status	
1	Mon Jan 29 2018	Not connect	it is disconnected	SLI-8041	2F	<span style="border: 1px solid red; border-radius: 50%; padding: 2px 5px;">1</span> <span style="border: 1px solid red; border-radius: 50%; padding: 2px 5px;">2</span>	

it is disconnected

SLI-8041

2F

**Comment**

Disconnected Edit

## 2.2.5 Resolving

2.2.5.1 If the error is no longer a problem, press the Clear button to change it to the Fixed state. 1

2.2.5.2 Errors once resolved can not be reverted back to open state

All			Issues		Resolved		
#	Date	Title	Description	Device	Location	Status	
1	Mon Jan 29 2018	Not connect	it is disconnected	SLI-8041	2F	<span style="border: 1px solid red; border-radius: 50%; padding: 2px 5px;">1</span>	



## 2.3 User List

You can only control lights that have certain rights. After adding a user, the administrator must register the lights that the user can control.

### 2.3.1 Create User

2.3.1.1 Click the top right button 1

2.3.1.2 Adding Manual 2

2.3.1.2.1 Enter user information and click "Add" button 3

2.3.1.3 Adding as a file 4

2.3.1.3.1 Write user information to a file

2.3.1.3.2 After uploading the created file, click "Add" button

### 2.3.2 Search 5


2.3.2.1 Retrieve a user's name, email, or assigned lighting information

### 2.3.3 State classification 6

2.3.3.1 Confirm the user list divided into "Full, Activate, and Disable"



User List						
#	Name	Email	Floor	Device	Status	Action
403	Kim	kim@samjin.co.kr	1	1	InActive	<span>Reset</span> <span>Remove</span>
402	Paul	paul@samjin.co.kr	1	1	InActive	<span>Reset</span> <span>Remove</span>

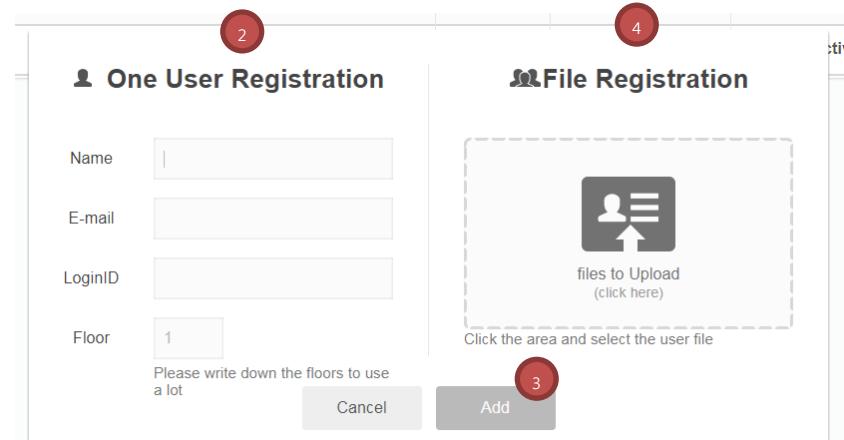

**One User Registration**

Name:

E-mail:

LoginID:

Floor:

Please write down the floors to use a lot

**File Registration**


files to Upload (click here)

Click the area and select the user file

3 Add

#### 2.3.4 Lighting registration

- 2.3.4.1 Can register and remove user controllable light
- 2.3.4.2 Click the  icon on the "Device" tab to display the setting popup
- 2.3.4.3 Select the desired layer and device and click "Save" button 
- 2.3.4.4 Click to cancel the setting and return to the previous state 

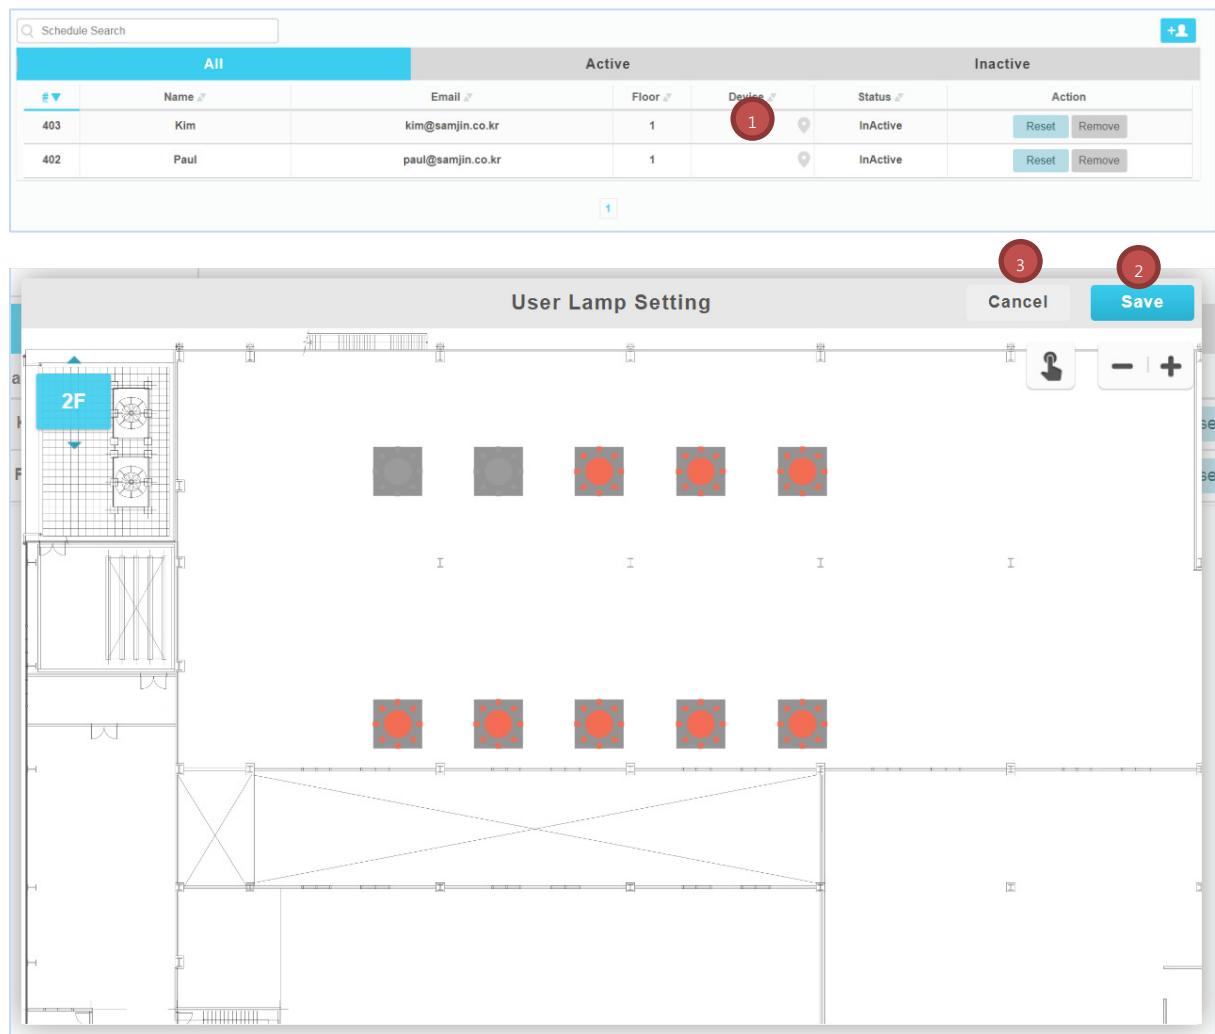

The image shows two screenshots of a software interface for managing lighting devices. The top screenshot is a table titled 'Device' with columns for ID, Name, Email, Floor, Device, Status, and Action. It shows two entries: '403 Kim' and '402 Paul', both in an 'InActive' status. The 'Device' column for both entries is highlighted with a red circle containing the number '1'. The bottom screenshot is titled 'User Lamp Setting' and shows a floor plan of a building with multiple floors. The floor plan is divided into sections with labels like '2F' and '1F'. On the floor plan, several circular icons represent lighting devices, some of which are highlighted with red circles. The 'Save' button in the top right corner is highlighted with a red circle containing the number '2'. The 'Cancel' button is highlighted with a red circle containing the number '3'.

All		Active			Inactive	
#	Name	Email	Floor	Device	Status	Action
403	Kim	kim@samjin.co.kr	1		InActive	 
402	Paul	paul@samjin.co.kr	1		InActive	 

## 2.3.6 Changing User State

### 2.3.6.1 User Status is checked on the Status tab. 1

2.3.6.1.1 Every time a user's status changes, the content is emailed

2.3.6.1.2 Ready: Waiting for administrator approval after signing up

2.3.6.1.3 Inactive: The state in which a password must be set

2.3.6.1.4 Active: A state in which a function can be normally used

2.3.6.1.5 Locked: Connection is restricted by administrator

### 2.3.6.2 User state can be changed by using the button in the Action tab 2

2.3.6.2.1 Reset: Have the password reset

2.3.6.2.2 Lock: Restrict system access

2.3.6.2.3 Unlock: Disable System Access Restrictions

2.3.6.2.4 Remove: Account deleted

2.3.6.2.4.1 Appears when the user account is not "Active"



The screenshot shows a user management interface with a table of users and an action bar. The table has columns for #, Name, Email, Floor, Device, Status, and Action. The Status column is highlighted with a red circle containing the number 1. The Action column is highlighted with a red circle containing the number 2. The Action column contains buttons for Reset and Remove.

All						
#	Name	Email	Floor	Device	Status	Action
403	Kim	kim@samjin.co.kr	1	1	InActive	<span>Reset</span> <span>Remove</span>
402	Paul	paul@samjin.co.kr	1	1	InActive	<span>Reset</span> <span>Remove</span>

## 2.4 Schedule


Schedule is a function that allows you to specify the time and status you want and automatically control the devices. Registered schedules can be viewed in timeline or list format. Transformations in the timeline and list format can be done via tabs at the top center.

### 2.4.1 Timeline

2.4.1.1 Check the registered schedule by date and time

2.4.1.2 The displayed color differs depending on how the schedule is executed

2.4.1.2.1 Duration: It returns to the state before the schedule operation after the specified state is maintained for a certain period of time.

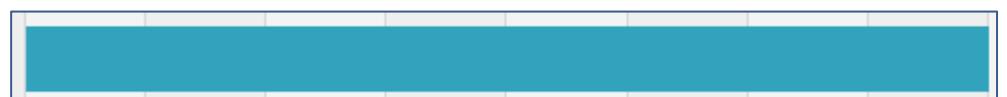

2.4.1.2.2 Spot: changes the devices to the specified state at a fixed time without retention time and finishes the operation



2.4.1.3 Change the date unit 1

2.4.1.3.1 Daily Units


Schedule for the selected date (0 to 24 hours)

2.4.1.3.2 Main Unit

Schedule for the selected week (Monday through Sunday)

2.4.1.3.3 Monthly Unit

Select month's schedule

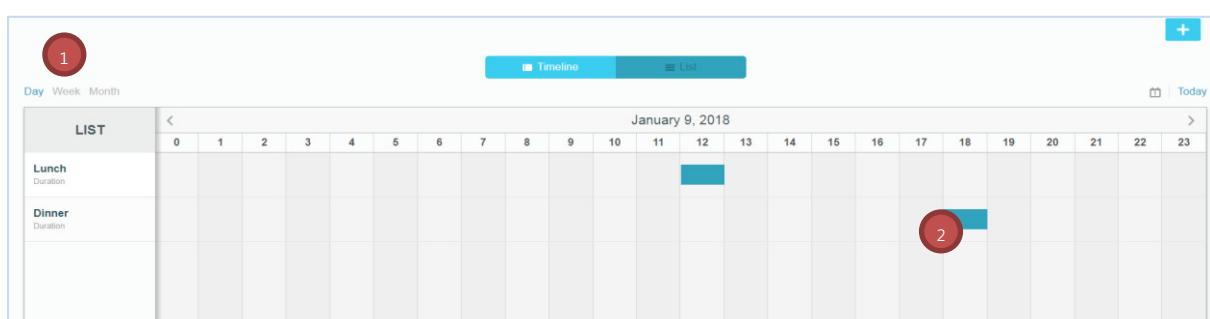

## 2.4.2 List

2.4.2.1 Registered schedules can be checked at a glance with detailed information




#	Title	Start Time	End Time	Repeat	Target	Kelvin	Dimming	Sensor	Power
122	Night	19 : 0	9 : 0 (+1day)	Yes	target	0	0	OCP	ON
112	Morning	10 : 0	18 : 0	Yes	target	0	0		ON

## 2.4.3 Checking and deleting schedule details

2.4.3.1 If you click on the schedule in the list or timeline, the detailed information confirmation popup appears 2

2.4.3.2 Delete schedule Click the top right button of the detail information popup 3

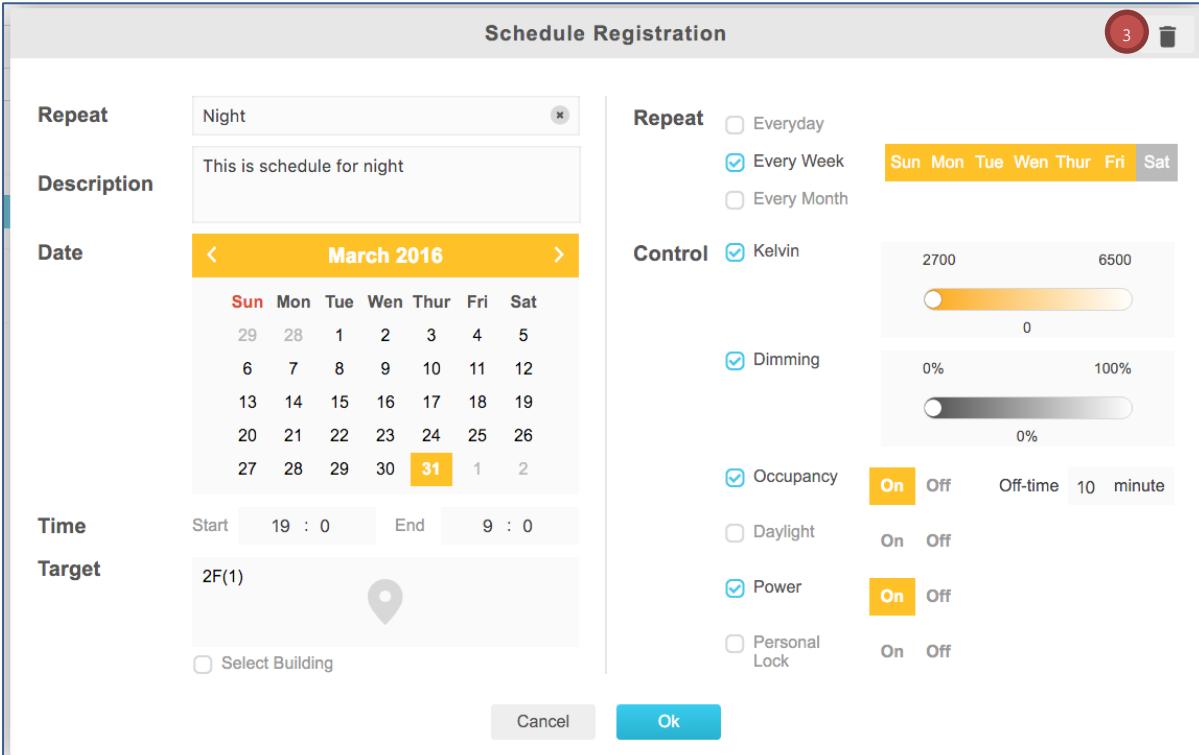

The dialog box is titled "Schedule Registration". It contains the following fields:

- Repeat:** Set to "Night".
- Description:** "This is schedule for night".
- Date:** A calendar for March 2016, showing the 31st as the selected date.
- Time:** Start time is 19 : 0, End time is 9 : 0.
- Target:** Set to "2F(1)".
- Control:** Kelvin slider from 2700 to 6500, set to 0. Dimming slider from 0% to 100%, set to 0%. Occupancy switch is checked. Power switch is checked. Daylight switch is unchecked. Personal Lock switch is unchecked.
- Buttons:** "Cancel" and "Ok".

## 2.4.4 Creating Schedules

2.4.4.1 Click the Add button at the top right of the timeline or list

2.4.4.2 Schedule Registration Popup

2.4.4.2.1 Title

2.4.4.2.2 Schedule Description

2.4.4.2.3 Start date

2.4.4.2.4 Start Time / End Time

2.4.4.2.5 Target Devices

2.4.4.2.5.1 Select All 1

2.4.4.2.5.2 Partial Device Selection 2

2.4.4.2.5.2.1 Select the desired device and click the Save button 3

2.4.4.2.6 Repeat

2.4.4.2.6.1 Repeat every day

2.4.4.2.6.1.1 Schedule will run at a fixed time every day from the start date

2.4.4.2.6.2 Repeat every week

2.4.4.2.6.2.1 Weekly Schedule runs at a specified time of the specified day of the week

2.4.4.2.6.2.2 The day of the week specified as the start date must be selected

2.4.4.2.6.3 Repeat monthly

2.4.4.2.6.3.1 Schedule runs at the appointed time on the same day of the month from the start date

2.4.4.2.7 제어

2.4.4.2.8 Control

2.4.4.2.8.1 Check each control item and change it to the set value. Unchecked item means to maintain the existing state. 4

2.4.4.2.8.1.1 Color Temperature

2.4.4.2.8.1.1.1 2700-6500


2.4.4.2.8.1.2 Brightness

2.4.4.2.8.1.2.1 0-100

2.4.4.2.8.1.3 Power

**Schedule Registration**

<b>Title</b>	<input type="text"/>																																										
<b>Description</b>	<input type="text"/>																																										
<b>Date</b>	<span>&lt;</span> <b>January 2018</b> <span>&gt;</span> <table border="1"> <tr><td>Sun</td><td>Mon</td><td>Tue</td><td>Wen</td><td>Thur</td><td>Fri</td><td>Sat</td></tr> <tr><td>31</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td></tr> <tr><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr> <tr><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td></tr> <tr><td>28</td><td>29</td><td>30</td><td>31</td><td>1</td><td>2</td><td>3</td></tr> </table>	Sun	Mon	Tue	Wen	Thur	Fri	Sat	31	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	1	2	3
Sun	Mon	Tue	Wen	Thur	Fri	Sat																																					
31	1	2	3	4	5	6																																					
7	8	9	10	11	12	13																																					
14	15	16	17	18	19	20																																					
21	22	23	24	25	26	27																																					
28	29	30	31	1	2	3																																					
<b>Time</b>	Start <input type="text"/> End <input type="text"/>																																										
<b>Target</b>	<input type="checkbox"/> Select Building <span>1</span> <span>2</span>																																										
<input type="button" value="Cancel"/> <input type="button" value="Ok"/>																																											

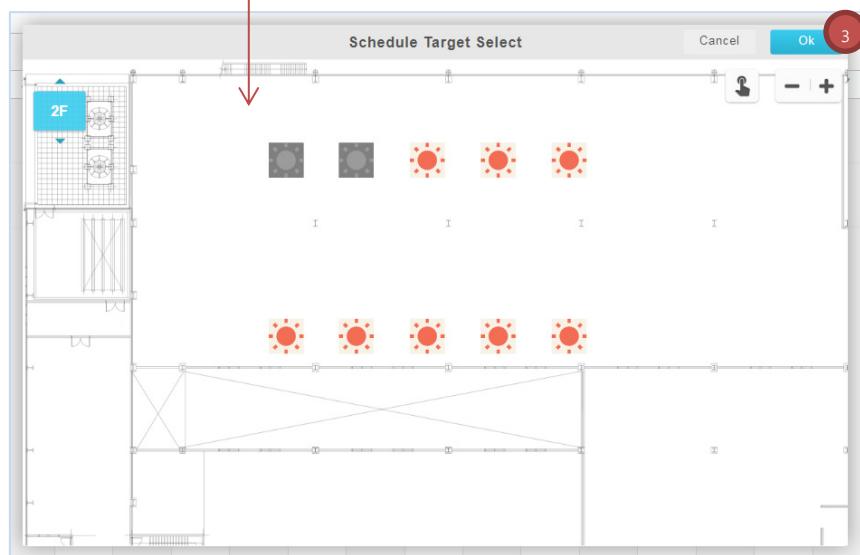


## 2.5 System Settings

System setting is the function to set administrator account, password policy, SMTP server and device layout information. Because all of these functions can change important information that can have a significant impact on the operation of the system, you must verify the administrator account when accessing the functions.

### 2.5.1.1 Account Identification

2.5.1.1.1 Before using each function, be sure to login again with administrator account

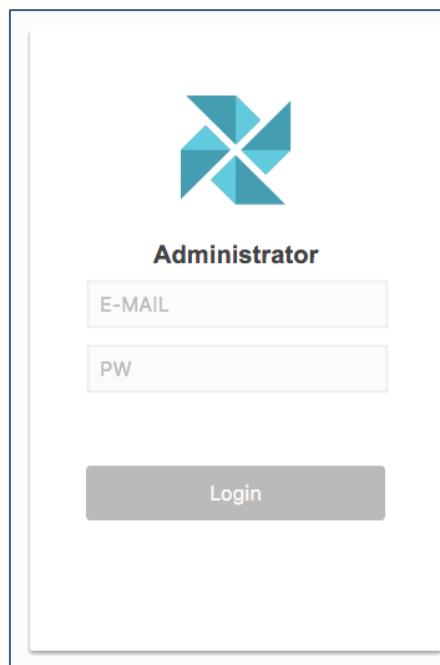

### 2.5.1.2 Password Policy

You can set a policy that limits the length of special characters and passwords that can be used for user or administrator passwords.

The already registered password does not reflect the modified policy, but it can be modified according to the modified policy at the time of modification.

#### 2.5.1.2.1 Length Limitations

2.5.1.2.1.1 Length Limitations

2.5.1.2.2 Available special characters

2.5.1.2.3 Forcing Special Characters

2.5.1.2.4 Complex Case

2.5.1.2.5 Character / number combination

2.5.1.2.6 Password Change Cycle

2.5.1.2.6.1 Setting the Password Change Cycle sends a message to reset all users' passwords for a fixed period of time

**Password Policy**

Minimum Password Length 10 ▾

Allowed Special Characters ~!@#\$%^&\*()\_+

Containing Special Characters (by force)

Containing Upper-case Letters (by force)

Containing Mixed Letters of the Alphabet and Numbers (by force)

**Options**

Password Change Interval 12 ▾ week(s)

**Save**

2.5.1.3 SMTP Settings

2.5.1.3.1 \* Refer to 1-D

2.5.1.4 setting Up Floor Layout

2.5.1.4.1 \* See 1-F

2.6 Statistics

Statistical information is divided into real-time data and cumulative data.

Real-time data shows real-time power usage from 0 to 24 hours today.

The cumulative data can be seen in two types of graphs of power usage over a desired period of time.

2.6.1.1 Real-time monitoring

### 2.6.1.1.1 Change destination 1

2.6.1.1.1.1 Function is the same as schedule target selection (see \* 2-D schedule registration)

### 2.6.1.1.2 Automatic information update once a minute



### 2.6.1.2 Cumulative Data

Cumulative data graph is a function to check the accumulated power usage data when the system is operated. Each graph can compare up to five targets at the same time, and you can check up to five graphs at a time.

#### 2.6.1.2.1 Adding a new graph

##### 2.6.1.2.1.1 Graph Type Selection 1

2.6.1.2.1.1.1 bar

2.6.1.2.1.1.2 Line

2.6.1.2.1.2 Enter a title 2

2.6.1.2.1.3 Data Period 3

2.6.1.2.1.3.1 Calendar Popup Exposure When Clicking Calendar Icon


2.6.1.2.1.3.2 Upper calendar: Start date 4

### 2.6.1.2.1.3.3 Down Calendar: End date 5

2.6.1.2.1.4 Target Selection (\* 3-D Schedule Target Selection Method) 6

2.6.1.2.1.5 Entire target

2.6.1.2.1.6 Selecting Partial Targets

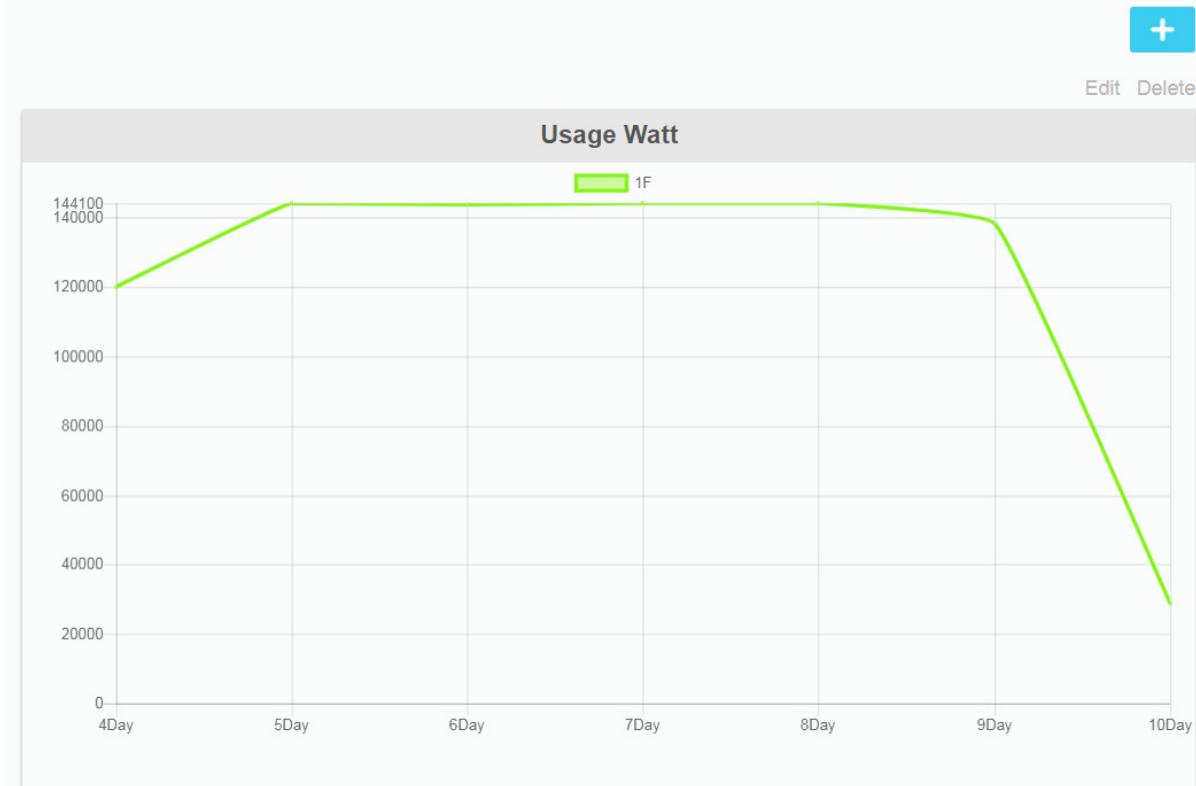

### 2.6.1.2.2 Delete Graph


2.6.1.2.2.1 Delete button at the upper right of the graph to be deleted

### 2.6.1.2.3 Changing the Graph

2.6.1.2.3.1 Modify Information in the Same Way as Create Popup

**Statistics Registration**

Statistics Type

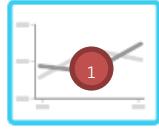

Title

Period

January 2, 2018

January 9, 2018

Target

Select Building

Building Location


Cancel
Ok

**January 2018**

Sun	Mon	Tue	Wen	Thur	Fri	Sat
31	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3

**January 2018**

Sun	Mon	Tue	Wen	Thur	Fri	Sat
31	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3

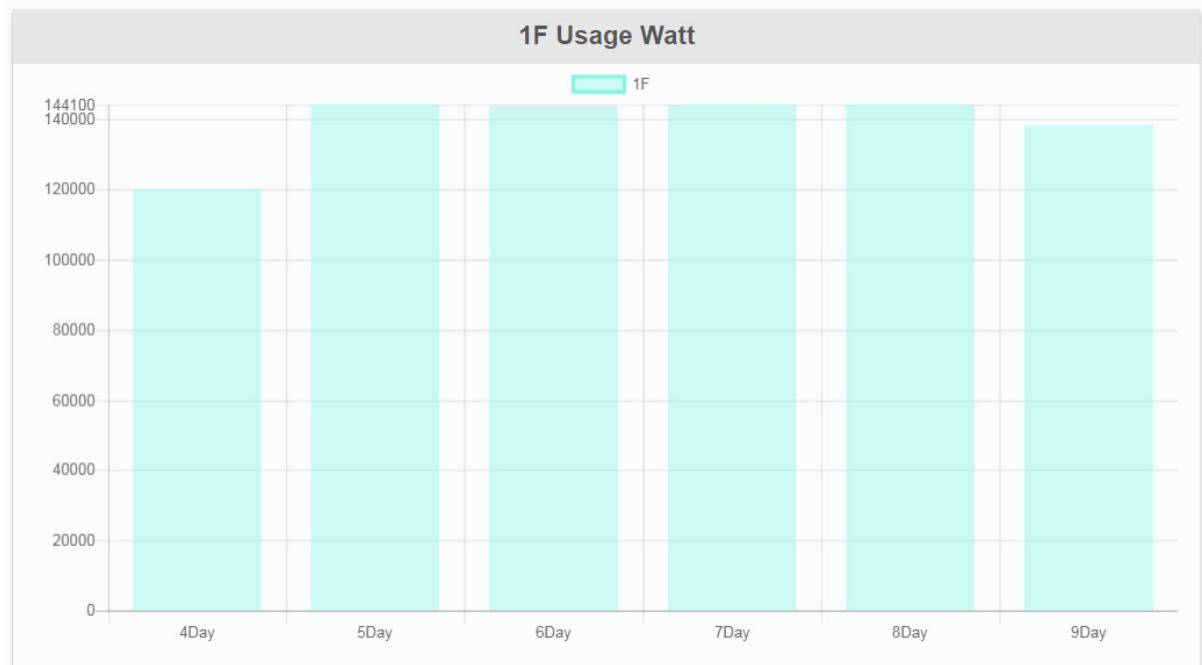

## **(CLASS B)**

### **FCC Information to User**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Caution**

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Compliance Information :** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

### **IMPORTANT NOTE:**

#### **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

*Leading through light innovation*



※ For product inquiries and AS, Please contact SAMJIN LND Co., Ltd (representative number: 031-379-2020) for further information



Manufacturer: SAMJIN LND Co., Ltd.  
Address: 64-17, Dongtangiheung-ro, Dongtan-myeon  
Hwaseong-si, Gyeonggi-do, 18487, Korea