

Iqua UFO

Bluetooth® Portable Handsfree



 
 
 
User Guide





Contents

- About Bluetooth® Technology 2
- General Information 3
- Getting Started 6
- Call Functions 9
- Other Functions 11
- Product Specifications 12
- Battery Information 13
- Care and Maintenance 14
- 12 MONTH LIMITED WARRANTY 16



About Bluetooth® Technology

Bluetooth is technology used for wireless communication between devices.

Bluetooth technology is based on a radio receiver and transmitter built into a tiny microchip, one of which is incorporated into this product and the other is in a compatible mobile phone.

Bluetooth enables wireless connections between a device and a mobile phone within a radius of 10 meters of each other, without a physical cable or a line-of-sight connection.

 
 
Iqua UFO Bluetooth® Portable Handsfree can be used with any brand of Bluetooth mobile phones that supports Headset or Handsfree profiles. For the latest compatibility information, please visit www.iqua.com.

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by IQUA is licensed. Other trademarks and trade names belong to their respective owners.

General Information

Thank you for purchasing Iqua UFO Bluetooth® Portable Handsfree. Your new device is a stylish product that enables you to communicate comfortably with compatible mobile phones that support Bluetooth wireless technology. It is light and pocket-sized and designed to be used at the office, at home or while traveling. The device can be charged with the charger included in the sales package.


Overview of the product

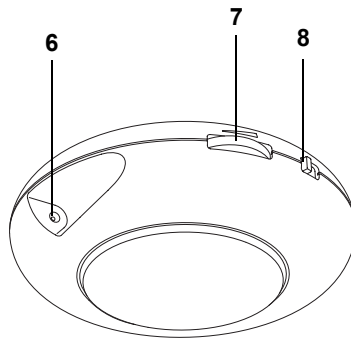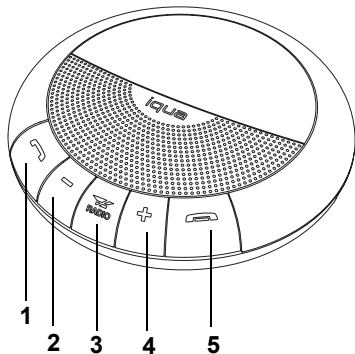

You can control the device with 5 push buttons:

1  Call button


Answer an incoming call
Select an option

2  button


Browse down

3  Radio/Mute button

Switch on/off the radio
Mute/unmute an active call

4  button

Browse up

5  End Call button

End an active call
Reject an incoming call
Cancel an option

Other parts include:

6 Charger connector

Connect the compatible charger to this connector.

7 Volume control

Adjust the volume by turning the volume wheel.

 
 
 
8 Power switch

Switch the device on/off by pushing the power switch to the left/right respectively.

Sales package

Remove all of the components from the sales package.

1. UFO
(including grip pad)
2. Wall charger
3. Quick guide
4. User guide

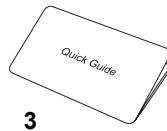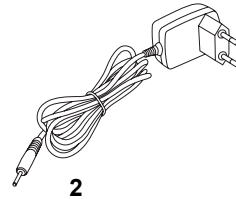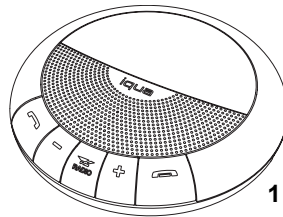



Getting Started

Charging the battery

Before you use Iqua UFO the first time, you must charge its battery for approximately 3.5 hours. Once the battery is full, it will provide up to 8 hours of talk time and up to 220 hours of standby time.

1. Connect the charger cable to the UFO.
2. Connect the wall charger to a wall outlet. If the UFO has been switched on, the battery symbol on its display will indicate it is charging. You can also charge the UFO without switching it on.
3. Once the battery is full, the battery symbol will be shown as fully charged. Unplug the charger from the wall outlet and disconnect it from the UFO.

Switching on and off

To switch on the UFO, push the Power switch to the left.

To switch off the UFO, push the Power switch to the right.

Pairing the UFO with your mobile phone

Pairing is the process of linking the UFO to a Bluetooth-enabled mobile phone. After this process is complete, you can only use it with this paired phone. If you want to use it with another phone, you must repeat the pairing process. The process depends on the model of your phone. Please refer to the user guide of your phone for details.

To start pairing for the first time, follow these steps:

1. Make sure that the battery is charged.
2. Switch on the UFO.
3. Press both the **+** button and the **-** button at the same time for a couple of seconds.
4. The UFO will be available for new compatible Bluetooth devices within its operating range. A Bluetooth symbol will flash in the upper right corner of the phone display to indicate that pairing is in progress. When the phone has found the device, you will see **Iqua UFO** on the phone display. Select **Yes** and enter the UFO ID code **0000**.
5. Once pairing has been successfully completed, you will hear a long beep and the Bluetooth symbol on the phone display will stop flashing to indicate an active connection between the UFO and the phone.

If the UFO has already been paired with a phone, it will find this phone the next time it is switched on and pair with it automatically.

If you want to cancel pairing, or if the UFO does not find a phone to pair with, you can stop it from trying by pressing the **End** button. To try again, repeat the steps above.

Disconnecting the UFO and the phone

To disconnect the UFO and the mobile phone, do any of the following:

1. Turn off the UFO.
2. Disconnect the UFO through the menu in your phone.
3. Move the UFO more than 10 meters away from the phone.




The UFO will also be disconnected if the battery is empty.



Reconnecting the paired UFO to the phone

To reconnect the UFO to the default mobile phone or the phone that was used last, switch on the UFO. Otherwise, connect through the menu on your phone as instructed in the user guide for your phone.

Using the UFO functions

Once the UFO has been switched on and it is in standby mode, you can enter the main menu by pressing either the  or  button twice. The UFO will always return to standby mode if its functions are not used for a while. You can always return to standby mode also by pressing and holding down .

- To use the call and other functions, switch on the UFO so that it is in standby mode.
- These functions depend on the model of your phone. For the latest compatibility information, please visit www.iqua.com.

Call functions

Downloading contacts

To be able to make calls and use the contacts saved in your mobile phone you need to download them to the UFO. Before you use the downloading function, pair the UFO with the phone in handsfree mode.

Press the **+** button twice to display the UFO menu. You will see **Call menu** first on the list. Press **OK** to enter the menu. Using the **+/ -** buttons, browse to **Download phonebook** and press **OK**. The UFO will go to download mode and you can send your contacts from the mobile phone via Bluetooth. This function depends on the model of your phone. Please refer to the user guide of your phone for details.

Making calls

Make a phone call from the phonebook

Press the **+** button twice to display the UFO menu. You will see **Call menu** first on the list. Press **OK** to open the Call menu. You will see **Phonebook** first on the list. Press **OK** to enter the phonebook. Select a contact by browsing with the **+/ -** buttons. Press **OK** once more to dial the call.

Redial a last dialed number

Press the **OK** button twice to display the **Redial** menu. Select a phone number by browsing with the **+/ -** buttons. Press **OK** once more to dial the call.

Dial to a received number

Press the **+** button twice to display the UFO menu. You will see **Call menu** first on the list. Press **OK** to open the Call menu. You will see **Received calls** third on the list. Browse to it with the **+**/**-** buttons. Press **OK** to open the **Received calls** menu. Browse to a phone number and press **OK** once more to dial the call.

Answering, ending and rejecting calls

When a call comes in, you will hear the ringing tone either through your mobile phone or the UFO's speaker or through both.

Answer a call

To answer a call, press the **OK** button.

End a call

To end an active call, press the **END** button.

Reject a call

When you have an incoming call that you do not want to answer, press the **END** button.

Muting an active call

You can mute or unmute an active call by pressing the **MUTE** button during the call. To unmute the microphone, press the button once more.

Other Functions

Time and date setting

Press the **+** button twice to display the UFO menu. Using the **+**/**-** buttons, browse to **Date/Time settings**. Press **ENTER** to enter the settings mode. You can browse the options with **+**/**-** and select each setting with **ENTER**. To cancel a setting, press **ENTER**.

Radio

Press the **RADIO** button to open the radio. You can tune the channels manually with the **+**/**-** buttons. Pressing and holding down the **+** or **-** button will make the UFO search for the next available radio station automatically.

Erasing paired phones

To erase all paired phone information from the UFO memory, press and hold down the **-**, **+** and **RADIO** buttons simultaneously for 3 seconds. After this procedure the UFO will not search for phones when it is switched on.

Erasing phonebook

To erase all phonebook information from the UFO memory, press the **+** button twice to display the UFO menu. You will see **Call menu** first on the list. Press **ENTER** to enter the menu. Using the **+**/**-** buttons, browse to **Erase phonebook** and press **ENTER**. Press **ENTER** once more to confirm. All contacts and numbers in the phonebook will be deleted.



Product Specifications

Model:	Iqua PHF-601
Size:	110 mm (L) x 110 mm (W) x 33 mm (H)
Weight:	150 g
Talk Time:	Up to 8 hours
Standby Time:	Up to 220 hours
Battery:	Lithium-polymer 3.7V 2200mA
Supported Bluetooth Profiles:	Headset 1.1, Handsfree 1.0 and Object Push 1.1
Bluetooth Compliance:	Version 1.2
Paired Devices:	Up to 8, one at a time
Operating Temperature:	Between -10°C and 85°C (14°F and 185°F)
Operating Range:	Up to 10 meters
Display:	Graphic LCD
Display resolution:	128 (W) x 64 (H)
Display visible area:	52.6 mm (W) x 27.5 mm (H)

Battery Information

- Do not attempt to replace the battery by yourself as it is built-in and cannot be changed.
- Do not dismantle the charger as it may expose you to dangerous voltages or other hazards.
- Please charge the device only with the chargers provided by the manufacturer.
- Incorrectly reassembling the device can cause electric shock when it is used again.
- Do not use the charger outdoors or in a humid environment.
- Avoid charging the device in extremely high or low temperatures.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter will reduce the capacity and lifetime of the battery and its ability to charge. Always try to keep the battery between -10°C and 85°C (14°F and 185°F). A device with a hot or cold battery may temporarily not work, even when the battery is full. Battery performance is particularly limited in temperatures well below freezing.

Care and Maintenance

- Keep the device and its accessories and parts out of the reach of small children.
- Please turn off the device before putting it in your bag or carrying it around. If it is not turned off and the buttons are pressed accidentally, the device may dial or answer a call without you knowing it.
- Do not expose the device to liquid, moisture or humidity as it is not waterproof.
- Do not use or store the device in dusty or dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, abrasive cleaning solvents, or strong detergents to clean the device.
- Do not allow the device to come in contact with sharp objects as they may scratch or damage it.
- Do not stick anything inside the device as this may damage internal components.
- Do not attempt to dismantles the device as it does not contain serviceable components.

Correct disposal of this product

(Applicable in the European Union and other European countries with separate collection systems)



This symbol, shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent harming the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

12 MONTH LIMITED WARRANTY


Iqua standard warranty - IQUA Ltd. guarantees that this product is free from material and workmanship defects for a period of twelve (12) months from date of purchase provided the following terms of this warranty are satisfied. This warranty only applies to the original owner of this product. The length of warranty may vary from country to country, however, so please check with your retailer for more details.

1. The purchaser must be able to prove that he or she purchased the product by presenting the original sales receipt that describes the product in order to establish the validity of the warranty claim to IQUA Ltd. with the provider of warranty service. IQUA Ltd. reserves the right to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery shall result in termination of the right of warranty.
2. IQUA Ltd. agrees to repair or replace, without charging the owner, any defective product that is still under warranty. Said warranty does not apply to cases where the owner has used product accessories, such as chargers, other than those supplied by Iqua with this product.
3. Replacement or repair does not extend the original warranty period.
4. This warranty is not valid for product owners who attempt to repair defective units themselves.
5. Certain product liability regulations may apply to you as the owner of the Product; however, under no circumstances is IQUA Ltd. liable for any indirect or consequential damages to person or property resulting from the use of any IQUA product.

6. The warranty is not valid in case of fire, lightning, earthquake, accident, misuse, unusual physical or electrical stress or any other cause beyond the normal usage and care of the product.
7. IQUA Ltd. reserves the right to make changes or improvements in design or manufacture without having any obligation to install such changes in existing and sold products.
8. This warranty does not cover normal wear and tear on the product or the operation time of the battery.

DECLARATION OF CONFORMITY

We, Iqua Ltd., declare under our sole responsibility, that the product, PHF-601, conforms with the provisions of the following Council Directive: 1999/5/EC.

CE 0678 

FC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**