

AN EXTENSION TO THE SEARCHCAM 3000 FOR FLAWLESS INTEROPERABILITY WITH RADIOS

# Savox SR100 Rescue - An extension to the SearchCam 3000 for flawless interoperability with radios

## **EN - TABLE OF CONTENTS**

SALES PACKAGE CONTENTS	3
SAVOX SR100 RESCUE FEATURES	
OVERVIEW	
PREPARING THE SR100 RESCUE FOR OPERATIONS	5
CONNECTIONS	6
AUDIO VOLUME ADJUSTMENT	7
OPERATING THE SR100 RESCUE	7
OPERATING WITHOUT THE HEADSET	7
NIRELESS PTT (WPTT)	8
WARRANTY	

Savox SR100 Rescue - Extension de la SearchCam 3000 permettant une interopérabilité optimale avec les radios

## FR - TABLE DES MATIÈRES

CONTENU DE L'EMBALLAGE	11
CARACTÉRISTIQUES DU SAVOX SR100 RESCUE	11
PRÉSENTATION GÉNÉRALE	12
INSTRUCTIONS PRÉALABLES À L'UTILISATION DU SR100 RESCUE	13
BRANCHEMENTS	14
RÉGLAGE DU VOLUME SONORE	15
FONCTIONNEMENT DU SR100 RESCUE	15
FONCTIONNEMENT SANS CASQUE	15
PTT SANS FIL (WPTT)	16
GARANTIE	

Savox SR100 Rescue - Extensión de la SearchCam 3000 para una interoperabilidad perfecta conradios

### **ESP - TABLA DE CONTENIDO**

CONTENIDO DEL PAQUETE DE VENTA	19
FUNCIONES DEL SAVOXSR100 RESCUE	19
VISIÓN GENERAL	20
PREPARACIÓN DEL SR100 RESCUE PARA SU FUNCIONAMIENTO	21
CONEXIONES	22
AJUSTE DEL VOLUMEN DE AUDIO	23
FUNCIONAMIENTO DEL SR100 RESCUE	23
FUNCIONAMIENTO SIN AURICULARES	23
PTT INALÁMBRICO (WPTT)	24
GARANTÍA	25

Savox SR 100 Rescue - Eine Erweiterung für die SearchCam 3000 zur perfekten Interoperabilität mit Funkgeräten

## **DE - INHALTSVERZEICHNIS**

LIEFERUMFANG	27
AUSSTATTUNG DES SAVOX SR100 RESCUE	27
ÜBERSICHT	28
INBETRIEBNAHME DES SR100 RESCUE	29
ANSCHLÜSSE	30
LAUTSTÄRKEREGELUNG	
BEDIENUNG DES SR100 RESCUE	31
BETRIEB OHNE EIN HEADSET	31
KABELLOSES PTT (WPTT)	32
GEWÄHRLEISTUNG	

## **SALES PACKAGE CONTENTS**

## The sales package contains the following items:

Α	SR100 Rescue
В	SearchCam Adapter
С	Headset Adapter
D	Wireless PTT (WPTT)
Е	User Guide

## Required for operation (not part of sales package):

F	Radio Cable
---	-------------

### **SAVOX SR100 RESCUE FEATURES**

1	Headset Socket
2	PTT B (for SearchCam)
3	Microphone
4	Volume Control Pad
5	Mode Button (M)
6	Power Button
7	SearchCam Socket (SEARCHCAM)
8	Radio Socket (COM)
9	Battery Compartment
10	Speaker
11	PTT A (for radio)
12	Wireless PTT Button (WPTT)
13	Battery Clip



### **OVERVIEW**

The SR100 Rescue is a smart, man worn, communication device that allows flawless operation of a SearchCam while simultaneously enabling communication via a radio.

The functionality and operation instructions of the SearchCam are not impacted by the SR100 Rescue; but use of the SR100 Rescue will allow interoperability with a radio.

The SR100 enables the user to keep both hands on the SearchCam while communicating to a survivor when pressing the PTT button on the SearchCam, or to the operation command center when pressing the wireless PTT button. The survivor will be heard in one ear and the command center in the other ear to clearly distinguish both parties.

# PREPARING THE SR100 RESCUE FOR OPERATIONS

#### Power

- Battery Removal and Replacement: Unscrew the battery cap. Place the battery into the compartment ensuring the battery negative (-) terminal is facing the battery cap. Screw the battery cap back on.
- Power Up: Once the battery has been inserted and the battery cap fitted back into place, the SR100 Rescue will power up automatically. The SR100 Rescue will go through a power cycle process lasting approximately 3-5 seconds. A two-tone alert will be heard upon completion. The SR100 Rescue is now ready for operation.
- Sleep Mode: To power off the SR100 Rescue press and hold the Power button for approximately 2 seconds. A four-tone alert will be heard
- Power Up From Sleep Mode: To power the SR100 Rescue back on from Sleep Mode, press and hold the Power button for approximately 4 seconds. The two-tone Power up alert will be heard to signify the SR100 Rescue is ready for normal operation.
- Low Battery Warning: Double beeps every 2 minutes denote low battery power. It is recommended the battery is changed as quickly as possible.
- Storage: ALWAYS remove battery when not in use and during storage.

Alkaline batteries should be used.



- Attaching the wireless PTT (WPTT) to the SearchCam: Use the strap
  to attach the WPTT (D) of the SR100 Rescue to the pole of the
  SearchCam so you can operate the SearchCam PTT with the index
  finger of one hand and the WPTT button with the thumb of the
  other hand while keeping both hands on the SearchCam. As supplied,
  the WPTT and the SR100 Rescue are paired.
- Cable connection: To fit a lead to the SR100 Rescue align the red dots
  on the connector and the SR100 Rescue and push the connector into
  the socket on the SR100 Rescue. To remove the cable from the SR100
  Rescue, pull the connector body backwards (latched style) and pull
  away from the SR100 Rescue.
- Connecting the radio: Plug the radio cable (F) appropriate for the radio you want to use into the radio socket marked as "COM" (8) on the SR100 Rescue. Connect the opposite end to your radio.
- Connecting the SearchCam: Connect the SearchCam Adapter (B) to the port marked "SearchCam" (7) on the SR100 Rescue. Connect the opposite end to the headset socket at the bottom of the SearchCam Video Display Unit (VDU).
- Headset: Connect the Headset Adapter (C) into the headset socket (1)
  on top of the SR100 Rescue. Plug the headset into the adapter.
- Dust Caps: Always ensure the protective dust caps are fitted when connector ports are not in use.

DO NOT CONNECT a Savox XG line 5 pole connector into the SR100 Rescue as this may damage the product.



### **AUDIO VOLUME ADJUSTMENT**

- Radio volume: The volume from the radio should be set to approximately 65-75%. The SR100 Rescue automatically senses the type of radio and sets up the audio levels accordingly.
- The volume control pad (4) on the SR100 Rescue controls the overall volume level in the headset in 4 steps.
- The microphone sensitivity of the camera head can be adjusted on the SearchCam Audio Rocker Switch + D or on the VDU control panel.
- If required, the volume control on the radio can be used to balance the headset volume output between the radio side and the SearchCam side.

### **OPERATING THE SR100 RESCUE**

- To speak to a survivor at the camera head, press the PTT Rocker Switch on the SearchCam PTT . No need to press any button on the SR100 Rescue.
- To speak to the command center through the radio, press the WPTT button. Alternatively, you can use the PTT A button on the SR100 Rescue. The survivor will not hear any radio communication.
- Listening to the survivor: The SearchCam microphone is an open line and will always be heard through the right speaker of the headset. No need to press any button.
- Listening to the command center through the radio: The command center will be heard over the left speaker of the headset.

### **OPERATING WITHOUT A HEADSET**

- The SR100 Rescue can also be used without a headset. Once the headset is disconnected the audio will come through the speaker of the SR100 Rescue.
- To speak to the survivor at the end of the camera head, the PTT Rocker Switch on the SearchCam and PTT B on the SR100 Rescue need to be pressed. Speak into the microphone of the SR100 Rescue (3).
- To speak to the command center, hold the PTT A and speak into the SR100 Rescue microphone.

NOTE: The 3rd button under PTT A has no functionality with a SearchCam.

## **WIRELESS PTT (WPTT)**

- As supplied, the WPTT and the SR100 Rescue are paired. To pair a different WPTT, disconnect all connectors from the SR100 Rescue and read through all 3 steps before starting:
  - Press the mode button (M) FOUR TIMES. "WiC Pairing Off" will be heard on the 4th press.
  - Within 3 seconds, press the Volume Up button (+) ONCE. "WiC pairing Switch A" will be heard. The SR100 Rescue will go into pairing mode for 10 seconds which is indicated by consecutive beeps.
  - Press the WPTT button TWO TIMES to pair the WPTT to the SR100 Rescue. A confirmation tone will be heard to indicate successful pairing.

NOTE: The other modes (1 to 3 button presses on M) should be ignored. DO NOT press the volume up or down button directly after entering any of these modes as this might switch off the internal speaker.

If this happens, remove the battery from the SR100 Rescue. Refit the battery. Wait for ten seconds. Press the mode button (M) THREE TIMES, then press Volume Down button once. Remove the battery from the SR100 Rescue. Refit the battery. The SR100 Rescue will now be ON with the internal speaker enabled as confirmed by the two-tone alert.

 Unpairing the WPTT: To use the WPTT on a different SR100 Rescue, the WPTT needs to be unpaired. Slide the battery clip out on the WPTT. Pull out the battery compartment, ensuring it is out of the housing. Press the wireless PTT button for 10 seconds to drain any power within the unit.



- Changing the WPTT battery:
  - 1. Remove the clamping wire completely by pulling it sideways and pull the battery compartment out of the WPTT.
  - Raise the metal sheet marked with + by gripping it on the two outer hooks.
  - 3. Replace the battery and lower the metal sheet.
  - 4. Slide the battery compartment back into the WPTT with the minus (-) facing on the same side as the PTT button.
  - 5. Slide the clamping wire through the top of the WPTT to lock the battery compartment.

#### WARRANTY

#### DISCLAIMER

DISCLAIMER OF WARRANTIES: TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, SAVOX COMMUNICATIONS OY AB (LTD) ("SAVOX") DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO (A) MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY RIGHTS, (B) THAT THEERE ARE NO VIRUSES OR OTHER HARMFUL COMPONENTS, (C) REGARDING CORRECTNESS, ACCURACY, OR RELIABILITY, OR (D) AGAINST INTERFERENCE WITH OTHER DEVICES. THE HARDWARE AND COMPUTER SOFTWARE PROVIDED TO YOU ARE PROVIDED WITH ALL FAULTS, AND THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, AND ACCURACY IS WITH YOU ALONE. SAVOX IS, UNDER NO CIRCUMSTANCES, RESPONSIBLE FOR ANY UNAUTHORIZED USE OR MODIFICATION OF THEDEVICE. SOME TERRITORIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

LIMITATION OF LIABILITY: UNDER NO CIRCUMSTANCES SHALL SAVOX BE LIABLE TO YOU FOR INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES (EVEN IF SAVOX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), ARISING FROM THE PURCHASE OR USE OF THE DEVICE. IN NO EVENT SHALL SAVOX'S TOTAL OBLIGATIONS OR LIABILITY HEREUNDER EXCEED ONE THOUSAND DOLLARS (\$1,000.00). NO ACTION, SUIT OR PROCEEDINGS SHALL BE BROUGHT AGAINST SAVOX MORE THAN ONE (1) YEAR AFTER THE DATE UPON WHICH THE CLAIM AROSE. SOME TERRITORIES DO NOTALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

SAVOX HAS NO LIABILITY TO YOU FOR ANY LOSS OF PROFIT, LOSS OF REVENUE, LOSS OF BUSINESS, BUSINESS INTERRUPTION, OR LOSS OF BUSINESS OPPORTUNITY.

NOTHING INTHESETERMS EXCLUDES OR LIMITS IN ANY WAYSAVOX'S LIABILITY UNDER ENGLISH LAW FOR (A) DEATH OR PERSONAL INJURY CAUSED BY SAVOX'S NEGLIGENCE; (B) FRAUD OR FRAUDULENT MISREPRESENTATION; (C) ANY BREACH OF THE OBLIGATIONS IMPLIED BY SECTIONS 12-15 OF THE SALE OF GOODS ACT 1979; OR (D) DEFECTIVE PRODUCTS UNDER THE CONSUMER PROTECTION ACT 1987.

**CONSIDERATION:** YOU HEREBY ACKNOWLEDGE THAT SAVOX'S PRICING IS MADE IN RELIANCE UPONTHELIMITATIONS OF LIABILITY AND THE DISCLAIMERS OF WARRANTIES AND DAMAGES SET FORTH HEREIN, AND THAT THE CONSIDERATION FORMS AN ESSENTIAL BASIS OF THE BARGAIN BETWEEN THE PARTIES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR LIABILITIES; TOTHE EXTENT SUCH LAWS APPLY, SOME OF THESE EXCLUSIONS MAY NOT APPLY TO YOU.

THIRD PARTY SOFTWARE: YOU MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE DEVICE. SAVOX MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE DEVICE. THE QUALITY, CAPABILITIES, OPERATIONS PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH YOU AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

NO MODIFICATION OF DISCLAIMER: THE AGENTS, EMPLOYEES, DISTRIBUTORS, AND DEALERS OF SAVOX ARE NOT AUTHORIZED TO MAKE MODIFICATIONS TO THESE TERMS AND CONDITIONS. INCLUDING THE DISCLAIMER. OR MAKE ANY ADDITIONAL WARRANTIES BINDING ON SAVOX, ACCORDINGLY, ANY ADDITIONAL STATEMENTS NOT SET OUT HEREIN SUCH AS DEALER ADVERTISING OR PRESENTATIONS, WHETHER ORAL OR WRITTEN, DO NOT CONSTITUTE REPRESENTATIONS OR WARRANTIES BY SAVOX AND SHOULD NOT BE RELIED UPON.

GOVERNING LAW AND YOUR RIGHTS: THIS WARRANTY AND DISCLAIMERS SECTION GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

THIS PRODUCT MEETS THE APPLICABLE FCC PART 15 RULES AND INDUSTRY CANADA'S LICENSE EXEMPT RADIO STANDARD SPECIFICATONS. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION OF THE DEVICE.

LE PRÉSENT MATERIEL EST CONFORME AUX CNREXEMPTS DE LICENCE D'INDUSTRIE CANADA. SON FONCTIONNEMENT EST SOUMIS AUX DEUX CONDITIONS SUIVANTES: (1) CET APPAREIL NE PEUT PAS PROVOQUER D'INTERFÉRENCES. ET (2) CET APPAREIL DOIT ACCEPTER TOUTE INTERFÉRENCE. Y COMPRIS CELLES SUSCEPTIBLES DE PROVOQUER LE FONCTIONNEMENT DU DISPOSITIVE

THIS PRODUCT MEETS THE APPLICABLE FCC PART 15 RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE. INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION OF THE DEVICE.

SAVOX MAKES NO REPRESENTATIONS OR WARRANTIES REGARDING THE CONTENTS OF THIS MANUAL. SAVOX RESERVES THE RIGHT TO REVISE THIS DOCUMENT AT ANY TIME OR TO MAKE CHANGES TO THE PRODUCT DESCRIBED WITHIN IT WITHOUT NOTICE OR ANY OBLIGATION TO NOTIFY ANY PERSON OF SUCH REVISIONS OR CHANGES.



 EUROPEAN UNION (EU) WASTE OF ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) DIRECTIVE: THE EUROPEAN UNION'S WEEE DIRECTIVE REQUIRES THAT PRODUCTS SOLD INTO EU COUNTRIES MUST HAVE THE CROSSED OUT TRASHBIN LABEL ON THE PRODUCT (OR THE PACKAGE IN SOME CASES). AS DEFINED BY THE WEEE DIRECTIVE, THIS CROSS-OUT TRASHBIN LABEL MEANS THAT CUSTOMERS AND END-USERS IN EU

COUNTRIES SHOULD NOT DISPOSE OF ELECTRONIC AND ELECTRICAL EQUIPMENT OR ACCESSORIES IN HOUSEHOLD WASTE. CUSTOMERS OR END-USERS IN EU COUNTRIES SHOULD CONTACT THEIR LOCAL EQUIPMENT SUPPLIER REPRESENTATIVE OR SERVICE CENTRE FOR INFORMATION ABOUT THE WASTE COLLECTION SYSTEM IN THEIR COUNTRY.

**DECLARATION OF CONFORMITY: WE, SAVOX COMMUNICATIONS OY AB, ADDRESS:** SINIKALLIONTIE 3 B, 02630, ESPOO, FINLAND, DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THE PRODUCT, SAVOX MOBILERSM, IS IN CONFORMITY WITH THE PROVISIONS OF THE FOLLOWING COUNCIL DIRECTIVES: RADIO AND TELECOMMUNICATIONS TERMINAL EQUIPMENT R&TTE DIRECTIVE 1999/5/EC, RESTRICTION OF HAZARDOUS SUBSTANCES (ROHS) DIRECTIVE 2011/65/EU, AS AMENDED, AND WITH NATIONAL IMPLEMENTING LEGISLATION AND FURTHERMORE DECLARES THAT THE FOLLOWING (PARTS/CLAUSES OF) HARMONISED STANDARDS HAVE BEEN APPLIED: EN

50581:2012, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 55022(2010) AND EN 55024(2010)

# THIS DEVICE COMPLIES WITH CALIFORNIA ENERGY COMMISSION STANDARD CEC-400-2012-019-CMF

For customer support, please visit us at www.savox.com