 


Ethernet Access Residential Unit 111x (EARU 1112/EARU 1113)



Please read this manual carefully before operating your set.

Retain it for future reference.

C O N T E N T S

2	Product and personal safety guidelines
7	Regulatory information
10	About EARU 111x
14	Checking package contents
15	Installing EARU 111x
19	Setting EARU 111x
20	Open Source Software Notice

Product and personnel safety guidelines

This section contains safety guidelines that you must follow for personal safety and to operate the equipment correctly.

LG-Ericsson documentation contains precautionary messages and safety procedures that refer to specific tasks or conditions. You must read and follow all precautionary messages before you start to work on the equipment.

Audience





Personnel working directly on equipment must be

- trained, authorized, and qualified to carry out the tasks required
- able to follow safety guidelines specific to the product and all local customer-specific safety procedures

Precautionary messages

To prevent personal injury, equipment damage, and service interruptions, you must follow all precautionary messages in LG-Ericsson documentation and all local safety standards required by your service provider.

The following precautionary messages appear in LG-Ericsson documentation:

	DANGER Risk of personal injury A precautionary message with this symbol indicates a risk of personal injury.
	DANGER Risk of electrical shock A precautionary message with this symbol indicates a risk of personal injury caused by an electrical hazard.
	WARNING Risk of laser radiation exposure A precautionary message with this symbol indicates a potential risk of personal injury caused by exposure to a laser beam.
	CAUTION Risk of laser radiation exposure A precautionary message with this symbol indicates a potential risk of personal injury caused by exposure to a laser beam.

Safety standards

LG-Ericsson products conform to all relevant safety standards. The EARU 111x complies with the following safety standards:

- IEC 60950-1:2005+A1:2009 and EN 60950-1:2006+A11:2009—Information technology equipment - Safety, Part 1 : General requirements
- IEC 60825-1:2001 and IEC 60825-2:2004—Safety of Laser Products
- FDA 21 CFR 1040—Performance Standards for Light-Emitting Products

Laser radiation—eye safety hazards

LG-Ericsson optical products use laser or light-emitting diode (LED) sources that emit light energy into optical fibers. This energy is within the red (visible) and infrared (not visible) areas of the electromagnetic spectrum. FDA 21 CFR 1040—Performance Standards for Light-Emitting Products

Laser radiation hazards

When operating the product normally, with all optical connectors in position and correctly terminated, the optical radiation is completely enclosed. The system is a Class 1(IEC)/Class I (FDA) product, regardless of the power transmitted within the optical fiber.

If you have unterminated optical cables (breaks in the fiber-optic cable or disconnected connectors) the output from circuit packs containing optical transmitters does not exceed Class 1 (IEC)/Class I (FDA) and is therefore considered safe under all reasonably foreseeable conditions.

The following text includes additional information on the laser for the EARU 111x .

Laser wavelength 1530 - 1600 nm

Maximum laser output power ≤ 0.299 mW (-5.25 dBm)

Standards: IEC 60825-1:2001 Edition 1.2

FDA 21 CFR 1040.10:2000

Using optical fibers

All activity described herein regarding the optical interface of the EARU 111x is intended only for trained personnel operating under the direction of the service provider. Users and homeowners should not attempt to access or disconnect the optical interface or damage the optical cable. Consult with the service provider before undertaking any action involving the optical interface.

Handling optical fibers

When you work with optical fibers, you must take the following general precautions:

- Wear safety glasses when you install optical fibers.



WARNING

Risk of laser radiation exposure

Do not look directly into the optical beam. Invisible light can severely damage your eyes. Keep all optical connectors capped.

- Do not look into the opening of an optical fiber, or the opening of an optical fiber connector, if the optical fiber is active or the unit has the power turned on.
- Avoid direct exposure to optical fiber ends or optical connector ends where you can access the laser signal directly.
- Clean your hands after you handle optical fibers. Small pieces of glass are not always visible and can damage your eyes.



DANGER

Risk of eye injury

If you have a piece of a glass in your eye, get medical assistance immediately.

- Do not handle pieces of optical fiber with your fingers. Use tweezers or adhesive tape to lift and discard any loose optical fiber ends.
- Wear rubber gloves when you clean optical connectors. The gloves prevent direct contact with the isopropyl alcohol and prevent contamination of the ferrules with skin oils.
- Place all optical fiber clippings in a plastic container provided for that purpose.
- Handle optical fibers with caution. Place the optical fibers in a safe location during installation.
- Protect all optical fiber connectors with clean dust caps at all times.
- Follow the manufacturer instructions when you use an optical test set. Incorrect calibration or control settings can create hazardous levels of radiation.

Splicing optical fibers

When you must look at a spliced optical fiber with a small magnifier, take the following precautions:

- Power off all laser sources to the optical fiber or disconnect the remote optical fiber end from the laser sources before you start splicing. Make sure that all laser sources remain disconnected or have the power turned off.
- Disconnect all optical test sets from the optical fiber before you start splicing. The connections can be local or remote.
- Use only the optical instruments approved by your company.

Repairing optical fibers

When an accidental break occurs in the optical fiber, do the following:

- Report the location of the damaged optical fiber to both the service provider and the field repair personnel.
- Power down all laser sources to the optical fiber or disconnect the remote optical fiber end from the laser sources.

Working with power



DANGER

Risk of electrical shock

The (AC) mains connection from the power adapter to the power supply can be a shock hazard. Read and understand the power procedures you are performing. Take necessary precautions and use the appropriate insulated tools when working with power.

Other Warnings and cautions

WARNINGS



Do not disassemble this product.

This can cause poor performance of the product or result in a fire, or injury from electric shock. If you experience trouble, contact the service provider.



Do not expose this product to liquid or install this product in a humid location. If the product does get wet, contact your service provider.

This can cause poor performance of the product or result in a fire, or injury from electric shock.



If the product has an abnormal smell, noise or if you see smoke, disconnect the power or turn it off if it safe to do so and contact your service provider.

This can result in a fire, or injury from electric shock.

CAUTIONS



Keep the fiber connected at all times. Do not remove it.
It is recommended that the fiber remains connected in your fiber port. This will reduce the possibility of dust contamination which would impact performance.



DO NOT pull on the optical cable.
This can cause poor performance and failure of the product.



Do not stack anything on this product.
This can cause poor performance and failure of the product.



DO NOT install the product in a dusty site.
This can cause poor performance or reduced life cycle of the product.



DO NOT install the product under direct sun rays or near heating appliances.
This can cause poor performance and failure of the product.



DO NOT install the product in a poor-ventilated site.
This can cause poor performance or reduced life cycle of the product.



Do not clean this product with any type of cleaning agents or water.
This can damage the product. Use a dry, clean cloth to remove dust.

Warranty: Customers can receive repair services for this product under specified conditions. This warranty does not cover failure or damage of the product caused from, using a power adapter other than the one provided, PC failures, data loss, or negligent treatment of the product. For questions or to report damage or failures contact your service provider.

Regulatory information

This chapter contains the following information:

- a list of global technical standards (electromagnetic compatibility, safety) to which the EARU 111x complies
- a country-by-country list of specific regulatory text required by national authorities
- information on the regulatory labels affixed to the product (artwork and location on the product)

The list of global technical standards provided in this chapter is not exhaustive.

The standards listed are generally regarded as the primary applicable electromagnetic compatibility (EMC) and safety standards. The conformity status on additional national and international standards not listed in this section can be provided upon request.

Compliance to applicable technical standards and regulations

The EARU 111x meets or exceeds the following standards and requirements:

- (CFR Title 47, Chapter 1) FCC Part 15, Subpart B, Class B (USA)
- ICES-003, Issue 4, Class B (Canada)
- European Union EMC Directive (2004/108/EC)
- European Radio and Telecommunications Terminal Equipment Directive (R&TTE, 1999/5/EC)
- European "Low Voltage" Directive (2006/95/EC)
- EN 55022:2006 - Class B (European Community, Australia and New Zealand)
- EN 55024:1998 +A1:2001 +A2:2003 (European Community)
- EN 300 386 V1.3.3 (European Community, Australia and New Zealand)
- Anatel Resolution Number 442:2006 (Brazil)
- GB 9254-2000 (China)
- VCCI V-3/2007.04 (Japan)
- Australian Radiocommunications Labelling (Electromagnetic Compatibility) Notice 2008
- CAN/CSA-C22.2 No. 60950-1 2nd edition (Canada)
- UL60950-1 2nd edition (USA)
- IEC 60950-1:2005+A1:2009
- EN 60950-1:2006+A11:2009
- IEC/EN 60825-1:2001
- IEC/EN 60825-2:2004
- AS/NZS 2211.1:2004 (Australia and New Zealand)
- AS/NZS 2211.2:2006 (Australia and New Zealand)
- Resolution 238:2000 (Brazil)
- GB 4943-1995 (China)

Country-specific regulatory information

Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

United States of America

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected (consult with the service provider before proceeding).
- Consult the service provider or an experienced radio/TV technician for help.

Repairs to certified equipment should be coordinated by a representative designated by your service provider. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the service provider cause to request the user to disconnect the equipment.

Do not attempt to repair this equipment. If you experience trouble, contact the service provider.

FCC Warning

This equipment generates or uses radio frequency energy. Changes or modifications to this equipment may cause harmful interface unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

European Union

The EARU 111x conforms with the essential requirements of Directive 2004/108/EC (EMC Directive), Directive 2006/95/EC (Low Voltage Directive) and Directive 1999/5/EC (Radio and Telecommunications Terminals Equipment) through compliance to the following harmonized standards:

- EN 55022:2006 (Class B)
- EN 55024:1998 +A1:2001 +A2:2003

- EN 300 386 V1.3.3 (Class B, other than telecommunications centres criteria)
- EN 60950-1:2006 +A11:2009
- EN 60825-1:2001
- EN 60825-2:2004

The product bears the CE mark as illustrated in figures on page14.

A signed Declaration of Conformity is available upon request.

Brazil

The EARU 111x conforms with the requirements of Anatel Resolution Number 442:2006 (EMC) for a Class B product and Anatel Resolution NR 238:2000 for product safety.

Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

(English translation)

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Australia / New Zealand

The EARU 111x complies with EN 55022:2006 (Class B) and EN 300 386 V1.3.3 (Class B) in respect of the EMC regulatory arrangements of the Radiocommunications Act 1992 of the Australian Communications And Media Authority, in particular, the Radiocommunications Labelling (Electromagnetic Compatibility) Notice 2008, and of the New Zealand Ministry of Economic Development.

Regulatory labels (Safety and EMC)

The following labels have been placed on the system and various field replaceable units (FRU).

The main product-level regulatory label is located on the rear side of the EARU 111x . See page14. The label bears the product name, power ratings information, certification and other regulatory marks and informational disclosures required by jurisdictional authorities.

After reading through this User's Manual, please keep it handy for easy reference.

About EARU 111x

Thank you for selecting EARU 111x (1112, 1113).

 
The EARU 111x is an equipment working as a modem in WDM-PON (Wavelength Division Multiplexing - Passive Optical Network).

This product multiplexes 125Mbps to 100Mbps Fast Ethernet signals (maximum 4ea) into WDM-PON optical signal.




This product will allow you to use the different services such as VoD (Video on Demand), EoD (Education on Demand), IP-TV, POTS and High speed internet access available from your provider.

Names and functions of each part

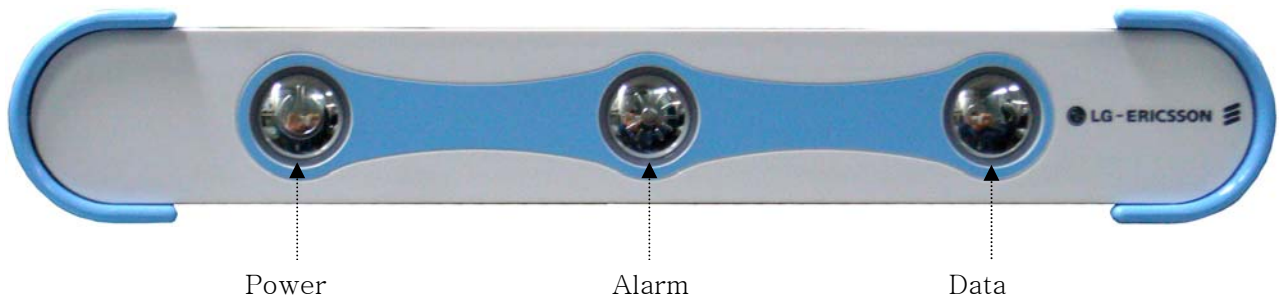
Front view




Front LED functions

Indicator	Color	Function
 Power	Green	Is lit when the device is powered.
 Alarm	Red	Is lit when the device is disconnected from the service provider's network.
 Data	Green	Is lit when the device sends/receives data to/from equipment of the service provider.

 Rear view
EARU 1112

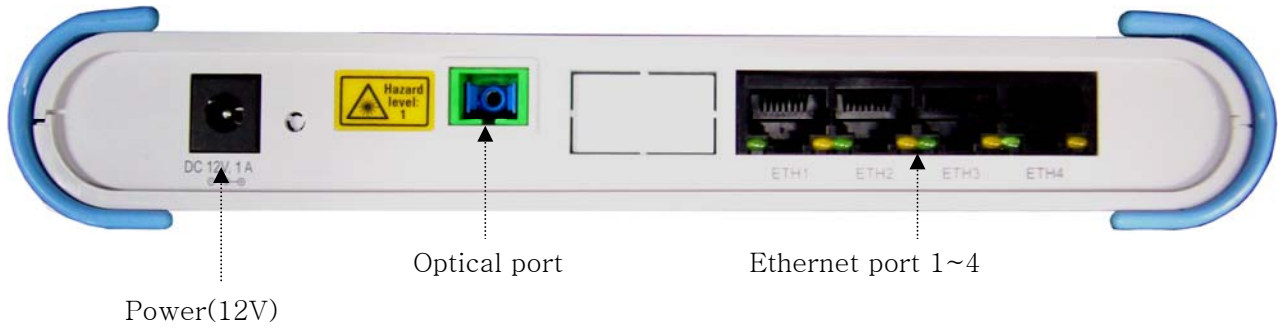

EARU 1113

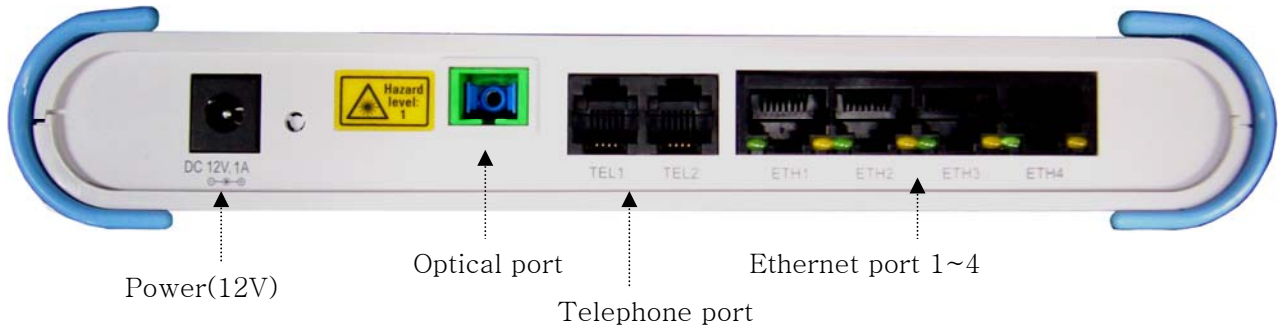 

Rear port functions

Indicator	Color	Function
Power (DC 12V,1A)	Power	This is the port for the power adapter.
Optical port	For connection to the optical cable	This port (optical) is the access point to the service providers network
Telephone port (1 to 2)	For connection to Telephone	These ports are Telephone ports that will connect to user devices supporting Telephone.
Ethernet port(1 to 4)	For connection to Ethernet	These ports are Ethernet ports that will connect to user devices supporting 10/100 Mbps.

Rear Ethernet port LED functions

Port	Indicator	Color	Function
1-4	Data LED	Green	Is lit when the device sends/receives data to/from user devices.
	Link LED	Orange	Is lit when the device has Ethernet connected at 100Mbps speed.

Bottom view



Number	item	Label	Location
1	PEC & SN Label 9.652mm x 27.94mm		Rear
2	Hazard level 1 (per IEC 60825-2) 9.5mm x 15mm		Front
3	Regulatory 40mm x 81mm		Rear

Specifications of EARU 111x

Item	Label
Dimensions in mm	203(w) x 150(d) x 35(h)
Power	DC 12V, 1A
Ambient Temperature	0°C to 50°C
Humidity	20% to 80%
Data rate	100Mbps
Connectors	SC/APC (optical), RJ45 (Ethernet), RJ11(POTS)
LED indicators	Power, Alarm, Data

Checking package contents

Before installing this product, ensure all parts are provided.

Checking what is in the package

 
Check the package to make sure the following items are included.



Main body
of EARU 111x



C clamps
for EARU 111x

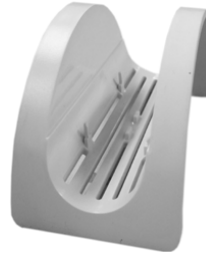


Cradle
for EARU 111x



Dedicated
adator
for EARU 111x



 Power cable

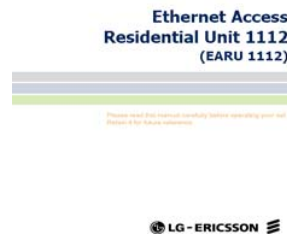

User Manual
of EARU 111x

If there is anything missing, please contact your Service provider.

Note

Use the power adapter provided with the product. Using another power supply (adapter) can damage the product. Damage from another adapter is not covered under the warranty and repairs would be at the owners expense.

Installing EARU 111x

This section provides the specifications for EARU 111x installation, it also describes how to install it and connect it into a network.

Preparing for installation

Before you install the EARU 111x, review following information.

Item	Quantity	Supplied
Main body of EARU 111x	1	yes
C clamps for EARU 111x	2	yes
Cradle for EARU 111x	1	yes
Ethernet (RJ-45) , POTS cable	as required	no
Power cable	1	yes
Dedicated adapter	1	yes
Optical fiber(SC/APC)	1	no

Installing the product

This section describes how to:

1. Select a resting mode
2. Connect power cable
3. Connect optical cables
4. Connect POTS cables(RJ11) and Ethernet cables (RJ45)
5. Turn on the power of EARU 111x
6. Check the connection status

 
Let's see detailed descriptions on each step.

Select a resting mode

Select a resting mode between horizontal mode and vertical mode according to the place where the EARU 111x is installed.

Horizontal Mode

Assemble the main body of EARU 111x and C clamps with the non-slip strips are facing down.

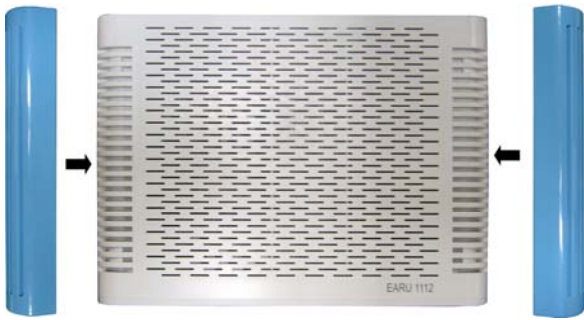


Vertical Mode

Connect the C clamps on the EARU 111x as shown above. Insert the EARU 111x into the cradle. The LG-Ericsson logo should be at the bottom in the cradle.



 Connecting optical cable

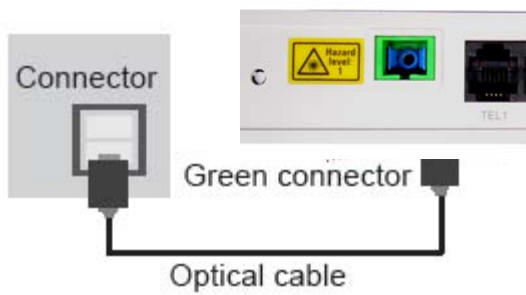

Check that the power is on..

Insert the green APC connector, into the optical port of the EARU 111x.

Insert the other end of the APC optical cable into the optical outlet on your wall.



Only green colored APC connector should be used. Other connector Types will not work properly.

Connecting Ethernet cable



Connect Ethernet cables to the RJ45 Ethernet port numbered 1 to 4 in EARU 111x (WDM-PON ONT Indoor).

Connect the other side of the Ethernet cable to the Ethernet port of your home device.

Connecting Telephone cable

 
Connect Telephone cables to the RJ11 POTS port numbered 1 to 2 in EARU 1113.

Connect the other side of the POTS cable to the POTS port of your home Telephone.



Connecting power cable & checking the power status


Make sure that both ends of the optical cable and the Ethernet cables are installed. And insert the connector of adapter, into the port of the EARU 111x. Make sure that the PWR LED (green) turns on.

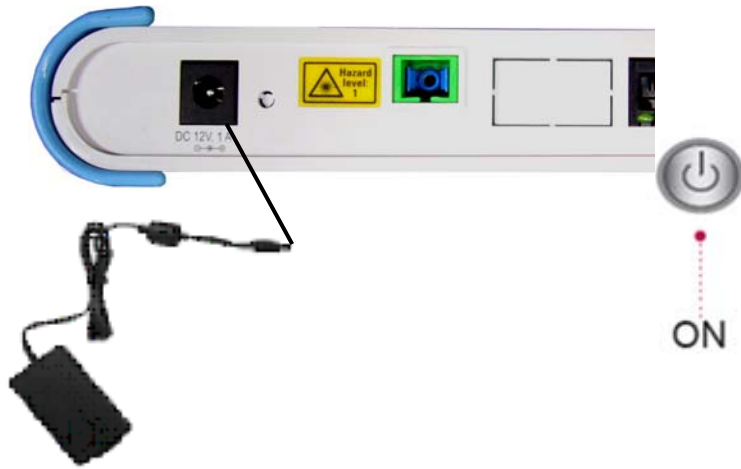

Do not pull on the power cable or adapter. This can cause failure or damage to the EARU 111x.


Checking the connection status

 Checking the connection status of service provider line (Link)

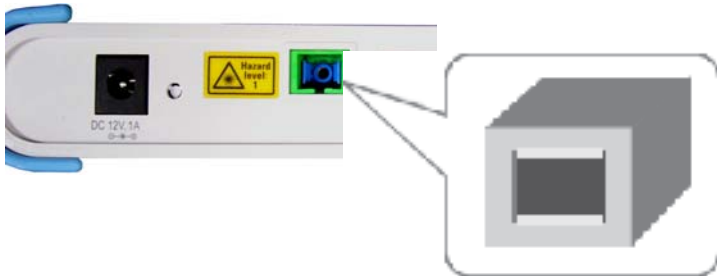

When the EARU 111x is first powered on, the Alarm LED should turn red momentarily. Once communication is established this LED turns off. The Data LED should turn green and blink.

 Checking the connection status of user devices

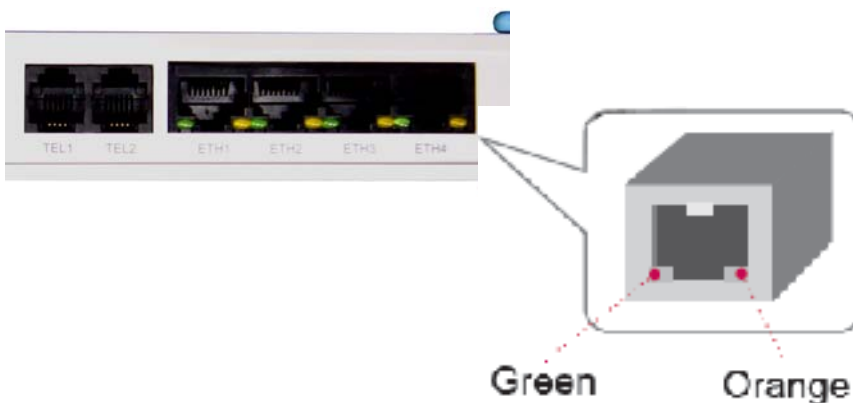

When EARU 111x is power-fed, the Green and Orange LEDs should be on. The green LED is the data indicator. It blinks when data is being transmitted or received. The orange LED is the link indicator. It lights up with a 100Mbps connection. If there is a 10Mbps connection (a 10BaseT

connection), the orange LED is off.

Setting EARU 111x

When you select to receive WDM-PON service, you do not have to make additional settings on the product to use it.

Using Internet

With a web browser such as the Internet Explorer on your PC, you can surf freely through the Internet.

Note

EARU 111x does not require any access programs such as ACEMAN_Pro, Enternet 300 and WinPoET; you can directly access the Internet.

Open Source Software Notice

The following open source software used in this product:

- o uclibc 0.9.29
- o MIPS Linux kernel, version 2.6
- o STP bridge in kernel
- o BusyBox 1.0.0 toolset
- o iptables-1.3.8
- o Telnet server, login
- o Ftp server: bftpd 1.0.24
- o Tcpcdump and libpcap
- o dproxy: dproxy-nextgen
- o Iproute2: iproute2-2.4.7

LG-Ericsson offers to provide source codes and copies of the GPL licenses to you on CD-ROM for a charge covering the cost of performing such distribution, such as the cost of media, shipping and handling upon e-mail request to LG-Ericsson at :

opensource@lgericsson.com

This offer is valid for a period of three (3) years from the date of the distribution of this product by LG-Ericsson.

Copyright © 2010 LG-Ericsson Co., Ltd.

All Rights Reserved.

Copyright of this manual belongs to LG-Ericsson Co., Ltd.

Reproduction, distribution or revision of part or all of contents in this manual in any form without written permission of LG-Ericsson Co., Ltd. is prohibited.

The information in this manual is subject to change for the reason of function improvement, design alteration, etc. without any prior notification.

<http://www.lgericsson.com>

P/N : SM0-000-S00527 Feb/2011/Ver 1.0



