



REDRAGON

HARPE WIRELESS GAMING KEYBOARD

Gaming Keyboard Operating Instructions

US UK

Dear user


Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

- 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

1

OS support

Windows XP/Vista/Win7/Win8/Win10

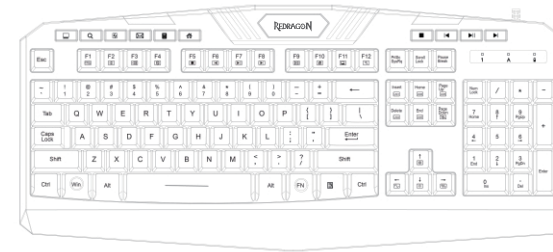

How to charge keyboard

Find the USB A to USB type-C cable in the package, plug the keyboard and connect it with computer for charging, the LED indicator of the keyboard will turn to blue. Remark: The LED indicator will flash in red when the keyboard is short of power.

How to connect the keyboard with a computer

Wired Connection

- 1. Take out the USB A to USB type-C cable in the package and connect the keyboard with your computer.
2. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. Once the keyboard is powered up, charging begins. It may take about 5 hours for the keyboard to be fully recharged.

2

Wireless Connection

- 1. Slide the ON/OFF switch on bottom of keyboard to ON.
2. Take out the nano USB receiver and plug it into an available USB port on your computer. The computer will recognize and configure the keyboard automatically.
3. The keyboard will be ready for use when the configuration is finished.
4. In some cases, you may need to pair the keyboard. Turn on the keyboard and press [FN]+[P], plug the USB receiver into any available USB port on your computer within 20 seconds. The keyboard will be paired automatically. Make sure the keyboard has enough power before doing so.
5. The indicator will flash when the battery is low. Please recharge the keyboard in time or it will turn off automatically soon.

Warning: Charging Input: 5V ---1A

Function Introduction

- 1. With standard USB interfaces, the keyboard can be used on computers without any software or driver installation.
2. There are 6 backlight effects:

Table with 3 columns: Operation, Backlight Mode, Description. Rows include [FN]+[Insert] (specture), [FN]+[Home] (Light ON), [FN]+[Page Up] (Three colors mix), [FN]+[Delete] (Running & Neon Light), [FN]+[End] (Breathing Backlight), and [FN]+[Page Down] (Lighting ON/OFF).

3

- 3. Press [FN] + [Win] To disable or enable the [Win] key
4. Press [FN] + [←] to slow down the speed of breathing backlight.
5. Press [FN] + [→] to add up the speed of breathing backlight.
6. Press [FN] + [↑] to increase the backlight brightness of the keyboard.
7. Press [FN] + [↓] to decrease the backlight brightness of the keyboard.
8. Press [FN] + [ESC] to set the keyboard to default setting.
9. Direct shortcut keys

Table mapping function keys to actions: 1) My computer (laptop icon), 2) Search (magnifying glass), 3) Refresh (refresh icon), 4) E-mail (envelope), 5) Calculator (calculator), 6) Homepage (house), 7) Stop (square), 8) Previous track (left arrow), 9) Play/Pause (play/pause), 10) Next track (right arrow).

- 10. Pair to computer (Wireless mode): [FN]+[P]
11. Multi-media keys ([FN]+[F1]~[F12])

4

Table mapping FN+F1-F12 to icons and functions: FN+F1 (Media player), FN+F2 (Volume down), FN+F3 (Volume up), FN+F4 (Mute), FN+F5 (Stop), FN+F6 (Previous track), FN+F7 (Play / Pause), FN+F8 (Next track), FN+F9 (E-mail), FN+F10 (Home), FN+F11 (My computer), FN+F12 (Research).

5

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.

6



FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

尺寸:100x100mm
材质:100g书写纸