

US UK

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.
1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

OS Support

WinXP/Vista/Win7/Win8/Win10 /Win11/Mac OS

How to connect the keyboard with multi-ple devices

Wired Connection

- 1. Slide the ON/OFF switch on left side of the keyboard to OFF.
2. Take out the USB A to USB Type C cable in the package and connect the keyboard with your computer, Press FN+5(USB) key, the LED marked with M twinkle and turn to white indicated the conencting sucessful.
3. Once the keyboard is powered up, charging begins. The LED marked with M lights on red.
4. It will turn to white when keyboard is fully recharged.

2.4G Wireless Connection

- 1. Slide the ON/OFF switch on left side of keyboard to ON.
2. press [FN]+[4] for about 3 seconds, the LED marked with M flashes quickly in green, plug the USB receiver into any available USB port on your computer within 20 seconds. The computer will recognize and configure the keyboard automatically.
3. The indicator will flash on Red when the battery is low. Please recharge the keyboard in time by plug type C cable into computer or it will turn off automatically soon, Please note LED marked with M will be light on Red while charging, it turn to Green when charging completed( In 2.4g connecting mode)

Bluetooth Connection

- 1. Slide the ON/OFF switch on left side of keyboard to ON.
2. Press [FN]+[1](or [2]/[3] for other Bluetooth devices), the LED marked with M flashes in blue (or cyan/magenta for the others)
3. Turn on Bluetooth and scan for available devices on your computer or smart phone. It will find "BT3.0Keyboard or BT5.0 KB" device. Select one of them to get connected with

2

it automatically.
4. The indicator will flash in Red when the battery is low. Please recharge the keyboard in time by plug type C cable into computer or it will turn off automatically soon, Please note LED marked with M will be light on Red while charging, it turn to cyan/magenta when charging completed( In Bluetooth connecting mode)

Function Introduction

 
- 1. With standard USB and 2.4G/BT connections, the keyboard can be used on computer without any software or driver installation.
2. Press [Fn]+[C] to switch keyboard between MAC and Win OS, the [Fn]+[M] light on for Windows OS.
3. Commands of key combinations with [FN] key.
FN+ [Fn]+[M] : Change backlight mode. There are 20 backlight patterns.
FN+ [Fn]+[C] : Change backlight color under available patterns.
FN+ [Fn]+[A] : Slow down the ratating speed of backlight .
FN + [Fn]+[D] : Add up the ratating speed of backlight.
FN + Win : Disable or enable the Win key and app key.(Only available at Window OS)
FN + 1: Select Bluetooth device one (for Bluetooth connection).
FN + 2: Select Bluetooth device two (for Bluetooth connection).
FN + 3: Select Bluetooth device three (for Bluetooth connection).
FN + 4: Change to 2.4G wireless connection. Press and hold the [FN]+[4] for 3 seconds to pair the keyboard with its receiver.
FN + 5: Switch to Wired connection
FN+ [ ] [= Home
FN+ ] = End
FN+ ; = PgUp
FN+ " = PgDn
FN+ . > = Insert

3

FN+ W : to switch arrow keys and WASD keys function,repeat to unlock.
FN + ESC: Set the keyboard to default setting.

Scroll button function

Scroll button is place on right upcorner of keyboard for volume adjustment and keyboard backlight brightness adjustment function.
Backlight brightness adjustment: Press [Fn]+[V] key, it is light on White color, Scroll button can switch in different brightness level.
Volume adjustment: Press [Fn]+[V] key, the key light's OFF, scroll button can be switch the volume level.



Multi-media keys in MAC OS

- F1: Screen brightness-
F2: Screen brightness+
F3: Multi-task
F4: siri
F5: Desk
F6: Search
F7: Previous track
F8: Play/Pause
F9: Next track
F10: Mute
F11: Volume-
F12: Volume+

Multi-media keys in Windows OS

- FN+F1: Screen brightness-
FN+F2: Screen brightness+
FN+F3: Multi-task

4

- FN+F4: Voice(Available at Win10 and above)
FN+F5: Desk
FN+F6: Search
FN+F7: Previous track
FN+F8: Play/Pause
FN+F9: Next track
FN+F10: Mute
FN+F11: Volume-
FN+F12: Volume+

Macro recording function

- 1. Press MR key (MR key lights ON), then press G key (G1/G2/G3/G4), the key backlight in flash.
3. Record the desired keys.
4. Press MR key to complete recording (MR key lights OFF).
For example: MR→G1→ABC→MR

How to play Macro

Press the Macro key from G1 to G4
For example : G1(ABC)

How to delete Macro

- 1. Press MR key (MR key lights ON).
2. Double press G keys from G1 to G4 (The key lights OFF).
3. Press MR key to save(MR key lights OFF).

Light recording function

Press [Fn]+[V] get ready for light recording. Press it again, at the meantime indicators of NUM, CAP, SCR keep flash until recording complete, keep press the desire key for favor color, press [Fn]+[V] to save the setting and quit .

5

How to recharge the keyboard

Find the USB A to USB type C cable in the packaging ,plug the keyboard and connect it with computer for charging, the LED indicator(M) of keyboard will be turn to red.
Remark:The LED indicator (M) will turn to red when keyboard is out of battery.

FAQ

- 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

6



BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.



CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

7



REDRAGON
SION PRO
REDRAGON LOW-PROFILE WITH G KEYS
WIRELESS KEYBOARD

Mechanical Gaming Keyboard
Operating Instructions

Table with 5 columns: Model (K653-RGB-PRO/8822), Name (说明书), Date (2023-4-22), Page (1 OF 1), Drawing (雷国建, 审核, 核准, 版本). Includes notes on dimensions and printing.

