

# User Manual

## Bluetooth Speaker

### Model: GFT-B007

#### Get Started

Congratulations! Thank you for choosing GFT-B007 Bluetooth speaker

#### Features

With AUX & Bluetooth input

The durable fabric material and rugged rubber housing.

Super portable Bluetooth speaker delivers powerful sound and robust bass.

Battery capacity: 2000mAh

Drive unit: 4Ω 5W x 2 + passive radiator x 1

Wireless pairing via Bluetooth 4.2

#### Connection diagram

Add the shell image and key function here

#### How to Use

##### 1. General Function

Operation	LED status
Power ON	Blue LED Flashes 3 times with Power on Tone
Power OFF	Power OFF Tone
Pairing	Blue LED flashes
Standby	Blue LED ON
Charging	Red LED keeps lighting during charging, Red light OFF after charging finished.

##### 2. Basic Buttons Operation

Power ON: Press power button for 3 seconds, Blue LED flashes, speaker turned ON with power ON tone.

Power OFF: Press power button for 3 seconds, Blue LED flashes, speaker turned OFF with power OFF tone.

Volume Adjust: Long press “+” key or “-” key

Play/Pause: Short press power button, music pauses, press it again, music continues.

Previous: Short press “-” key.

Next: Short press “+” key.

Answer call: Short press Power button, answer the incoming call.

End call: Short press Power button, phone call ended.

Battery Capacity status: If connected speaker to IOS devices, IOS devices show the speaker battery power status on the upper right corner.

Charging the Speaker: New speaker has enough power for pairing, please charging it VIA USB cable for 3 hours after pairing, Red LED keeps lighting during charging, Red LED light OFF after charging finished.

##### 2. Pairing

Place speaker in one meters away with Bluetooth device, make sure the Speaker is power OFF, Press and hold Power button for 3 seconds to get ready for paring, after Blue LED flash alternately, there will be a voice tone reminding entering paring mode, Activate Bluetooth function on your phone or devices and search for GFT-B007, From the list of found devices on your Bluetooth devices, select GFT-B007 to connect it, then there will be a voice tone reminding connected.

#### Kit Contents

- 1 X GFT-B007 Speaker
- 1x Charging Micro USB cable
- 1X user manual

**Warning**

1. You must choose a qualified charger from a regular manufacturer to charge the speaker.
2. You must charge the ear-buds if it has not been used for more than 12 months.

**Specification**

Bluetooth Version: 4.2

Stand-by time: 20 hours

Playing time: About 8 hours

Wireless range: 10 meters

Bluetooth profiles: HFP,A2DP,AVRCP

Charging time: 3 hours

Battery capacity: 2000mA

Weight:780g

Dimension:78×63×200mm

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.