

Gigaset

allrounder A694
allrounder A694_A
allrounder A694_H

You can find the most up-to-date
user guide at
www.gigaset.com/manuals



Contents

| | |
|---|-----------|
| Overview | 4 |
| Safety precautions | 7 |
| Getting started | 8 |
| Package contents | 8 |
| Base | 8 |
| Handset | 9 |
| Using the phone | 11 |
| Switch the handset on and off | 11 |
| Lock/unlock the keypad | 11 |
| Control key | 11 |
| Display | 12 |
| Menu navigation | 13 |
| Making calls | 14 |
| Making a call | 14 |
| Accepting a call | 15 |
| Handsfree mode | 15 |
| Changing the receiver/speaker volume | 15 |
| Muting | 16 |
| Making internal calls | 16 |
| Calling Line Identification | 17 |
| Automatic network provider selection (preselection) | 18 |
| Call/message lists | 19 |
| Call list | 20 |
| Message list | 20 |
| Directory | 21 |
| Local answer machine (if available) | 23 |
| Setting up the answer machine | 23 |
| Operation using the handset | 24 |
| Operation when on the move (remote operation) | 26 |
| Network mailbox | 27 |
| Entering a number | 27 |
| Playing messages | 27 |
| Assigning key 1 | 27 |
| Additional functions | 28 |
| Alarm clock | 28 |
| Baby monitor (Room monitoring) | 28 |
| ECO DECT | 30 |
| Protection from undesired calls | 31 |


| | |
|--|-----------|
| Extending the functionality of the phone | 32 |
| Multiple handsets | 32 |
| Repeater support | 33 |
| Operating the base on a router/PABX | 34 |
| Phone settings | 35 |
| Date and time | 35 |
| Country and language (if available) | 36 |
| Display | 36 |
| Tones and signals | 37 |
| System | 40 |
| Innovation, Science and Economic Development Canada - Certification | 41 |
| FCC / ACTA Information | 41 |
| Safety precautions | 43 |
| Service (Customer Care) | 44 |
| End-user limited warranty | 44 |
| Questions and answers | 48 |
| Manufacturer's advice | 48 |
| Data protection | 48 |
| Environment | 49 |
| Care | 49 |
| Contact with liquid | 49 |
| Technical data | 50 |
| Character set tables | 51 |
| Menu tree | 52 |
| Index | 55 |



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

Handset

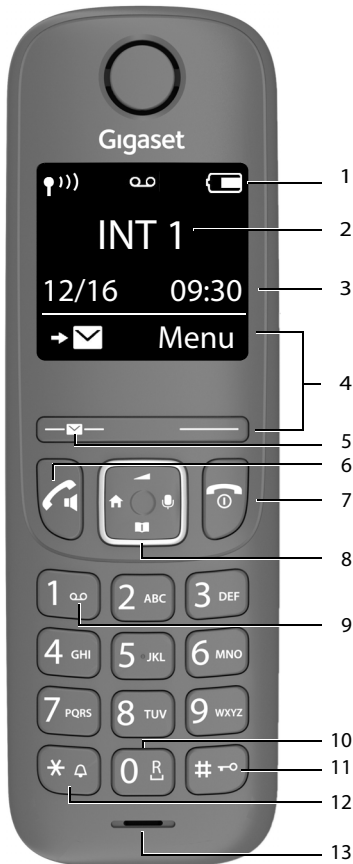

- 1 **Status bar** (→ p. 12)
Icons display current settings and operating status of the telephone
- 2 **Name of the handset** (→ p. 32)
- 3 **Date and time** (→ p. 35)
- 4 **Display keys and functions** (→ p. 12)
Various functions, depending on the operating situation

- 5 **Message key**
Access to the call and message lists;
flashes: new message or new call
New messages in the call list / network mailbox list are shown on the display by message **New messages**.
- 6 **Talk key / Handsfree key**
Accepting call; selecting displayed number; open redial list
Start dialling
Press **briefly** / Press and **hold**
- 7 **End call key / On/Off key**
End call; Cancel function; one level back
Back to idle mode, switch handset on/off
Press **briefly** / Press and **hold**
- 8 **Control key** (→ p. 11)
 - ☰ Open menu; mute;
 - ☑ Open directory;
 - 🔊 Adjust volume;
 - ☎ Make internal calls;
 - 🔄 Navigate in menus and entry fields
- 9 **Key 1** (→ p. 24)
Call answering machine / network mailbox
Press and **hold**
- 10 **Flash key**
Consultation call (flash)
Press and **hold**
- 11 **Hash key / Lock key**
Lock/unlock the keypad; enter a dialling pause
Toggle between upper/lower case and digits
Press and **hold** / Press **briefly**
- 12 **Star key**
Switching the ringtone on/off
Switch from pulse dialling to tone dialling
Press and **hold** / Press **briefly**
- 13 **Microphone**

i If multiple functions are listed, the button function depends on the situation.
The colour and shape of your device may be different from the illustration.



Setting the display language (→ p. 10)

Base without answer machine

Registration/paging key

Locate a handset (paging): ▶ Press **briefly**

Registering handsets: ▶ Press and **hold**



Base with answer machine

A Volume keys (- = quieter; + = louder)

During message playback:
adjust the speech volume

While the phone is ringing:
adjust the ringtone volume

B Registration/paging key

Locate a handset (paging):

▶ Press **briefly**

Register the handset:

▶ Press and **hold**

C Forward key

During message playback: Skip to the next message

D Back key

During message playback:

Go to the start of the current message:

▶ Press **once**

Go to the previous message:

▶ Press **twice**

E Delete key

During message playback: Delete current message.

F On/Off and Playback/Stop key

Switch the answer machine on/off:

▶ Press and **hold**

During message playback:

Play back messages:

▶ Press **briefly**

Cancel playback:

▶ Press **briefly**

Lights up:


Answer machine switched on, no new messages

Flashes:

New message; message is being played or recorded



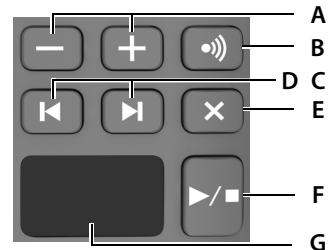

Flashes very quickly: Memory full

G Display


 

 



 


Symbols used in the user guide

Icons

| | |
|---|---|
|  | Warnings, the non-adherence to which can result in damage to devices or personal injury. |
|  | Important information regarding function and appropriate handling or functions that could generate costs. |
|  | Prerequisite for carrying out the following action. |
|  | Additional helpful information. |



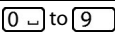



Buttons

| | | | |
|---|--------------------|---|--------------|
|  | Talk/Handsfree key |  | Hash key |
|  | End call key |  | Star key |
|  | Control key |  | Flash key |
|  | Digit/letter keys |  | Display keys |













Procedures

Example: Enabling/disabling Auto Answer:

- ▶  **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Auto Answer** ▶ **OK**
 = enabled)

| Step | Actions required |
|--|---|
| ▶ Menu | Press the Menu display key. |
| ▶  Settings | Use the control key  to navigate to entry Settings . |
| ▶ OK | Press OK to confirm. The Settings submenu is opened. |
| ▶  Telephony | Select the Telephony entry using the control key  . |
| ▶ OK | Press OK to confirm. The Telephony submenu is opened. |
| ▶  Auto Answer | Select the Auto Answer entry using the control key  . |
| ▶ OK | Enable or disable it using OK . Function is enabled ✓. |

Safety precautions

| | |
|---|--|
|  | Read the safety precautions and the user guide before use. |
|  | The device cannot be used in the event of a power failure. It is also not possible to transmit emergency calls . Emergency numbers cannot be dialled if the keypad/display lock is activated! |
|  | Use only rechargeable batteries that correspond to the specification (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced. Do not charge the handset in charging unit or base station while the headset is connected. |
|  | The handset must not be operated if the battery cover is open. Ensure that the batteries can not be short-circuited by objects in the battery compartment. |
|  | Do not use the devices in environments with a potential explosion hazard (e.g., paint shops). |
|  | The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms. |
|  | Use only the power adapter indicated on the device. Whilst charging, the power socket must be easily accessible. |
|  | Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services. Disconnect the telephone network connector (TNV circuit connector). |
|  | Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired. |
|  | Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing. The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier. |
|  | Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately. |
|  | Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data"). |

Getting started

Package contents

- One base, one power adapter, one phone cable
- One handset, two batteries, one battery cover
- One user guide

Models with multiple handsets, per handset:

- One handset, one charging cradle with power adapter, two batteries and one battery cover



The base and charging cradle are designed for use in closed, dry rooms within a temperature range of +41 °F to +113 °F.

Position the base on a level, non-slip surface at a central point in the flat or house. The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Never expose the telephone to heat sources, direct sunlight or other electrical devices. Protect your telephone from moisture, dust, corrosive liquids and vapours.

Base

Connecting the base to power supply and telephone network

- ▶ Connect the power adapter **1**.
- ▶ Connect the phone jack **2** and insert the cables into the cable channels.

Device without answer machine



Device with answer machine



The power adapter must **always be connected** as the phone does not work without a power supply.

The local answer machine (if available) is not ready until about 30 seconds after the base has been connected.

Connecting the base to the router

You can also operate the telephone on the analogue connection of a router.

- ▶ Connect the phone jack **1** and connect it to the analogue port of a router **2**.

Device without answer machine

Device with answer machine



Any echoes can be reduced by enabling **XES mode** (→ p. 34).


Handset

Connect the charging cradle (if included)

- ▶ Connect the flat plug of the power adapter **1**
- ▶ Plug the power adapter into the socket **2**

To remove the plug from the charging cradle again:

- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

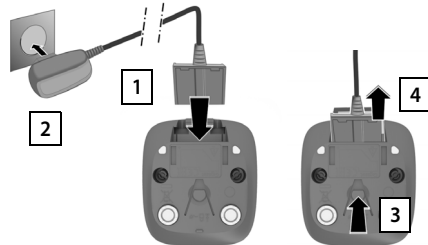

Setting up the handset for use

The display is protected by a plastic film. **Please remove the protective film.**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged beyond repair or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


Getting started



- ▶ Insert the batteries with the polarity in the right direction (refer to the picture for +/- positions).




- ▶ Fit the battery cover from the top.
- ▶ Push the cover closed until it clicks into place.

 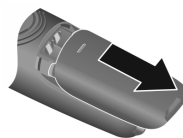


- To re-open the battery cover:
- ▶ Grip the notch on the cover and slide it downwards.

Charging the batteries

- ▶ Fully charge the batteries in the charging slot prior to initial use.

The batteries are fully charged when the battery icon  disappears from the display.





Batteries can heat up during the charge process. This is not dangerous.

Over time, the charging capacity of the batteries will decrease for technical reasons.

Handsets contained in the package have already been registered to the base. If a handset has not been registered however, please register it manually (→ p. 32).




Changing the display language


You can change the display language, if the phone has been set to an incomprehensible language.

- ▶ **Menu** ▶ Press the keys **4** **2** slowly in succession . . . the language set (e.g. **English**) is displayed
- ▶ Select a different language: ▶ Press the control key  until the language required is selected on the display, e.g. **Français** ▶ **OK**  = selected)

Setting date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  Enter the date (day, month and year) in 8-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK** (Display: **Saved**)


Moving the input position to the left or right: ▶ Press the control key  to the left/right

Your phone is now ready for use.

Using the phone

Switch the handset on and off

 
Switching on: ▶ When the handset is switched off, press and **hold** the End call key 

Switching off: ▶ When the handset is in idle mode, press and **hold** the End call key 

If you place a deactivated handset into the charging slot, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the phone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock enabled: The  symbol is shown on the display




If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.





It is also not possible to call emergency numbers when keypad lock is enabled.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.


In the description below, the side of the control key is marked with an arrow (up, down, left, right) that must be pressed in the different operating situations, e.g.  for "press right on the control key".

| In idle mode | During a conversation |
|--|---|
|  Open the menu | Mute the microphone |
|  Select audio settings | Adjust the loudspeaker volume for receiver and handsfree mode |
|  Open the directory | Open the directory |
|  Make internal call / Open list of handsets | Initiate an internal consultation call |

Display

Display keys

The display keys perform a range of functions depending on the operating situation.

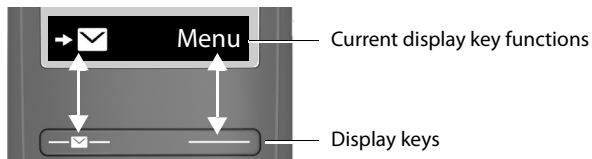

- ▶ Press the display key . . . Function shown in display above.

| | | |
|--|------|---|
| | Menu | Open the main menu / submenu |
| | OK | Confirm menu function / save entry |
| | Menu | Back one menu level |
| | OK | Delete character by character to the left |
| | Menu | Access the call list / message list |

Changing the assignment of the right display key in idle mode

- ▶ Press and **hold** the right-hand display key . . . The list of possible key assignments is opened ▶ Select function ▶ **OK**

Display functions accessed from the control key

| | | | |
|--|--|------|---|
| | | Menu | Use to scroll up/down and set the volume |
| | | OK | Move the cursor left and right with |

Status bar

Icons display current settings and the status of the phone.

| | |
|--|-----------------------|
| | Keypad lock activated |
| | Ringtone deactivated |

Radio contact between the base and handset

| | |
|--|---|
| | Good to poor |
| | No reception |
| | ECO DECT mode No Radiation enabled |

Answer machines

Local answer machine switched on (if available)

Battery charge level

0 - 10%



11 - 33%



34 - 66%



> 66%

The ⚡ symbol is shown at the front during the charge process.





Flashing

Battery almost flat (less than 10 minutes of talk time)

Menu navigation

The functions of your phone are displayed in a menu comprising several levels.


Menu overview: → p. 52

- ▶ When the phone is in **idle**, press the Display key **Menu** or the control key  (right) ... the menu opens
- ▶ Use the control key  to scroll to the function required ▶ Confirm with **OK**

Back one level:

- ▶ Press the  key or **briefly** press the End call key 

Return to idle:

- ▶ Press and **hold** the End call key 



The display automatically returns to idle mode after two minutes of inactivity.


Making calls

Making a call

▶  Enter the number ▶ Press the Talk key  ... The number is dialled




or

▶ Press and **hold** the Talk key  ... The dial tone can be heard ▶  Enter the number





Ending a call / cancelling dialling: ▶ Press the End call key 

You can automatically prefix every number with a network provider prefix (**Preselection**).

Dialling from the directory

▶ Open the directory with  ▶  Scroll to the required entry ▶ Press the Talk key 

or

▶ Open the directory with  ▶  Enter the first letter of the name ... The first entry matching the input is displayed ▶  Scroll as needed to the entry required ▶ Press the Talk key 

Dialling from the redial list

The list contains the 10 numbers last dialled with the handset.

▶ Press **briefly**  ▶  Select entry ▶ 



Managing entries in the redial list

▶ Press **briefly**  ▶  Select ▶ **Menu** ▶  Select function ▶ **OK**

Possible functions: **Use Number / Copy to Directory / Delete Entry / Delete List**

Dialling from the call list

Open the call list: ▶ Press the Display key  ▶  CallsList ▶ **OK**

▶  Scroll to the required entry ▶ Press the Talk key 

Dialling with speed dial key








Entries from the directory are assigned to keys 2 to 9.

▶ Press and **hold** the quick dial key to which the required number is assigned

One touch call

A predefined number is dialled by pressing **any** key. This allows children, who are unable to enter a number, to call a certain number for example.

Enabling one touch call mode:

- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **One Touch Call** ▶ **OK** ▶ **Activation** ▶ **OK** ▶  Enter the number or use  to take it from the directory ▶ **OK**  = enabled)

Make a one touch call: ▶ Press any key . . . the saved number is dialled

Cancel dialling: ▶ Press the End call key 

End one touch call: ▶ Press and **hold** the  key

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen.

- ▶ Press the Talk key 

Function **Auto Answer** enabled: ▶ Simply take the handset out of the charging slot

Enabling function **Auto Answer**:


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Auto Answer** ▶ **OK**  = enabled)

Switch the ringtone off: ▶ **Menu** ▶ **Silent** . . . The call can continue to be accepted whilst it is being shown on the display

Handsfree mode

In handsfree mode, you switch on the loudspeaker so that you can hear the caller without holding the handset to your ear.

Enabling/disabling handsfree mode during a call and when listening to the answer machine:

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the Handsfree key  ▶ Place the handset into the charging cradle

Changing the receiver/speaker volume


To change the receiver/speaker volume during a call:

- ▶  ▶ Use  to set the volume

Making calls

Muting

When the microphone is switched off, the people you are talking to can no longer hear you.

- ▶ During a call, press the control key  (right) ... The handset microphone is switched off



 
Making internal calls



Internal calls are free calls to other handsets registered to the same base.

Making internal calls




Calling a specific internal subscriber:

- ▶  ▶ when more than two handsets are registered: Use  to select the internal subscriber ▶ OK or  ... The handset selected is called

Calling all handsets ("group call"):

- ▶  Press and hold or ▶  ▶ 



or

- ▶  ▶  Call All ▶ OK or  ... All registered handsets are called. You speak to the first internal subscriber to pick up.

Ending the internal call: ▶ Press the End call key .

Making an internal consultation call / Forwarding a call

Call an **external** subscriber and transfer the call to an **internal** subscriber or hold a consultation call with him or her.

- ▶  ▶  Select as required the handset or Call All ▶ OK ... The internal subscriber(s) is/are called, the external subscriber hears music on hold

Possible options:


Hold a consultation call: ▶ Speak to the internal subscriber

Return to the external call: ▶ Press the Display key 

Transfer the external call when the internal subscriber has answered:

- ▶ Announce an external call ▶ Press the End call key 

Transfer the external call before the internal subscriber answers:

- ▶ Press the End call key  ... The external call is forwarded immediately

Listening in to an external call

You are holding an external call. An internal subscriber can listen in to this call and take part in the conversation (conference).



The **Listening in** function is enabled.

Enabling/disabling internal listening in

▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Listening in** ▶ **OK**
 = enabled)

Initiating an internal conference call

You want to join an existing external call on a different handset.

▶ Press and **hold** the Talk key ... All subscribers hear a signal tone

Ending a conference call:

▶ Press the End call key ... All subscribers hear a signal tone

When the **first** internal subscriber presses the End call key , the handset which joined the conference call remains connected to the external subscriber.

Calling Line Identification

During a call, the caller's number is transferred (CLI = Calling Line Identification) and can be displayed on the recipient's display (CLIP = CLI Presentation). When the caller's number is withheld, it is not shown on the called party's display. The call is made anonymously (CLIR = CLI Restriction).

If CNIP (Calling Name Identification Presentation) is available, the registered name is shown instead of the number.



You have authorised your network provider to show the number of the caller (CLIP) and their name (CNIP) on your display.

The caller has authorised the network provider to send the phone number (CLI).

Caller display for incoming calls

Calling Line Identification

The caller's phone number is displayed. If the caller's number is saved in the directory, the name is displayed.

No Calling Line Identification

Instead of name and number, the following is displayed:

- **External call:** No number is transferred.
- **Withheld:** Caller has withheld Calling Line Identification.
- **Unavailable:** Caller has not authorised Calling Line Identification.

Making calls

Automatic network provider selection (preselection)

You can store a Call-by-Call number (preselection number), which **automatically** prefixes the number you dial. If you want to make calls abroad through a particular network provider for example, you can store its prefix here.

In the **With Preselect** list, enter the (initial digits of the) prefix numbers for which you want to use the preselection number.

In the **Without Presel** list, enter the exceptions to the **With Preselect** list.

Example:

| | |
|----------------|------------|
| Presel. Number | 0999 |
| With Preselect | 08 |
| Without Presel | 081 084 |

All numbers beginning with **08**, with the exception of **081** and **084**, are dialled using preselection number **0999**.

| Number | Selected number |
|-----------------|------------------------|
| 07112345 | ▶ 07112345 |
| 08912345 | ▶ 0999 08912345 |
| 08412345 | ▶ 08412345 |

Entering a preselection number

- ▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ Enter the number or use number from directory ▶ OK

Create list of prefix numbers with preselection

- ▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Preselection ▶ OK ▶ With Preselect ▶ OK ▶ Select the list entry (1 – 11) ▶ OK ▶ Enter (the initial digits of) the prefix number for which the preselection number is to be used ▶ OK ▶ Select different list entry as required and enter more numbers

Create list of prefix numbers without preselection

- ▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Preselection ▶ OK ▶ Without Presel ▶ OK ▶ Select the list entry (1 – 11) ▶ OK ▶ Enter the exceptions for the **With Preselect** list ▶ OK ▶ Select another list entry as required and enter more numbers

Disabling preselection permanently

- ▶ Menu ▶ Settings ▶ OK ▶ Telephony ▶ OK ▶ Preselection ▶ OK ▶ Presel. Number ▶ OK ▶ Clear the preselection number with the Display key ▶ OK


Call/message lists

The phone saves information about various events in lists:

- Call list: Numbers of all incoming and missed calls
- Answer machine list: Messages on the local answer machine (if available)
- Network mailbox list: Messages on the network mailbox

An advisory tone sounds as soon as a **new entry** appears on one of the lists. The default setting is the message key flashing (= left display key) and the following shown on the display:

 + number for missed calls

 + number for new voice messages

Disabling the display of new messages

▶ Menu ▶

97

Select the type of message:

▶ Press key for missed calls

▶ Press key for messages on the local answer machine (if available)/network mailbox

975 SET: [0]

Setting the actions for new messages:

▶ Press key The presence of new messages is displayed (default).

▶ Press key The presence of new messages is not displayed.

975 SET: [1]

Save setting: ▶ OK



A change to the setting only becomes effective once the next new message is received.

If calls are stored in the network mailbox, you receive a message when the setting is configured (dependent on the network provider).

Call list



Prerequisite: CLIP

Depending on the type of list set, all numbers for the last 25 incoming calls are saved, or only the missed calls are saved.

Setting the list type

- ▶ Menu ▶  Settings ▶ OK ▶  Telephony ▶ OK ▶  Call list type ▶ OK ▶  Missed calls / All calls ▶ OK = selected)


Opening the call list

- ▶ Press the display key  ... The list selection is opened ▶  CallsList

The entry shows: number of new entries + number of old, read entries

| | |
|-----------|-------|
| CallsList | 01+02 |
|-----------|-------|

Open list: ▶ OK ... The last incoming call is displayed

- ▶ Use  to scroll through the list

Using other functions



- ▶  Select entry ▶ Menu ▶ Use  to select the function:

| | |
|--------------------------|--|
| Delete Entry | Delete current entry |
| Copy to Dir. | Copy an entry to the directory |
| Copy to Blacklist | Copy a number to the black list |
| Show Name | If you have requested CNIP, you can view the name and place that are registered for this phone number with your network provider |
| Delete List | Delete all entries Note: All old and new entries are deleted |



Message list

You can listen to messages on the answering machine (if available) or the network mailbox. from the answering machine list / network mailbox list.

Open the answer machine list:

- ▶ Press the Display key  ... The list selection is opened ▶  Voice Mail ▶ OK


Open the network mailbox list:

- ▶ Press the Display key  ... The list selection is opened ▶  Network Mailbox ▶ OK

Directory

The local directory is unique to a handset. Entries can be sent to other handsets however (→ p. 22).

Up to 150 phone numbers (max. 30 digits) with associated names (max. 16 characters) can be stored.

Open the directory: ▶ Press down the control key 

or: ▶ **Menu** ▶  **Directory** ▶ **OK**

Creating a directory entry


First entry:

▶  ... **No entries. New entry?** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**





 
More numbers:

▶  ▶ **Menu** ▶ **New Entry** ▶ **OK** ▶  Enter the phone number ▶ **OK** ▶  Enter the name ▶ **OK**

Marking an entry as VIP


Every existing entry can be marked as a VIP contact. VIP contacts are assigned their own ring-tones and are displayed with symbol  in the directory and when they call.


Creating a VIP entry:

▶  ▶ Use  to scroll to the entry you want to make a VIP contact ▶ **Menu** ▶  Select **VIP Caller Melody** ▶ **OK** ( = enabled) ▶  Select the ringtone melody ▶ **OK**

Resetting a VIP mark: ▶ Select **No Melody** as the ringtone melody

Selecting/editing the directory entry




▶  Open the directory

▶ Use  to scroll to the entry until the required name is selected

or

▶ Enter the first character of the name ▶ Scroll as required with  to the entry

Display number: ▶ **Menu** ▶  **Show Number** ▶ **OK**

Change entry: ▶ **Menu** ▶  **Edit Entry** ▶ **OK** ▶ Delete characters with  ▶ change entry with  ▶ **OK**

Directory

Assigning quick-dial keys

- ▶  ▶  Select entry ▶ Menu ▶  Shortcut ▶ OK ▶  Select key ▶ OK
 = selected)

Clearing a key assignment:

- ▶  ▶  Select entry ▶ Menu ▶  Shortcut ▶ OK ▶  No Shortcut ▶ OK
 = selected)

Deleting a directory (entry)

Deleting a directory entry

- ▶  ▶  Select entry ▶ Menu ▶  Delete Entry ▶ OK

Deleting a directory

- ▶  ▶ Menu ▶  Delete List ▶ OK ▶ Confirm deletion with OK

Transferring a directory (entry) to another handset



The sending and receiving handsets must both be registered with the same base.
 The other handset and the base are able to send and receive directory entries.

Transferring a directory entry to another handset

- ▶  ▶  Select entry ▶ Menu ▶  Send Entry ▶ OK ▶  Select internal number of the recipient handset ▶ OK

Transferring a directory to another handset

- ▶  ▶ Menu ▶  Send List ▶ OK ▶  Select internal number of the recipient handset ▶ OK

Local answer machine (if available)




The handset is used to personalise settings on and operate the answering machine.



Setting up the answer machine

The default setting is answer machine already set up. You can change this.

Recording your own announcements

You can record your own announcements using the handset. The pre-recorded announcement is used if no personal announcement is available.




- ▶ Menu ▶  Answering Machine ▶ OK ▶  Announcements ▶ OK ▶  Rec announce ▶ OK ▶ Speak after OK ▶ OK ... You hear the ready tone (short tone) ▶ Record the announcement (min. 3 seconds) ▶ Confirm with OK

Cancelling and discarding an announcement: ▶ Press  or 




After the recording, the announcement is played back for you to check.

Recording ends automatically when the max. recording time of 170 seconds is reached or there is a pause in speaking of longer than 2 seconds.

Play back the announcement:

- ▶ Menu ▶  Answering Machine ▶ OK ▶  Announcements ▶ OK ▶  Play announce ▶ OK

Delete announcement:

- ▶ Menu ▶  Answering Machine ▶ OK ▶  Announcements ▶ OK ▶  Del announce ▶ OK

Changing settings

- ▶ Menu ▶  Answering Machine ▶ OK ▶ Select the setting you want to change

Time to Auto Answer

- ▶ Ring Delay ▶ OK ▶  Immediately / 10 sec / 18 sec / 30 sec / Auto ▶ OK = enabled)

Auto: the answer machine answers a call:

- after **18 seconds** if there are no new messages.
- after **10 seconds** if there are new messages.



Select **Auto** when you want to retrieve messages while you are out. So for remote access (→ p. 26), it is clear after 10 seconds that there are no new messages. No call costs are incurred if the call is ended immediately.

Local answer machine (if available)

Recording time

- ▶ **Message Length** ▶ OK ▶ **Maximum / 1 Minute / 2 Minutes / 3 Minutes** ▶ OK
 = enabled)

Listening in during recording

- ▶ **Call Screening** ▶ OK ▶ **Handset / Base** ▶ OK = enabled)



Disable listening in for the **current recording**:

- ▶ Press the End call key

Setting a different language (if available)

You can change the voice prompt language and language of the standard announcement.

- ▶ **Menu** ▶ **Answering Machine** ▶ OK ▶ **Language** ▶ OK ▶ Select the language ▶ OK

Operation using the handset

Enabling/disabling an answer machine

- ▶ **Menu** ▶ **Answering Machine** ▶ OK ▶ **Answ. Mach.** ▶ OK = enabled)

If the answer machine is enabled, the display shows icon .



If the memory is full, the display shows **Memory full** and the answer machine switches off automatically. Delete old messages so that it switches on again automatically.

Playing back messages

- ▶ Press and **hold** key (key 1 is assigned to the answer machine)

or

- ▶ **Menu** ▶ **Answering Machine** ▶ OK ▶ **Play Messages** ▶ OK

If the network mailbox is enabled: **Answ. Mach.** ▶ OK

or

- ▶ Press the Display key ▶ ... The list selection is opened ▶ **Voice Mail** ▶ OK

The answer machine list is shown as follows: **VoiceMail 01+02**

 
 


 

 

 

 

 



 
 


Number of new messages + number of old entries which have already been played back

If there are new messages, playback starts with the first new message, otherwise with the first old message. First an info block is played, then the content. The display shows the caller's number or the caller's name.

The handset loudspeaker switches on **automatically**.




Switch off the loudspeaker: ▶ Press the handsfree key

Actions during playback

- Stop playback: ▶ 
- Continue playback: ▶ Press  again
or ▶ **Menu** ▶  **Continue**
- Go to the next message: ▶  or 
- During playback of the info block**
- Go to the start of the previous message: ▶  or  
- Skip the information block: ▶ 
- During playback of the content**
- Go to the start of the current message: ▶  or  
- Go to the content of the next message: ▶ 
- Call back a caller: ▶ **Menu** ▶  **Dial Number** ▶ **OK**
- Change volume: ▶ **Menu** ▶  **Volume** ▶ **OK**
- Copy a number to the directory: ▶ **Menu** ▶  **Copy to Dir.** ▶ **OK**
- Delete a single message: ▶   or press the Display key 
- Delete all old messages: ▶ **Menu** ▶  **Delete all old** ▶ **OK** ▶ Confirm the prompt



Picking up a call from the answer machine

Even if the answer machine has already answered or is recording a call, you can still take it:

- ▶ Press the Talk key 
- or
- ▶ Remove the handset from the base / charging cradle ( **Auto Answer** is enabled)
- or
- ▶ **Menu** ▶  **Accept** ▶ **OK**

Recording stops and you can speak to the caller.



If **Call Screening** via the handset is enabled (→ p. 23) and the call can already be heard through the handset, you can only take the call with **Menu** ▶  **Accept** ▶ **OK**.
Pressing the Talk/handsfree key  only enables and disables handsfree mode.

Local answer machine (if available)


Operation when on the move (remote operation)

You can check and enable your answer machine from any other phone (hotel, pay phone, etc.).



- ▶ The system PIN is not 0000.
- ▶ The other phone has tone dialling (DTMF).

Enabling the answer machine

- ▶ Call the telephone connection and let it ring until the announcement **Please enter your PIN** (approx. 50 seconds) ▶ Use  to enter the phone's system PIN within 10 seconds ... The answer machine is enabled, the remaining memory is announced and messages are played back

 


The answer machine cannot be disabled remotely.





Checking an answer machine



The answer machine is enabled.

- ▶ Call the telephone connection ▶ press key  during the announcement ... the announcement is interrupted ▶ enter the system PIN

The answer machine is operated using the following keys:

| | |
|--|---|
| During playback of the info block: Skip to previous message. During message playback: Go to the start of the current message. |  |
| Pause playback. Press again to resume. After a pause of approx. 60 seconds, the connection is ended. |  |
| Go to the next message. |  |
| During message playback: Delete current message. |  |

Network mailbox



The network mailbox is **registered** with the network provider.

Entering a number

- ▶ Menu ▶ Answering Machine ▶ OK ▶ Net Mailbox ▶ OK ▶ Enter the number ▶ OK ... The network mailbox is enabled



To enable and disable the network mailbox, use the number and a function code from your network provider. Contact the network provider if you require any further information.

Playing messages

- From the menu:
- ▶ Menu ▶ Answering Machine ▶ OK ▶ Play Messages ▶ OK ▶ Net Mailbox ▶ OK

- Using key 1:
- ▶ Press and **hold** key (▲ key 1 is assigned to the network mailbox)

- From the message list:
- ▶ Press the Display key ... The list selection is opened ▶ Network Mailbox ▶ OK

... The network mailbox is called and the voice menu of the network operator is used for subsequent use

Assigning key 1

When you use a local and a network mailbox, you can specify which one is opened with the key.



Settings for quick access are handset-specific. A different answer machine can be assigned to key on every handset registered.

Device without network mailbox: the network mailbox is automatically linked to key .

- ▶ Menu ▶ Answering Machine ▶ OK ▶ Set Key 1 ▶ OK ▶ Answ. Mach. / Net Mailbox ▶ OK (= selected)

Additional functions

Alarm clock



Date and time have been set.

Turning the alarm clock on and off

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Activation** ▶ **OK** = turned on)
- ▶ Enter the wake-up time in hours and minutes ▶ **OK**

Alarm clock turned on: Instead of the date, the display shows the wake-up time and left of it the alarm clock symbol.

Setting/changing the wake-up time

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Wake-up Time** ▶ **OK** ▶ Enter the wake-up time in hours and minutes ▶ **OK**

Setting days

Select when the alarm is to be active, daily or only on workdays.

- ▶ **Menu** ▶ **Alarm Clock** ▶ **OK** ▶ **Occurrence** ▶ **OK** ▶ **Select Daily / Monday-Friday** ▶ **OK**

Turning off the wake-up call

A wake-up call is shown on the display and indicated by the ringtone melody selected.

- ▶ **Off** ... The alarm call is switched off for 24 hours

or

- ▶ Press **Later** or any key ... **Snooze** is shown on the display, the alarm call is repeated after five minutes

Baby monitor (Room monitoring)

When the baby monitor is switched on, the stored external phone numbers or all handsets registered to the phone (internal) are called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after about 90 seconds.

You can answer the alarm using the **Two-Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. Advisory tones are disabled. All keys with the exception of the display keys are disabled.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The answer machine for the destination number must be switched off.

After switching on:

- ▶ Test sensitivity.
- ▶ Test the connection, if the alarm is being forwarded to an external number.



Activating and setting the baby monitor

- ▶ **Menu** ▶  **Baby Monitor** ▶ **OK**

Enable/disable:

- ▶ **Activation** ▶ **OK** (= enabled) ... if a phone number to call is already entered, the baby monitor is enabled immediately

Entering/changing call number:

- ▶  **Call Target** ▶ **OK** ▶  **Select Internal or External Call** ▶ **OK** ▶ for **External Call**, enter phone number ▶ **OK**

Baby Monitor and the number to call are displayed when the baby monitor is enabled and in idle mode.

Activate/deactivate two-way talk:

- ▶  **Two-Way Talk** ▶ **OK** (= enabled)

Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:

- ▶ In idle status press the display key **Off**

Cancel the alarm:

- ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys **9** **#**

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key **Off**.



The baby monitor cannot be reactivated remotely.

Reactivate: → p. 29

ECO DECT

The device range is set to maximum by default. This guarantees the best connection between handset and base. In idle mode, the handset does not transmit (it is radiation-free). Only the base maintains contact with the handset, using weak wireless signals. During a call, the transmit power automatically adapts to the distance between base and handset. The shorter the distance to the base, the lower the radiation.

Reducing radiation by up to 80%

Enabling/disabling the maximum range:

- ▶ **Menu** ▶  **Settings** ▶ **System** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **Max. Range** ▶ **OK**
- = range and radiation reduced



It is not possible to use a repeater to increase the range.

Disabling radiation in idle mode

The wireless signals of the base are also disabled with the **No radiation** setting.


- ▶ **Menu** ▶  **Settings** ▶ **System** ▶ **OK** ▶  **ECO DECT** ▶ **OK** ▶ **No Radiation** ▶ **OK**
- = Radiation disabled



All handsets registered must support this feature.

For speedy set-up of connections for incoming calls, the handset keeps switching to "ready to receive" momentarily. This increases the power consumption and so reduces the standby and talk times.

When **No Radiation** is enabled, there is no range display / range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and **hold** the Talk key  ... the ringing tone sounds.

Protection from undesired calls





Black list

You can enter up to 32 numbers in a black list. When the black list is enabled, calls from black list numbers are not signalled acoustically. These settings apply to all registered handsets.

Enabling/disabling the black list

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶ OK ▶ Activation ▶ OK = enabled)

Displaying/editing the black list

- ▶ Menu ▶  Call Manager ▶ OK ▶  Blacklist ▶  Blacklist ▶ OK... The list of blocked numbers is displayed ▶ Use  to scroll through the list

Create an entry: ▶ New ▶  Enter the number ▶ OK

Delete entry: ▶  Select the entry ▶ Delete

Transferring a number from a call list to the black list

- ▶ Open the call list: Press the Display key  ▶  CallsList ▶ OK ▶  Select an entry ▶ OK ▶ Copy to Blacklist ▶ OK

Extending the functionality of the phone

Multiple handsets

Up to four handsets can be registered with the base.

Every device is assigned an internal name and internal number (**INT 1 – INT 4**). The assignment can be changed.

All internal numbers are already assigned: ▶ De-register any devices no longer needed

Registering a handset

The **Please register handset** display flashes or you want to register the handset with a different base.

Registering from the display key or menu



Registration must be initiated **both** on the base **and** on the handset. Both must be **within 60 seconds**.

On the handset

▶ Press the display key **Registr.**

or

▶ **Menu** ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ... The display shows **Registering...** ▶ Enter as required the system PIN of the base (default: 0000) ▶ **OK**

On the base

▶ Within **60 seconds**, press and **hold** the registration/paging key for a minimum of 3 seconds.







The registration process takes about 1 minute. Handsets are assigned the lowest available internal number (1 to 4). If internal numbers 1 to 4 are already assigned to other devices, number 4 is overwritten.



Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu entry **Legacy (GAP) Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

De-registering a handset

You can de-register any other registered handset from any registered Gigaset handset.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Registration** ▶  **Deregister Handset** ▶ **OK**
- ▶  Select the internal user to be de-registered. (The handset you are currently using is marked with <.) ▶ **OK** ▶ Enter the system PIN of the base (default: 0000) ▶ **OK** ... the handset is registered. **Please register handset** flashes on the display

Locating a handset (paging)

Locate a handset using the base.

- ▶ **Briefly** press the Register/Paging key on the base ... all handsets registered ring at the same time even when their ringtones are turned off

Exit

- ▶ **Briefly** press the Register/Paging key on the base

or

- ▶ Press  or  on a handset

Repeater support

A repeater increases the receiving range between the Gigaset handset and base.

Enabling Repeater mode for the base:

- Menu** ▶  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Repeater** ▶ **OK** = enabled)

Register repeater on the base: → User guide for the repeater



Repeater support and ECO DECT mode **No Radiation** are mutually exclusive.

Operating the base on a router/PABX

Operation with a router

When operating on the analogue connection of a router, any **echoes** occurring can be reduced by enabling **XES mode** (XES = eXtended Echo Suppression).

▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  XES mode ▶ OK = enabled

 






 


If there are no problems with echoes, this function should be disabled.




 


 
Operation with a PABX

The following settings are only necessary when your PABX requires them (→ refer to the PABX user guide). Enter the digits **slowly** one after the other.


Changing the dialling mode

▶ Menu ▶         ▶ The digit for the dialling mode set flashes:
0 = Tone dialling (DTMF); 1 = Pulse dialling (PD) ▶ Enter digit ▶ OK

Setting the flash time




 


 

▶ Menu ▶         ▶ The digit for the current flash time flashes:
1 = 80 ms; 2 = 100 ms; 3 = 120 ms; 4 = 180 ms; 5 = 250 ms; 6 = 300 ms; 7 = 400 ms;
8 = 600 ms; 9 = 800 ms ▶ Enter digit ▶ OK

Changing pause after line seizure

You can set the length of the pause inserted between pressing the Talk key  and sending the phone number.

▶ Menu ▶         ▶ The digit for the current pause length flashes: 1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec. ▶ Enter digit ▶ OK

Changing pause after Flash key





▶ Menu ▶         ▶ The digit for the current pause length flashes: 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms ▶ Enter digit ▶ OK

Phone settings

Date and time



 
 
 
 
 

Setting

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Set Date and Time** ▶ **OK** ▶  Enter the date (month, day and year) in 8-digit format ▶ **OK** ▶  Enter the time (hours and minutes) in 4-digit format ▶ **OK**

Using the network time

If date and time are also to be sent to your phone by your network operator (or a router/PABX) during calling line identification, you can specify whether and when these are accepted:

- ▶ **Menu** ▶    **0**  **5**   **7**  **3** ... The digit for the current setting flashes:
 - 1 = **Never**
 - 2 = **Once**, if the date and time are not set on your phone or
 - 3 = **Always**
- ▶  Enter the required digit ▶ **OK**




Setting the time format

Display the time in 12-hour format instead of 24-hour format.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Time Format** ▶ **OK** ▶  **Select 24-hour or 12-hour** ▶ **OK** = selected)

Changing the calendar (if available)

Show the date in Persian calendar format not the Gregorian.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶ **Date and Time** ▶ **OK** ▶  **Calendar** ▶ **OK** ▶  **Select Gregorian or Persian** ▶ **OK** = selected)




Country and language (if available)

Country

Select the country where you use the phone.


- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Country** ▶ **OK** ▶  **Select the country** ▶ **OK**
 = selected)

Display language

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Language** ▶ **OK** ▶  **Select the language** ▶ **OK**
 = selected)







If you accidentally choose a language you do not understand:

- ▶ **Menu** ▶ **Press keys one after the other** ▶  **Select the language** ▶ **OK**

Display

Screensaver

The screensaver is enabled when the phone is not used over a longer period of time. The time is shown as the screensaver.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Screensaver** ▶ **OK** ▶  **Select the required option** (= enabled)

Large dial keys

Show large dial keys when dialling

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Larger Font** ▶ **OK** (= enabled)





Contrast

Adjust the display contrast on 9 levels.

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Contrast** ▶ **OK** ▶  **Select the level** ▶ **OK** (= selected)




Inverting the display colours

The default colour scheme of the display is white text on a black background. Inverting the colour scheme:

- ▶ **Menu** ▶  **Settings** ▶ **OK** ▶  **Display** ▶ **OK** ▶  **Inverse Colors** ▶ **OK** ▶  **Select the level** ▶ **OK** (= selected)

Backlight

The display light is switched off when the handset is not used over a long period of time. You can enable/disable this function separately for situations **handset in charging cradle** and **handset not in charging cradle**.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display On Out of Charg. or Display On In Charger ▶ OK = enabled)



The **Display On Out of Charg.** setting reduces the standby time.

During a call, the display is off

During a call, the display normally stays on. When the function is enabled, the display is switched off during calls.

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Display Off During Calls ▶ OK = enabled)



If the function is disabled, talk time is reduced.

The display flashes for new messages

- ▶ Menu ▶  Settings ▶ OK ▶  Display ▶ OK ▶  Backlight Control ▶ OK ▶  Flash Display for Notifications ▶ OK = enabled)

Tones and signals

Call volume

Adjust the receiver volume or handsfree function on 5 levels.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Call Volume ▶ OK ▶  Earpiece / Handsfree ▶ OK ... The current setting is displayed ▶  Select the volume ▶ OK

Changing the volume during a call

During a call, set the volume of the receiver on 5 levels.

- ▶ Press the control key  ▶ set the volume with 

Tone quality

Change the tone quality of the receiver to how you want it.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Acoustic Profile ▶ OK ▶  Low / High ▶ OK = selected)

Phone settings

Ringtone volume (ringer volume)

Adjust the volume of the ringtone on 5 levels.

For the handset:

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringer Volume ▶ OK ▶  Select volume ▶ OK
 = selected)

For the base (with answer machine):

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringtones(Base) ▶ OK ▶  Ringer Volume ▶ OK ▶  Select volume ▶ OK = selected)

Ringtone melody

For the handset:

Set the ringtone melody for external calls, internal calls or the alarm.

 

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringtones (Handset) ▶ OK ▶  Select External Calls / Internal Calls / Alarm Clock ▶ OK ▶  Select ringtone required ▶ OK
 = selected)

For the base (with answer machine):

Adjusting the ringtone melody for external calls.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Ringtones(Base) ▶ OK ▶ Ringtones (Handset) ▶ OK ▶  Select the ringtone required ▶ OK

Disabling/re-enabling the ringtone permanently

- ▶ When the phone is idle, press and hold the Star key . When the ringtone is disabled, symbol  is shown on the display.

Deactivating the ring tone for the current call

- ▶ Menu ▶ Silent ▶ OK

Enabling/disabling advisory and warning tones

The handset provides acoustic notification of different activities and statuses.

Advisory tone: e.g. keypress tones, error tone, a new message

Battery warning tone: The battery charge falls below a certain level during a call.

Range warning tone: The handset moves outside the range of the base.

You can enable and disable advisory and warning tones separately.

- ▶ Menu ▶  Audio Settings ▶ OK ▶  Advisory Tones / Battery Low / Out-of-Range Warning ▶ OK = enabled)

Music on hold

You can choose whether an external caller hears music on hold during an internal consultation or when a call is being forwarded.

- ▶ **Menu** ▶ * 0 # 0 5 # 1 7 ... The digit for the current setting flashes:
0 = disabled; 1 = enabled ▶  Enter required digit ▶ **OK**

Enabling/disabling ringtone with time control

Enter a time period during which the handset should **suspend** ringing to indicate external calls, such as during the night.

Enabling/disabling time control

For the handset:






- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Activation** ▶ **OK**
 = enabled)

For the base (with answer machine):





- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones(Base)** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Activation** = enabled)

Setting the time period

For the handset:

- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶  **Settings** ▶ **OK** ▶ **Off from:**  Enter the 4-digit time ▶ **OK** ▶ **Off until:**  Enter the 4-digit time ▶ **OK**

For the base (with answer machine):

- ▶ **Menu** ▶  **Audio Settings** ▶ **OK** ▶  **Ringtones(Base)** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Settings** ▶ **Off from:**  Enter the 4-digit time ▶ **OK** ▶ **Off until:**  Enter the 4-digit time ▶ **OK**

Permit/block VIP calls

Specify whether, when time control is enabled, calls from those marked as VIP contacts in the directory are also suppressed.

- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ **Suppress VIP Calls** ▶ **OK**
 = enabled)






Off for anonymous calls

You can set your **handset** so that it does not ring for calls where Calling Line Identification has been withheld. The call is only signalled on the display.

- ▶ **Menu** ▶  **Call Manager** ▶ **OK** ▶  **Mute Anonym. Calls** ▶ **OK** = enabled)

System




Changing the system PIN

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  System PIN ▶ OK ▶  Enter the current 4-digit system PIN (default: 0000) ▶ OK ▶  Enter the new 4-digit system PIN ▶ OK

Resetting the system PIN: → p. 40

Resetting the handset

You can reset individual settings. Entries in the directory and call list, and the handset's registration to the base, are maintained.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Handset ▶ OK ... Perform factory reset? ▶ OK

Resetting the base

A reset disables mode **No radiation**, resets individual settings and deletes all lists.

The time and date are not affected. The answer machine (if available) is not ready until after about 15 seconds after the base is reset.

Resetting the base from the menu

The handsets remain registered. The system PIN is **not** reset.

- ▶ Menu ▶  Settings ▶ OK ▶  System ▶ OK ▶  Reset Base ▶ OK ... Reset? ▶ OK

Resetting the base using a key on the base

All handsets are de-registered. The system PIN is set back to the original code **0000**.

- ▶ Remove the power cable from the base ▶ Keep pressed the **Registration/paging key** on the base ▶ At the same time, reconnect the power cable to the base ▶ Keep the key pressed for at least another 5 seconds

Innovation, Science and Economic Development Canada - Certification

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

NOTICE: The ISED label identifies certified equipment. This certification means that the equipment meets certain telecommunications network, protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together.

This precaution may be particularly important in rural areas

NOTE: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications including licence-exempt RSS standard(s).

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all devices does not exceed five.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC / ACTA Information

Warning: Changes or modifications to this unit not expressly approved by Gigaset Communications USA LLC could void the FCC authority to operate the equipment. This includes the addition of any external antenna device.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the base station is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

FCC / ACTA Information

A copy of the supplier's Declaration of Conformity (SDoC) is available at this Internet address:
www.gigaset.com/docs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance, that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If trouble is experienced with this equipment, for repair or warranty information, please contact Support at 1-866 247-8758 tollfree. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. This equipment is of a type that is not intended to be repaired by the Customer (user).

This telephone system may not be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. Privacy of communications may not be ensured when using this phone.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This telephone system equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this telephone system does cause harmful interference to radio or television reception, which can be determined by turning the system off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio TV technician for help.

Notice for Direct Inward Dialing ("DID")

ALLOWING THIS EQUIPMENT TO BE OPERATED IN SUCH A MANNER AS TO NOT PROVIDE FOR PROPER ANSWER SUPERVISION IS A VIOLATION OF PART 68 OF THE FCC'S RULES.

Notice to Hearing Aid Wearers

This phone system is compatible with inductively coupled hearing aids.

Power Outage

In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone that does not require electricity available for use during power outages.

Radio frequency radiation exposure Information

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

For body worn operation, the portable part (handset) has been tested touched to the phantom and meets FCC RF exposure guidelines. Nevertheless, the device should be used in such a manner that the potential for human contact during normal operation is minimized.

Notice to telephone company service:

If you need service from your telephone company, please provide them with the information

- Facility interface Code (FIC)
- Service Order Code (SOC)
- Universal Service Order Code (USOC)

as indicated on the label on the bottom side of the base station.

Safety precautions

Before using your telephone equipment, basic safety instructions should always be followed to reduce the risk of fire, electric shock and injury to persons.

- 1 Read and understand all instructions.
- 2 Follow all warnings and instructions marked on the product.
- 3 Unplug this product from the wall telephone jack and power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
- 4 Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
- 5 Place this product securely on a stable surface. Serious damage and/or injury may result if the unit falls.
- 6 Slots or openings in the cabinet and the back and bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register, or in a place where proper ventilation is not provided.
- 7 This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of AC line power to your home, consult your dealer or local power company.
- 8 Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
- 9 Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 10 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in the risk of fire or electric shock. Never spill liquid of any kind on this product.
- 11 To reduce the risk of electric shock or burns, do not disassemble this product. Take it to a qualified service center when service is required. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used. Disconnect TNV circuit connector before removing cover.
- 12 Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a.) When the power cord is damaged or frayed.
 - b.) If liquid has been spilled into the product.
 - c.) If the product has been exposed to rain or water.
 - d.) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
 - e.) If the product has been dropped or physically has been damaged.
 - f.) If the product exhibits a distinct change in performance.

Service (Customer Care)

- 13 Avoid using a telephone (other than a cordless type) during a thunderstorm. There may be a remote risk of electrical shock from lightning. Therefore we suggest a surge arrester.
- 14 Do not use the telephone to report a gas leak in the vicinity of the leak.
- 15 Emergency/911 numbers may not be dialed if the keypad is locked.
- 16 Minimum No. 26 AWG telecommunication line cord must be used with this phone.



Intertek
3187698

ETL LISTED

CONFORMS TO
ANSI/UL STD 62368-1
CERTIFIED TO

CAN/CSA C22.2 No. 62368-1

Battery safety precautions

To reduce the risk of fire, injury or electric shock, and to properly dispose of batteries, please read and understand the following instructions.

CONTAINS NICKEL METAL HYDRIDE BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.

- 1 Only use the batteries specified for use with this product.
- 2 DO NOT USE NICKEL CADMIUM OR LITHIUM BATTERIES, or mix batteries of different sizes or from different manufacturers in this product. DO NOT USE NONRECHARGEABLE BATTERIES.
- 3 Do not dispose of the batteries in a fire; the cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.
- 4 Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
- 5 Exercise care in handling the batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
- 6 Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in the user's manual. Do not attempt to charge the batteries with any means other than that specified in the users manual.
- 7 Periodically clean the charge contacts on both the charger and handset.

Service (Customer Care)

Customer Care Warranty for Cordless Products

To obtain Customer Care Warranty service, product operation information, or for problem resolution, call:

1-866 247-8758 tollfree

End-user limited warranty

This product is covered by a one year limited warranty. Any repair replacement or warranty service, and all questions about this product should be directed to: **1-866 247-8758 tollfree**.

This limited, non-transferable warranty is provided to the original buyer/end-consumer ("you") for systems, handsets and accessories (collectively, "Product") provided by Gigaset Communications USA LLC or Gigaset Communications Canada Inc. (collectively "Gigaset NAM"). Gigaset NAM warrants to you that at the date of purchase, the Product is free of defects in workmanship and materials and the software included in the Product will perform in substantial compliance to its program specifications.

1. WARRANTY PERIOD

The Product warranty period is one (1) year from the original date of purchase by you. Proof of purchase (e.g., sales slip or invoice) must be provided with any Product returned during the warranty period. Batteries supplied with the Products are warranted to be free from defects at the time of purchase only.

2. EXCLUSIVE REMEDY

Gigaset NAM's entire liability and your exclusive remedy if the Product is defective in materials or workmanship during the warranty period and is returned shall be that the Product will be repaired or replaced as set forth in Section 4 below. Reconditioned replacement components, parts or materials may be used in the replacement or repair. Data in the memory of the Product may be lost during repair.

3. THIS LIMITED WARRANTY DOES NOT COVER AND IS VOID WITH RESPECT TO THE FOLLOWING

- Cosmetic damage, physical damage to the surface of the Product, including, without limitation, breakage, cracks, dents, scratches or adhesive marks on the LCD screen or outside casing of the Product.
- Products which have been repaired, maintained or modified (including the antenna) by anyone other than Gigaset NAM or a Gigaset NAM-approved repair facility, or that have been improperly installed.
- Cost of installation, removal or reinstallation.
- Damage due to any telephone, electronic, hardware or software program, network, Internet or computer malfunctions, failures, or difficulties of any kind, including without limitation, server failure or incomplete, incorrect, garbled or delayed computer transmissions.
- Equipment and components not manufactured, supplied or authorized by Gigaset NAM.
- Modification of the Product's components, or operation of the Product in an unsuitable environment or in a manner for which it is not intended, including but not limited to failures or defects caused by misuse, abuse, accidents, physical damage, abnormal operation, improper handling or storage, neglect, alterations, unauthorized installation, removal or repairs, failure to follow instructions, problems caused by the carrier's network coverage, exposure to fire, water or excessive moisture or dampness, floods, or extreme changes in climate or temperature, acts of God, riots, acts of terrorism, spills of food or liquids, viruses or other software flaws introduced into the Product or other acts which are not the fault of Gigaset NAM and which the Product is not specified to tolerate, including damage caused by mishandling or blown fuses.
- Products which have had warranty stickers, electronic serial number and/or serial number label removed, altered, rendered illegible or fraudulently applied to other equipment.
- Signal reception problems (unless caused by defect in material or workmanship in the Product).
- Products operated outside published maximum ratings.
- Performance of the Products when used in combination with other products or equipment not manufactured, supplied or authorized by Gigaset NAM.
- Consumables (such as batteries and fuses).
- Payments for labor or service to representatives or service centers not authorized to perform product maintenance by Gigaset NAM.
- Loss of data.
- Testing and examination discloses that the alleged defect or malfunction in the Product does not exist.

This warranty does not cover customer education, instruction, installation or removal, set up adjustments, problems related to service(s) provided by a carrier or other service provider, and/or signal reception problems. Gigaset NAM shall not be responsible for software, firmware, information, or memory data contained in, stored on, or integrated with any Products returned for repair, whether under warranty or not. This warranty is valid only in the country in which it is purchased (i.e., the United States of America or Canada respectively, but not both).

USE WITH ACCESSORIES NOT SUPPLIED BY GIGASET NAM OR NOT OTHERWISE EXPRESSLY AUTHORIZED BY GIGASET NAM MAY VOID WARRANTY.

4. WARRANTY CLAIM PROCEDURE

All warranty claims must be made by notifying Gigaset NAM prior to the expiration of the warranty period. Gigaset NAM's obligation to provide warranty support shall not extend past the end of the warranty period, except that any product repaired or replaced during the warranty period shall continue to be warranted for the balance of such warranty period or thirty (30) days, whichever is greater.

Support service will be provided for you by accessing the toll free customer service number:

1-866 247-8758 tollfree.

5. LIMITATION OF WARRANTY

Gigaset NAM makes no warranty or representation that the software in the Products will meet your requirements or will work in combination with any hardware or applications software products provided by third parties, that the operation of the software will be uninterrupted or error free, or that all defects in the software products will be corrected.

6. LIMITATION ON REMEDIES; NO CONSEQUENTIAL OR OTHER DAMAGES

Your exclusive remedy for any breach of this limited warranty is as set forth above. Except for any refund elected by Gigaset NAM, **YOU ARE NOT ENTITLED TO ANY DAMAGES, INCLUDING BUT NOT LIMITED TO CONSEQUENTIAL DAMAGES**, if the Product does not meet the limited warranty, and, to the maximum extent allowed by applicable law, even if any remedy fails of its essential purpose. The terms below ("Exclusion of Incidental, Consequential and Certain Other Damages") are also incorporated into this limited warranty. Some states/jurisdictions/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights. You may have others which vary from state/jurisdiction/province to state/jurisdiction/province.

7. DISCLAIMER OF WARRANTIES

GIGASET NAM AND ITS SUPPLIERS PROVIDE THE PRODUCT AND SUPPORT SERVICES (IF ANY) AS IS AND WITH ALL FAULTS. THE LIMITED WARRANTY IS IN LIEU OF ANY OTHER EXPRESS WARRANTIES (IF ANY) CREATED BY ANY DOCUMENTATION OR PACKAGING EXCEPT FOR THE LIMITED WARRANTY, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW IS IN LIEU OF ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY OR COMPLETENESS OR RESPONSES, OF RESULTS, OF WORKMANLIKE EFFORT, OF LACK OF VIRUSES AND OF LACK OF NEGLIGENCE, ALL WITH REGARD TO THE PRODUCT, AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION OR NONINFRINGEMENT WITH REGARD TO THE PRODUCT. Some states/jurisdictions/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you. If an implied warranty or condition is created by your state/province and federal or state/provincial law prohibits disclaimer of it, you also have an implied warranty or condition, BUT ONLY AS TO DEFECTS DISCOVERED DURING THE PERIOD OF THIS LIMITED WARRANTY (ONE YEAR). AS TO ANY DEFECTS DISCOVERED AFTER THE ONE YEAR PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state/province to province. In no event shall Gigaset NAM's liability exceed the cost of repairing or replacing defective Products as provided herein, and any such liabilities will terminate upon expiration of the warranty period.

Any supplements or updates to the Product or the software in the Product, including without limitation, any (if any) software fixes or upgrades or bug fixes provided to you after the expiration of the one year limited warranty period are not covered by any warranty or condition, express, implied or statutory.

8. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL GIGASET NAM, SELLER OR THEIR SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS LIMITED WARRANTY, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF GIGASET NAM OR SELLER OR ANY SUPPLIER, AND EVEN IF GIGASET NAM OR SELLER OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY.

9. LIMITATION OF LIABILITY AND REMEDIES

NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED ABOVE AND ALL DIRECT OR GENERAL DAMAGES), THE ENTIRE LIABILITY OF GIGASET NAM, SELLER AND ANY OF THEIR SUPPLIERS UNDER ANY PROVISION OF THIS LIMITED WARRANTY AND YOUR EXCLUSIVE REMEDY FOR ALL OF THE FOREGOING (EXCEPT FOR ANY REMEDY OF REPAIR OR REPLACEMENT ELECTED BY GIGASET NAM OR SELLER OR SUPPLIER WITH RESPECT TO ANY BREACH OF THE LIMITED WARRANTY) SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT OR FIVE DOLLARS (\$5.00 USD/CAN). THE FOREGOING LIMITATIONS, EXCLUSIONS AND DISCLAIMERS SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

10. GOVERNING LAW

If this Product was purchased in the United States of America this limited warranty will be governed by the laws of Texas, and exclude the United Nations Convention on Contracts for the International Sale of Goods. If this Product was purchased in Canada this limited warranty will be governed by the laws of the Province of Ontario and the federal laws of Canada applicable therein, and exclude the United Nations Convention on Contracts for the International Sale of Goods.

If you want to learn more about Gigaset Service or for Support on your Gigaset phone, visit our web site at www.gigaset.com or please call 1-866 247-8758 tollfree

Issued by

Gigaset Communications GmbH

Frankenstr. 2a D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modifications reserved.

Product attributes subject to change.

We reserve the right, to make changes without notice in equipment design and/or components.


Part Number: A31008-M2816-R341-1-3S19

© Copyright 2021.

Manufacturer's advice

Questions and answers

If you have any questions about the use of your telephone, please go to www.gigaset.com/service where help is available at any time. The table below contains a list of common problems and possible solutions.

| | |
|-----------------|---|
| Problem | Nothing on the display. |
| Cause | The handset is not switched on. The batteries are flat. |
| Solution | Press the End call key  for about 5 seconds or place the handset into the base. Charge or replace the batteries. |
| Problem | No radio connection to the base. |
| Cause | The handset is outside the range of the base. Handset is not yet registered. The base is not switched on. |
| Solution | <ul style="list-style-type: none"> ▶ Move the handset closer to the base. ▶ Register the handset. ▶ Check the power plug on the base. |
| Problem | You cannot hear a ring or dial tone from the fixed line network. |
| Cause | The phone cable supplied has not been used or it has been replaced by a new cable with the wrong pin connections. |
| Solution | <ul style="list-style-type: none"> ▶ Please always use the telephone cable supplied or ensure that the pin connections are correct when purchasing from a retailer. |
| Problem | Error tone sounds after system PIN prompt. PIN forgotten. |
| Cause | You have entered the wrong system PIN. |
| Solution | <ul style="list-style-type: none"> ▶ Reset the system PIN to the default 0000. <p>All the handsets are de-registered. All settings are reset. All lists are deleted.</p> |

Manufacturer's advice

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Care

Wipe the device with a **slightly moistened** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Unplug all cables from the device.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry,
- 5 Place the device in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.) with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Manufacturer's advice

Technical data

Batteries

| | |
|-------------|-----------------------------|
| Technology: | Nickel metal hydride (NiMH) |
| Size: | AAA (Micro, HR03) |
| Voltage: | 1.2 V |
| Capacity: | 400 - 1000 mAh |

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used. (All times are maximums).

| | |
|---|------------|
| Standby time (hours) | 180 / 110* |
| Talktime (hours) | 12 |
| Operating time for 1.5 h of calls per day (hours) | 90 / 70* |
| Charging time in charging cradle (hours) | 4.5 |
| Charging time in base (hours) | 5 |

* **No Radiation** switched off / **No Radiation** switched on, without display backlight in idle status

Power consumption of the handset in the charging cradle

| | |
|--------------------------------|----------------|
| When charging: | approx. 2.10 W |
| To maintain the charge status: | approx. 1.30 W |


Base power consumption

| Standby: | Without answer machine | With answer machine |
|---|------------------------|---------------------|
| - Handset in the charging cradle (charging) | approx. 2.00 W | approx. 2.80 W |
| - Handset in the charging cradle (sustained charge) | approx. 0.60 W | approx. 1.00 W |
| - Handset away from the charging cradle | approx. 0.55 W | approx. 0.65 W |
| During a call: | approx. 0.65 W | approx. 0.75 W |

General technical specifications

| | |
|----------------------------------|--|
| DECT standard | DECT 6.0 |
| GAP standard | supported |
| Radio frequency range | 1920MHz - 1930MHz |
| Range | up to 700 ft outdoors, up to 100 ft indoors |
| Power supply for base | 120 V ~/60 Hz |
| Transmission power | 5 mW average power per channel, 120 mW pulse power |
| Ambient conditions for operation | +41 °F to +113 °F, 20% to 75% relative humidity |

Pin connections on the telephone jack

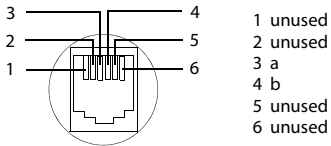

Character set tables

The character set used on the handset is dependent on the language set.

Entering letters/characters

- Press the relevant key several times.
- Briefly press the Hash key **#->** to switch from mode "Abc" to "123", from "123" to "abc" and from "abc" to "Abc".

Standard characters

| | 1x | 2x | 3x | 4x | 5x | 6x | 7x | 8x | 9x | 10x | 11x | 12x | 13x | 14x | 15x |
|---------------|---------------|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|
| 1 | 1 | £ | \$ | ¥ | ¤ | | | | | | | | | | |
| 2 | a | b | c | 2 | ä | á | à | â | ã | ç | | | | | |
| 3 | d | e | f | 3 | ë | é | è | ê | | | | | | | |
| 4 | g | h | i | 4 | ï | í | ì | î | | | | | | | |
| 5 | j | k | l | 5 | | | | | | | | | | | |
| 6 | m | n | o | 6 | ö | ñ | ó | ò | õ | | | | | | |
| 7 | p | q | r | s | 7 | ß | | | | | | | | | |
| 8 | t | u | v | 8 | ú | ú | ù | û | | | | | | | |
| 9 | w | x | y | z | 9 | ÿ | ý | æ | ø | ä | | | | | |
| 0 | ¹⁾ | . | , | ? | ! | 0 | + | - | : | ; | " | ' | ; | _ | |
| * | * | / | (|) | < | = | > | % | | | | | | | |
| #-> | | # | @ | \ | & | § | | | | | | | | | |

1) Space

Menu tree



Not all functions described in the user guide are available in all countries or from all network providers.

Opening the main menu: ▶ Press the display key **Menu** when the handset is in the idle mode.



Alarm Clock

| | | |
|--------------|-------|---------|
| Activation | | → p. 28 |
| Wake-up Time | | → p. 28 |
| Occurrence | | → p. 28 |



Audio Settings

| | | |
|----------------------|----------------------|---------|
| Call Volume | Earpiece / Handsfree | → p. 37 |
| Acoustic Profile | | → p. 37 |
| Ringer Volume | | → p. 37 |
| Battery Low | | → p. 40 |
| Advisory Tones | | → p. 40 |
| Out-of-Range Warning | | → p. 40 |
| Ringtones (Handset) | | → p. 38 |
| Ringtones(Base) | Ringer Volume | → p. 38 |
| | Ringtones (Handset) | → p. 38 |
| | Time Control | → p. 40 |



Answering Machine

System without local answer machine

| | | |
|---------------|-------|---------|
| Play Messages | | → p. 27 |
| Net Mailbox | | → p. 27 |

System with local answer machine

| | | |
|----------------|---------------|---------|
| Play Messages | Net Mailbox * | → p. 27 |
| | Answ. Mach. * | → p. 24 |
| Activation | | → p. 24 |
| Call Screening | | → p. 24 |
| Announcements | | → p. 23 |
| Message Length | | → p. 24 |
| Ring Delay | | → p. 23 |
| Net Mailbox | | → p. 27 |
| Set Key 1 | | → p. 27 |
| Language | | → p. 24 |

* When the network mailbox is set up



**Settings**

| | | | |
|------------------------|---------------------------|--|---------------|
| Date and Time | | → p. 35 | |
| Language | | → p. 36 | |
| Country (if available) | | → p. 36 | |
| Display | Larger Font | → p. 36 | |
| | Inverse Colors | → p. 36 | |
| | Backlight Control | Display On In Charger | → p. 37 |
| | | Display On Out of Charg. | → p. 37 |
| | | Display Off During Calls | → p. 37 |
| | | Flash Display for Notifications | → p. 37 |
| | Screensaver | → p. 36 | |
| | Contrast | → p. 36 | |
| Registration | Register Handset | → p. 32 | |
| | Legacy (GAP) Registration | → p. 32 | |
| | Deregister Handset | → p. 33 | |
| System | Reset Handset | → p. 40 | |
| | Reset Base | → p. 40 | |
| | Repeater | → p. 33 | |
| | System PIN | → p. 40 | |
| | XES mode | → p. 34 | |
| | ECO DECT | Max. Range / No Radiation → p. 30 | |
| Telephony | Auto Answer | → p. 15 | |
| | Listening in | → p. 17 | |
| | Call list type | → p. 20 | |
| | Preselection | → p. 18 | |

**Directory**

| | | |
|------|-------------------|---------------|
| Menu | New Entry | → p. 21 |
| | Show Number | → p. 21 |
| | Edit Entry | → p. 21 |
| | Delete Entry | → p. 22 |
| | Send Entry | → p. 22 |
| | Delete List | → p. 22 |
| | Send List | → p. 22 |
| | Shortcut | → p. 22 |
| | VIP Caller Melody | → p. 21 |

Menu tree

| | | |
|---|--------------------|---------|
|  Baby Monitor | | |
| Activation | | → p. 28 |
| Call Target | | → p. 28 |
| Two-Way Talk | | → p. 28 |
|  Call Manager | | |
| Mute Anonym. Calls | | → p. 39 |
| One Touch Call | | → p. 15 |
| Blacklist | Activation | → p. 31 |
| | Blacklist | → p. 31 |
| Time Control | Activation | → p. 39 |
| | Suppress VIP Calls | → p. 39 |
| | Settings | → p. 39 |

Index

A

| | |
|---|----|
| Accepting a call | 15 |
| Adjusting the call volume (handset) | 38 |
| Adjusting the ringtone melody | |
| base | 38 |
| Adjusting the ringtone melody (handset) | 38 |
| Answer | 15 |
| Answer machine | |
| actions during playback | 25 |
| announcement | 23 |
| back key | 5 |
| delete key | 5 |
| display | 5 |
| enabling and disabling | 24 |
| forward key | 5 |
| listening to message | 24 |
| operation from the handset | 23 |
| operation on the base | 5 |
| play/stop key | 5 |
| recording time | 24 |
| remote operation | 26 |
| time to call accept | 23 |
| Answer machine list | 20 |
| Automatic network provider | |
| selection | 18 |

B

| | |
|----------------------------|----|
| Baby monitor | 28 |
| activation | 29 |
| deactivation | 29 |
| Backlight | 37 |
| Base | |
| connecting | 8 |
| connecting to the router | 9 |
| restore to defaults | 40 |
| Battery | |
| charge level | 13 |
| charging | 10 |
| insert | 9 |
| recommended batteries | 50 |
| Battery safety precautions | 44 |
| Black list | 31 |
| Broken display | 7 |

C

| | |
|-----------------------------------|--------|
| Calendar, Persian | 35 |
| Call | |
| external | 14 |
| internal | 16 |
| Call list | 20 |
| copy a number to the black list | 31 |
| functions | 20 |
| opening | 20 |
| set the list type | 20 |
| Call volume, see Ringtone volume | |
| Calling | |
| external | 14 |
| internal | 16 |
| Calls | |
| making an external call | 14 |
| transferring (connecting) | 16 |
| Cancel the alarm (baby monitor) | 29 |
| Care | 49 |
| Care of the device | 49 |
| Change the recording time | 24 |
| Changing the call volume | |
| during a call | 15, 37 |
| permanently | 37 |
| Changing the display language | 10, 36 |
| Character set (handset) | 51 |
| Charging time of handset | 50 |
| CLI, Calling Line Identification | 17 |
| CLIP, CLI Presentation | 17 |
| CLIR, CLI Restriction | 17 |
| CNIP, Calling Name Identification | |
| Presentation | 17 |
| Colour scheme, display | 36 |
| Connecting | 16 |
| Connecting the charger cradle | 9 |
| Consultation call (internal) | 16 |
| Contact with liquid | 49 |
| Control key | 4, 11 |
| accessing display functions | 12 |
| Country | 36 |
| Customer Care | 44 |

Index

D

| | |
|-------------------------------|----|
| Data protection | 48 |
| Date and time | |
| accept | 35 |
| Set | 35 |
| set | 10 |
| Dialling mode | 34 |
| Directory | 21 |
| assign quick-dial key | 22 |
| delete | 22 |
| opening | 21 |
| saving the first number | 21 |
| selecting an entry | 21 |
| sending entry/list to handset | 22 |
| VIP contacts | 21 |
| Directory entry | |
| delete | 22 |
| Disabling | |
| answer machine | 24 |
| Disabling wireless module | 30 |
| Display | |
| adjust contrast | 36 |
| anonymous | 17 |
| broken | 7 |
| disable new messages | 19 |
| external call | 17 |
| icons | 6 |
| large dial keys | 36 |
| name (CNIP) | 17 |
| phone number (CLIP) | 17 |
| unknown | 17 |
| Display backlight | 37 |
| Display functions | 12 |
| Display keys | 4 |
| functions | 12 |
| Display, answer machine | 5 |
| Disposal | 49 |

E

| | |
|-------------------------------------|-------|
| ECO DECT | 30 |
| Emergency numbers | |
| not possible | 7 |
| Enable/disable warning tones | 38 |
| Enabling | |
| answer machine | 24 |
| Enabling/disabling advisory tones | 38 |
| Enabling/disabling music on hold | 39 |
| Enabling/disabling the battery tone | 38 |
| End call key | 4, 11 |
| Entering characters | 51 |
| Environment | 49 |

F

| | |
|------------|----|
| FCC / ACTA | 41 |
| Flash key | 4 |

H

| | |
|---------------------------|--------|
| Handset | |
| de-registering | 33 |
| display language | 36 |
| locating | 33 |
| resetting | 40 |
| setting (personalisation) | 35 |
| setting up | 9 |
| switching on/off | 11 |
| transferring a call | 16 |
| use as a baby monitor | 28 |
| using multiple | 16, 32 |
| Handsfree | |
| key | 4, 15 |
| mode | 15 |
| volume | 37 |
| Hash key | 4 |
| Hearing aids | 7 |

I

| | |
|--|----|
| Innovation, Science and Economic Development | |
| Canada - Certification | 41 |
| Insert a dialling pause | 4 |
| Internal | |
| consultation | 16 |
| consultation call | 17 |
| making calls | 16 |
| Internal call | 16 |
| Internal listening in | 17 |
| enable/disable | 17 |
| Inverting the display colours | 36 |

K

| | |
|--------------|-------|
| Keys | |
| control key | 4, 11 |
| end call key | 4, 11 |
| Flash key | 4 |
| handsfree | 4, 15 |
| hash key | 4 |
| key 1 | 4, 27 |
| messages | 4, 19 |
| star key | 4 |
| talk key | 4, 14 |

L

Language
 for voice prompting
 (answer machine)..... 24
 set for display 10
 Last number redial 14
 Liquid 49
 List
 answer machine 20
 calls 20
 network mailbox 20
 Listening in
 call participant 17
 Listening in to a call 17
 Listening to a message (network mailbox) 27
 Locating
 handset 33
 Lock/unlock the keypad 4, 11

M

Making calls
 accepting a call..... 15
 internal 16
 Manufacturer's advice 48
 Medical equipment.....7
 Menu
 opening..... 11
 tree..... 52
 Menu navigation 13
 Message (answer machine)
 deleting 25
 playback 24
 Messages key.....4, 19
 Messages list 20
 Microphone4
 Muting 16

N

Name
 displaying caller's name (CNIP)..... 17
 Network mailbox..... 27
 enable 27
 listening to message 27
 Network mailbox list..... 20
 Network provider selection,
 automatic..... 18
 Number
 dialling from the directory 14
 displaying caller's number (CLIP) 17
 entering..... 14

O

On/Off button4
 Operating time of handset..... 50
 Overview
 handset4

P

PABX
 set pause after Flash key 34
 set pause after line seizure..... 34
 setting dialling mode 34
 setting flash time 34
 Package contents..... 8
 Paging 33
 Paging key
 device with answer machine 5
 device without answer machine..... 5
 Pause after Flash key 34
 Pause after line seizure 34
 Phone number
 select from call list 14
 select from redial list 14
 Picking up
 a call from answer machine 25
 Pin connections 51
 Playing back
 messages (answer machine) 24
 messages (network mailbox)..... 27
 Power adapter 7
 Power consumption (base)..... 50
 Power consumption (handset)..... 50
 Preselection 18
 Problem solutions 48
 Protection from calls, black list..... 31

Q

Quick dial number 14
 Quick-dial key
 assign 22

R

Radiation-free..... 30
 Receiver
 change volume (during a call)..... 15, 37
 change volume (permanently) 37
 tone quality 37
 Reception booster, see Repeater
 Recording an announcement 23
 Reducing radiation 30
 Remote operation 26
 Repeater 33
 Reset (base) 40
 Reset (handset)..... 40
 Ringtone
 enable/disable time control 39
 Ringtone (handset)
 disable for anonymous calls 39
 switch on/off from menu 38
 switch on/off with key 4, 38
 Ringtone volume 38
 Room monitoring 28
 Router, operation with 34

Index

S

Safety precautions 7, 43
 Screensaver 36
 Searching
 in the directory 21
 Sending a directory entry to a handset 22
 Service (Customer Care) 44
 Set call accept time for answer
 machine 23
 Setting flash time (PABX) 34
 Setting the list type 20
 Setting the time format 35
 Setting the wake-up time 28
 Setting up handset 9
 Speed dial key 14
 Speed dialling
 network mailbox 27
 Star key 4
 Status bar 4, 12
 Switching off
 handset 11
 Switching on
 handset 11
 Symbol 6
 answer machine 13, 24
 battery charge level 13
 keypad lock 11
 keys 6
 procedures 6
 radio contact 12
 ringtone 38
 System PIN
 changing 40

T

Talk key 4, 14
 Technical data 50
 Telephone jack, pin connections 51
 Three-party conference 17
 Time control
 VIP contact 39
 Tone quality (receiver) of the handset 37
 Turning off the wake-up call 28
 Turning the alarm clock on and off 28

U

Upper/lower case and digits 4

V

VIP contact 21
 time control 39
 Volume keys (base) 5

X

XES mode 34

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com