说明书成品尺寸:105*145MM

颜色:4色印刷印刷

材质:80g书纸

工艺:骑马钉

其他:18P



变	新版本	变更时间	变更前	变更后
更				
履历	说明	:		

USER MANUAL

2.4GHz Digital Wireless Baby Monitor





EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.






Model No.: 8217KL

Version 1.0
Please read this user manual carefully before using this product. Failure to understand operation procedures may result in injury.

Introduction

Thank you for choosing our baby monitor. Please read the instruction carefully in case of product damage due to improper operation.

Parts in the package

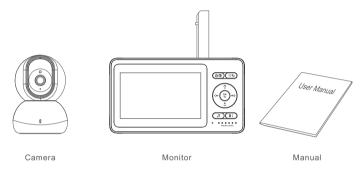






Power adapter x2~3

Power cable x2~3


Product structure




- 1. Photo sensitive sensor
- 2. Lens
- 3. Microphone

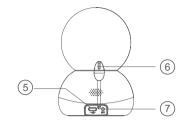

- 4. Indicator
- 5. Power interface
- 6. Temperature sensor

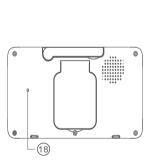

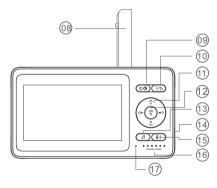

- 08. Antenna
- 09 ON/OFF/Eco mode
- 10. Menu button/back
- o. Wicha batton/bac
- 11. Navigation button
- 12. OK button

- 13. Music play button
- 14. Power interface
- 15. Talk (long press)/
- adjust (short press) button
- 16. Status indicator

18. RESET button

7. SET button

17. Microphone

N 1

Message push icon

Yx	No signal connection between the receiver and the camera		
ull	Signal strength between the receiver and the camera		
J	The Lullaby function is enabled.		
'@	The sleep setting of the receiver is enabled.		
27°C	Displaying current room temperature		
	Show current battery level		
l.	Temperature alarm has been turned on		
€§83	Feed reminder has been turned on		
□!	Audible alarm has been turned on		

Message push icon

Ŷ	No camera is added or the camera is disconnected from receiver			
40	Audio alarm			
1	Temperature alarm reminder			
©	Feed alarm reminder			
	Low battery alarm reminder			

Explanation for status indicator LED

O O O O O O

The first to the fifth **green indicators flash from low to high**: indicating the received volume; the sixth **red indicator is steady on:** indicating the lithium battery is being charged; (displayed whether it is powered on or off)

Using the Monitor

Place the Camera Unit in a convenient location (e.g. on a table or a shelf) and point the camera lens toward the area you want to monitor.





NOTE:

Do not place the Monitor Unit within baby's reach. If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.



Strangulation Hazard:

Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3feet(0.9m) away).

Never use extension cords with AC Adapters. Only use the AC Adapters provided.




04


03______

Preparation before using camera

1. Powering the Camera Unit

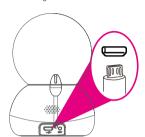

Insert one end of the included charging cable into the USB jack on the back of the camera.

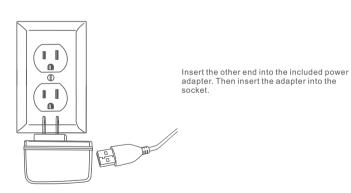

When energized, the camera will be automatically turned on. (The camera indicator **flashes green**. At this point, the camera is turned on successfully).

Preparation before using receiver

1. Power on the receiver (The receiver is provided with a lithium battery, if the receiver has enough power, please go directly to the Step 2).



Insert one end of the charging cable into the USB charging iack on the side of the receiver.

Insert the other end into the included power adapter. Then insert the adapter into the socket.

2. Receiver starting up

Press and hold the "ON/OFF" button on the receiver to turn it on.



Note: This device has been paired before leaving the factory. If the receiver fails to display on the monitor screen as described above, please re-try the device pairing operation. For detailed steps, please refer to Page 8 "Camera Pairing".

05

Receiver function settings

Functions of the Babysitter is user definable, to best satisfy your demands. Audio and temperature alarms may offer automatic notification to you. This chapter will introduce the user-definable settings item by item.

Access receiver menu

In states of live view, press MENU button on the monitor can enter into MENU list; In states of non-live view, press MENU button on the monitor can return to previous interface level.



Camera settings (camera pairing and deletion)


Add camera

- 1. Select Camera, and press OK to enter the function.
- 2. Select the channel to be paired, and press OK to confirm. Then select "Add Camera" and press OK to confirm.



3. When the device prompts "Start pairing, please press the SET button on the camera.", press the SET button on the camera, and at this point, the device enters pairing mode. After pairing succeeds, the screen will jump to a real-time monitoring screen.



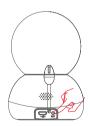

07_______08

Delete camera

- Camera, and press OK to enter the function.
- 2. Select the channel to be deleted, and press OK to confirm. Then select "Delete Camera" and press OK to confirm.



Lullabies

The digital wireless baby monitor has 5 lullables. They can help you lull your baby to sleep.

- 1. Select Music Play, and press OK to enter the function.
- 2. Select the music you want to play, press OK to confirm, and the camera will play the Iullaby of your choice, Press OK again, and the Iullaby pauses, Select "All" to play all the Juliables in a loop. After settings are completed, press MENU to return.



Notice: In the current interface, press keys to switch lullabies; press A V keys to adjust the volume.

3. You can also play music quickly through the music play button () on the panel.

Alarm settings

Sound sensitivity settings

Set the sound sensitivity alarm range. This function identifies the volume of the baby's crying. When it is above the set threshold, the receiver will sound an alarm.

- 1. Select Alarm Settings, press OK to enter the settings page, and select "Sound Sensitivity" settings.
- 2. Select "Low, Middle, High, Off" as needed and press OK to confirm.



Note: The audible alarm ringing will last for 1 minute. The audible alarm notification can be turned off by pressing any button on the receiver, and within 3 minutes after turn-off, if an alarm is triggered again, the receiver will not issue an alarm notification again to avoid frequent interference.

Temperature alarm settings

When it is too hot or too cold in your baby's room, the temperature alarm will push a notification to your receiver.

1. Select Alarm Settings, press OK to enter the settings page, and

select "Temperature Alarm" settings.

- 2. Select "Celsius, Fahrenheit" as needed and press OK to confirm.
- 3. Select "Alarm" "ON, OFF" as needed.



0.9

Alarms settings

You can set the feeding alarm to prevent you from forgetting to feed your baby as busy or for other reasons, which may affect your baby's healthy growth.

1. Select Alarm Settings, press OK to enter the settings page and select "Alarms"

Settinas.

2. Select the time periods and quantity of "Alarms" as needed, and press OK to enter the settings page. After the settings are completed, press OK to confirm.



System settings

Time settings

Calibrate time on the receiver.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select Time Settings, and press OK to enter the settings page. After settings are completed, press OK to confirm.



Language selection

Switch language displayed on the receiver.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select Language Settings, and press OK to enter the settings page. Select a

language you need and press OK to confirm.

Alarm sound settings

Switch the alarm sound "ON/OFF" on the receiver.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select Alarm Sound Settings, and press OK to enter the settings page.
- 3. Select "ON/OFF" and press OK to confirm.

Eco mode

You can set the receiver to automatically enter Eco mode. The receiver will automatically enter energy saving state according to the length of time you set.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select CE Eco Mode, and press OK to enter the settings page. Select a time that suits

your need and press OK to confirm.

Note: There are three options for sleep time: 20 seconds, 40 seconds, and 60 seconds. You can choose according to your needs. Selecting "OFF" and pressing OK will turn off the Eco mode.



11 ______

Restore to default settings

Restore the receiver to default settings.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select Restore to Default Settings, and press OK to enter the settings page.
- 3. The device will prompt "Restore to default settings?". Select YES and press OK to confirm. The device begins to execute a factory reset.



Tip: After restoring to default settings, all individualized settings on the receiver will not exist. So, please be cautious.

View version information

View version information of the receiver and camera.

- 1. Select Settings, and press OK to enter the settings page.
- 2. Select Version Information, and press OK to enter the version information view page.



Specifications

Car	nera
Image sensor	1/6.5" CMOS
Video resolution	640*480P
Viewing Angle	50±5°
Rotation angle	Pan: 345° Tilt:55°
Night visual range	3m
Power supply	DC 5V/1A
Operation temperature	0°C~40°C
Storage temperature	-20°C~60°C
Operation humidity	15~85%RH
Dimensions(W*D*H)	75x75x109(mm)
Rec	eiver
LCD	4.3" TFT LCD monitor
Number of pixels	480*272P
Wireless transmission Way	2.4GHz FHSS
Power supply	DC 5V/1A
Operation temperature	0°C~40°C
Storage temperature	-20°C~60°C
Operating humidity	15~85%RH
Dimensions(W*D*H)	158x19x88 (mm)

All the specifications are subject to minor change without prior notice.

CE and ECC Certification Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -30 °C or maximum over 50°C. This device is acting as slave and operating in the 2.4 GHz (2412 ~2462 MHz) band. GD7617:

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. GD8217:

RF exposure warning:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

Hereby, we declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/FU

Notice: Observe the national local regulations in the location where the device Is to be used. This device may be restricted for use in some or all member states of the European Union (EU)

EU Environmental Provisions

E-waste cannot be mixed with household garbage: corresponding local government sector or recycling stations shall be responsible for circular process.





15