

Package Contents:

Play X Speaker, Charge Cable, Audio Cable, User Guide

Technical Specifications:

Output Power: 3W

Driver Size: 45mm

Bluetooth Version: V2.1

Transmission Range: Up to 30 feet

Frequency Response: 20HZ-20KHZ

Impedance: 4Ω

Charging the Speaker:

NOTE: Make sure the Play X Speaker is fully charged before use.

1. Plug the USB end of the included charge cable into a powered USB port, such as a computer, laptop or USB AC adapter (not included).
2. Plug the Micro-USB end of the cable into the charge port labeled 5V IN located on the back of the speaker.
3. The LED indicator light located on the front of the speaker will turn red. Once the speaker is fully charged, the LED indicator light will turn off.

Connecting a Device via Bluetooth (First Time Set-Up):

1. Switch the Power Button located on the back of the speaker from [OFF] to [ON]. You will hear a sound and the LED indicator light on the front will turn green.

NOTE: Once you turn the speaker on, the speaker will try and pair with a Bluetooth device.

The Bluetooth LED located on the back of the speaker will rapidly flash blue.

2. Open the settings on your smartphone, tablet or computer (Bluetooth must be enabled).
3. Select Play X from the devices list.
4. Once paired, you will hear a sound and the Bluetooth LED will slowly flash blue.
5. Volume should be adjusted from your device.

NOTE: Your device will automatically find and pair with the Play X after the initial pairing. If your device does not automatically pair, turn off the speaker and repeat steps 1-4.

Connecting a Device via Audio Cable

1. Switch the Power Button located on the back of the speaker from [OFF] to [ON]. You will hear a sound and the LED indicator light on the front will turn green.
2. Insert one end of the included audio cable into the AUX IN port on the back of the speaker.
3. Insert the other end of the cable into your device.

NOTE: If an audio cable is inserted into the speaker, it will disconnect any Bluetooth connectivity. Once the audio cable is removed from the speaker, the speaker will go into Bluetooth pairing mode.

Troubleshooting

Issue: My speaker doesn't turn on.

Solution: Try the following:

- Make sure that you fully charge your speaker before use.
- Make sure the Power Button on the speaker is switched to [ON].
- Make sure your volume is turned up on your device.

Issue: My speaker isn't charging.

Solution: Make sure that the charge port on the speaker is free from dust and debris. Make sure that you are using the charge cable that came with your speaker.

Issue: My speaker isn't syncing to Bluetooth.

Solution: Try the following:

- Make sure that the Bluetooth setting is turned "ON" on your device.
- Check to see if another user is connected to the speaker.
- Refer to the user guide of your device for Bluetooth syncing instructions.

IMPORTANT SAFETY PRECAUTIONS

- Incorrect use or incompatibility with your device may result in reduced battery performance or damage to your device.
- Do not attempt to disassemble product.
- Store and operate between 32°F – 113°F.
- Do not allow this product to have contact with liquids.
- Do not place this product near a heat source or flame.

- Do not throw or shake.
- Do not operate if it has been subjected to shock or damage.
- Do not crush or puncture the battery.
- Recharge the battery every 3 months when not in use to keep battery in best condition.
- Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents.
- The internal battery must be recycled or disposed of properly. Contact your local waste management office for information on the proper disposal or recycling.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.