

iSound

dreamGEAR

for/your  
PS3

## WARRANTY CARD

You have purchased a quality product that has been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs dreamGEAR, at its option, will repair or replace the product purchased at no charge.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

To obtain warranty service send the defective product postage prepaid, along with a copy of the original sales receipt showing purchase date to:

**Attention: Returns Department**  
dreamGEAR, LLC  
P.O. Box 478  
Torrance, CA 90508

For further information please call our  
Customer Hotline at 877-999-DREAM  
(International customers please call 310-222-1045),  
or visit our websites [www.isound.net](http://www.isound.net) or [www.dreamgear.net](http://www.dreamgear.net).  
Please allow 4 to 6 weeks for processing.

shadow  
wireless DUAL RUMBLE MOTORS



dreamGEAR

[www.dreamgear.net](http://www.dreamgear.net)

**CHARGING SHADOW WIRELESS:** The Shadow Wireless controller features an internal rechargeable battery.

1. To charge the Shadow Wireless, use the included USB charge cable or your original Sony USB charge cable.
2. Connect the mini USB cable to the mini USB port located on the top of the Shadow Wireless controller.
3. Connect the standard USB plug to any available port on your PlayStation 3 game console. Your PlayStation 3 must be powered "ON" in order for the Shadow Wireless to charge. The DG/PS3 menu button will flash to indicate charging has begun. When the controller is fully charged the LED will become solid.

**Note:** You can also charge Shadow Wireless from any powered USB port.

### SHADOW WIRELESS SET-UP:

1. Connect the included USB receiver to any available USB port on the PlayStation 3 game console.
2. Press the connect button on the USB receiver. The receiver LED will flash rapidly.
3. Press the DG/PS3 menu button. The LED on the receiver and controller will become solid when the controller is properly synchronized to the PlayStation 3.

dreamGEAR  
[www.dreamgear.net](http://www.dreamgear.net)

**CHARGING WHILE PLAYING:** The Shadow Wireless controller can be charged during game play.

1. To charge the Shadow Wireless during game play, both the USB charge cable and USB receiver must both be connected to your PlayStation 3 game console.
2. To play and charge your Shadow Wireless controller, please follow the previous charge and set-up portion of this user's guide.

### Notes:

- If the Shadow Wireless LED button flashes during connection, the internal battery is becoming low.
- If the Shadow Wireless controller will not function properly during proper set-up or gameplay, press the reset button located on the back of the controller.

**FCC NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try the interference by one of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FOR TECHNICAL SUPPORT PLEASE CONTACT: 1-877-999-DREAM  
or [support@dreamgear.net](mailto:support@dreamgear.net)**