(DGPSP-592)	
69	
2	
CINEMA	
SP	

USER MANUAL

Thanks for our PSP cinema 2 go products! Please read the

manual carefully before using it.

modulation stereo, steady capability, distance far and so on character; Good outlook and handle make you enjoy the perfect game and strong shock This product adopt the special FM transmit chip, with frequency effect from the MOVE on your trip!

Technology specification 1 Í

Specification:

- 1. Compatible with all car light plug
- Compatible with all version of PSP games ň
- Compatible with all audio device with Φ 3.5mm output -m
- With 5 channel by selected by hand 4
 - With channel LED indication Ś
 - With power LED indication ؽ
- With PSP charging function ~
- 8. With suction cup to fix glass suface
 - - 9. With bending connect sticker
- Transmit distance: ≥10 ¥ Match PSP car adapter 11. 10,
 - Power voltage: DC 5V 12,
 - Work current: 40mA IJ,


Car adapter specification:

- Input: DC12V Ļ
- Output: DCSV 1.A ર્સ ર્ભ
- Plug: PSP special DC plug

E-core Technology (China) Co..Ltd

1. Product function introduction: as following

picture

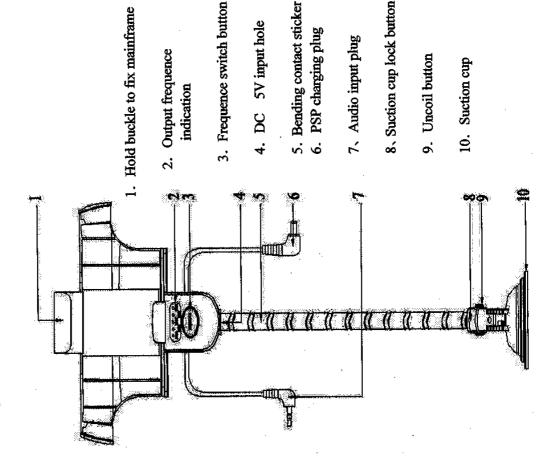

- 2、Use instroduction:
- 1). Undraw the lock button for fix mainframe, put in the PSP mainframe then press the lock button, lock the PSP mainframe.
- 2). Insert the audio plug to PSP audio output hole.
- 3). Insert the PSP car adapter to car light hold, blue LED of car adapter is on, car adapter is working; then insert the DC plug of car adapter to FM transmitter DC 5V power input hole, blue LED of FM transmitter is on.
- 4), Press "FRQSELECT" button of the FM transmitter, 88.1MHz frequence indication RED LED is on, the same operation as 88.1MHZ of pressing 88.3MHz, 88.5MHz, 88.7MHz, 88.9MHz, 88.1MHz.
 - 5). Once fix one frequence(For example 88.1MHz), open the car radio, adjust to FM 88.1MHz.
- 6), Power on the PSP mainframe, select you prefer game or move, voice of PSP mainframe come out from car radio, it show working normal
- 7), Pull down the uncoil button, suction cup lock go to high place, then put the suction cup on the glass, press suction lock button to the best low, then you can bend the connect sticker as you prefer to.
- 7), One warning of low battery from your PSP mainframe, please insert PSP charging plug to PSP mainframe DC power input hole to charge for your PSP mainframe
 - 8). If you play in home or office, please use PSP original matched power adapter.
 - 9). Audio plug can insert any audio device with $\Phi 3.5 \text{mm}$ output

- Once PSP mainframe is full of power, don't charge for it, or it will reduce battery use life. í
 - Don't put the suction cup to any UN-plane glass
- Once finish playing, please leave FM transmitter from the glass, ર્સ ભં
 - uncoil the suction cup lock button.
- Please not dismantle product privately. 4 ś
- The final explain right of user manual is belong to our E-core Technology (China) Co., Ltd.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.