Address List	-	Display the filtering address(s).
Delete	Disable	Select the check boxes and click 'Delete' to delete the filtering
		address(s).

Click Add to List button to add a new entry.

Click **Apply** button to save the new settings.

Click **Delete All & Apply** button to delete all entries.

#### 3-2-4-3 Secure Remote

This feature allows you to create a secure connection to a remote site or back end system with VPN PPTP Client. If "Secure Remote" is enabled, the RADIUS packet/ syslog will be transferred to this secure connection.

ECURE REM	OTE
Secure Remote: Disa	able 💌
Create a secure connect transferred to this secur	tion to a remote site or back end system with VPN PPTP Client. When enabled, the RADIUS packet/syslog/HTTP/session trace will be e connection.
PPTP Client	Auto-connect at Start-up (Always connect) PPTP Server IP address : Username : Password : Start/stop connection
	VPN Tunnel : Online/Connecting Client IP : 192.168.1.1
	Apply

#### Figure 3-2-28 Secure Remote Setting Screen

Item	Default	Description	
Auto-connect at Start-up	Disable	Enable the check box to automatically establish the PPTP	
(Always connect)		connection.	
PPTP Server IP address	Empty	Enter the PPTP server IP address provided by your ISP.	
Username	Empty	Enter the user name provided by your ISP. The user name can	
		consist of up to 80 alphanumeric characters and is case sensitive.	
Password	Empty	Enter the user password provided by your ISP. The password	
		can consist of up to 80 alphanumeric characters and is case	
		sensitive.	
start / stop connection	Click on Start/Stop connection button to start/stop PPTP connection.		
VPN Tunnel	Display the status.		
Client IP	Display the IP address.		

#### Click **refresh** button to delete all entries.

# 3-2-5 SYSTEM

# 3-2-5-1 System

# Define the WG-500P System configuration.

System:Host Name		]			
Domain Name		1			
Location Information	Location Name:			(Max=50)	
	Address:			(Max=200)	
	City:		1	(Max=50)	
	State / Province:			(Max=50)	
	Zip / Postal Code:			(Max=10)	
	Country:			(Max=50)	
	Contact Name:		1	(Max=60)	
	Contact Telephone:			(Max=50)	
	Contact FAX:			(Max=60)	
	Contact Email:		1	(Max=50)	
Date/Time	There Zones (OMT )				
	Time Zone: GMI M				
	Date 2011 w / 1 w / 1 w /	(aarMonth/Day)			
	Time 00 - 00 - 00 - 00	Minute Second			
	Inne. 00 . 00 . 00 . 00 . 00	Date: 2004/2/2 Time: 16	06:02		Undate Now
	Chir soling	Date: 2004772 Time: 10	00//2 Time: 16:06:02		Optime Now
	Server IP/Domain Name 1:	[time, nis	time, nist, gov		
	Server IP/Domain Name 2:	(www.nis	24 bours		
	Update Time	24	hours	-	
	Daylight Saving Time	Start	Date:	4 Month / 1	Day
		End	)ate:	10 Month / 3	1 💌 Day
NAT (Network Address Translation)	O Enable     Plug and Play Internet access     O Enable				
User Session Limited	Enable 300 (1-1024)	ODisable			
Layer 2 Isolation Security					
Secure administrator IP	© Any				
addresses	O Specify				
	· · · · ·				
	~				
Multicast passtbrough	Enable     O Disable				
Allow remote user to ping	Enable     O Disable				
and derive	O Enable O Customer Certificate				
SSL Certificate	O Enable O Customer Certificate				

Figure 3-2-29 System Setting Screen

ltem	Default	Description
System/Host Name	Empty	The system name can consist of up to 40 alphanumeric
		characters.
Domain Name	Empty	The Domain name can consist of up to 80 alphanumeric
		characters.
Location Information	Empty	Enter your location information.
Date/Time		
Time Zone	GMT	Select the appropriate time zone for your location.
Manual Setting	Click Manual Setting	to set the system date and time.
Date	Year/Month/Day	Enter the Date for the system.
Time	Hour:Minute:Second	Enter the Time for the system.
NTP Setting	Enable	Enables or disables NTP (Network Time Protocol) Time
		Server. Network Time Protocol can be utilized to synchronize
		the time on devices across a network. A NTP Time Server is
		utilized to obtain the correct time from a time source and
		adjust the local time.
Server IP/Domain Name	Empty	Enter the IP address/domain name of NTP server. The
		maximum allowed characters length is 100.
Update Time	0 hours	Enter the number of hours for update time.
Daylight Saving Time	Disable	Enables or disables Daylight Saving Time (DST).
	Month/Day	Set the Daylight Saving Time (DST) on the WG-500P. Adjust
		the begin time and end time.
NAT (Network Address Tran	nslation)	
NAT	Enable	Enables or disables NAT Address Translation function.
User Session Limited	Enable,300	Enables or disables user session limit function. This feature
		provides you an ability to control a number of sessions
		allowed for particulars user(s) at the one time.
IP Plug and Play (iPnP	Enable	Enables or disables plug & play function. When enabled, the
Technology)		user needn't change their network configuration to access the
		Internet.
Layer 2 Isolation Security	Enable	If enable plug and play is selected, you can enable Layer 2
		Isolation Security function. When the "Layer 2 Isolation
		Security" enabled, everyone cannot communicate with each
		other.
Secure administrator IP	Any	Options: Any and Specify. Administrator can specify 5 IP

Addresses		addresses or a range to allow remote control access from
		network.
Multicast Pass Through	Enable	This function allows for multiple transmissions to specific
		recipients at same time.
Allow remote user to ping	Enable	This function allows remote user to ping the WG-500P
the device		through Internet. Ping is normally used to test the physical
		connection between two devices, to ensure that everything is
		working correctly.
SSL Certificate	Enable	Option: default or customize certificate, These are two ways
		to create a certificate, one is purchase a certificate from a
		certificate authority (Ex. Verisign or Thawte), and another is
		creating a self-certificate (For example: Uses OpenSSL tool).
Personal ID Recognition	Disable	Some countries or areas will ask WiFi users to offer personal
mode		ID recognition according to the law for the Internet crime
		investigation. If you would like to active PIR function, please
		refer to the Chapter 5 Personal ID Recognition.

Click **Apply** button to save the new settings.

# 3-2-5-2 WAN/LAN

AN	Device IP Address and Subnet mask set	ttings
	IP Address: 10.59.1.1	
	Subnet Mask: 255.255.255.U	
VAN MAC Address	Oefault	
	O Change to: 00 ; 00 ; 00	0 ; 00 ; 00
VAN MTU Setting	Wan Port Maximum Transmission Unit	00
VAN Port Mode	OHCP Client (Mostly for Cable model	m users or Local Area Network )
	Static IP (Mostly for advanced Local A	Area Network environment)
	Static IP information (from your ISP	2)
	IP Address:	0.0.0.0
	Subnet Mask:	0.0.0.0
	Gateway IP address:	0.0.0.0
	Primary DNS Server:	
	Secondary DNS Server:	
	O PPPoE (Usually for ADSL modern us	ers)
	Your ISP requires a username and	password.
	Username:	
	Password:	
	PPP MTU Setting:	1492
	TCP MSS Setting:	1452
	Service Name:	
	Sconnect on Demand	Max Idle Time: 10 Min.
	🔘 Keep alive	Redial Period: 30 Sec.
	Your ISP requires a username, pass	sword, and PPTP setting
	My IP Address:	
	My Subnet Mask:	
	Gateway IP address:	
	PPTP Server IP Address	
	Heamama	
	B	
	Password:	
	PPP MTU Setting:	1460
	TCP MSS Setting:	
	Connection ID/Name:	
	Connect on Demand	Max Idle Time: 10 Min.
	○ Keep alive	Redial Period: 30 Sec.
		App

Figure 3-2-30 WAN/LAN Setting Screen

Item	Default	Description
LAN		
IP Address	10.59.1.1	The internal LAN IP address of your Wireless Subscriber Server
		Gateway.
Subnet Mask	255.255.255.0	Enter the subnet mask for the IP address.
WAN MAC Address		
IP Address	The default MAC	address is set to the WAN physical interface on device.
DHCP Client	The device can	work as a DHCP client. This allows the device to obtain the IP address
	and other TCP/I	P settings from your ISP. If your xDSL/Cable comes with this feature,
	please enable U	se DHCP Client.
Static IP		
IP Address	Enter the IP add	ress for the xDSL/Cable connection (provided by your ISP).
Subnet Mask	Enter the subnet	t mask for the IP address.
Gateway IP Gateway	Enter the Gatew	ay IP address for the xDSL/Cable connection (provided by your ISP).
Primary DNS Server	A primary DNS	server IP address for the xDSL/Cable connection (provided by your ISP).
Secondary DNS	A secondary DN	S server IP address for the xDSL/Cable connection (provided by your
Server	ISP). If the prima	ary DNS Server IP were not available, meanwhile, Secondary DNS Server
	IP would start in	the same time.
PPPoE		
User Name	Empty	Enter your PPPoE account name. The user name can consist of up to
		80 alphanumeric characters and is case sensitive.
Password	Empty	Enter your PPPoE password. The password can consist of up to 80
		alphanumeric characters and is case sensitive.
PPP MTU Setting	1492	MTU (Maximum Transfer Unit) specifies maximum transmission unit
		size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment size.
Service Name	Empty	Enter the service name provided by your ISP. The service name can
		consist of up to 64 alphanumeric characters and is case sensitive.
Connect on Demand	Enable	You can configure your WG-500P to cut your connection with your ISP
Max Idle Time	10 Minutes	after a specified period of time (Max Idle Time). If you have been
		disconnected due to inactivity, Connect on Demand enables your
		WG-500P to automatically re-establish your connection as soon as you
		attempt to access the Internet again. If you wish to activate Connect on
		Demand, click the radio button. If you want your Internet connection to
		remain, click the radio button of keep alive. The Max Idle Time
		maximum value is 65535 minutes.

Keep alive	Disable	This option keeps your PPPoE enabled Internet access connected
Redial Period 30 Seconds		indefinitely, even when it sits idle. The Redial Period maximum value is
		65535 seconds.

## 3-2-5-3 Server

# <u>Server</u>

VCI	Static DCIP Table						
Web	Server	HTTP Port 80     (80,8010-8060)     HTTPS Port 443     (443,4430-444     Administrator Idle-Timeout 5     Min(s)     Account Manager Idle-Timeout 5     Mi	0) (1 - 1440) n(s) (1 - 1440)				
DHCP	9 Server	<ul> <li>DHCP Disable</li> <li>DHCP Relay</li> </ul>					
		DHCP Server IP Address:					
		DHCP Server					
		IP Pool Starting Address:	10.59.1.2				
		Pool Size:	253 (Max=253)				
		Lease Time:	300 (Minutes)				
		Primary DNS Server:	168.95.1.1				
		Secondary DNS Server:					
Email	Server Redirect	IP Address or Domain Name:	99)				
				Anniv			

# Figure 3-2-31 Server Setting Screen

Item	Default	Description
Web Server		
HTTP Port	80	Enter the HTTP port number. The HTTP port allowed range is 80 or
		8010 to 8060. For access the WG-500P system under NAT, please tab
		the "http://HTTP Port IP Address: Port Number".
HTTPS Port	443	Enter the HTTPS port number. The HTTPS port allowed range is 443 or
		4430 to 4440. For access the WG-500P system, please tab the
		"https://HTTPS Port IP Address: Port Number".
Administrator Idle-Timeout	5 Minutes	The idle time out valid range is 1-1440. If the idle time out is set as 5
		minutes, it means if the administrator doesn't send packet in 5 minutes,
		the administrator will logout automatically.
DHCP Server	Enable	There are three types of DHCP Services.
		DHCP Disable—Disable the DHCP server function.
		DHCP Relay—Enable DHCP Relay function.

		DHCP Server—Enable DHCP server function.	
DHCP Relay	To route DHCP through an external server, the administrator needs to enable the		
	DHCP relay and assign a valid DHCP server IP address.		
DHCP Server IP Address	Empty	Enter the IP address of DHCP server.	
DHCP Server	The WG-500	P's DHCP server is turned on and running by default when you install it in	
	your network	κ.	
DHCP Pool Starting	10.59.1.2	Enter the DHCP Pool Starting IP address.	
Address			
Pool Size	253	The DHCP pool size range is 1 to 512.	
Lease Time	300	The DHCP lease time. The DHCP lease time range is 1 to 71582788	
	Minutes	minutes.	
Primary DNS Server	168.95.1.1	Enter the IP address of the network's primary DNS server.	
Secondary DNS Server	Empty	Enter the IP address of a second DNS server on the network.	
Email Server Redirect	To prevent some subscriber's original Email server may protect by firewall or NAT		
	network. WC	G-500P provides an extra Email server parameter to forward the	
	subscriber's	Email. The WG-500P not only forwards the subscribers' E-mail via other	
	E-mail serve	er but also changes the SMTP header. The recipient of your E-mail sees	
	the message	e as if you sent it from your local Internet Service Provide, not form the	
	hotel or othe	er place.	
	Note: Before	e setting this sever, please make sure the e-mail sever relay function is	
	opened. It must not exceed 50 characters.		
IP Address or Domain	Empty	Enter the E-mail server IP address or domain name.	
Name			
SMTP Port	25	Enter the SMTP port number for mail server. The SMTP port allowed	
		range is 25 or 2500 to 2599.	

Click **Apply** button to save the new settings.

# Static DHCP

This function allows subscriber to assign IP address on the LAN to specific individual computers based on their MAC Address.

	IP	MAC		IP	MAC
			26		
2			27		
3			28		
4			29		
5			30		
3			31		
7			32		
3			33		
3			34		
10			35		
1			36		
2			37		
13			38		
4			39		
15			40		
6			41		
7			42		
18			43		
9			44		
20			45		
21			46		
22			47		
23	-		48		
24			49		
25			50		

#### Figure 3-2-32 Server Setting Screen

Item	Default	Description
IP Address	Empty	Enter the IP address that subscriber want to assign to the computer on LAN with the
		MAC address the subscriber will also specify.
MAC Address	Empty	Enter the MAC address of a computer on your LAN.

Click **Apply** button to save the new settings.

#### 3-2-5-4 Customization

# Login Page

The WG-500P provides three different login page formats, including standard, redirect, advanced and frame format.

CUSTOMIZ	ZATIO	V
Login Page	Logo	Inform

eneese a login page type.							
○ Standard	Custom the message on the s	tandard login page:					
	🗖 Logo						
	Title	Welcome	(Max. 80 characters)				
	Subtitle	Wireless Subscriber Gate	eway (Max. 80 characters)				
	Username	Username	(Max. 20 characters)				
	Password	Password	(Max 20 characters)				
	Enter Button	Enter	(Max. 20 characters)				
	Cancel Button	Cancel	(Max. 20 characters)				
	Footnote	Contact us if you have an	Max 240 characters)				
	Copyright	Copyright (c) 2013-2015	All F (Max 80 characters)				
	Background Color	Background Color FFFFFF View Color Grid					
		Ti	Code				
		11-	Code				
O Advanced	Welcome Slogan	© None					
O Advanced	Welcome Slogan Page Background	O None O Background Color ffffff	View Color Grid				
O Advanced	Welcome Slogan       Page Background       Article	O None O Background Color ffffff	View Color Grid				
O Advanced	Welcome Slogan       Page Background       Article       Article Text Color	None     Background Color ffffff	View Color Grid				
O Advanced	Welcome Slogan       Page Background       Article       Article Text Color       Article Background Color	None     Background Color ffffff      000000     View Co     None     ffffff     View	View Color Grid				
Advanced	Welcome Slogan       Page Background       Article       Article Text Color       Article Background Color       Information	None       Background Color ffffff       000000       View Co       None       Ifffff       View	View Color Grid				
O Advanced	Welcome Slogan       Page Background       Article       Article Text Color       Article Background Color       Information       Comments	None     Dackground Color ffffff      000000     View Co     None     ffffff     View      Co	View Color Grid				
Advanced     Frame	Welcome Slogan       Page Background       Article       Article Text Color       Article Background Color       Information       Comments	○ None         ○ Background Color ffffff         000000       View Co         ○ None       ffffff         ○ ffffff       View         □       URL : http:// 💓	View Color Grid				

Figure 3-2-33 Customization Setting Screen

Item	Default		Description		
Standard	For some service provide	rs, they may hop	be to have a customize subscriber's login		
	page to the users. This function helps them to realize the ideal. The page elements				
	are including login page title, background color, subtitle etc.				
Logo	Disable	Select the che	ck box to display service provider's logo.		
Title	Welcome	Enter the title	name of subscriber login page. The		
		maximum			
		allowed chara	cters length is 80.		
Subtitle	Hot Spot Internet	Enter the subtitle name of subscriber login page. The			
	Service	maximum allo	wed characters length is 80.		
Footnote	Disable	Allow the adm	inistrator to input the footnote such like		
		"Pleas			
		Contact to our	Customer Service Center, EXT 141".		
		The maximum	character of the footnote is 240.		
Copyright	Enable	The copyright	is allowed the administrator to input a		
		paragraph in			
		the subscriber	login page for copyright information. The		
		maximum cha	racter of the copyright is 80.		
Background Color	FFFFF	The backgrou	nd text color can be specified color. For		
		the specified			
		text color form	at please views the color grid. The		
		allowed forma	t is		
		Hexadecimal.			
		大 新 店 Log	0		
	AMBA	Title			
	Welcor Hot Spot Intern	ne 🗲 Su et Service 🗲 Su	btitle		
	Username:				
	Password:				
	Enter Button	ancel Cancel	Button		
	or Click here to pay	y by credit card 🗲 C	redit Card Message		
	VISA 🔤 🕾	DISCOVER	Copyright		
	Please contact us if you	have any question ◄	Footnote		
			Copyright (c) 2002-2004 All Rights Reserved.		
		in Dago Screer			
		in Page Screer	ı 		
Redirect	This allow service provide	er to redirect the	subscriber's browser to a specified home		

Comments

	page.						
Copy and paste the following HTI	Copy and paste the following HTML Code into your home page to produce redirect subscriber login page.						
	Redirect Login	Page Code					
<html> <body bgcolor="#FFFFF" e="font-family: Arial" sk=""> <form action="http://1.1.1.1/login.cgl" method="post" nam<br=""><dr align="center"> <draalign="center"> <dr align="center"> <dr align="center"></dr></dr></draalign="center"></dr></form></body></html>	e="apply"» adding="4" width="50%" bgColor="#F7F7F7" borc	lerColorLight="#9dcda0" border="1">					
<pre></pre>	)an="2">						
atd align="right" width="35%" bgColor="#eaeaea"> <font color="#000080" size="2"><b>Username:</b>//d&gt;</font>	>						
vidth="65%"> <input name="username" size="25" type="text"/> <							
dalign="right" width="35%" bgColor="#eaeaea">font color="#000080" size="2">>b>Password:							
<input name="password" size="25" type="password"/>							
<							
<input name="clear" reset"="" style="fon&lt;/td&gt;&lt;td&gt;ont-family: Arial" type="submit" value="Clear"/> ⊧family: Arial">							
		(BB)					
	Figure 3-2-35 Preview Re	edirect Login Page Code					
Advanced	This function allow user to	o design login page of WG-500P.					
Welcome Slogan	Welcome	The maximum allowed characters length is 80.					
Page Background	None	The page background can be none or specified color.					
		For the background color format please views the color					
		grid. The allowed format is Hexadecimal.					
Article	Empty	The article is allowed the administrator to input a					
		paragraph in the subscriber login page for advisement					
		or announcement. The maximum character of the					
		article is 1024.					
Article Text Color	000000	The article text color can be specified color. For the					
		specified text color format please views the color grid.					
		The allowed format is Hexadecimal.					
Article Background	None	The article background can be specified color. For the					
Color		background color format please views the color grid.					
		The allowed format is Hexadecimal.					
Information	Empty	Allow the administrator to input the text information					
		such like address, telephone number and fax					
		information. The maximum character of the information					
		is 80.					

Allow the administrator to input the text comments such

Empty

		like "Please Contact to our Customer Service Center,			
		EXT 141". The maximum character of the comment is			
		80.			
Frame	If "Frame" is selected the subscriber login page will be separate into Top Frame				
	and Bottom Frame.				
	Bottom Frame is a default format for username and password input, Top Frame is				
	allowed to be				
	specified a URL to link.				
Top Frame URL Link	Empty	The input format can be http://www.yahoo.com. The			
		maximum character of the URL Link is 200.			
Bottom Frame	-	This frame will show the standard login page.			

	CÆSAR PARK® PANAMA	TOP Fram
	English Español Welcome	
Bottom Frame	Username: Password:	
	Enter	

#### <u>Logo</u>

This function allows service provider to upload the customer's logo image file which can be shown on the standard login page and account printout of PC-connected printer.

gin Page	Logo	Information Window	Account Printout	Credit Card	User Agreement Page	
Upload a	a logo imagi	e to be shown on the stand	lard login page and acc	ount printout.		
0	n filo cito ic	60 khyles Recommended	Select			
, maximum					••	Apply

Figure 3-2-37 Logo Setting Screen

ltem	Default	Description
File Path	Empty	Enter the file pathname of the logo file in the File Path field.

Click **Apply** button to save the logo file to system.

Click **Delete** button to delete the logo file.

#### **Information Window**

This function allow service provider can decide whether they want an "Information Window" pop-up on subscriber PC when authenticate successful or not and specified text of information window. Subscriber can type "http://1.1.1.1/info" to open the information window again or enter "http://1.1.1.1/logout" to logout immediately if accumulation billing selected.

in ugo	Logo		Account Frintout	eroux ouru	ober Agreenteik i age		
Customi	ze the pop-u	ip message that appears	after successful subsc	riber login. The su	bscriber can type http://1.1.1.1/	info to open this window again.	
🗹 Displ	lay informa	tion Window after a subs	criber logs in success	fully			
Information Window Type			⊂r ⊛r	Redirect     Pop Up     Allow subscriber to close the pop-up window			
Information Window	Window N	Window Name		Information Window	(Max. 30 character)		
contents	Contents	Main mes	Main message Message Description		You can use Internet now!	(Max. 30 character)	
		Message			This is an information windo	(Max. 150 character)	
		Time cour	t label	[	Remaining Usage	(Max. 30 character)	
		🔲 Warni	ng/Alarm message		lf you want to stop using the	(Max. 150 character)	
				N	Notice Text 1 Notice!	(Max. 150 character)	
		🗆 Notice	Message		Notice Text 2 If you are using a VPN (virtu	(Max. 150 character)	
				[		(Max. 150 character)	
						Annalis	

#### Figure 3-2-38 Example-Login Page Screen

You can u s is an information window	to show the us	age and notice.	in messa You can	ge Message Description
http://1.1.1.1/info to open th	is window agai	n without VPN c	connection.	
Remaining	Usage H	H:MM:SS	Time c	ount label
you don't want to continue u Just click	sing Internet, ple the Logout butt	ease remember on.	to logout.	Warning/Alarm messa ≮
	Notice! nnection now, p	lease close the	message	the Manager

Figure 3-2-39 Information Window

Billing Type=Time to Finish

Can be replenished by subscriber=Enable

Information Window
You can use Internet now! This is an information window to show the usage and notice. You can type http://1.1.1.1/info to open this window again without VPN connection.
Remaining Usage HH:MM:SS
If you don't want to continue using Internet, please remember to logout. Just click the Logout button.
Notice! If you are going to use VPN connection now, please close the message window before you run VPN connection.
Replenish

Figure 3-2-40 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Disable

Information Win	dow
You can use Intern This is an information window to show the type http://1.1.1.1/info to open this window ag	et now! usage and notice. You can gain without VPN connection.
Remaining Usage	HH:MM:SS
If you don't want to continue using Internet, Just click the Logout b	please remember to logout. utton.
Notice! If you are going to use VPN connection now window before you run VPN Logout	r, please close the message connection.

Figure 3-2-41 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Enable

Information Window
You can use Internet now! This is an information window to show the usage and notice. You can type http://1.1.1.1.finfo to open this window again without VPN connection.
Remaining Usage HH:MM:SS
If you don't want to continue using Internet, please remember to logout. Just click the Logout button.
Notice! If you are going to use VPN connection now, please close the message
window before you run VPN connection.
Replenish

Figure 3-2-42 Information Window

# Account Printout

This function allow service provider to specified text of account printout.

age Logo Information	Window Account Printout Credit Card User Agreement Page
🗹 Logo	* Only for connected printer
	Sermat 1: Welcomel (Max=75)
Title:	Welcome!
	© Format 2:
Cultille	WG-500P
El Subline.	O Farmet 2:
Lleamama	(Max-50)
Password	Deemane. (no24)
rassworu.	
Billing Method:	Billing: Time to Finish : Time to Finish (Max=24)
	Accumulation : (Max=24)
Billing Profile:	Service: (Max=24)
Purchase Unit	Unit: (Max=24)
Usage Time:	Usage Time: (Max=24)
Price:	Total (Max=24)
Tax:	Tax: (Max=24) TOTAL : Total (Max=24)
ESSID:	ESSID: (Max=24)
	WPA : (Max=24)
Wrieless Sceurity	WPA2 : (Max=24)
	MixMode: (Max=24)
Additional Label 1:	(Max=24) Value: (Max=24)
Additional Label 2:	(Max=24) Value: (Max=24)
Print out Time:	Format: yyyy/mm/dd V HH: mm:ss V (HH:2h hh:12h tt:AMPM)
	Activate your account before:
	Description: (Max=24x3)
Expiration Time:	Format: yyyy/mm/dd W HH: mm:ss W (HH:24h hh:12h tbAM/PM)
	within 3 months after your last login.
	Accumulation: (Max=24x4)
	Thank you!
Ending:	
	(Max=24x10)
QR Code:	Printout the GR Code.
Preview of connected printer	
Preview of account generator	printer output
	Abb

Figure 3-2-43 Account Printout Customization Setting Screen

Note: If you don't print out QR code on the ticket, please disable "QR Code".

# Credit Card

Standard Login Page	Customize the additional credit card m	ressage for the standard login page	4			
	Credit Card Message	or Click here to pay by cred	(Max 80 characters)			
	Q Preview Standard Login Page					
Service Selection Page	Customize the message for the service selection page					
	Service Selection Message	Choose from the following	(Mac80 characters)			
	Purchase Unit Message	How much Internet access	(Max 80 characters)			
	Notification Message 1	*Note: There is no refund o	(Max 160 characters)			
	Notification Message 2	*Please note that time bloc	(Max 160 characters)			
	Notification Message 3		(Max 160 characters)			
	Enter Payment Information	Enter Payment Information	(Max 160 characters)			
	Enter Credit Card Number	Credit card number:	(Max 80 characters)			
	Enter Credit Card expiration date	Credit card expiration date	(Max 80 characters)			
	Card Verification Value	Security code:	(Max.80 characters)			
	Enter Email Address	Enter Email Address	(Max. S0 characters)			
	Email Button	Email this webpage to mys	(Max 40 characters)			
	Submit Button	Submit Transaction and Lc	(Max.40 characters)			
	Additional Containing Data					
	Additional Customer Data Merchants may provide additional custome	er information with a transaction, based	on their respective requirements.			
	Credit Card Code	Credit Card Code:	(Max 80 characters)			
	Customer ID	Customer ID:	(Max 40 characters)			
	First/Last Name	First Name: (Max 20 ch	aracters) Last Name: (Max 20 characters			
	Company	Company	(Max.40 characters)			
	Address	Address	(Max.40 characters)			
	City	City:	(Max.40 characters)			
	State/Province	State/Province:	(Max.40 characters)			
	ZIP/Postal Code	ZIP/Postal Code:	(Max.40 characters)			
	Country	Country.	(Max40 characters)			
	Phone	Phone:	(Max:40 characters)			
	Fax	Fax	(Max: 40 characters)			
	Q Preview of Service Selection Page					
Successful Page	Customize the message for the successful page					
o o o o o o o o o o o o o o o o o o o	Successful Message	You may now use the Inter	(Max.80 characters)			
	Notification Message 1	IMPORTANTI Make a note	(Max.160 characters)			
	Notification Message 2		(Max 160 characters)			
	Account Information	This is your account inform	(Max 160 characters)			
	Usemame	Your username is	(Max.80 characters)			
	Password	Your password is	(Max.80 characters)			
	Usage Time	Your usage time is	(Max.80 characters)			
		Please activate your accou	(Max.80 characters)			
	Expiration Time	Format : yyyyy/mm/dd 💌				
	F	HH: mm:ss M (HH:	z4n nn:12n ILAMOFM)			
	Criment Button	E-mail this webpage to my	(Max 40 characters)			
	Q Preview of Successful Pass	Use this account to LOGIN	(Max: 40 characters)			
	~ Fleview of Succession Fage					
Fail Page	Customize the message for the fail pag	ge				
	Notification Message 1	Your card could not be pro-	(Max 160 characters)			
	Notification Message 2	Please enter a different cre	(Max 160 characters)			
	Notification Message 3	Thank you!	(Max 160 characters)			
	Try Again Button	Try Again	(Max.40 characters)			
	Review of Fail Page					

Figure 3-2-44 Credit Customization Setting Screen

ltem	Description
Standard Login Page	This function allow service provider to customize the additional credit card message
	for the standard login page.
Service Selection Page	This function allow service provider to customize the additional credit card message
	for the standard login page.
Fail Page	This function allow service provider to customize the message for the fail page.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Credit Card Customization setting screen.

## User Agreement Page

This function allow user to design user agreement page of Internet Subscriber Server.

	Logo	Information Window	Account Printout	Credit Card	User Agreement Page		
			6				
Title			User Agreement Pag	e	(max 100 Character)		
Title Tex	d Color		000000	View Color Grid	1		
Article							
					(max.5000 Character)		
Article T	ext Color		000000	View Color Grid	(max.5000 Character)		
Article T Article B	ext Color	d Color	000000 FFFFF	View Color Grid View Color Grid	(max.5000 Character)	 	 
Article T Article B Page Ba	ext Color lackground	d Color Color	000000 FFFFFF FFFFFF	View Color Grid View Color Grid View Color Grid	(max.5000 Character)		
Article T Article B Page Ba Agree B	ext Color ackground ackground utton	d Color Color	000000 FFFFF FFFFF Agree	View Color Grid View Color Grid View Color Grid View Color Grid (max.50 Char	(max.5000 Character)		
Article T Article B Page Ba Agree B Disagre	ext Color lackground ackground utton e Button	d Color Color	000000 FFFFFF FFFFF Agree Do not agree	View Color Grid View Color Grid View Color Grid (max.50 Char (max.50 Char	(max.5000 Character) I I acter) acter)		
Article T Article B Page Ba Agree B Disagre	ext Color lackground ackground utton le Button <b>v Standar</b>	d Color Color d User Agreement Page	000000 FFFFFF FFFFF Agree Do not agree	View Color Gri View Color Gri View Color Gri (max.50 Char (max.50 Char	(max.5000 Character, I I acter) acter)		

Figure 3-2-45 User Agreement Page Setting Screen

## 3-2-5-5 Portal Page

This feature allows redirecting subscriber's browser to a specified portal page after successful login.

PORTAL PAGE	
Set to redirect subscriber to	a portal page after successful login.
URL Link	URL: http://
	Apply

#### Figure 3-2-46 Portal Page Setting Screen

Item	Default	Description
URL Link	Empty	Enter the URL Link page. The input format can be "http://www.yahoo.com". The maximum
		character of the URL Link is 200.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Portal Page setting screen.

### 3-2-5-6 Advertisement

The system allow service provider to input 5 URL links for advertisement link purpose.

#### ADVERTISEMENT

Frequency	One Time Only     O Every     Min(s)	
Sequence	Randomly Orderly (From 1 to 10)	
URL Link 1	URL: http://	
URL Link 2	URL: http:// v	
JRL Link 3	URL: http://	
JRL Link 4	URL: http:// v	
JRL Link 5	URL: http:// v	

Figure 3-2-47 Advertisement URL Link Setting Screen

ltem	Default	Description
Frequency	One Time Only	One Time Only—One Time Only means to send the advertisement link
		once after the subscriber Login.
		Every~Min(s)—The field means to send the advertisement link every
		interval minutes. The value range is 1 to 60 (minutes).
Sequence	Randomly	Randomly—Display the advertisement page in the random order. From 1 to
		10 — Display the advertisement page in the order as setting.
URL Link 1~5	Empty	This function allows the administrator to input ten different websites in the
		table for advertisement. And these 5 websites will display to the subscribers
		at random when the subscribers login in the WG-500P system. The input
		format can be "http://www.yahoo.com". The maximum character of the URL
		Link # is 200.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Advertisement URL Link setting screen.

# 3-2-5-7 Walled Garden

We prepare ten URL links that allows subscriber to access the specific Web pages even they didn't have a username or password. It's free trying and can use for advertisement.

Link 1	Name: URL: http:// v	
Link 2	Name: URL: http:// v	
Link 3	Name:URL: http:// v	
.ink 4	Name: URL: http:// v	
Link 5	Name:	

Figure 3-2-48 Walled Garden Setting Screen

Item	Description
Name	The name is allowed user to set the prompt string in user customize login page. The maximum
	allowed characters length is 80.
URL 1~5	The input format can be "http://www.yahoo.com". The maximum character of the Link# is 200.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Walled Garden setting screen.

#### 3-2-5-8 DDNS

The DDNS service (Dynamic Domain Name Service), an IP Registry provides a public central database where information such as email addresses, host names, IP addresses etc. can be stored and retrieved. This solves the problems if your DNS server uses an IP associated with dynamic IP addresses. When the ISP assigns the WG-500P a new IP, the WG-500P must inform the DDNS server the change of this IP so that the server can update its IP-to-DNS entry. Once the IP-to-DNS table in the DDNS server is updated, the DNS name for your web server (i.e., xyz.dyndns.org) is still usable.

No.	Active	Settings Update Status Now	
		Status = N/A	
		Service Provider	dyndns.org (www.dyndns.org)
		Registered Host Name	(Example: xyz.dyndns:org)
01		Login Name	(max. 23 characters)
		Password	(max. 23 characters)
		Email Address	(optional)
		Wildcards (optional)	
		Status : N/A 🗆 Wildcards (option	al)
		Service Provider	dyndns.org (www.dyndns.org)
		Registered Host Name	(Example: xyz.dyndns.org)
02		Login Name	(max. 23 characters)
		Password	(max, 23 characters)
		Email Address	(optional)
		Wildcards (optional)	
		Status : N/A	
		Service Provider	dyndns.org (www.dyndns.org)
		Registered Host Name	(Example: xyz.dyndns.org)
03		Login Name	(max. 23 characters)
		Password	(max, 23 characters)
		Email Address	(optional)

Figure 3-2-49 DDNS Setting Screen 85

Item	Default	Description
Force to update every~day(s) when	1 day	Enter a number in the field to set the force update
WAN IP address keeps no change		interval (in days).
No	01~03	The index number of a DDNS account.
Active	Disable	Click on check box, active or inactive the DDNS
		record.
Update Status Now	Click the Update St	tatus Now button to do manual update.
Settings	Enter the account in	nformation of DDNS Server.
Status	YY/MM/DD	Display the update date, time and status. The Status
	HH:MM:SS	area shows the update time and current state of the
		DDNS Client.
		N/A—DDNS Client service not installed.
		Update Successfully—DDNS Client service installed;
		service running.
		Update Fail—DDNS Client service installed; service
		not running.
Service Provider	Dyndns.org	Select a DDNS service provider by clicking in the list
	(www.dyndns.org)	box.
		Note: Before configuring the DDNS settings, you have
		to register a dynamic domain at one of the dynamic
		domain service providers' list box.
Registered Host Name	Empty	Enter the host name of DDNS server. The maximum
		character of the registered host name is 100.
Login Name	Empty	Enter the user name of DDNS server.
Password	Empty	Enter the user password of DDNS server.
Email Address	Empty	Enter your email address. The DDNS Server will
		e-mail you important information once your Internet
		Name has been successfully registered.
Wildcards (optional)	Disable	Enable this function to be able to use
		*.mydomain.dyndns.org and not only
		mydomain.dyndns.org.

Click **Apply** button, the success dialog box appears. Click on Back to return to DDNS setting screen.

### 3-2-5-9 Wireless

John Stang	Wireless Con Channel : 802.11 Mode Channel Widt	nection : Enable  6  802.11n + 802.11g h : Auto 20/40 MHZ	+ 802.116 💌		
Aultiple ESSID Setting	ltem	ESSID	Security	Edit	
	1	Wireless-1234_1	Open	Edit 🔢	
	2	Wireless-1234_2	Open	Edit 📰	
	3	Wireless-1234_3	Open	Edit 🔳	
	4	Wireless-1234_4	Open	Edit	
Do not change the below settin	gs unless you are aware of	the possible results. Click <b>Default</b> to (msec, range:1~1000, default	restore the factory default settings. :200)		
RTS Threshold	2342	(range:256~2342, default:234	2)		
RTS Threshold Fragmentation Threshold	2342	(range:256~2342, default:234	2) 6, even numbers only)		

Figure 3-2-50 Wireless Setting Screen

Item		Default	Description
General Settings			
Wireless Connection		Enable	To Enable or Disable wireless connection.
Channel		6	Select the channel ID for wireless connection.
Multiple ESSID Sett	ing	Click Edit button for	each of 4 ESSID setting.
WIRELESS ESSID 1	CONFIGU	RATION	
General Settings	ESSID Broad	: cast :	Wireless-1234_1 (Max=32)
Security Settings	⊕ O O W Group O	pen PA WPA2 MixMode Key Rekeying: Per 86400 Use WPA or WPA2 with Pre-sha Pre-shared Key. Use WPA or WPA2 with 802.1x RADIUS Server IP/Domain: Authentication Port: Shared Secret Key:	Seconds ared Key (8-32 Characters)
			Apply
		Figure 3-2-51	EDDID Setting Screen
General Settings			
ESSID			The ESSID's name by default is related to the last 4 numbers of Wlan MAC. If the Wlan MAC is "00-90-0E-00-12-34", the default is "Wireless-1234_1(2,3,4)". It is case sensitive and must not exceed 32 characters.
Security Settings			
Security		Open	Select Open to allow wireless station to communicate with the device without any data encryption. Select WPA / WPA2 / MixMode for data encryption.
Group Key Re-Keying	g	86400 Seconds	Enter a number in the field to set the force re-keying interval.
Use WPA or WPA2 w Pre-shared Key	vith	Disable	
Pre-Shared Key		Empty	Enter a pre-shared key from 8 to 63 case sensitive ASCII characters.
Use WPA or WP 802.1x	A2 with	Disable	
RADIUS Server IP/Domain	n	Empty	Enter the RADIUS server IP address or domain name. The maximum allowed characters length is 15.
Authentication Port		Empty	Enter the authentication port number. The allowed numbers

		are from 0 to 65535.
Share Secret Key	Empty	Enter the RADIUS secret key
Beacon Interval	200	This value valid range is 1 to 1000 indicates the frequency
		interval of the beacon.
RTS Threshold	2347	This value valid range is 256-2342. This setting determines the
		packet size at which the WG-500P issues a request to send
		(RTS) before sending the packet. A low RTS Threshold setting
		can be useful in areas where many client devices are
		associating with the WG-500P, or in areas where the clients
		are far apart and can detect only the WG-500P and not each
		other.
Fragmentation	2432	This setting determines the size at which packets are
Threshold		fragmented. Enter a setting ranging from 256 to 2432 bytes.
		Use a low setting in areas where communication is poor or
		where there is a great deal of radio interference.
Preamble Type	Long Preamble	The preamble type is a section of data at the head of a packet
		that contains information the WG-500P and client devices
		need when sending and receiving packets. The setting menu
		allows you to select a long, short or dynamic preamble type.

Click **Apply** button, the restart dialog box appears. Click on **Apply** to restart the system.

Click **Default** button to load the default manufacturer configuration to the system. All this page (Wireless) configuration setup will be replaced by default settings.

# 3-3 System Status

Display WG-500P system basic status, including,

- 1. System
- 2. Account List
- 3. Account Log
- 4. Current User
- 5. DHCP Clients
- 6. Session List



Figure 3-3-1 System Status Item Screen

# 3-3-1 System

The System Information Menu displays current system basic information including the service connection message, host name, LAN, WAN, DHCP Configuration, DNS, E-mail Redirection, SSL Certificate, network traffic Information and the system firmware version number.

Detailed system information.		retresh ⊖
Service	Internet Connection	Fail
	Wireless Sentce	ок
System	Poster News	
-,	Domain Name	
	Firmware Version	1.07.06
	Controller Board Firmware Version	1.00.00
	Wireless Version	1.00a
	Boatrom Version	1.03
	WAN MAC Address	00.90.0E 00:60 C1
	WLAN MAC Address	00.90:0E 00:60:C0
	System Time	2004/7/2 17:10:35
	System Up Time	00D.01H 02M 48S
Contr.	Subnet Mask	255.0.0
WAN IP	WAN Port Mode	DHCP Client
	IP Address	None
	Subnet Mask	None
	Gateway IP address	None
DNS	Primary DNS Server	
	Secondary DNS Server	
DHCP	DHCB Status	Countr
	Start ID Address	10.69.1.2
	End ID Address	10.59.1.254
	Lease Time	300
	Lotes into	
Wireless	Channel	10
	ESSID 1	Wireless-1234_1
	ESSID 2	Wireless-1234_2
	ESSID 3	Wireless-1234_3
	ESSID 4	Wireless-1234_4
E-Mail Redirection		
Network Traffic		
inetwork frame		Rx Data: 0
	WAN Traffic	Tx Error: 0
		Rx Error: 0
		Tx Data: 4001 Rv Data: 3645
	LAN Traffic	Tx Error: 0
		Rx Error: 0
		Tx Date: 5
	ESSID 1 Traffic	Rx Data: 0 Tx Error 0
		Rx Error: 0
		Tx Data: 5
	ESSID 2 Traffic	Rx Data: 0
	2000 2 1000	Tx Error: 0
		IN LINE O
Location Information	Location	
	Address	
	City	
	State	
	Zip	
	Country	
	Contact Name	
	Contact Telephone	
	Contact FAX	
	Contact Email	
SSL Certificate	Country	00
	State	Local State
	1	Local City
	Local City	
	Organization	Local Group
	Organization Organization Unit	Local Group Local Host
	Drganization Organization Organ	Local Group Local Host 1.1.1.1



# 3-3-2 Account List

You can display a list of all the account information on this device. This table includes the username, password, usage time, time created, login time, expiration time and status.

S/N	Status	Username	Usage Time	Time Created	Login Time	Time left	Delet
00001	Finished	ca12vc23	00:30:00	05/06/2013 08:21:25	05/06/2013 08:29:55	00:30:00	
00001	Un-Used	vc2312ac	01:00:00	05/06/2013 08:21:25		01:00:00	

Figure 3-3-3 Account List

Click **refresh** button to update the account list page.

Click the column button (S/N, Status, Username, ....,etc.) to sort the column in ascending/descending order.

Select the check boxes and click **Delete** to delete the accounts.

Click **Delete ALL** button to delete all accounts in account list.

Note: This page will refresh automatically every 5 minutes.

# 3-3-3 Account Log

The account log shows the accounts' log information.

S/N	Username	Time Created	Login Time	Usage Time	Charge	Payment Info	Status
000013	wzc5	2013-05-09 14:35:36		01:00:00	2	Cash	Expired
000014	byha	2013-05-09 15:55:30		01:00:00	2	Cash	Delete
000015	63nv	2013-05-10 10:23:09		00:30:00	1	Credit Card	Un-Used
000016	pxvd	2013-05-10 10:23:13		01:00:00	2	Cash	Expired

#### Figure 3-3-4 Account Log

Click Export to export the account logs to a text file format. (export.log)

Click **Clear Log** button to remove all account log entries.

Click **refresh** button to update the account log page.

Click the column button (S/N, Username, Time Created, ...,etc.) to sort the column in ascending/descending order.

# 3-3-4 Current User

Display the current logged-in subscribers' status. It allow service provider to disconnect any subscribers.

					Wine induces	36551011	Delete
1.	Ethernet	Dynamic	6866gvq×	10.59.1.2	00:0C:6E:56:33:CF	10	
2	ESSID 1	Dynamic	ld93k5j7	10.59.1.3	00:90:6E:56:33:CF	100	
3	ESSID 2	No-Auth	)-	10.59.1.4	00:90:6E:56:83:C1	56	
4	ESSID 3	No-Auth	-	10.59.1.5	00:90:6E:AC:FF:C1	100	
5	ESSID 4	No-Auth	-	10.59.1.6	00:AC:6E:EC:FF:C1	100	
6	ESSID 1	Super	Super	10.59.1.12	00:90:9F:56:83:C1	100	

#### Figure 3-3-5 Current User List

Click **refresh** button to update the current user list page.

Click the column button (Interface, Type, Username, IP Address, ..., etc.) to sort the column in ascending/descending order.

Select the check boxes and click 'Delete' to delete accounts.

Click **Delete ALL** to delete all accounts in current user list.

# **3-3-5 DHCP Clients**

The DHCP client table shows the current DHCP users on the LAN.

DHCP CLIENT	S	
DHCP Client Information	n nt information every 1 minutes. (1~80 minute)	
No.	MAC Address	IP Address



# 3-3-6 Session List

The remote site administrator could monitor the real time usage status of WG-500P via this page.

List sessior	ns of Network events n session list every [	s: Incoming and out 10 mi	going packet information nutes. (1~60 minute)	, including source IP address, c	lestination IP address,	and port number	10	
No.	TCP/UDP	Client IP	Client Port	Translated Port	Remote IP	Remote	e Port	Idle
₩GO	1 🔽 PAGE							
					Ħ First	Previous	Next 🕨	End Ħ

Figure 3-3-7 Session List Screen

# 3-4 System Tools

This allows service provider or administrator to process Firmware upgrade, change password and backup or restore configuration.

- 1. Configuration
- 2. Firmware
- 3. Boot Code
- 4. Controller Board Firmware
- 5. System Account
- 6. SSL Certificate
- 7. Ping Command
- 8. Restart
- 9. Logout

CONFIGURATION
🕨 FIRMWARE
BOOT CODE
🕨 Controller Board Firmware
SYSTEM ACCOUNT
SSL CERTIFICATE
PING COMMAND
RESTART
LOGOUT

Figure 3-4-1 System Tools Item

# **3-4-1** Configuration

Use the Configuration item to save, restore or reset configuration parameters of the WG-500P.

Backup the system configuration	on from this device to your PC or restore your stored system configuration to this device.	
Backup	Click Backup to backup the system configuration from this device to your computer or to the remote TFTP server. Remote TFTP Server IP Address :	
Restore	To restore your stored system configuration to this device Local PC File Path : Select Remote TFTP Server IP Address : File Name :	
Reset the system back to factory defaults	□ Keep subscriber profile	
		Apply

# Figure 3-4-2 Configuration Setting Screen

Item	Default	Description
Backup	Click it to sa	ve the system configuration to your computer. (export.cfg)
Remote TFTP Server IP	Empty	Enter the IP address of TFTP Server.
Address		
File Name	Empty	Enter the file name in the File Name field.
Restore	Click it to res	store your system configuration.
Local PC File Path	Empty	Enter the file pathname of the system configuration file in the Local PC
		File Path field.
Remote TFTP Server IP	Empty	Enter the IP address of TFTP Server.
Address		
File Name	Empty	Enter the file name in the File Name field.
Reset the system back	Erase all set	ting and back to factory setting.
to factory defaults		
Keep subscriber profile	Disable	Click the keep subscriber profile to change all the parameters into factory
		setting but still reserve the subscriber profiles.

## 3-4-2 Firmware Upgrade

The Firmware Upgrade menu loads updated firmware to be permanent in flash ROM. The download file should be a binary file from factory; otherwise the agent will not accept it. After downloading the new firmware, the agent will automatically restart it.

#### Manual Firmware Upgrade

anual Firmware Upgrade       Scheduled Firmware Upgrade         To upgrade firmware, click Select to locate the firmware file, or specify a remote TFTP server and file name, and click Apply.         Local PC File Path       Select         Remote TFTP Server IP Address       File Name	MWARE		
To upgrade firmware, click Select to locate the firmware file, or specify a remote TFTP server and file name, and click Apply.          Local PC File Path       Select         Remote TFTP Server IP Address       File Name	anual Firmware Upgrade	Scheduled Firmware Upgrade	
To upgrade firmware, click Select to locate the firmware file, or specify a remote TFTP server and file name, and click Apply.          Local PC File Path       Select         Remote TFTP Server IP Address       File Name			
Local PC File Path Select Remote TFTP Server IP Address File Name	To upgrade firmware, click	Select to locate the firmware file, or specify a remote TFTP server and file name, and click	Apply.
Remote TFTP Server IP Address	Local PC File Path	Select	
File Name	Remote TFTP Server IP A	Idress	
	File Name		
			Apply
Apply	i.		

Figure 3-4-3 Manual Firmware Upgrade Setting Screen

Item	Default	Description
This allow administrator to upgra-	de the firm	vare via HTTP.
Local PC File Path	Empty	Enter the file name and location in the Local PC File Path field.
This allows administrator use TFT	P server to	upgrade firmware.
Remote TFTP Server IP Address	Empty	Enter the IP address of TFTP Server.
File Name	Empty	Enter the file name in the File Name field.

Note:

- 1. Before downloading the new firmware, users must save the configuration file for restore configuration parameters of the device.
- 2. Do not turn the power off during the upgrade process. This will damage the unit.

#### Scheduled Firmware Upgrade

Scheduled Firmware Upgrade is a program that enables an automatic upgrade to the latest firmware version through the TFTP server.

nual Firmware Upgrade	Scheduled Firmware Upgrade	
To upgrade firmware, click	< Select to locate the firmware file, or sp	cify a remote TFTP server and file name, and click <b>Apply</b> .
Local PC File Path Remote TFTP Server IP A File Name	ddress	Select
		Anniv

#### Figure 3-4-4 Scheduled Firmware Upgrade Setting Screen

Item	Default	Description
Disable/Enable	Disables or enables the	ne scheduled firmware upgrade function.
TFTP Server IP	Empty	Enter the IP address of TFTP Server.
File Synchronization	Empty	Enter the file name and location in the File
		Synchronization field.
View Sample File	Click the button to dis	play synchronization file example.
Synchronization Check File Sample Code Version=1.07.06 Filename=wsgap01.bin		
Figure	3-4-5 Synchronizatio	Close on File Sample Code
Frequency	Weekly	Set the firmware upgrade time. The default value is "Weekly".

**Note:** Do not turn the power off during the upgrade process. This will damage the unit.

# 3-4-3 Boot Code

BOOT CODE		
To upgrade the Boot Code, click <b>Select</b> to locate the file and click	Apply.	
Local PC File Path :	Select	
		Apply

Figure 3-4-6 Boot Code Upgrade Setting Screen

# 3-4-4 Controller Board Firmware

Controller Board Firmware		
To upgrade the Controller Board Firmware, click Select to locate the	ile and click <b>Apply</b> .	
Local PC File Path :	Select	
		Apply

Figure 3-4-7 Controller Board Firmware Upgrade Setting Screen

# 3-4-5 System Account

Use the System Account screen to change the system accounts.

	SYST	EM	ACCOUNT	
--	------	----	---------	--

THE AGIMINIST ALOF ALLOUTE LATER	ully control this system and modify all :	settings	
10 and 10 and 10	lannaunt		
Jsemame :	account		
⊃assword :			
Confirm :	1		
Web-based Accounting Manage	ər		
The Web-based accounting mai	nager account can operate the proprie	tary web-based accounting system.	
Jsername :	account		
⊃assword :			
Confirm :			
Supervisor Account			
The Supervisor account can view	w system status and change passwori	js	
Jsemame :	supervisor		
⊃assword∶			
Confirm :			
Super Subscriber Account			
The Super subscriber is a built-i	n subscriber account for system test c	ır premium usage.	
Super Subscriber	Disable 💌		
Super Subscriber dle Time Out	Disable v	Min(s) (1~1440)	
Super Subscriber dle Time Out Jsername :	5 supervisor	Min(s) (1~1440)	
Super Subscriber dle Time Out Jsername : Password :	5 supervisor	Min(s) (1~1440)	

Figure 3-4-8 System Account Setting Screen

ltem	Description
Username	The username can consist of up to 20 alphanumeric characters and is sensitive.
Password	The password can consist of up to 20 alphanumeric characters and is sensitive.
Confirm	The password for confirmation
Super Subscriber	Disables or enables the super account function.
Idle Time Out	The user idle time out valid is 1 to 1440 minutes. If the idle time out is set as 5 minutes, it
	means if the account doesn't send packet in 5 minutes, the account will logout automatically.

#### **Administrator Account**

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.

kmarks	<u>I</u> asks <u>H</u> elp	
0	<b>№</b> 10.59.1.1	
Antonio		

Figure 3-4-9 Web Browser Location Field (Factory Default)

Step 2: The WG-500P configuration main menu will appear. Enter **admin** as the Username and **admin** as the password and click **Login**. If you are first time setting the system, the wizard setup screen will appear.

HANDLINK		
	WG-500P	
	Username : admin Password : •••••	
	Version 1.00.01a	
	Convright (c)2013~2015 Handlink Technologias Inc. All Rights Reserved	

Figure 3-4-10 Administrator Account Login Screen (First Time)

#### Web-Based Accounting Manager

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.

	<u>I</u> asks <u>H</u> elp	kmarks
2	▶ 10.59.1.1	0
	0 10.59.1.1	0

Figure 3-4-11 Web Browser Location Field (Factory Default)

Step 2: The WG-500P configuration main menu will appear. Enter **account** as the Username and **account** as the password and click **Login**.

WG-500P	
Username : account	
Password :	
Version 1.00.01a	
Login	

Figure 3-4-12 Web-Based Accounting Manager Login Screen

Step 3: After a valid user name and password have been provided, the account Generator Panel homepage will appear.

Account Generator Panel	
Please choose one button from the following selections           30 minutes         1 hour         2 hours	
	View Account List

Figure 3-4-13 Account Generator Panel

#### Supervisor Account

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.

<u>T</u> asks <u>H</u> elp	
№ 10.59.1.1	
	<u>Тазks H</u> elp 🗣 10.59.1.1

Figure 3-4-14 Web Browser Location Field (Factory Default)

Step 2: The WG-500P configuration main menu will appear. Enter **supervisor** as the Username and **supervisor** as the password and click **Login**.

HANDLINK		
	WG-500P	
	Username : supervisor	
	Password :	
	Login Reset	
	Copyright (c)2013~2015 Handlink Technologies Inc. All Rights Reserved.	

Figure 3-4-15 Supervisor Account Login Screen

Step 3: After a valid user name and password have been provided, the WG-500P configuration homepage will appear. "WIZARD SETUP" and "ADVANCED SETUP" are disabled.

#### **Super Subscriber Account**

Start your Web Browser; a subscriber login page will appear. Enter **super** as the Username and **super** as the password and click **Enter**, you can use Internet now.

	Welcome
Н	ot Spot Internet Service
Username:	Supër
Password:	
	Enter Cancel

Figure 3-4-16 Subscriber Login Page

## 3-4-6 SSL Certificate

The function allows you to download the registered CA certificate into the WG-500P.

Password for Private Key:		
Certificate File:	Select	
Private Key File:	Select	

Figure 3-4-17 SSL Certificate Download Setting Screen

Note: The password field must the same as the CA's registered password.

# 3-4-7 Ping Command

The Ping function can check the WG-500P networking connective or not.

NG					 
ecute a ping command to te	st the availability of a re	mote system. Enter an IP :	address.		
		Ping Clear			
				12	

#### Figure 3-4-18 Ping Command Screen

Item	Description
IP or URL	Enter the IP address or the URL link.

### 3-4-8 Restart

If your WG-500P is not operating correctly, you can choose this option to display the restart WG-500P screen. Clicking the apply button restart the WG-500P, with all of your settings remaining intact.

#### RESTART



Figure 3-4-19 Restart Screen

## 3-4-9 Logout

If you would like to leave the configuration page, please click apply to exit.

LOGOUT

Click Apply to log out. If you do not wish to log out, choose a menu option to leave this page.	
	Apply

Figure 3-4-20 Logout Screen

# 4 QR Code Service

# 4-1 QR code setting

Please find **Advance setting** > **Customization** > **Account Printout** >**QR code**. If you don't print out the QR Code on the ticket, please disable it and click **Apply** button.

age Logo Informat	sen Win ew Account Printout Credit Card User Agreement Page
9 ( m)	
e cogo	
	Format 1: Welcomel (Max =75) Relicione 1
n Toe.	© Format 2: (Max.=75)
	* Format 1: W/G-500P (Max =60)
Sutotle.	WG-500P
	© Format 2 : (Max=60)
Jsemame:	Usemame: (Max-24)
Password	Password (Max =24)
a	Billing: Time to Finish (Max=24)
<ul> <li>Blang Method</li> </ul>	(Max=24) Accumulation : Accumulation (Max=24)
Billing Profile	Service: (Max=28)
Purchase Unit	Unit: (Mac-24)
🕙 Usage Time:	Usage Time: (Max.+24)
Price	Total (Max.=24)
R Tax	Tax: (Max =24) TOTAL : Total (Max =24)
essid	ESSID (Max = 24)
	WPA 1 (Max =24)
Wrieless Sceurity	WPA2 : [///////////////////////////////////
Ø. 1000000000000000000000000000000000000	MicMode : Microsoft
Addbonal Label 1	0444 %24) Y2005 - 0444 %24)
Post out Time	Enemat : vuovulmm/dd = HH : mm : cc = ale tas lei tas e andbas
- Charles Inc.	Activate
	your account before: Description
Expiration Time	Format : yyyy/mm/dd 🖉 HH : mm : ss 💌 (HH 246) Hr 126 H. AssEM
	Please finish your usage time within 3
	Marr=24rd)
	Thank you!
Ending:	
orano Di⊑noble	OD Cada
5 Z: Enable	UK CODE
COR Code:	Printout the OR Code
Preview of connected prin	ter output Stop 2: Click
Preview of account genera	tor printer output SLEP S. CITCK



## 4-2 Additional information for QR code use

If you will activate QR code service for Apple iOS 6 device and later,

- 1. Please find Advance setting > Security > Pass Through.
- 2. Choose "Enable".
- 3. Add **www.apple.com** into PASS THROUGH list in WG-500P because iOS6 device and later is required.
- 4. Click **Add to List** button.
- 5. Choose Active on the Pass Through List.

For certain QR code Apps, please add **go.redirectingat.com** and follow the above steps.

PASS THR	OUGH Step	01			
Pass Through:	Enable 💌 St	ep 2: Choose Enable			
Pass Through De Subscriber is us or that are conne	estination allows the s eful for VIP users with ected with LAN port (w	ubscribers to access specified Internet out authentication.Pass Through LAN d reless access points, for example).	websites without authentication, levice is also useful for devices th	which is useful to promote selecte at do not have a web browser (cas	ed services.Pass Through sh registers, for example)
Please enter no URL or Web: Start / End IF Please enter no Start / End I IP Address: MAC Addres Description	ew pass through for site: WWW.appale. P Address ew pass through for P Address ss:	destination (up to 20 entries) com Step 3: Add ~	"www.appale.com	"	Add to List
Pass Through I	iet			S	tep 4: Click Add to
No.	Active	Address List	Туре	Description	Delete
1		www.apple.com	Destination		E
	Step 5: Cl	noose Active		1	Delete All
					Apply

Figure 4-2-1 Pass Through Setting Screen

## 4-3 Use QR code to access the Internet

Please follow the steps to access the Internet for clients.

1. Print out the Ticket. You can find the ESSID and WPA/WPA2 printed on the ticket.



Figure 4-3-1 QR Coding Ticket

Connect to the ESSID(ex: Handlink\_WG-500P), input WPA/WPA2 password(ex: 1234567890).



Figure 4-3-2 Password Input Screen

3. Open up QR code APP and Scan.



Figure 4-3-3 Scan 1 Screen

4. Some Apps may require user to click "Go to URL".



Figure 4-3-4 Scan 2 Screen

5. Client can use the Internet now.



Figure 4-3-5 Scan Finish Screen

# **5** Personal ID Recognition

Some countries or areas would ask users to show their personal identification when accessing WiFi service according to laws for the cybercrime investigation.

WG-500P provides the function Personal Identification Recognition. **The default is disabled.** Subscribers need to activate it by the following steps.

# 5-1 Personal ID Recognition Setting

Step1. Active the function: Go to Advanced Setup -> System -> System. Enable the **Personal ID Recognition Mode**. Please refer the **Chapter** 3-2-5-1 System.

System Host Name	1				
Domain Name	-				
Location Information	Location Name:			(Max=50)	
	Address:			(Max=200)	
	City:			(Max=50).	
	State / Province:			(Max.=50)	
	Zip / Postal Code:			(Max.=10)	
	Country	0		(Max=60)	
	Contact Name	1		(Max=50)	
	Contact Telephone.			(Max=50)	
	Contact FAX:	[		(Max=50)	
	Contact Email:			(Mac=50)	
Date/Time	Time Zone: GMT 🐭				
	O Manual Setting				
	Date 2011 V / 1 V / 1	(Yean/Month/Day	d)		
	Time: 00 🛩 : 00 🛩 : 00	💌 (Hour : Minute : Se	scond)		
	© NTP Setting Date: 2004/7/2 Time: 16:05:02			Update Now	
	Server IP/Domain Name 1: time.nist.gov				
	Server IP/Domain Name 2: www.nist.gov				
	Update Time 24 hours				
			Start Date:	4 💌 Month / 1	💌 Day
	Daylight Saving Time		End Date:	10 Month / 31	M Day
NAT (Network Address Translation)	<ul> <li>Enable</li> <li>Plug and Play in</li> <li>Disable</li> </ul>	ternet access			
User Session Limited	Enable 300     (1~1	024) Ó Disable			
Layer 2 Isolation Security	Enable     Olisable				
Secure administrator IP addresses	<ul> <li>Any</li> <li>Specify</li> </ul>				
		~			
	2	~			
	3	~			
	4	~	1		
	5	~			
Multicast passthrough	© Enable O Disable				
Allow remote user to ping the device	Enable     Otisatile				
SSL Certificate	O Enable O Customer Ce	rtificate			
Personal ID Recomition	C Cashia 🛞 Disshia				

Figure 5-1-1 System Setting

Step2. The first billing profile you activate is the Personal ID Recognition selection. There is only ONE billing profile in the Personal ID Recognition mode.

Please refer the **Chapter 3-2-2-1 Billing** to modify your first billing profile.

Pre-Paid				
The subsci	ibers can access Internet with pr	e-defined usage time.		
Enable (	redit Card Service WG-500P			
Time to	Finish			
The sub rnet bef	scriber can access Internet only pre run out.	one time with one account. Once subscriber logi	in, the pre-defined usage time will start until run o	ut even the subscriber stop to access the Ir
Accume The sub	llation scriber can access Internet seve	ral times with one account. The system can keep	p and accumulate every single usage time until th	e pre-defined usage time run out.
illing Profile				
Currency: •	S S Number of	decimals places: 2 )		
No.	Active	Name (may 12 characters)	Account Usage Time	Charge
27224		30 minutes	30 minutes V	100
01	e.	oc minateo		1.00
01	×.	1 nour	1 nours M	2.00
01 02 03	8	1 hour 2 hours	1 nours V 2 hours V	2.00
01 02 03 04	8	T nour 2 hours 3 hours	1     nours       2     hours       3     hours	3.00
01 02 03 04 05	× ×	T nour 2 hours 3 hours 5 hours	I  Inours    I  Inours    I  Inours    I  Inours    I  Inours	2.00 3.00 4.00 5.00
01 02 03 04 05 06	* * *	2 hours 3 hours 5 hours 10 hours	1     nours       2     hours       3     hours       5     hours       10     hours	2.00 3.00 4.00 5.00 6.00
01 02 03 04 05 06 07		2 hours 3 hours 10 hours 1 day	1  nours    2  hours    3  hours    5  hours    10  hours    1  days	2.00 3.00 5.00 6.00 10.00
01 02 03 04 05 06 07 08		2 hours 3 hours 5 hours 10 hours 1 day 2 days	I  Inours    I  Inours    I  Inours    I  Inours    I  Inours    I  Inours	2.00 3.00 5.00 6.00 10.00 20.00
01 02 03 04 05 06 07 08 09		2 hours 3 hours 5 hours 10 hours 1 day 2 days 7 days	I     Inours       2     Inours       3     Inours       5     Inours       10     Inours       1     days       2     days       7     days	2.00 3.00 4.00 5.00 6.00 10.00 20.00 50.00



**Step 3:** Start your browser, and then enter the factory default IP address **10.59.1.1** in your browser's location box. Press **Enter**.

asks Helb	
№ 10.59.1.1	
	asks <u>n</u> eip ≫10.59.1.1

Figure 5-1-3 Web Browser Location Field (Factory Default)

**Step 4:** The WG-500P configuration tools menu will appear. In the Username and Password field, type the factory default user name "**account**" and password "**account**" and click **Login**.

WG-500P	
Username :	
Password :	
Version 1.00.01a	
 Login Reset	

Figure 5-1-4 Configuration Tools Menu

**Step 5: ONLY account manager** can operate PIR and printout the ticket. There are 3 types for the account manager to choose, including Driver License NO., Passport No. and Identify card No. Fill in numbers and click "+" or "-" for usage time.

Click the **Print** button to printout the ticket.

Logout

Click View Account List to see all accounts which are printed out.

Please Enter the Subscriber Personal ID Number Please Choose Internet Access Usage Time 10 + hours - Clear Priver Licence No. Driver Licence No. PassPort No. Identity card No. 6	Personal ID Recognition (PIR Mode)
Clear	Please Enter the Subscriber Personal ID Number Driver Licence No.  Driver Licence No. Please Choose Internet Access Usage Time 10 + Total amount : USD 6
	Clear

Figure 5-1-5 PIR

View Account List

Username: a33y
Password: 5pm4
Billing : Time to Finish
Service Unit: 10 hours
Purchase Unit: 1
Usage Time: 10:00:00
Subtotal: USD 6.00
Tax: USD 0.00
Total: USD 6.00
ESSID: 4F_WG-500P_1
2013/10/07 18:23:44
5/N: 000252
Activate account before:
2013/10/08 18:23:44
E15426-77
Close Print

Figure 5-1-6 PIR Ticket

Step 6: Click Logout and then click the Apply button to finish it.

## LOGOUT

Do you want to log out from the web configurator?

Figure 5-1-7 Logout

# **Appendix A Signal Connection Arrangements**

### **RJ-45 Ethernet Port**

The WG-500P RJ-45 Ethernet port can connect to any networking devices that use a standard LAN interface, such as a Hub/Switch Hub or Router. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable to connect the networking device to the RJ-45 Ethernet port.

Depending on the type of connection, 10Mbps or 100Mbps, use the following Ethernet cable, as prescribed.

10Mbps: Use EIA/TIA-568-100-Category 3, 4 or 5 cables. 100Mbps: Use EIA/TIA-568-100-Category 5 cable.



Figure RJ-45 Connector and Cable Pins

**Note:** To prevent loss of signal, make sure that the length of any twisted-pair connection does not exceed 100 meters.

# **Appendix B Regulations/EMI Compliance**

#### FCC Regulatory Statement

Part 15-Class B compliant device

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including that which may cause undesired operation.

This equipment has been test and found to comply with the limits for a computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. The equipment and the receiver should be connected the outlets on separate circuits.
- 4. Consult the dealer or an experienced radio/television technician for help.

Changes or modification not expressly approved be the party responsible for compliance could void the user's authority to operate the equipment.

### FCC RF Radiation Exposure Statement

- 1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

# LIMITED WARRANTY

#### WG-500P

#### What the warranty covers:

We warrant its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, we will at its sole option repair or replace the product with a like product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

#### How long the warranty is effective:

The WG-500P is warranted for one year for all parts and one year for all labor from the date of the first consumer purchase.

#### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

#### What the warranty does not cover:

- 1. Any product, on which the serial number has been defaced, modified or removed.
- 2. Damage, deterioration or malfunction resulting from:
- a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
- b. Repair or attempted repair by anyone not authorized by us.
- c. Any damage of the product due to shipment.
- d. Removal or installation of the product.
- e. Causes external to the product, such as electric power fluctuations or failure.
- f. Use of supplies or parts not meeting our specifications.
- g. Normal wears and tears.
- h. Any other cause that does not relate to a product defect.
- 3. Removal, installation, and set-up service charges.

#### How to get service:

- 1. For information about receiving service under warranty, contact our Customer Support.
- 2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address (d) a description of the problem and (e) the serial number of the product.
- 3. Take or ship the product prepaid in the original container to your dealer, and our service center.
- 4. For additional information, contact your dealer or our Customer Service Center.

#### Limitation of implied warranties:

THERE ARE NOWARRANTIED, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

#### Exclusion of damages:

OUT LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. WE SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBLITY OF SUCH DAMAGES.
- 2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
- 3. ANY CLAIM AGAINST THE CUSOMER BY ANY OTHER PARTY.