


Start


Remote with Aim Anywhere

1 Meet Your Remote

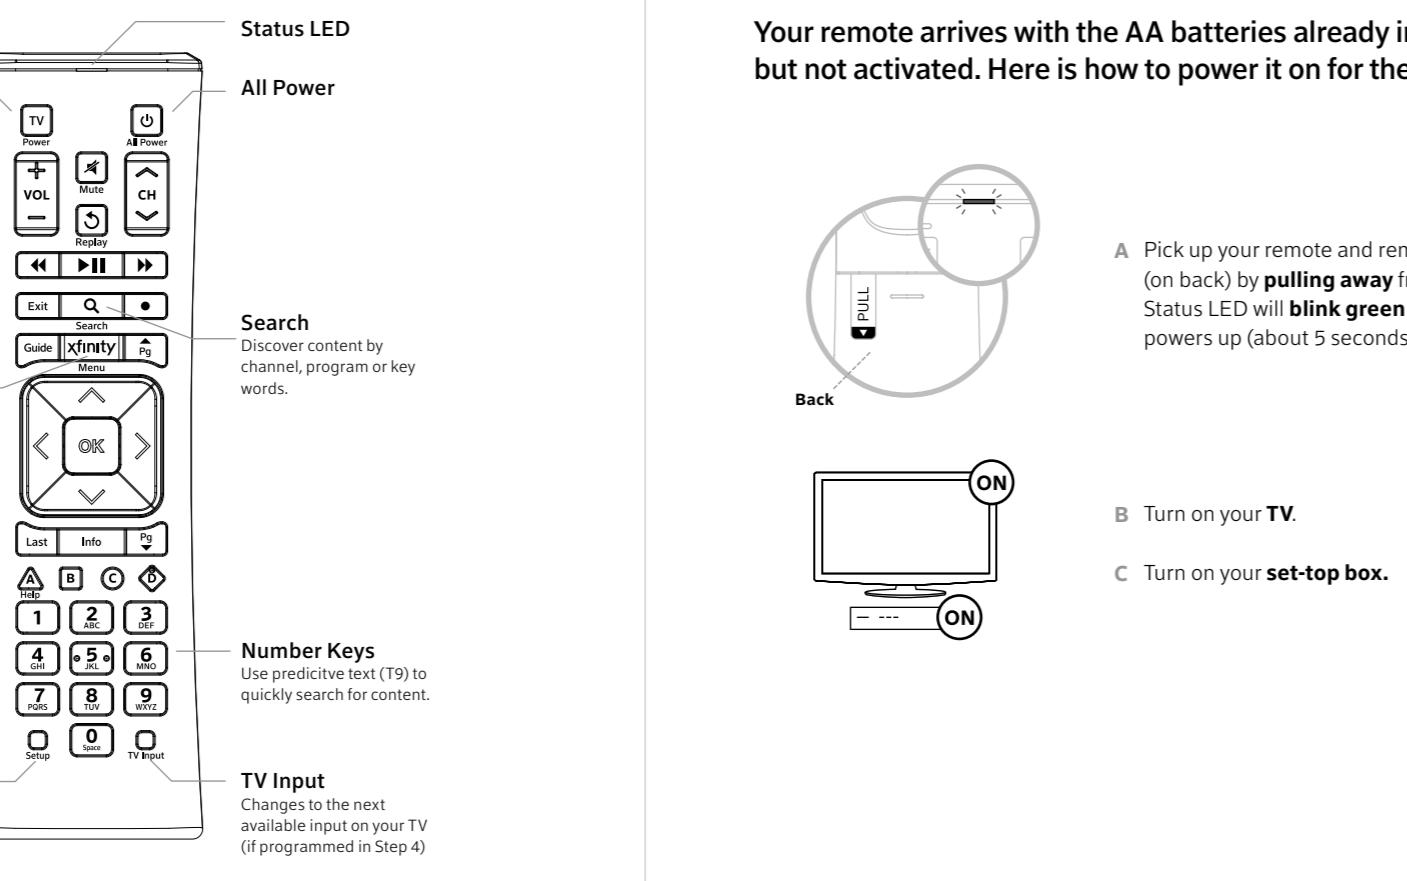

2 Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

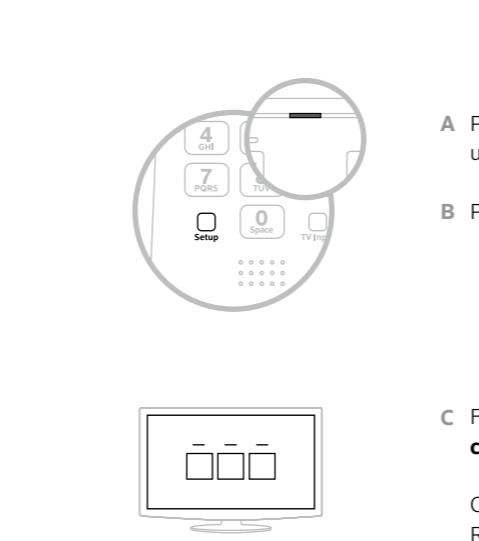

A Using the list on the right, find the first **5-digit code** for your TV manufacturer.

B Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.

B Press the **XFINITY** button.

C Enter in the **first** 5-digit code for your TV manufacturer. The Status LED should **blink green twice**.

C Turn on your **TV**.

C Turn on your **set-top box**.

Once the code is correctly entered, your XFINITY Remote is paired with the device.

D Verify that the code was accepted by using your remote to adjust **volume** and turn the **TV on and off**.

Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.

Not working? Try the second code listed. Still not working? Visit xfinity.com/remotes for a complete list of manufacturer codes.

Need to remove Aim Anywhere control? Press and hold the **Setup** button on the remote until the status LED changes from **red to green**. Press **A** on the remote. If the status LED **blinks green twice**, you have successfully removed Aim Anywhere.

3 Pair Remote for "Aim Anywhere" Control

Control your set-top box without having to point at it, even when it is inside a cabinet or entertainment center.



A Using the list on the right, find the first **5-digit code** for your TV manufacturer.

B Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.

B Press the **XFINITY** button.

C Enter in the **first** 5-digit code for your TV manufacturer. The Status LED should **blink green twice**.

C Turn on your **TV**.

C Turn on your **set-top box**.

Once the code is correctly entered, your XFINITY Remote is paired with the device.


D Verify that the code was accepted by using your remote to adjust **volume** and turn the **TV on and off**.

Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.

Not working? Try the second code listed. Still not working? Visit xfinity.com/remotes for a complete list of manufacturer codes.

Need to remove Aim Anywhere control? Press and hold the **Setup** button on the remote until the status LED changes from **red to green**. Press **A** on the remote. If the status LED **blinks green twice**, you have successfully removed Aim Anywhere.

4 Control Your TV's Power and Volume

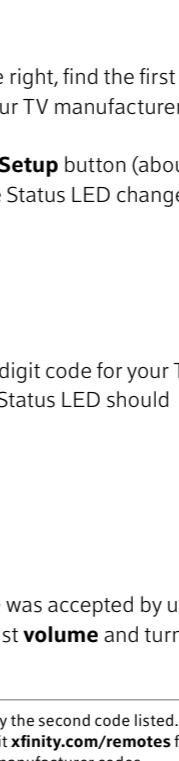

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced remote control/TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to this equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"Caution": Exposure to Radio Frequency Radiation.

Antenna shall be mounted in such a manner to minimize the potential for human contact during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.

Radio Exposure Statement: This equipment complies with the


FCC radiation exposure limits set forth for devices operating in an uncontrolled environment. This equipment should be

operated with a minimum distance of 2 cm between the radiator and front of face.

Inicio


Control remoto con Aim Anywhere

1 Conozca su control remoto

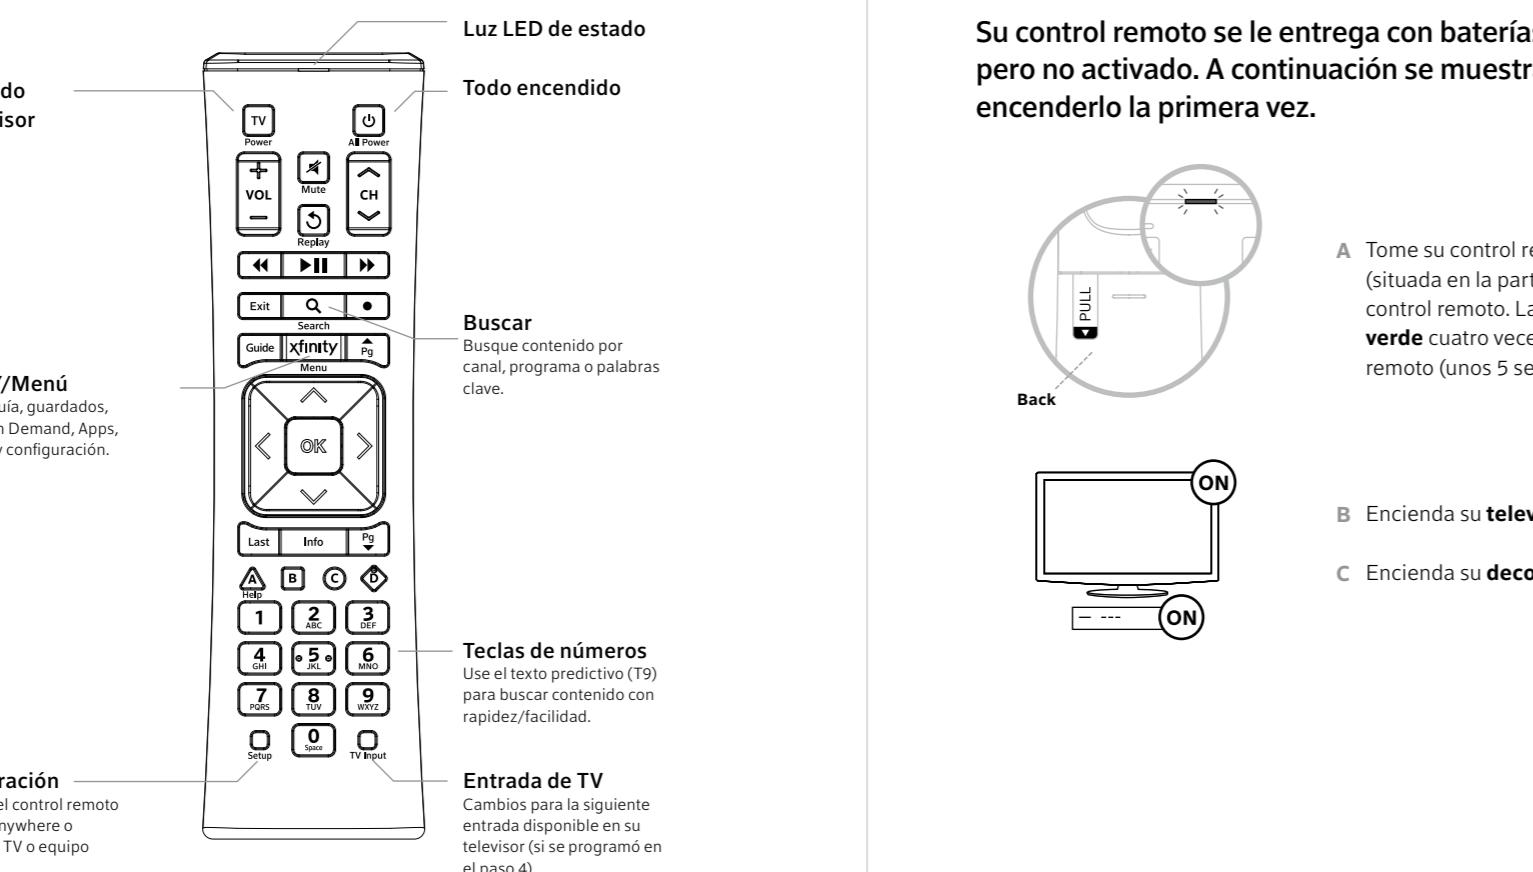

2 Encienda su control remoto

Su control remoto se le entrega con baterías AA ya instaladas, pero no activado. A continuación se muestra cómo debe encenderlo la primera vez.

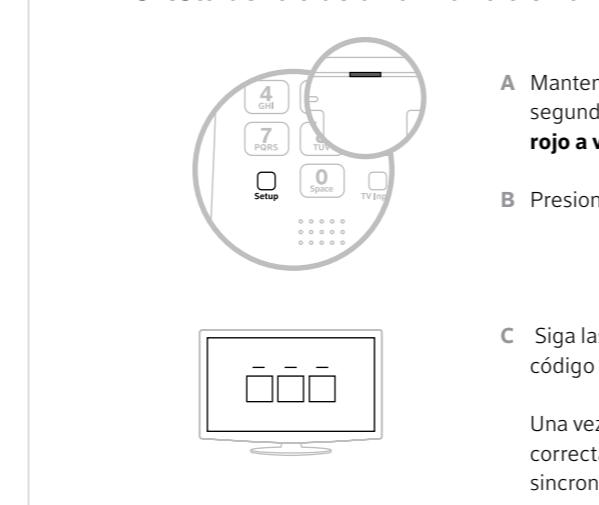


- Mantenga presionado el botón **Setup** unos 3 segundos, hasta que la luz LED de estado cambie **de rojo a verde**.
- Presione el botón **XFINITY**.
- Encienda su **televisor**.
- Encienda su **decodificador**.

Una vez que el código se haya ingresado correctamente, su control remoto de XFINITY queda sincronizado con el aparato.

3 Sincronice el control remoto para controlar "Aim Anywhere"

Controle su decodificador sin tener que apuntar hacia él, incluso si está dentro de un armario o en un centro de entretenimiento.

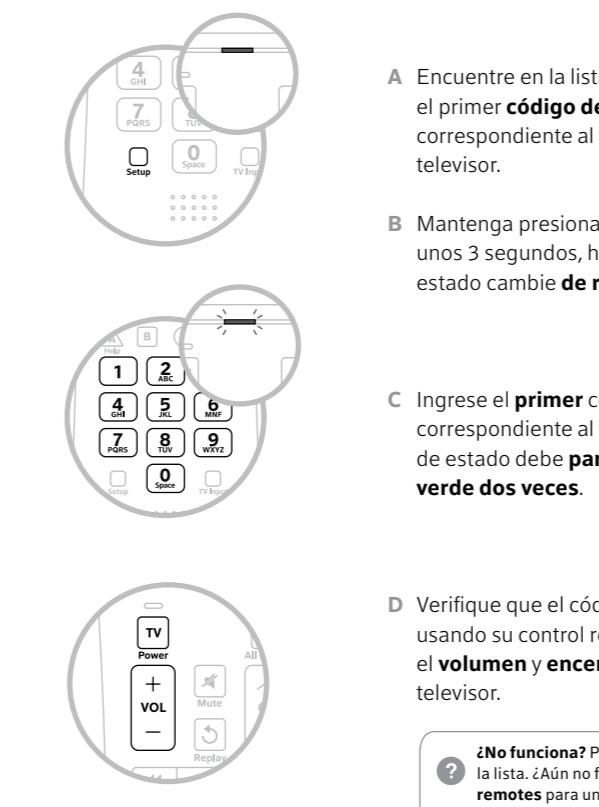

- Códigos de fabricantes más comunes**
- | | |
|------------------|--------------|
| LG | 10178, 11265 |
| Panasonic | 10051, 10250 |
| Samsung | 10812, 10060 |
| Sanyo | 10154, 10159 |
| Sony | 10000, 11100 |
| Sharp | 10093, 10165 |
| Toshiba | 10156, 11156 |
| Vizio | 11758, 11756 |

Need help?
Visit xfinity.com/xtv

4 Controle el encendido y el volumen del televisor

Keep for future reference, but if you decide to toss, please recycle.

Get Started Guide v.1.0