

Blue Voice L Home



Blue Voice L Home is a cordless handset. It can communicate with any Bluetooth access point, supporting the CTP profile, by using the Bluetooth interface and the Bluetooth Cordless Telephony Profile. (A direct connection between two Blue Voice L Home handsets without involving a Bluetooth access point is possible in Intercom mode (→ S. 26).)

- All basic telephone features can be used with Blue Voice L Home.
- It is possible to make a telephone call outdoors at a remove of up to 100 metres from the access point. Inside a building, it is possible to make a telephone call from the adjoining two or three rooms, depending on the layout of the building.

Familiarize yourself with the Blue Voice (→ S. 5)

Commissioning (→ S. 9)

Basic rules of operation (→ S. 14)

Telephoning (→ S. 23)

Making calls with ease (→ S. 28)

Settings (→ S. 37)

Consult the manual as required (→ S. 46)

Important notes

Where you may use Blue Voice

The Blue Voice is suitable for use in the office, outdoors or in a dusty environment. It complies with the IP 54 protection class and is splashproof and dustproof.

Do not leave the telephone in direct sunlight. Doing so could cause damage to the telephone, thus making it inoperable.

Operating the battery

Your Blue Voice comes fitted with a Li-ion battery.

- Charge the battery completely the first time you use it.
- Insert the Blue Voice into the charger repeatedly during the first week of use.

The new battery attains its full capacity after it has been charged, used and charged again a few times.

Avaya is not liable for damage which occurs due to inappropriate handling of the battery.

Repairs

The device may only be opened or repaired by qualified technicians. Do not open the telephone yourself. Doing so could cause damage to the telephone, thus making it inoperable.

Efficient use of the handset

Your Blue Voice comes fitted with an antenna. The antenna projects into the casing projection on the upper rear side of the device.

Do not cover up the antenna unnecessarily. Particularly when making a call.

This reduces the signal range, the connection quality and the talk time, as your device must then operate at a higher transmission power.

It is recommended to switch your Blue Voice off if you intend to have it away from the charger for a long period of time. When switched off, Blue Voice remains on standby for up to 20 days before the battery is finally flat.

Maintenance

Please clean your telephone with a soft, lint-free cloth. If required the cloth can be moistened with a mild household or plastic cleanser or disinfectant. Do not clean with scrubbing cleansers or solvents.

Important notes

Always dispose of old equipment correctly - keep our environment tidy




Old electrical and electronic equipment marked with this symbol can contain substances hazardous to human beings and the environment. Never dispose of these items together with unsorted municipal waste (household waste). In order to protect the environment, public collection points have been set up to ensure the correct disposal of old electrical and electronic equipment marked with this symbol.

To reduce the risk of these substances being released into the environment and to reduce the burden on natural resources, it is also possible to participate in Avaya-Tenovis' used equipment return system.

This system ensures the correct recycling of old equipment as well as the re-utilisation of individual components.



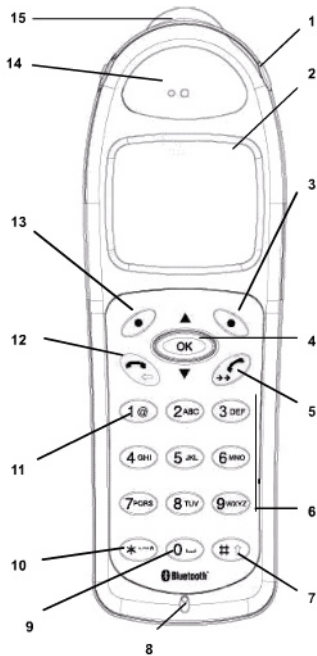






Overview of the Blue Voice L Home



1	Socket for headset
2	Display
3	Right softkey
4	Selector
5	Lift the receiver / redial key
6	Digit keys
7	Hash key / switchover between lower case and upper case letters key
8	Microphone
9	0 / empty space key
10	Star / special character mode key
11	Button 1
12	Hang up receiver / back key
13	Left softkey
14	Speaker loudspeaker
15	Antenna

All keys at a glance

Many keys have two functions. According to the status of Blue Voice, the appropriate function is active.

	Left softkey	Function depends on status Second function (press and hold down key): Switch off
	Right softkey	Function depends on status Second function (press and hold down key): Switch on
	Lift the receiver	Dials the call number entered Second function: Redial
	Hang up	Ends call Second function: Cancel / back to last menu displayed
	Digit keys with letters	For dialling call numbers and entering text Second function (press and hold down key): Direct entry into phone book
	Button 1	Digit / special characters Second function (press and hold down key): Direct entry into phone book
	Star button	For special function Second function: Calls up the menu for the entry of special characters
	Hash key	For special function Second function: Switching between upper case and lower case letters
	Selector	Pressing the key strongly: Opens a selected menu item or confirms an input. Press the rocker switch up or down: Moves the highlight in the display accordingly. If a scroll bar is shown, the display scrolls up or down.



It normally does not matter if a key is pressed quickly or held down for a longer period. Longer pressing is only necessary for the use of some special functions.

Commissioning

Only a few more steps are necessary before you can make calls with your Blue Voice:

1. Connect the charger. (→ S. 10)
2. Charge the battery. (→ S. 11)
3. Connect the Blue Voice to your access point (bonding). (→ S. 12)

Positioning of the charger

Place the charger on a solid, even surface, for example, on a table. Choose a location that is protected from direct sunlight and dampness.

- Plug the small plug of the connecting cord into the back of the charger.
- Plug the plug-in power supply into a socket.

The charger is ready for operation.



- You may only use the charger with the standard 6.2 V 620 mA plug-in power supply, reference number 4.999.109.002.
- The plug-in power supply must be accessible and close to the charger. In case of danger it has to be unplugged from the socket.
- You are therefore advised to use an antiskid surface for your charger, in particular with new furniture or furniture that has been refreshed using varnish preservation agents. Varnishes or varnish preservation agents may contain substances that soften the feet of the device, thus leaving unsightly stains on the surface of your furniture. Avaya cannot assume liability for damage of this kind.

Charging the battery

Simply place the Blue Voice into the charger. It may be switched on or off. It will remain in the same condition during charging. You will hear a confirmation tone if Blue Voice is switched on.



The battery symbol with three arrows shown here is displayed until the battery is completely charged.



- You can leave the handset in the charger permanently, if you wish. The battery will be loaded until it is full and then loaded no more - it cannot be 'overloaded'.
- When the battery is being charged, it will become slightly warm. This is perfectly normal.
- If the battery is completely flat (for example, if the Blue Voice has not been charged for many weeks), you should leave the battery in the charger for at least 30 minutes before switching on and using Blue Voice.

Connect the Blue Voice to your access point

Before you can make calls with your Blue Voice, a communication connection (bonding) between the Blue Voice and the access point must be set up.

This procedure need only be carried out once. After ending a connection, the Bluetooth connection will be automatically re-established.

First you should prepare your access point for connection (bonding) (→ S. 13), then you should connect (bond) your Blue Voice. (→ S. 13)

Connect the Blue Voice to your access point

Making the access point recognisable for other Bluetooth devices

Configure your access point in a way, that it is recognisable for other Bluetooth devices. Make use of the user manual of your access point.

Connecting (bonding)

Your access point must already be in "Discovery mode".

Blue Voice is switched off.



Press the right softkey for a long period.

Blue Voice starts up. The display shows No device or changes between Search devices and No device.



Press the "Search all" left softkey.

The display first shows Search available devices. The search can last approximately one minute. The device available or a list of all devices available will then be displayed.



Select the device if necessary.



Confirm.

"Device details" are displayed:



Press the "Enrolment" right softkey.



Enter the PIN of your access point and confirm with the "Enrolment" right softkey.

The message Registering with ... successful appears and Blue Voice goes into idle state.



- Only those Bluetooth devices with the CTP profile are displayed.
- If more than one device is shown, compare the Bluetooth device addresses of the device details. You will find this number in the documents of your access point.
- If the system search was not successful, you can try again using the "Retry" softkey. Ensure that the access point is in Discovery mode.

Switching the telephone on and off

Switching on the telephone

The telephone is switched off.



Press the right softkey for a long period.

You will be automatically connected with the last access point upon which you were last online.

Switching off the telephone

The telephone is idle.



Press the left softkey for a long period.



- If your Blue Voice cannot re-establish the last connection, the display alternates between showing `Search devices` and `No device`. Approach closer to your access point. Check whether your access point is functioning correctly.
- You can also switch off your Blue Voice by using the menu.


The display

In the idle state, (→ S. 15) the display uses symbols to show important settings and information.

You can access settings by using various menus. Menus (→ S. 17) are always constructed in the same manner.

When you are using Blue Voice, the display is highlighted in blue. This lighting is automatically switched off after ten seconds in order to save electricity.

Idle display

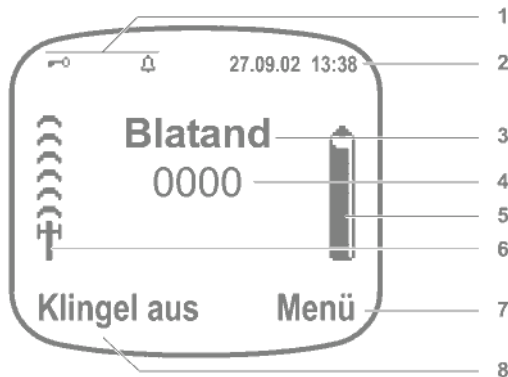







1	Symbols (→ S. 47)
2	The date and time (→ S. 41)
3	Username (→ S. 42)
4	Call number (→ S. 42)
5	Battery display (→ S. 16)
6	Field strength display (→ S. 16)
7	Right softkey (→ S. 18), current function
8	Left softkey (→ S. 18), current function

The display

Battery display

The degree to which the symbol is 'full' indicates the charge status of the battery. Five levels are displayed:


Chrg disp.	Remaining charge
	100 %
	75 %
	50 %
	25 %
	0 %
	The battery is being charged.

Field strength display

The field strength display on the left hand side of the display shows the radio link to the access point. The number of radio waves (maximum of five) indicates how good the link is. Even the presence of a single radio wave still indicates a sufficiently good radio link.

The display

Layout of menus in the display

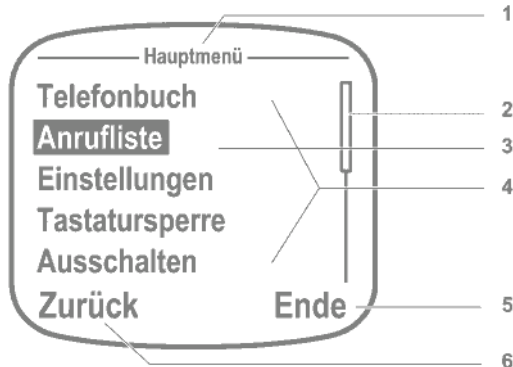

1	Menu name	Name of the menu or designation of the setting which can be adjusted here.</br>
2	Scroll bar	Only appears when not all menu entries can be displayed at the same time. It serves as an indication that further menu entries will follow. Disappears after a few seconds.</br>
3	Selected menu item	Select: Press the selector up or down. Invoking the selected menu item: Press the selector.
4	Menu items	List with all setting possibilities in this menu
5	Current function of right softkey	"End": Back to idle state
6	Current function of left softkey	"Back": Back to the previous menu

Functions in the menu

Many functions and settings of your Blue Voice can be accessed using the display contents (menu). The menu is set out in such a way that most of the menu items lead to submenus.

Selecting functions



Call up the menu using the right softkey.



Press either the selector either up or down to select the desired menu item, e.g. *Settings*.



Call up the menu item by using the selector.

Calling up higher-ranked menu levels



Use the left softkey to access higher-ranked menu level or to exit the main menu.

Submenus

Submenus are operated in exactly the same way as the main menu.

Using softkeys

The functions of softkeys change according to the situation. The function is always shown in the display directly above the key, e.g., *Menu* or *Cut off*.



The right softkey is used, for example, for switching on, for calling up menus or when confirming a setting.



The left softkey is used, for example, to exit a menu item or to cancel.

Cancelling or exiting an action



Press the Hang up key. This action is cancelled without saving.
Pressing and holding down a key: Return to idle display.


Entering text




The numeric keys can also be used to enter letters and symbols, e.g., for names in the phone book. The letters are printed on the digit keys. Your telephone switches automatically to entry of letters and numbers when this is necessary.



You may select special characters by using a Special character dialogue (→ S. 20). An overview of all symbols that may be entered by using numeric keys and the Special character dialogue may be found in the Table of characters (→ S. 48).



You may change all text, symbols and call numbers entered.

Example: Enter the name "John":

 Press the JKL button once. J appears in the display.


   Press the MNO button three times. JO appears in the display.

  Press the GHI button twice. JOh appears in the display.

  Press the MNO button twice. JOhn appears in the display.

Switch to upper case letters


Enter text

 Press the Hash key. The next character entered will be upper case.

To finish entry

 Press the selector. The characters are accepted.

Cancelling an entry

 Press the back key. The entry is stopped.



- The first letter is always upper case in the case of names.
- Before entering a second letter with the same key, you must wait a moment until the cursor moves forward.

Entering text

Text, symbols and call numbers entered

Text and call numbers may be changed in the same way as on a normal mobile phone.

Moving the cursor



should be pressed briefly.

The cursor moves one step to the left or to the right.

Deleting a character or digit



should be pressed briefly.

The character left of the cursor is deleted.

Deleting a line



should be held down.

All characters left of the cursor up as far as the next empty space are deleted.

Entering a character or digit

Newly entered characters are entered at the position of the cursor.



When setting the date or time, you may delete the digits one-by-one starting from the left, you may delete all digits together or you may overwrite individual digits.

Entering special characters

Blue Voice is in text input mode (e.g., when entering a name):



should be pressed briefly.

An overview of all special characters available is displayed



Using the left and right softkeys and the selector (up or down), select the character desired.



Confirm your selection.

The character is added next to the last character entered.

Cancelling the entry of a special character



Press the back key.



• You can use the hash key to switch between upper and lower case, as usual.

Locking the keypad

You can set your Blue Voice to ignore key presses. You will thus prevent calls being made or settings from being changed by inadvertent key presses.

... by using the menu




Call up the menu using the right softkey.



Select the **Key lock** menu item and confirm.

... by key press



and  pressing and holding down **at the same time**.

You will briefly be shown a message stating that the key lock can be switched off by pressing the star and hash keys simultaneously.

Unlocking the keyboard



and  pressing and holding down **at the same time**.



When the keyboard is locked, the corresponding symbol appears in the idle display.

Charge level of the battery

Your Blue Voice sounds signal tones to let you know that the battery is almost flat:

- Single signal tone: The remaining charge in the battery will soon be used up. Please charge the battery immediately.
- Double signal tone: There is no charge left in the battery and Blue Voice will switch off presently.







- No battery warning tones are sounded during a call.

Making calls

You may use your Blue Voice to telephone in the usual manner.

- Depending on the telephone line, your access point is connected to, you have to dial the external line code in front of the call number.

    Dial the call number you wish to call, e.g. 1276.



Pick up the handset.

Cancelling a call



Press.

End call



Replace the handset.



- You can easily redial call numbers which you have recently called using the Redial list (→ S. 35).

Answering calls

When you are being called, this is signalled as per the settings in the Call signalling (→ S. 37) menu.

Accepting a call

Your Blue Voice rings.

The call number and, if the call number is stored in the phone book, then also the name of the caller are displayed.



Pick up the handset.

Deactivating the call tone

Your Blue Voice rings.



Ringer off. The call is still waiting.

Establishing several connections

During an active call the right softkey is an "R"-button. Some access points support the "R"-button to control features like callback, brokering and forwarding. Refer to the user manual of your access point to get the supported features.



- Blue Voice supports DTMF tones.

Making calls in Intercom mode

In Intercom mode, a direct connection can be made to a second Bluetooth device which is also in Intercom mode. The access point is not necessary for this. In Intercom mode, only simple calls can be made (Basic call connection). No Comfort features can be used.

Switch on Intercom mode



Call up the menu using the right softkey.



▽



Select the *Settings* menu item and confirm.



▽



Select the *System* and confirm.



▽



Select the *Intercom mode* menu item and confirm.

Blue Voice switches to Intercom mode. Blue Voice can now be recognised by other handsets. The display shows INTERCOM MODE.



-
- If Blue Voice has no connection to the access point, you can select the "System" menu item from the main menu.
 - No menu is available in Intercom mode.
 - You can exit Intercom mode by using the "End" right softkey.

Making calls in Intercom mode

Telephoning

In Intercom mode, you can only make a call with a Bluetooth device which is itself also in Intercom mode.

Searching for accessible Bluetooth devices



Press the "Search" left softkey.

A list is displayed of all Bluetooth devices found which are in Intercom mode. The names of the devices for Blue Voice consist of the last digits of their Bluetooth addresses.

Connecting



You can now choose the device you wish to use to make calls.



Call the device by using the "Dialling" right softkey.

*When the counter cell picks up, *Connected* is displayed.*

Ending a call



Press the "Cut off" left softkey.

The call is ended.



- A search for other Bluetooth devices is automatically ended after 15 seconds. A call attempt is also ended after 15 seconds. These procedures can not be interrupted earlier.

Making calls in Intercom mode

Blue Voice also has its own lists of call numbers and names. The lists inform you and allow easy selection. The call list (→ S. 33) and the redial list (→ S. 35) are created automatically. You can set up the phone book (→ S. 29) yourself.

Phone book

You may store up to 50 numbers with names in your phone book. This phone book is only available on your Blue Voice.

Searching for and calling the entry



Call up the menu using the right softkey.



Select the Phone book menu item and confirm.



Press the right softkey.



...



Enter one or more of the first letters of the name.



Search (Right softkey).

The phone book shown the first entry which begins with this (or these) letters. If there is no corresponding entry, the next entry alphabetically is shown.




Calling up an entry.







- You can also scroll to the desired entry using the arrow keys.
- The entries are stored in the telephone book as follows: Special characters, digits, letters (the difference between upper and lower case is not taken account of; accents are ignored).
- You can also call up a highlighted entry by first confirming with "OK" and then selecting the Call menu item and confirming.
- The phone book menu can also be called up from the idle display by using the left softkey.
- **Accessing the phone book quickly:** Press and **hold down** the digit key with the first letter of the name you are looking for. The first entry which matched the first letter on the key is shown.



Phone book

Creating a new entry


 Call up the menu using the right softkey.



  Select the `Phone book` menu item and confirm.

  Select the `--General information--` menu item and confirm.


  Select the `New entry` menu item and confirm.

  Enter name.

 Confirm.

  Dial the call number.


 Confirm.



 Saving a new entry in the phone book.



- The name may contain a maximum of 32 letters and the call number up to 24 digits.
- An empty phone book has only the `New entry` menu item.

Editing entries



 Call up the menu using the right softkey.

  Select the `Phone book` menu item and confirm.

  Select the entry that you want to change, e.g., `Mozart`, and confirm.


  Select the `Change` menu item and confirm.

  Select the entry that you want to change, e.g., `Mozart` and confirm.

  Modifying the name or call number.

 Confirm.

If necessary, change the name or the call number in the same way.

 Save the changes using the right softkey.

Phone book

Deleting an entry



Call up the menu using the right softkey.



OK

Select the Phone book menu item and confirm.



OK

Select the entry that you want to delete, e.g., Mozart, and confirm.



OK

Select the Delete menu item.



OK

Deleting an entry.

Delete all entries



Call up the menu using the right softkey.



OK

Select the Phone book menu item and confirm.



OK

Select the --General information-- menu item and confirm.



OK

Select the Delete all menu item and confirm.



You are asked to confirm by using the right softkey whether you really wish to delete all entries.

All entries in the phone book are deleted.

Phone book

Capacity

You can see how many memory places are still free in the phone book.



Call up the menu using the right softkey.



Select the `Phone book` menu item and confirm.



Select the `--General information--` menu item and confirm.



Select the `Capacity` menu item and confirm.

The free and occupied capacity is displayed.



The telephone book has a capacity of 50.

Call list

If you do not answer a call, the call is stored in the call list along with its date and time.



- No new entries can be made to the call list when you are making a call.
- Blue Voice must be switched on and have radio contact to the access point in order to make an entry to the call list.
- When there are entries in the call list, the corresponding symbol appears in the idle display.
- The call list shows the 32 most recent entries.

Viewing entries



Call up the menu using the right softkey.



Select the `Call list` menu item and confirm.



Select an entry, e.g., `Saleri`, and confirm.



Select the `Details` menu item and confirm.

How often this caller has called and when he/she last called is displayed.



- If there are new entries in the call list, you can call up the call list directly from the idle display by using the left softkey.
- The list entries are sorted by date and the most recent entry is shown first.

Selecting an entry

You have the call list open.



Select an entry, e.g. `Saleri`.



Calling up an entry.







After a successful recall, an entry is automatically deleted from the call list.

Call list


Transferring an entry to the phone book


Open the call list or the redial list.

  Select the entry that you want to add to the phone book, e.g., 006912346789, and confirm.

  Select the Add to phone book menu item and confirm.
The name (empty) and call number are displayed on the idle display.



 ...  Entering name.



 Confirm.

 Save the entry to the phone book by using the right softkey.

Deleting an entry

You have the redial list or the call list open.

  Select an entry, e.g., Saleri, and confirm.

  Select the Delete menu item and confirm.
The entry is deleted from the list.



- If you want to delete all entries at once: Select the "Delete all" menu item and confirm.
- After a successful recall, an entry is automatically deleted from the call list.

Redial

The last 10 call numbers and names that you have dialled are entered into the redial list.

Deleting an entry

You have the redial list or the call list open.



Select an entry, e.g., Saleri, and confirm.



Select the `Delete` menu item and confirm.

The entry is deleted from the list.



- If you want to delete all entries at once: Select the "Delete all" menu item and confirm.
- After a successful recall, an entry is automatically deleted from the call list.

Dialling a call number again.

The handset is in idle state.



press.

A list of the last ten numbers dialled is shown.



Select an entry, e.g. Saleri.



Selecting an entry



Entries from the redial list can be directly added to the phone book. (→ S. 34).

Using the headset

You can connect a headset to your Blue Voice by using a cord. All calls are then made using the headset. The loudspeaker and microphone of your Blue Voice are then switched off.

Function of the cord key of the headsets

Status	Function
There is an incoming call	The call is answered
During a call	The call is terminated
In idle state	No function
For an call on hold	Forwarding the current call



- You can connect the HSG D3 headset (Catalogue number 4.999.046.312).
- When the headset is plugged in, a symbol in the display indicates this during calls.

Acoustic settings

Call signalling

You can determine how your Blue Voice should signal an incoming call.



Call up the menu using the right softkey.



Select the `Settings` menu item and confirm.



Select the `Call signalling` menu item and confirm.



Select how a call should be signalled (call tone, vibrator). Select the menu item desired, for example `Vibrator`.



Modifying settings.

The corresponding control box is highlighted or the highlighting is removed. The new setting takes immediate effect.



- To choose a ring tone, there is a list of tones from which you can select your favourite tone (→ S. 38).
- Call tone and vibrator can be switched either on or off independently of each other.
- You can deactivate the call tone using the left softkey while your Blue Voice is ringing.
- A symbol in the idle display indicates whether call tone is deactivated.

Acoustic settings

Ringer volume

You can select from four volume levels.



Call up the menu using the right softkey.



Select the `Settings` menu item and confirm.



Select the `Volume` menu item and confirm.



Select the `Ringer volume` menu item and confirm.

The volume is displayed and the call tone sounds at the volume set.



Increase or reduce volume.

The call tone sounds at the volume set and the volume is displayed, e.g., Stage 3.



Accept the new settings.



You can also adjust the ringer volume using the `Call signalling` menu (→ S. 37).

Dial tone



Call up the menu using the right softkey.



Select the `Settings` menu item and confirm.



Select the `Call signalling` menu item and confirm.



Select the `Melody selection` menu item and confirm.



Select an entry, e.g., `Elise`, and confirm.

The melody is played and the corresponding option field  is highlighted.



Save the melody using the right softkey.

Acoustic settings

Headset volume

You can select from five volume levels.



Call up the menu using the right softkey.



Select the `Settings` menu item and confirm.



Select the `Volume` menu item and confirm.



Select the `Speaker volume` menu item and confirm.

The volume is displayed and a test tone sounds at the volume set.



Increase or reduce volume.

The test tone sounds at the volume set and the volume is displayed, e.g., Stage 4.



Accept the new settings.

Acoustic settings

During a call, you may adjust the speaker volume by using the selector (pressing up or down). The new volume is applied immediately to the current call.

Infotones

Your Blue Voice can confirm every keypress with a tone (→ S. 40).

Blue Voice can warn you when the radio link (→ S. 40) has been broken and you are thus no longer reachable.

Key beeps



Call up the menu using the right softkey.



OK

Select the `Settings` menu item and confirm.




OK

Select the `Infotones` menu item and confirm.



OK

Select and confirm how keypresses should be signalled, e.g., `Click`.

The corresponding option field  is highlighted and the setting is saved.

Linkloss



Call up the menu using the right softkey.



OK

Select the `Settings` menu item and confirm.



OK

Select the `Infotones` menu item and confirm.



OK












Scroll to the `Linkloss` control box and confirm.



The control box is highlighted and the setting is saved.

Setting the date and time

In the idle state, your Blue Voice displays the time and date. You may adjust both.

-  Call up the menu using the right softkey.
-   Select the `Settings` and confirm.
-   Select the `Time/Date` menu item and confirm.
-   Select the time or date entry that you want to change, e.g., `01.01.03`, and confirm.
-  ...  Changing the date or time (→ S. 20).
-  Confirm.
-  Save the settings using the `Store` right softkey.



Even when your Blue Voice is switched off and the accu is completely charged, the clock continues to run for about 10 days.

Entering your own call number and name

You can change the call number and name which Blue Voice displays when it is in the idle state.

Caution: These items serve only as user information on the idle state display. Your call number **does not change**. The call number and name which are sent to your call partner remain **unchanged**. Such settings can only be changed in your telephone system.



Call up the menu using the right softkey.



Select the *Settings* and confirm.



Select the *Settings* and confirm.



Select the entry that you want to change, e.g., the call number 12345678, and confirm.



...



Modifying the name and call number. (→ S. 20).



Confirm the new name or call number.



Save the settings using the right softkey.



The name can be up to 16 characters long, depending on the width of the letters used.

Selecting the display language

You have a choice of six languages for the display.



Call up the menu using the right softkey.



Select the `Settings` and confirm.




Select the `Language` menu item and confirm.



Select language, e.g. `English`.



Confirm entry.

The corresponding option field  is selected. The display language is changed immediately.

Further system settings

Changing the access point

You can log your Blue Voice onto another access point. It must already be logged off the previous access point.

On the access point:

Switch the access point, to which you wish to log Blue Voice on, to "Discovery mode".

On Blue Voice:



Call up the menu using the right softkey.



Select the *Settings* and confirm.



Select the *System* and confirm.



Select the *Change device* menu item and confirm.

You are notified that the current device data could be deleted.



Press the "Alternate" right softkey.

Blue Voice searches for all available Bluetooth devices. The search can last approximately one minute. The device available or a list of all devices available will then be displayed.



Select new device if necessary.



Confirm.

Device details are displayed.



Press the "Enrolment" right softkey.



...  Enter the PIN of your access point.



Confirm using the "Enrolment" right softkey.

*The message *Registering with ... successful* appears and Blue Voice goes into idle state.*



- If the device change did not work, Blue Voice remains logged on to the original access point.

Further system settings

Displaying Software-Version and Hardware-Info

Concerning the hardware, you can have the following displayed:

- The Bluetooth address of the Blue Voice and
- the serial number.

Concerning the software, you can have the following displayed:

- Date and release of the handset software,
- Bootloader version and
- Bluetooth firmware version.



Call up the menu using the right softkey.



Select the *Settings* menu item and confirm.



Select the *System* and confirm.



Select the *Hardware-Info* or *Software version* menu item and confirm.

Information about hardware and software is then displayed.

Consult the manual as required.






Menu overview

By using the right softkey, you can switch from idle state to the menu.

The left hand side column of the following table contains all menu items of the main menu. If there is a menu item hidden behind a submenu, the submenu will be to the right of the menu item and indicated with "-->".

Phone book (→ S. 29)	--> -- General information	--> Search
		--> New entry
		--> Capacity
		--> Delete all
	--> Search (Right softkey)	--> Name
	--> Selected entry	--> Change
		--> Delete
		--> Making calls
Call list (→ S. 33)	--> Selected entry	--> Call
		--> Details
		--> Transfer phone book
		--> Delete
		--> Delete all
Settings	--> Volume	Ringer volume (→ S. 38)
		Speaker volume (→ S. 39)
	--> Call signal. (→ S. 37)	--> Melody selection
		Call tone
		--> Ringer volume
		Vibrator
	--> Language (→ S. 43)	
	--> Infotones (→ S. 40)	
	--> Time/Date (→ S. 41)	Time
		Date
	--> User info (→ S. 42)	Call number
		Name
	--> System	--> Device change (→ S. 44)
		--> Software version (→ S. 45)
		--> Hardware-Info (→ S. 45)
		--> Intercom mode (→ S. 26)
Key lock (→ S. 21)		
Switch off (→ S. 14)		
Games (→ S. 51)		

Meaning of symbols

	Entry present in call list
	Conversation
	Call tone deactivated
	Keyboard locked
	Conversation using the headset

Consult the manual as required.

Table of characters

Key	Characters	Additional characters					
		D	F	GB	E	I	NL
1	Upper case letters Lower case letters	. : , ? ! / @					
2	Upper case letters Lower case letters	A B C 2 a b c 2	Ä ä	Å Æ å æ ç	Ç ç	À à	Ä Å Æ ä å æ ç
3	Upper case letters Lower case letters	D E F 3 d e f 3		Ë Ê Ë è é ê ë	È É è é	È É è é	Ë Ê Ë è é ê ë
4	Upper case letters Lower case letters	G H I 4 g h i 4		Ï ï	Í Î í î	Í í	Ï Ï Ï ï ï ï
5	Upper case letters Lower case letters	J K L 5 j k l 5					
6	Upper case letters Lower case letters	M N O 6 m n o 6	Ö ö	Ñ Ò Æ ñ ò œ	Ñ Ó Ò ñ ó ò	Ò ò	Ö Ó Ò ö ó ò
7	Upper case letters Lower case letters	P Q R S 7 p q r s 7		ß			
8	Upper case letters Lower case letters	T U V 8 t u v 8	Ü ü	Ú Û ú û	Ú Û ú û	Ú ú	Ü Ú Û ü ú û
9	Upper case letters Lower case letters	W X Y Z 9 w x y z 9		ÿ ÿ			
0	Upper case letters Lower case letters	<Empty space> 0 <Empty space> 0					

Table of characters

Special characters

" # \$ % & * () + / ; < = > @ [\] ^ ` ~ { | } ~ ¡ ¢ £ ¤ ¥ ¦ § ¨ © ª « ¬ ® ¯ ° ± ² ³ ´ µ ¶ · ¸ ¹ º » ¼ ½ ¾ ¿ À Á Â Ã Ä Å Æ Ç È É Ê Ë Ì Í Î Ï Ð Ñ Ò Ó Ô Õ Ö × Ø Ù Ú Û Ü Ý Þ à á â ã ä å æ ç è é ê ë ì í î ï ð ñ ò ó ô õ ö ÷ ø ù ú û ü ý ÿ

Consult the manual as required.

Using MSN

Many access points allow to connect more than one telephone. MSN numbers can be used to assign to each telephone an individual call number. For further information refer to the user manual of your access point.

Playing DMove

With your Blue Voice, you can test your powers of reasoning and prediction by playing this game.

The aim of the **DMove** game is to rearrange scrambled letters into the correct sequence. You have to achieve this in as few moves as possible.

One move: Moving of the two letters beside a position digit to be entered. Two letters are always moved together: the one left of the position digit is moved to the front of the sequence and the one right of the position digit to the end of the sequence. And that is where the fun begins...

You can read more about the game in the help for DMove.



Call up the menu using the right softkey.



Select the Game menu item and confirm.



Call up "Help".

Consult the manual as required.

FAQ - Frequently asked questions

Blue Voice cannot automatically re-establish the last connection after switching on

Approach closer to your access point. Check whether your access point is functioning correctly.

Exist negative effects of Bluetooth and WLAN interaction?

Both radio standards use the same frequencies (ISM band, 2,4 GHz), therefore the quality of speech transmission may degrade. Please avoid to use Bluetooth equipment and WLAN equipment simultaneously and nearby. A list of FAQs, which is updated constantly, can be found in

www.avaya.de/gcm/emea/de/products/offers/integral_mobile_blue.htm&View=ProdResources

Conformity

We, Avaya GmbH & Co. KG, declare that the Blue Voice L Home (Bluetooth) product complies with the basic requirements and other relevant rules in accordance with EU directive 1999/5/EU (radio and telecommunication terminal equipment, R&TTE). This device is intended for connection to radio interfaces (Bluetooth) in the EU and meets the fundamental requirements formulated in the EU directive 1999/5/EU (Radio and Telecommunication Terminal Equipment, R&TTE).

This Bluetooth product, for home and office use, operates in the non-harmonised frequency range of 2.4 GHz. Faults are possible in isolated cases as this frequency range is used by various other services in EU countries.

Due to its design, this device is not intended for direct operation on interfaces to public telecommunications networks.

If any problems happen to occur during operation, please first contact your specialist dealer or your system administrator.

The complete declaration of conformity can be obtained at the following internet address: <http://www.avaya.de/gcm/emea/de/includedcontent/conformity.htm> or under index look for the key words: 'Konformität' or 'conformity'.

notes for operation

The radiation of Blue Voice L home into the human body (specific absorption rate) was tested by an accredited laboratory. The measured values are far below the limit value of 2 W/kg, which is defined by the EU. Average values of about 0,1 W/kg have been measured, which is only about 5% of the limit. However, in case of any problems during operation, please contact your dealer first.

CE 0700 

Consult the manual as required.

Conformity

FCC ID: TYM-BLUEVOICEL

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important note:

FCC Radiation Exposure Statement:

The Blue Voice L Home handset (FCC ID: TYM-BLUEVOICEL) is in compliance with the Federal Communications Commission (FCC) Guidelines [OET 65] for uncontrolled exposure.

Body worn operation

This device was tested for body-worn operations. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that does not contain metallic components in its assembly. The use of accesories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

Specifications

Standard	Bluetooth™
Dimensions	137 x 46 x 21 mm plus antenna
Weight	approx. 100 g
Battery type:	Lithium-Ion;950 mAh
Service life of Blue Voice L Home (with full battery):	Speaking: min. 11 hours Stand-by: min. 43 hours
Charge time:	approx. 3 hours
Frequency range:	2.4 - 2.483 GHz (ISM frequency band)
Transmitting power:	up to max. 100 mW, up to max. +20 dBm
Permissible operating temperature:	Handset: -5 °C to +45 °C Charger: +5 °C to +40 °C
Storage temperature:	-25 °C to +55 °C
Transport temperature:	-25 °C to +60 °C
Protection category:	IP54, splashproof and dustproof
Accessories:	Charger, plug-in power supply, HSG D3 headset, D3 protective case incl. rotation clip, D3 case, (belt pouch), D3 case (quiver case), rotation clip for D3 protective case with adhesive holder. Ask your dealer for availability.