



3 Press the MEMORY button.

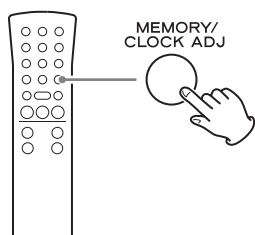

The selected track/file is added at the selected program number, replacing the file that was there.

Clearing all the program contents

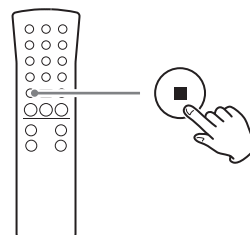

Press and hold the stop (■) button for at least 2 seconds when stopped.


The contents of the program are cleared.

When the contents of the program are cleared, "PROGRAM CLEAR" scrolls across the display.




- The program is also cleared in the following cases.
 - The unit enters standby mode
 - The PHONO/AUX, FM/AM or CD/Bluetooth button is pressed, changing the source
 - The disc tray is opened

Repeat and shuffle playback

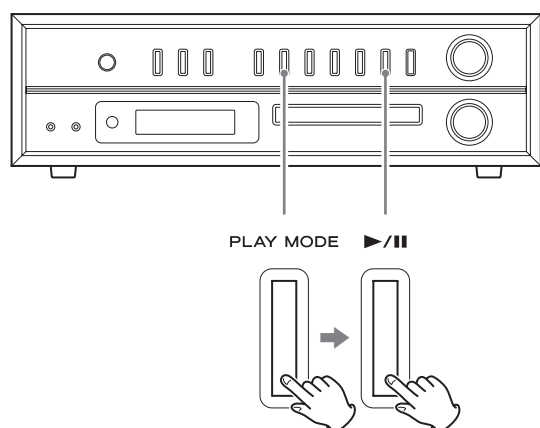

When the CD function is active, press the PLAY MODE button to cycle through the following playback modes.

When an audio CD is loaded

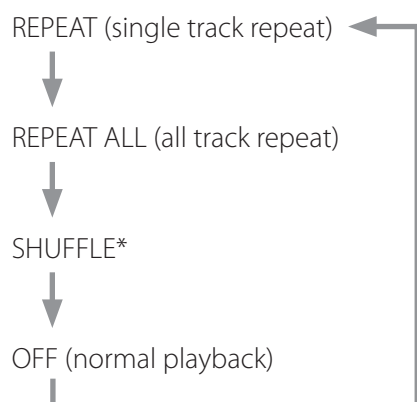

When an MP3/WMA disc is loaded



Press the play/pause (▶/||) button when the mode you want to select appears to start playback.

*If shuffle is selected, playback starts automatically.

- You can also change the playback mode by pressing the PLAY MODE button during playback.
- Any of the following operations will end repeat or shuffle playback mode.
 - The stop (■) button is pressed
 - The unit enters standby mode
 - The PHONO/AUX, FM/AM or CD/Bluetooth button is pressed, changing the source
 - The disc tray is opened

Repeat playback

REPEAT (single track/file repeat)

During playback, press the PLAY MODE button once to repeat playback of the currently playing track/file. "REPEAT" appears on the display.

- If you turn the main unit's skip (I◀◀ / ▶▶I) knob or press the remote control's skip/search (I◀◀ ◀◀ / ▶▶ ▶▶I) buttons and select another track/file, that track/file will be played repeatedly.
- When stopped, press the PLAY MODE button and then use the main unit's skip (I◀◀ / ▶▶I) knob or remote control's skip/search (I◀◀ ◀◀ / ▶▶ ▶▶I) buttons to select a track/file. Press the play/pause (▶ / ||) button to start single repeat playback.
- During programmed playback, the track/file being played will be played repeatedly.

REPEAT ALL (all track/file repeat)

Press the PLAY MODE button twice (or three times for an MP3/WMA disc).

"REPEAT ALL" appears on the display and repeat playback of all tracks/files starts.

- During programmed playback, the programmed tracks/files will be played repeatedly.

REPEAT FOLDER (MP3/WMA discs only)

Press the PLAY MODE button twice.
"REPEAT FOLDER" appears on the display, and the files in the selected folder are played back repeatedly.

Shuffle playback

All the tracks/files on the disc are played back randomly.

SHUFFLE

Press the PLAY MODE button repeatedly until "SHUFFLE" appears on the display.


- During shuffle playback, turn the main unit's skip (▶▶I) knob right or press the remote control's skip/search (▶▶ ▶▶I) button to start playback of the next random track/file.
Turn the main unit's skip (I◀◀) knob left or press the remote control's skip/search (I◀◀ ◀◀) button to return to the beginning of the current track/file.
- Shuffle playback is not possible during programmed playback.

About MP3/WMA files (1)

File playback order

A disc that contains MP3/WMA files can have the files in folders in the same manner that files are managed on an ordinary computer. One folder can also contain multiple subfolders.

Example of folder numbers and file playback order (1 to 9) during normal playback of a disc that contains MP3/WMA files

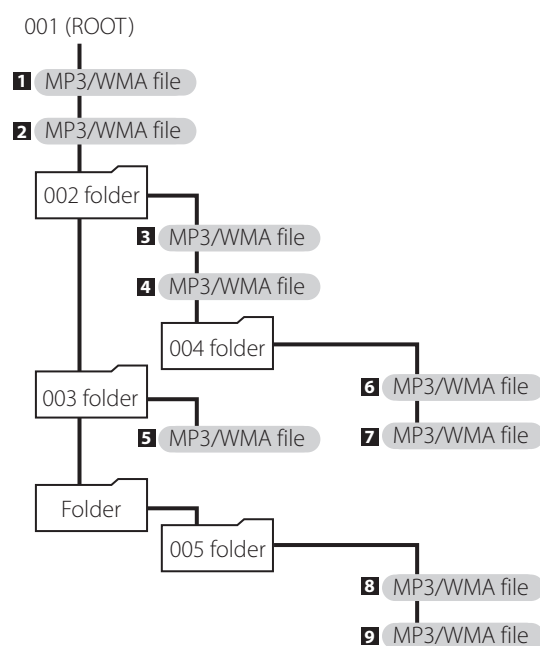


- Adding, removing or relocating files and folders could change the order shown in the above illustration.


About MP3/WMA files (2)

Selecting folders and files


To select a folder by number, use the main unit's search (◀◀/▶▶) buttons.

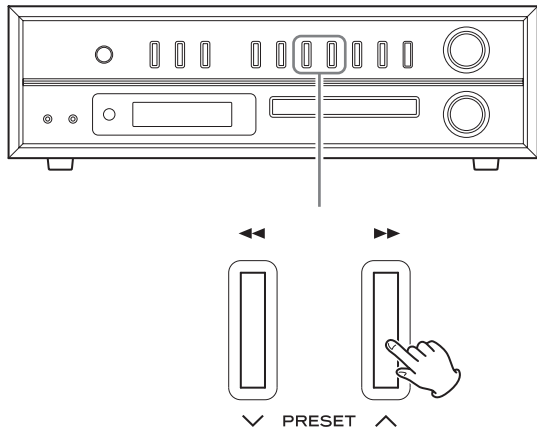

When using the remote, use the MP3 (∨/∧) buttons.

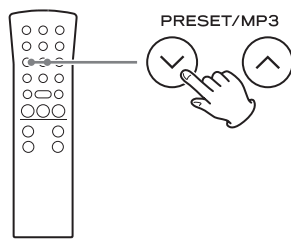


To select a file by number, use the main unit's scroll (MULTI JOG) knob.

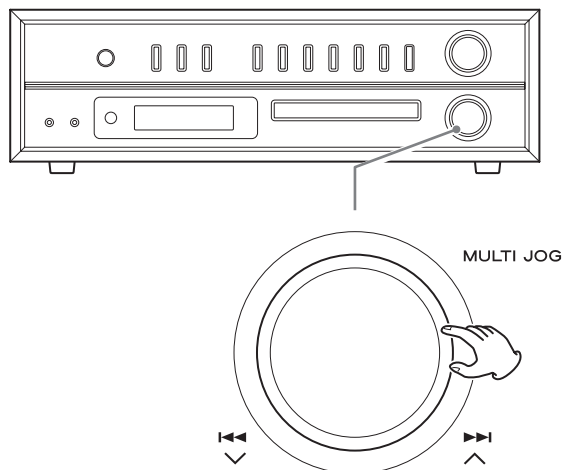

- After selecting the folder/file number, press the play/pause (▶/||) button to start playback. If the play button is not pressed within 5 seconds, "STOP" will appear on the display.


Changing the display

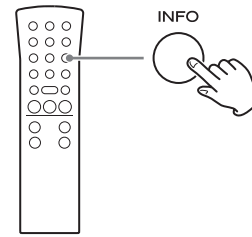

Each time you press the INFO button, the information on the display changes as follows.


- The first 32 characters of the song/artist/album names are shown.
- If the file information uses Japanese, Chinese or other double-byte characters, playback is possible but information will not be shown correctly on the display.
- After each item of information scrolls across three times, the elapsed playback time will appear again.
- When a WMA disc is loaded, "WMA" will appear on the left side of the display.

Display example

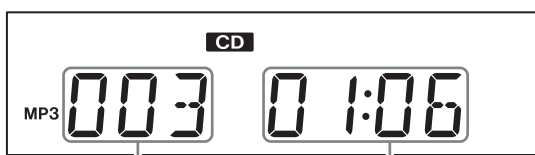

Track number

Playback elapsed time

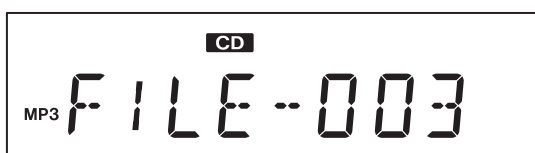


File name




Folder name



Title name

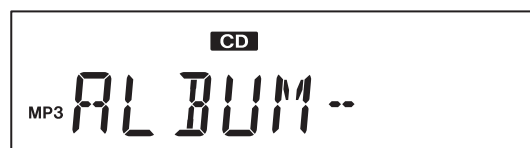

Album name

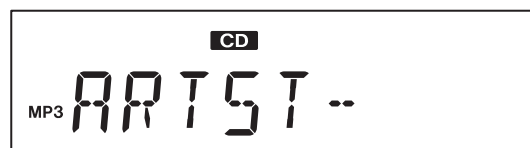



Artist name

ENGLISH


Listening to audio from a Bluetooth device

With this unit, you can enjoy listening to music played back on another Bluetooth device wirelessly.

 1 Press the CD/Bluetooth button to select "Bluetooth".

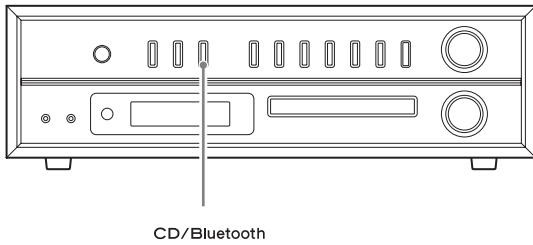


"PAIRING" appears on the display, and the unit searches for paired devices.

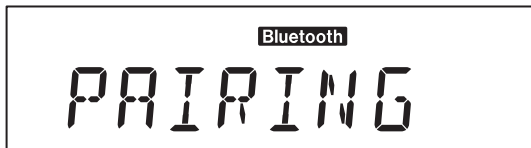

- Press the CD/Bluetooth button to select "Bluetooth" (the Bluetooth indicator lights).


When connection with a Bluetooth device succeeds, the Bluetooth icon (📶) appears and "BLUETOOTH" scrolls across the display.

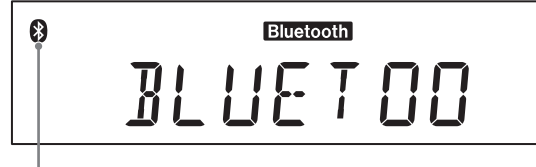

Bluetooth figure mark



After "BLUETOOTH" scrolls across 5 times, the current time is shown.

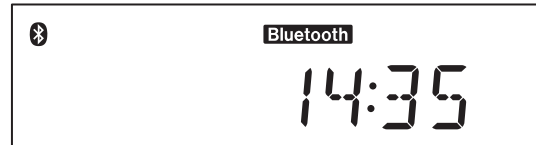

- The unit will automatically try to connect to the previously connected device.
- If it cannot connect for two minutes or longer, "NO DEVICE CONNECTED" will scroll across the display.
- Pairing is necessary before using the Bluetooth function of this unit for the first time and when you want to connect a new Bluetooth device.
- If connection fails, confirm that the other Bluetooth device is able to make a Bluetooth connection.
- If the connection is broken during use, "NO DEVICE CONNECTED" scrolls across this unit's display. Conduct the connection operations again on this unit and the other Bluetooth device.

2 Operate the Bluetooth device to start playback.

If the connected Bluetooth device supports AVRCP, you can use this unit or the remote control to play, pause or stop audio on that device.

Depending on the Bluetooth device being used, remote control operation might not be supported or actual operations might differ.

- The volume, however, cannot be adjusted remotely.

Audio/Video Remote Control Profile (AVRCP)

To control playback of a Bluetooth device, the Bluetooth device must support AVRCP.

Some Bluetooth devices, however, have different functions depending on their specifications.

- Depending on the Bluetooth device, skipping tracks might not be possible using this unit's skip (◀◀/▶▶) knob. In this case, use this unit's search (◀◀/▶▶) buttons.
- If you cannot control another Bluetooth device with this unit, operate the other Bluetooth device directly.

Unpairing a device

To unpair with a connected Bluetooth device, press the PAIRING button.

- If you later want to use a Bluetooth connection with that Bluetooth device, you must pair them again.
- This deletes all pairing information. Unpairing with just one device is not possible.

Pairing with another Bluetooth device


Pairing is necessary before using the Bluetooth function of this unit for the first time and when you want to connect a new Bluetooth device.

Follow these procedures to pair the unit with the other device.

Pairing


1 Press the CD/Bluetooth button to select "Bluetooth".

After "BLUETOOTH" scrolls across the display, "PAIRING" appears, showing that the unit is ready to be paired with another device.

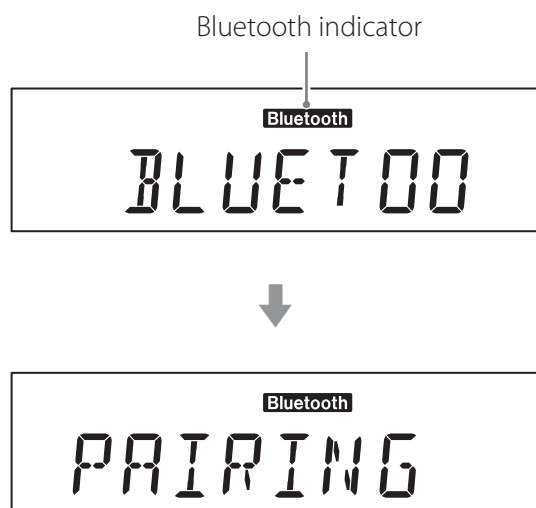

If it cannot connect for two minutes or longer, "NO DEVICE CONNECTED" will scroll across the display.

To begin pairing from this state, press the PAIRING button to put the unit into pairing mode. "PAIRING" appears on the display.

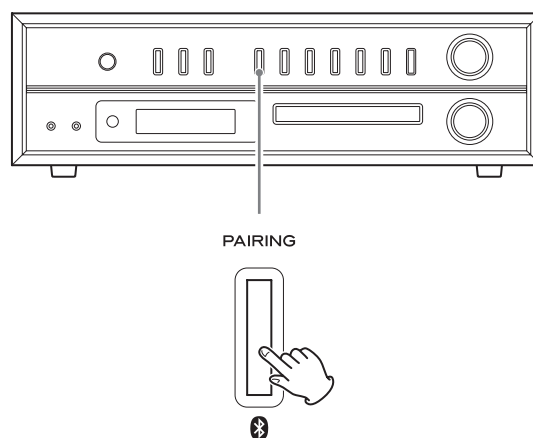

2 Enable the Bluetooth communication function on the other Bluetooth device.

3 From the Bluetooth device select "LP-P1000" (this unit).

- If a passkey is required during pairing, input "0000".

 

When connection succeeds, the unit will make an electronic beeping sound, and the Bluetooth figure mark (📶) will appear on the display.

- If it cannot connect for two minutes or longer, "NO DEVICE CONNECTED" will scroll across the display and pairing mode will end.
- This unit can retain pairing data for up to 5 devices. After 5 devices have been paired, if a new device is paired, the oldest pairing will be overwritten.
- When a Bluetooth device is connected, if you change the input with a function button or press the STANDBY/ON button to put the unit into standby mode, the next time the unit is turned on, the last connected Bluetooth device will automatically connect again assuming it is in range and has its Bluetooth function activated.
- If you disconnect from the other Bluetooth device, "NO DEVICE CONNECTED" will appear.
- If the other Bluetooth device is waiting to pair, pairing will occur automatically when this unit enters pairing mode.

Listening to records (1)


Before using the record player, use a coin or other tool to turn the transport locking screw clockwise until it stops. Remove the stylus cover (made of white plastic) (page 23).

1 Press the PHONO/AUX button to select "PHONO".

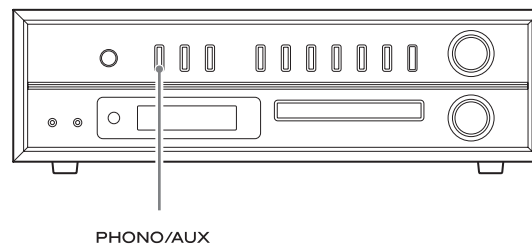

Each time the PHONO/AUX button is pressed, PHONO (record) and AUX (external component) are selected alternatively.

2 Open the turntable cover slowly.

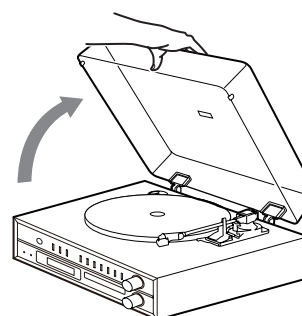


- ⚠ **Be careful not to pinch your hand, for example, when closing the turntable cover.**

Continued on the next page →

Listening to records (2)


3 Place a record on the turntable.

When playing a 45 RPM large-hole single record, use the included adapter.

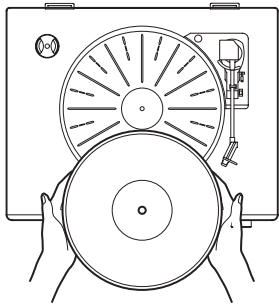


4 Set according to the rotation speed (RPM) of the record.


The rotation speed can be set to one of three options: 33 1/3, 45 or 78.

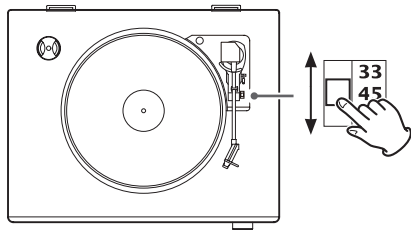

5 Move the tone arm clasp to the right to release the tone arm.

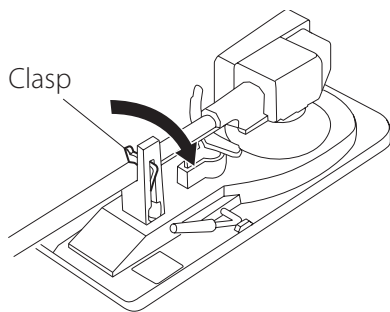


6 Lift the cue lever to raise the tone arm.

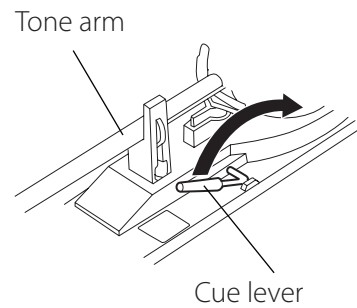


- You can also leave the cue lever down and move the raised tone arm over the record and then lower the tone arm slowly to start playback.

7 Move the tone arm to the edge of the record or the track where you want to start playback.

When you move the tone arm toward the record, the turntable will begin to turn.

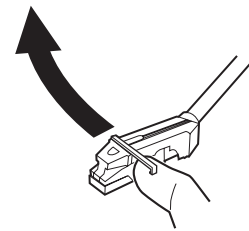

8 Slowly lower the cue lever to slowly lower the tone arm.

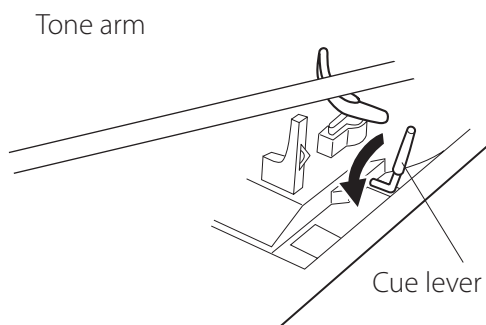

- During record playback, you can close the turntable cover to avoid dust.



⚠ Do not place anything on the turntable cover. Objects on the cover might cause noise due to vibrations or fall off, especially during playback.

During record playback, feedback could occur if the volume is too loud. If this happens, turn the VOLUME knob left to lower the volume.

When playback finishes

When the end of the record is reached, the tone arm automatically returns to the tone arm holder and turntable rotation stops (auto return function).

- To stop playback manually, slightly lift the tone arm using the cue lever or a finger and return the tone arm to the tone arm holder.

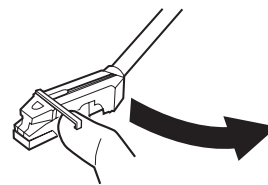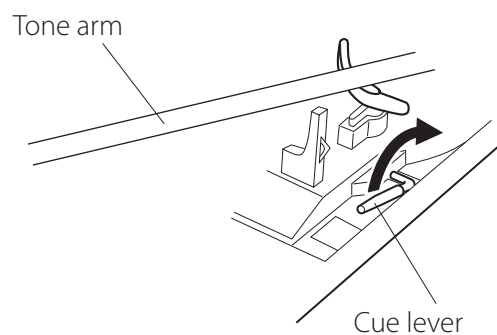


The auto return function might not work depending on the record. In that case, move the tone arm back to its original position manually.


Listening to the radio

Press the FM/AM button to select FM or AM band.


When using the main unit

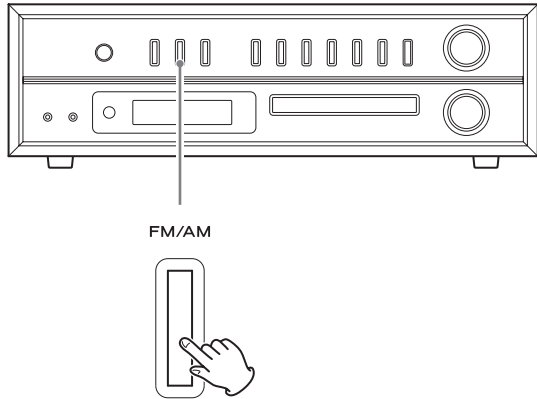


When using the remote control

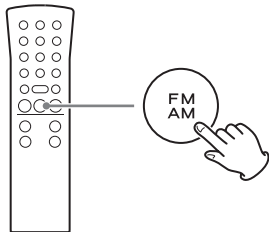

FM radio reception example

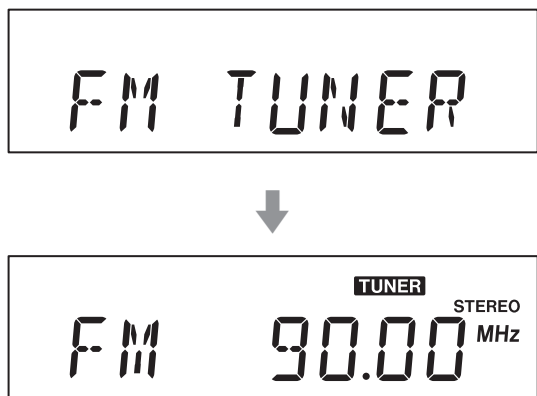


AM radio reception example

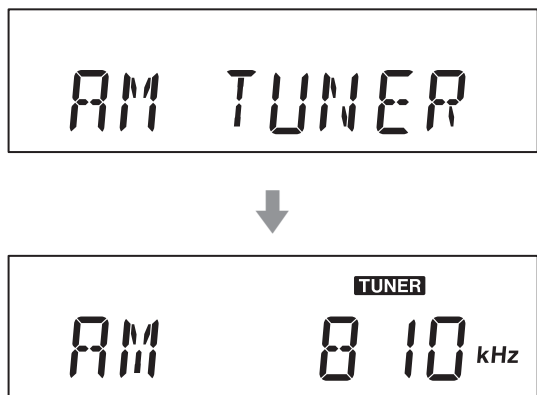


Automatic station selection

Press a ∇/\wedge button repeatedly until the frequency begins to change. After the frequency starts changing, stop pressing the button to start automatic station selection.

When using the main unit

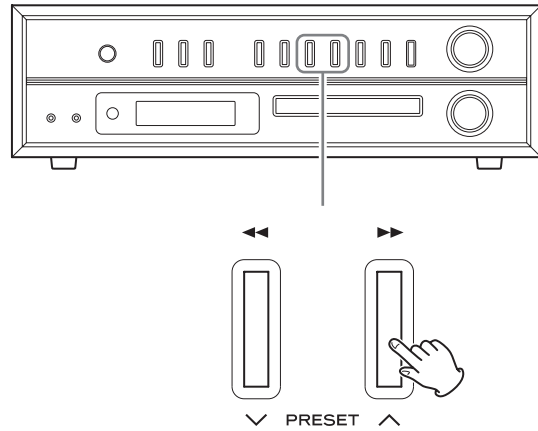

When using the remote control

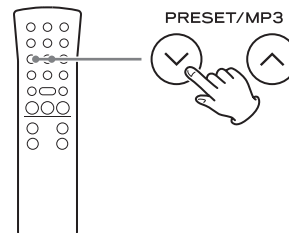

- "SEARCH" appears on the display until the station is found.

Display example



- When a radio station is received, automatic station selection ends.
- To cancel automatic station selection, press a ∇/\wedge button again.
- If the reception is poor or the antenna is disconnected, "PLEASE CHECK ANTENNA" scrolls across on the display. Check the antenna position and connection and then try the operation again.