

# EP RACING BOAT



AGE 14+

## NO.7000



Boat length : 700mm



Width : 252mm

Height : 155mm

### PARTS CONTENT



- (1) Speed boat body (Assembled) (2) Remote Control Unit (3) 7.2V Ni-Cad re-chargeable battery  
(4) Spare Propellers (5) Mains Charger (6) Aerial Tube (7) Stand

### 1). BATTERY INSTALLATION

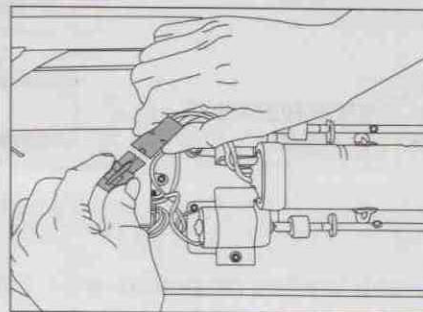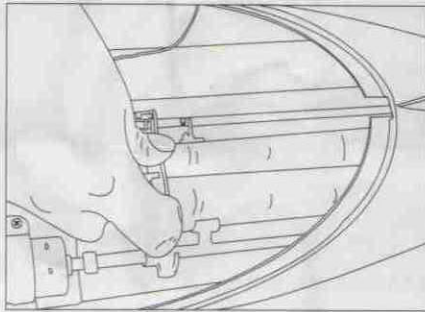


- (1). Place Ni-Cad battery securely into holder inside boat.  
(2). Connect battery plug to socket inside boat.

### 2). CABIN COVER INSTALLATION

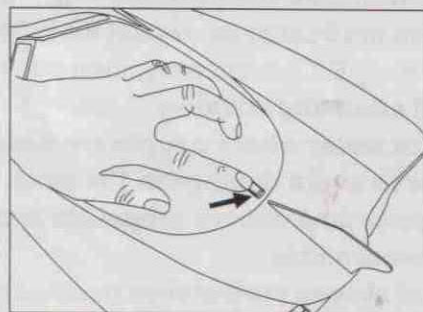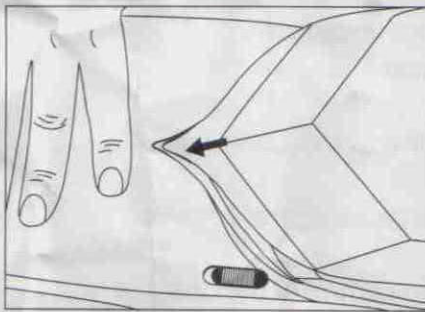

- (3). Place cabin cover on boat and push forward so that peg at front locates in deck ensure side pegs also locate. At the rear of the cabin cover push lock button to rear.

### 3. TURN ON /OFF

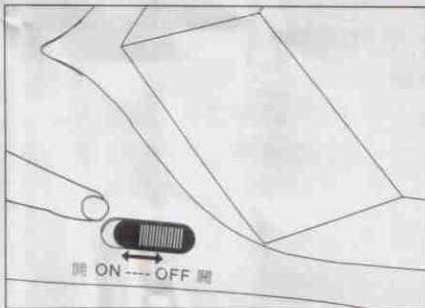


- (4). Push the switch to 'On' then turn on Radio Control Unit. Do not put your hand near the Propellor and ensure there are no objects near the propellor to avoid injury.



**Important:**  
This product should not be used at full power for more than 15 minutes without letting the motors cool down. Check propellor fixings are tight before using boat.

- (5). Use mains charger supplied to re-charge battery. Charge for 5 hours only.  
Caution: Discharge battery before charging for 5 hours only to ensure long battery life.


### 4. CHARGING

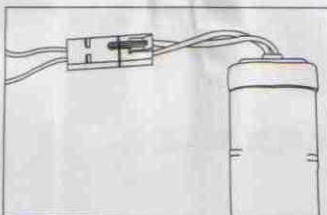

### 5). INSTALLATION OF ANTENNA

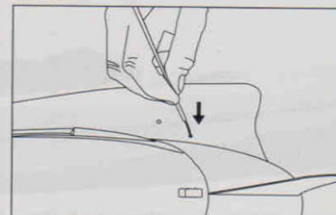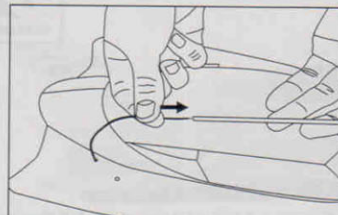

## 6). OPERATION

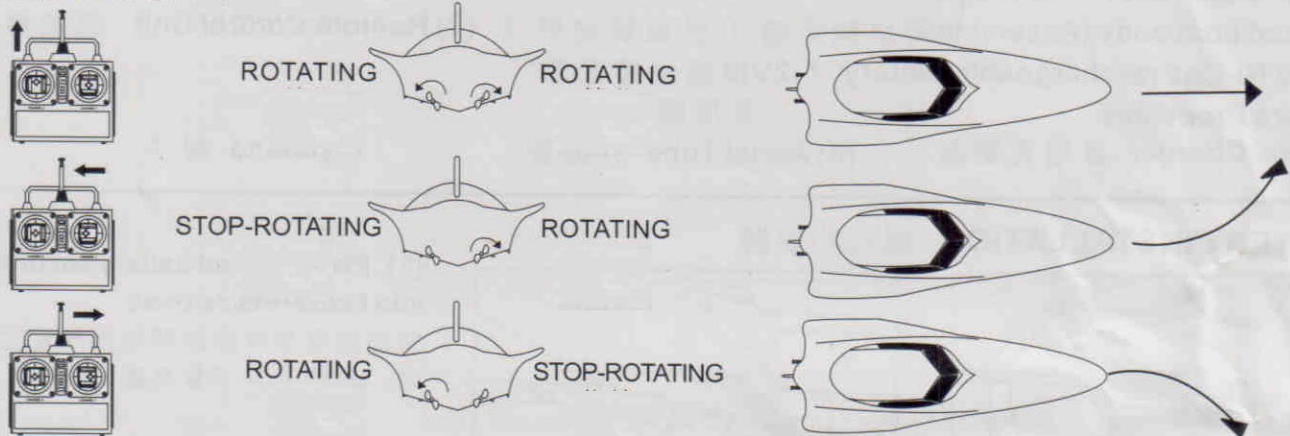

- (6). Push aerial wire into PVC tube and then push tube into hole in boat deck.
- (7). Push the left handle of the R/C unit forward, the two propellers will rotate at the same time and the boat will go forwards. Push the right handle left to turn left & right to turn right. The boat turns according to it's speed - Let go of the left handle a short time before turning, quickly push the right handle in the direction you want the boat to go, let it return to the middle position, push the left handle forward and let go, push the right handle in the direction you want the boat to go, repeat these instructions to turn.
- (8). Ensure no-one is using the same frequency R/C unit nearby, then put the boat into the water.

**Note: 1. Children under 14 years old need adult supervision.**

**2. Don't play in the swimming pool or water where people are swimming to avoid injury.**

**3. Watch out for objects in the water to avoid damage to the boat.**

- (9). If you do not intend using the boat for some time remove propellers and fixings using the wrench provided, dry parts and shaft, oil and re-assemble.
- (10). This model's R/C distance is 40M do not exceed the distance to avoid losing control of the boat.
- (11). Avoid direct sunlight and greasy dirt on the model to avoid damage. You can use detergent and water to wash the model.
- (12). This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - 1) this device may not cause harmful interference.
  - 2) this device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, or modified not expressed approved by the party responsible for compliance, may cause harmful interference to radiocommunications.