mes shown are trademarks of their

MANUAL • MANUEL • MANUAL Mo TR[]

REPERE TR (Gwave PLUS 0 والمرا

### ln-Wall Tamper Resistant Smart Outlet

Montage mural sans fil Prise intelligent

**Tomacorriente** inalàmbrico de pared inteligente



(gg)



# DO NOT RETURN THIS PRODUCT TO THE STORE NE RETOURNEZ PAS CE PRODUIT AU MAGASIN

NO DEVUELVA ESTE PRODUCTO A LA TIENDA

If you have any problems or questions, contact our tech support team at 1-800-654-8483, (option 1] Monday-Friday, 7AM-8PM CST. For the most up-to-date product support, occessories, electronic (PDF) for manuals and mere, with www.bysacc.com/support.

o user serviceable parts in viru unix. ous avez des problèmes ou des questions, communiquez avec notre inn de mutien technique qui 1-800-654-8483, aption 1, du lundi au ve

de 7 h à 20 h HNCL Pour le soubren rédaif aux produits le plus à pour les accessoires, les manuels et format électronque POPI et plus encore, voitez le site www.buysecc.com/supp - Aucune des prèces de ce dispositif ne peut être réporde por l'utilisateur. Si teles problèmes couls, comuniques con unestro equale ference of nuine 1-800-556-883, godion 1 de lunes a viernes, de 7 a.m. a 8 p.m., hora estandar cartor (CST).

centra (LST).

Para recibir el saporte técnico más actualizada sabre productas, acces
manuales en formato digital (PDF), entre atras, visite www.byjasco.com

Esta unidad no contiene piezas que el usuario pueda reparar.

### WARNING

RISK OF FIRE RISK OF ELECTRICAL SHOCK RISK OF FLIRMS

# AVERTISSEMENT

QUE D'INCENDIE QUE DE CHOC ÉLECTRIQUE DUE DE BRÛLURES

# ADVERTENCIA

RESCO DE QUER MACINA.

COMPINO DE RANDO DE RECOR AL MARIS DESTRUITO.

TRACARRO DE CREADA AL MARIS DESTRUITO.

TRACARRO DE CREADA AL MARIS DE RECORDITACIO.

TRACARRO DE CREADA AL MARIS DE CREADA AL M


NE PAS UTILISER AVEC UN ÉQUIPEMENT
MÉDICAL OU DE SURVIE
LES DEPOSITES COMPATIÈLES AVEC LA TEO-INDICOSI
ZAMANE NE DEVINNENT LAMANS ÉTRE UTILISÉS FOUR
ALMENTRES OU COMPANIENCE LA MEE EN MANDE DE
L'ARRÊT DE L'ÉQUIPEMENT MÉDICAL OU DE SURVIE.

SE PROHÍBE SU EMPLEO EN EQUIPO MÉDICO O EQUIPO PARA EL MANTENIMIENTO DE LAS FUNCIONES VITALES LOS DENOMINOS E DESEN USAS INANO, SU EN OBIGANO EN ENTRA SE DESEN USAS INANO, SU EN OBIGANO EN ENTRA DE COMPONIO EN ANTIFORMENTO DE RUMOJORES VITALES, NIMPA CONTROLARE, ESSAN DE PROFESSIONO DANAS CONTROLARES.


The device plugged into the Z-Wave controlled smart outlet on this module must not exceed 960 watts (Incandescent); 15 Amps, 1800W (Resistive) or 17 LP (Motor). The maximum rating for both outlets combined is 1800W (15A) Resistive.

- One Z-Wave remote controlled outlet
  One always-ON autlet
  Remote ON/OFF control via the Z-Wave controller/network

- One drwys-Liv Doue.
   Remarch ROMF control with the Z-Waive controller/network.
   Manual CRVOFF control with the manual/program button.
   Blue ELD indicates outlet location in a dork norm.
   This Z-Wawe device has obtained features that allow you to customize your properience. These features on any lobe adjusted by a Z-Wawe enabled controller that support the Z-Wave Configuration command class. See the -leadable Configuration Parameters at the end of this guide for details.

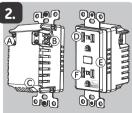

- A. Line (Hot) B. Neutral
- E. Manual/Program buttor
- WARNING SHOCK HAZARD

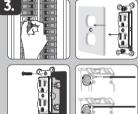

### Wiring

- IMPORTANT! Verify power is OFF to switch box before continuing

- Corefully remove the autlet from the autlet box.
   Disconnect the wires from the existing outlet. Be careful to label wires according to the previous terminal connection.
- The three screw terminals on the Z-Wave smort outlet; these are marked
  A. LINE [Hot]
  B. NEUTRAL
  C. GROUND
- Match these screw terminals to the wires connected to the existing outlet.

Adding your device to the Z-Wave Network

Follow the instructions for your Z-Wave certified controller to add a device to the Z-Wave network

controller to add a device to the Z-Wave network.

2. Once the controller is ready to add your device, press and release the Program Button to add it in the network.

Rease reference the controller/placency mount for instructions.

Now you have complete control to turn your facure OVVOTcoording to equippe, scenes, schedules and interactive automations programmed by your controller.

If your Z-Wave certified controller features Remote Access, you can now control your feature from your mobile devices.



### Observe Important Wiring Information

Observe important Wiring Information
Always follow the recommended were step lengths and wiring
combination when mediany wiring connections You may wish to
combination when mediany wiring connections You may wish to
install the described in with questions or of the professional installation
IMPORTANT The screw terminods in this receptacle are
qualified electrical if you have aluminum wiring.
Wire Gauge Requirements

- Use 14 AWG or larger wires suitable for at least 80° C for supplying UNE (Hot), NEUTRAL, GROUND and connection 1. Insert Z-Wave controlled outlet into the box being careful not to pinch or crush wires.
- Secure the controlled outlet to the box using the supplied screws.
   Mount the wallplate.



Reapply power to the circuit at fuse box or circuit breaker and test the system.

### Basic Operation

The connected device can be turned ON/OFF in two ways: 1. Manually from front program button. 2. Remotely with a Z-Wave Controller

# Manual LED Invert Method

- Device needs to be paired with a Z-Wave certified controller
   Quickly press the ON/OFF button 10 times;
   the light will invert if done correctly.







## To remove and reset the device:

- Follow the instructions for your Z-Wave certified controller to remove a device from the Z-Wave network.
- Once the controller is ready to remove your device, press and release the manual/program button to remove it from the network.

### To return to factory defaults:

Press the button 3 times, then press and hold the button for at least 3 seconds. The LED will bink 5 times to confirm.

NOTE This should any be used in the event your network's primary controller is missing or atherwise inoperable.

# Available Configuration Parameters

# LED Light

Possible values = 0, 1 (default) or 2

Passible Values = 0,1 (bellular of 2 Value descriptions "0" - LED ON when Load is OFF, LED OFF when load is ON "1" - LED ON when Load is ON, LED OFF when load is OFF "2" - LED olways OFF



in Command Class (3 Groups) Jeline, Binary Switch Report