

Network USB Storage Link

NUS1000

**Users Manual
Ver 2.2**



Federal Communications Commission(FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the use's authority to operate the equipment

FCC-Class B

This equipment has been tested and found to comply with the limits for a Class B digital device,

Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a communications.

However , these is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Table of Contents

1. Introduction	2
2. Hardware & Installation	3
3. Web Configuration	6
4. Detailed Functions	9
4.1. Status	9
4.2. Setup	10
4.3. File Server.....	13
4.4. iTunes Server.....	15
4.5. Media Server	15
4.6. BitTorrent Client	16
4.7. Tools	17
4.8. Shutdown	19
5. Administration with iOS devices	20
6. Printer Installation	23
7. CiragoLink - (Remote Access)	30
8. Usage Tips	37
9. Specifications	39
10. Contact Us	40

Forward

Copyright and Trademark Notice

Cirago and other names of Cirago products are registered trademarks of Cirago International Limited. Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation. Apple, iTunes and Apple OS X are registered trademarks of Apple Computers, Inc. All other trademarks and brand names are the property of their respective owners. Specifications are subject to change without notice.

Copyright © 2009 Cirago International Limited. All rights reserved.

About This Manual

All information in this manual has been carefully verified to ensure its correctness. In case of an error, please provide us with your feedback. Cirago International Limited reserves the right to modify the contents of this manual without notice.

Limited Warranty

Cirago International Limited guarantees all components of Cirago NUS1000 are thoroughly tested before they leave the factory and should function normally under general usage. In case of any system malfunctions, Cirago International Limited and its local representatives and dealers are responsible for repair without cost to the customer if the product fails within the warranty period and under normal usage. Cirago International Limited is not responsible for any damage or loss of data deemed to be caused by its products. It is highly recommended that users conduct necessary back-up practices.

1. Introduction

Thank you for purchasing the Cirago Network USB Storage Link NUS1000. This device enables sharing files with users in your network easily. Simply insert your USB storage into the NUS1000, connect the device to your network, configure some basic settings, and you are ready to share your files on your NUS1000. With the introduction of the CiragoLink, the files sharing is no longer restrict to local access but extend your access remotely via Internet

The NUS1000 has a simple and clear web interface enabling easy setup and configuration.

Main Features

- Convert any USB storage device into a Network Attached Storage device
- Share music libraries using the built-in iTunes server
- Stream photos, music and movies to compatible entertainment devices using UPnP protocol
- Download directly to connected USB devices using the built-in BitTorrent client
- Access printers over a network connection using the built-in Print Server
- Setup and administration is easy though the web interface
- Supports multiple user accounts and permission levels
- Small size and low power consumption

Package Contents

- NUS1000 Storage Link
- Users Manual
- Power Adaptor
- Ethernet Cable


Quick Notes

Web browser: <http://NUS1000:1010>

Default Login Information: Username: admin Password: 000000

2. Hardware & Installation

The Front Panel

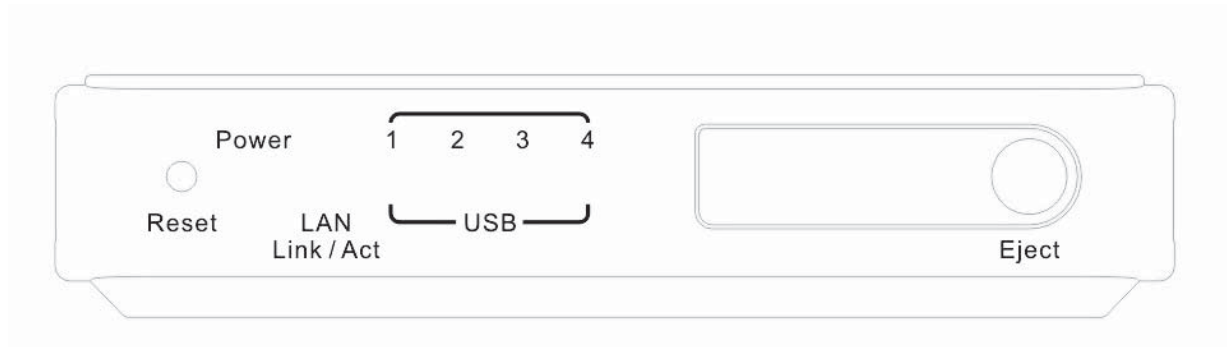

Display

Power : Indicates the power is on

LAN : ON - network connected to switch / hub
Blink - indicates live network activity.


USB 1-4 : On when a USB device plugged into the corresponding ports. They also act as status indicators:
Power Up > USB 3 ON (12 sec) > USB 4 ON (10 sec) > OFF (15 sec) > USB 1-4 Blink twice

Buttons

Reset: Protected button to reset the system to default parameters in order to recover the unit, activate only in the power up diagnostic stage for the 10 seconds the USB 4 LED is on. If the reset is accepted, all USB LEDs will flash for a second, then you can release the button and the system will boot up with factory default settings.

Eject: In order to safely unplug the USB storage, hold down the Eject button for 1 second and wait until all USB LEDs are off and then unplug the USB device. Alternatively, you can eject a connected USB storage through the web interface. In the TOOLS menu, select "Unplug" and then select the device you wish to unplug.
After the USB device is removed, you can push this button again (1 sec) to resume the operation of the remaining connected USB devices.

The Back Panel

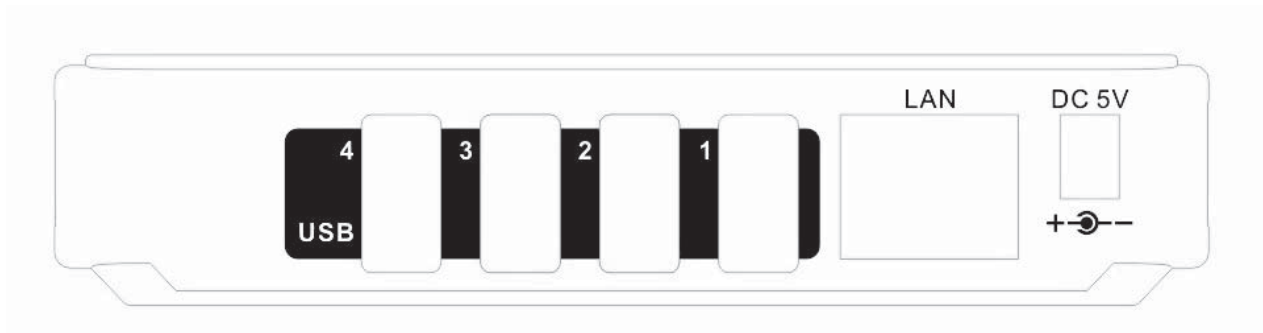

DC Power Jack : Socket for DC Power Plug 5V, 2A


LAN Port : Standard RJ45 10/100 Ethernet socket

USB 1-4 Socket: USB type A connectors


Installation

Please follow the following steps to install your NUS1000.


- Step 1. Connect the Ethernet cable to the network switch and USB NAS

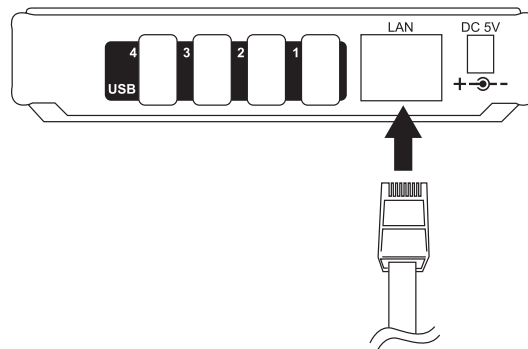


- Step 2. Connect the USB device to the NUS1000

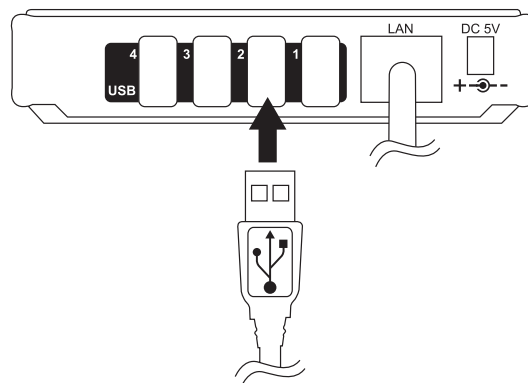

- Step 3. Connect the power adaptor

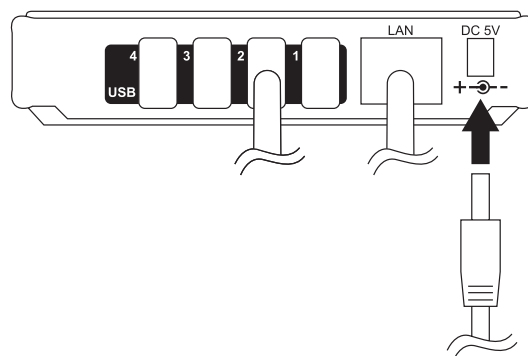


- Step 4. The LED lights on the front panel will light up

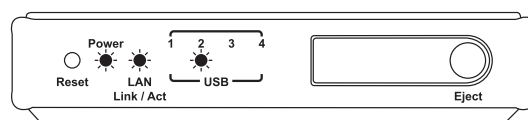

3. Web Configuration

The NUS1000 has a built-in web interface for easy setup and configuration.

 1. In PC, use web browser such as IE, Firefox, Chrome or Safari, type in <http://NUS1000:1010>, where “NUS1000” is the factory default name. The name given to the NUS1000 can be changed from the setup menu. If the name is changed, please use the new name to access it.

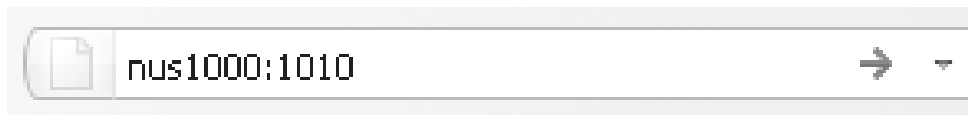

2. If your computer's UPnP is enabled you can search your Network Neighborhood for the NUS1000.



Then click the UPnP device icon to enter the configuration page of the device.

3. Using Apple Mac computer, with Safari, you just type <http://nus1000.local:1010> to enter the admin page.
4. If you still cannot connect, reset the unit to factory default settings and setup your PC on the same IP subnet, ie. 192.168.1.xxx, the default IP address for the NUS1000 is 192.168.1.66. Use a browser to go to <http://192.168.1.66:1010>.
5. A window will pop up asking for login information. Please enter the default Username as “admin” and Password as “000000”



6. After entering the login information, the web interface for the NUS1000 will be displayed.



7. Configuring the settings of the NUS1000 can be done from the Tools menu. Select Storage Tools to view and format any connected USB devices.

8. A partition information table will be displayed

Storage Tools

This page shows the status of all valid partitions of attached storage. Any unformatted space of attached storage will not be displayed here.

Partition Information

Port	Partition	Access	Size	Free	Format	Format To	Operation
1	1	rw	54.0M	53.1M	FAT32	fat32 ▼	<button>Format</button>
3	1	rw	13.9G	12.8G	EXT2	fat32 ▼	<button>Format</button>
4							
	1	rw	30.8G	26.3G	FAT32	fat32 ▼	<button>Format</button>
	2	ro	45.5G	45.4G	NTFS	fat32 ▼	<button>Format</button>

Refresh

9. Format the partition the drives to FAT32 or EXT2 for read-write access or NTFS for read only access. If a partition has been formatted in a format other than FAT32, EXT2 or NTFS, it will be shown as “UNDEF”.
10. Rebooting the system after you have formatted a new partition is recommended.

11. Alternatively, you can access the Web Admin through your iPhone or iPad. Just start the Safari browser and type `http://nus1000.local:1010`, then entering the “admin” user and password.



12. To get remote disk access, you need to register your account on www.ciragolink.com with a valid email. Then activate the service through the Web Admin page:





Now You can use your WebDAV application to access the box either locally or remotely with proper URL path configuration and the NUS become your iPhone / iPad extended storage.

4. Detailed Functions

The Admin page has the left menu showing the selection. Clicking that row or the triangle in front of the menu item, the list will expand to have display the sub-menu.

4.1. Status

Select STATUS from menu on the left.

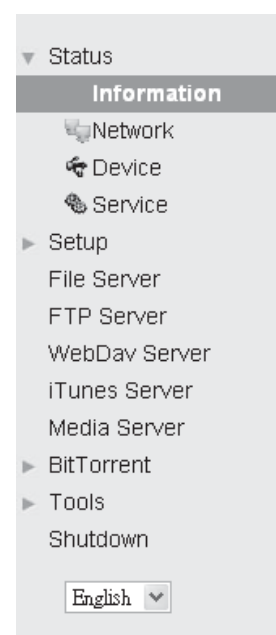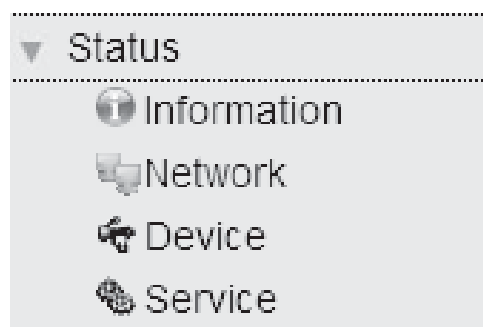

Information

This page displays the general information of the hardware setup and the specific server information as shown below.

Information

System Time	2011/1/25 02:09:30
MAC Address	00:13:3B:0C:2A:9E
Model	NUS1000
Device Id	1001979873
Firmware Version	2.2.0
Server Name	NUS1000
Work Group	WORKGROUP
Description	Network USB Storage Link
Uptime	11 min

Network

This page displays network information, including gateway and DNS information.

Network Information

IP Address	192.168.0.145
Subnet Mask	255.255.255.0
Gateway	192.168.0.1
Primary DNS	208.67.220.220
Secondary DNS	156.154.70.1

Device

This page displays the USB devices that are connected to the NUS1000.

Device Connected

USB 1	disk	250.0 GB
USB 2		
USB 3		
USB 4	lp	SAMSUNG SCX-4x16 Series

Service


This page shows the services that are currently enabled or disabled.

Services Status

Print Server	Disabled
File Server	Running
iTunes Server	Disabled
Multimedia Server	Disabled
BitTorrent Download	Disabled
CiragoLink Service	Connected

4.2. Setup

Select SETUP from the menu on the left to configure the settings of the NUS1000 and shows the submenu.

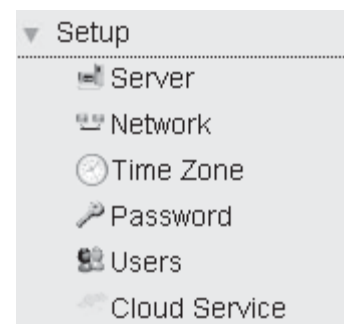

Server

This page shows the name of the NUS1000 so that you can access the unit in the Windows network by its name instead of using the IP address that may be changed if you are using DHCP (IP address distribution). The default name is “NUS1000”. If there are multiple units attached to the same network, we recommend that you assign a different name to each unit so as to avoid confusion.

Server Settings

Server Name	<input type="text" value="NUS1000"/>
Workgroup	<input type="text" value="WORKGROUP"/>
Server Description	<input type="text" value="Network USB Storage Link"/>
<input type="button" value="Apply"/> <input type="button" value="Cancel"/>	

In order to be recognized by its name in the Windows network, the NUS1000 and PC must have the same workgroup name.

Network

This page allows users to configure the network connection. The default is DHCP that requires a DHCP server to assign an IP to the device. Usually, your router is also the DHCP server that is responsible to allocate the IP address to attached network devices such as your PC or devices like the NUS1000.

There is an option to define a fixed IP address. This is recommended for experienced users. Two default DNS servers are provided but should be changed to the DNS servers that your ISP recommends.

Network Settings

- IP Address Settings
 - ☒ Obtain an IP address automatically
 - ☐ Use the following IP address

IP Address	192.168.10.101
Subnet Mask	255.255.255.0
Gateway Address	192.168.10.10

- DNS Address Settings
 - ☐ Use the following DNS address

First DNS Address	208.67.220.220
Second DNS Address	156.154.70.1

Time Zone

The NUS1000 uses the network time server to synchronize its clock. Select time zone and daylight savings options and hit Apply to save settings.

Time Zone

Time Zone	(GMT-08:00)Pacific Time (US & Canada); Tijuana
Daylight Savings	<input type="checkbox"/> Enable

The setting will take effect after the system restart.

NTP Server

Default	pool.ntp.org
User Defined	<input type="text"/> Reference

NOTE : You can choose from the two NTP servers provided or you can enter your specific NTP server name

NOTE : Reboot the device to permanently activate any changes made.

Password

The default administrator password is “000000”. Changing this to an alphanumeric password is recommended. This is most important to change that password and create the users list especially when you enable your NUS to connect to the CiragoLink Service

Password Settings

User Name	admin
New Password	<input type="text"/>
Retype New Password	<input type="text"/>

Users

Add new users using this feature. Enter in a User Name and Password and click “Save” to continue. On the user list, click “edit” icon to modify the password or click “delete” icon to remove the user account from the list. Please note that the user list is applicable to the File Server and WebDAV server.

User List

User Name	Edit	Delete
abc		

Password Settings

User Name	admin
New Password	<input type="text"/>
Retype New Password	<input type="text"/>

CiragoLink Service

Owner of the NUS box needs to register to CiragoLink service to enable the Internet Remote Disk Access, After registration with your email account with www.ciragolink.com, Then on the CiragoLink admin page, you just enter the registered user and password information and activate the unit.

After activation is confirmed, the admin page will show additional Link Service display box underneath. User need to tick Enable and apply to start the cloud connection. If you want to unplug your unit, just check clear that box and apply. It is no need to physically unplug your NUS Ethernet cable.

For more detail operation on CiragoLink service, please turn to the corresponding chapter.

CiragoLink Service

CiragoLink Service	<input checked="" type="checkbox"/> Enable
Status	Connected
User	abc@mail.com
Remote Access	nus1001987654.ciragolink.org:9880

CiragoLink Activation

[Don't have an account?](#)

User	<input type="text"/>
Password	<input type="text"/>

4.3. File Server

The NUS1000 is able to share connected USB storage devices as a File server for other network users. The file server can be access by SMB (Samba) or WebDAV protocol.

SMB is commonly used in PC environment, while WebDAV is used in Apple environment including the Mac, iPhone or iPad

The File Server supports multiple users and you are able to assign different home paths for each user. The “admin” is the default user which has the access rights to the root path “/”, i.e. to all disk partitions. Starting from version 2.2, the management of Samba and WebDAV are unified.

File Server Setting

Users	Share Folder	Edit	Delete
admin	/		
abc	/usb1-disk1/Content/		

Click “Add” to add existing user from user list and edit the corresponding path to have the access of the File Server

Share Folder Setting

User:

Share Folder:


Each user is allowed to have the right to access a single path, which can be the “/” root path, the partitions “\usb1-disk1” or a specific folder.



Samba Access

You can access the File Server from your computer in 2 ways:

- i. Enter Network Neighborhood and double click the NUS1000 icon
- ii. Click “Start” > “Run” > Open “\\nus1000” or “\\<ip address>”

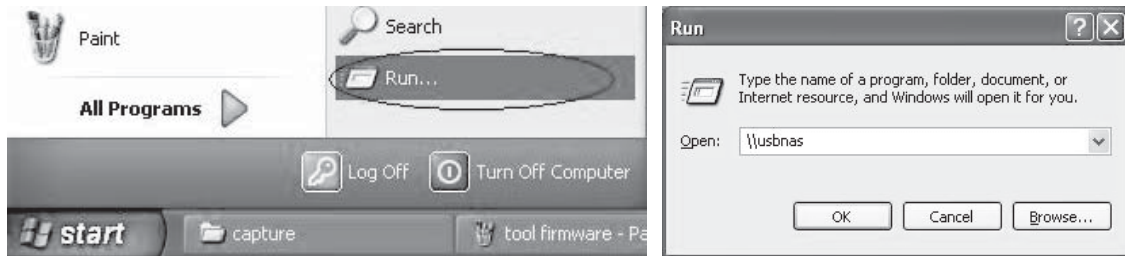

WebDAV Access

WebDAV is based on the Http protocol. It requires special client to support the access but cannot be used by a general browser such as IE, Firefox or Safari to achieve this.

For example, Mac has the built-in client supporting WebDAV access. This is similar to access a website by typing the URL address such as `http://<ip address>`

In an Apple environment, you can make use of bonjour to name the server on the LAN. You simply type

`http://nus1000.local:9880`

Which will connect to the NUS1000 WebDAV file server, you then enter the username and password into the prompt. The “.local” is the bonjour convention for the name of NUS1000 and the “:9880” is the tcp port number used for WebDAV.

Chapter 7 has more detail information on the setup and usage of the WebDAV client on local LAN and remote access to the NUS storage.

4.4. iTunes Server

This page allows you to setup a specific path that stores your music library that can be viewed and played by your iTunes program on your computer. By default, a directory path including all USB drives is selected. However it is recommended you setup the specific path to where you are storing your music files as this will improve the scanning time.


iTunes Server Manager



The iTunes Server Manager dialog box contains a section for 'iTunes Server' with a checked 'Enable' checkbox. Below this is a 'Music Folder' field with a backslash character and an 'Open' button. At the bottom are 'Rescan' and 'Cancel' buttons.

If the iTunes Server is running, the button on the left will show Rescan, otherwise it will show APPLY.

Open iTunes on your PC or Mac and the NUS1000 will be displayed under the SHARED tab. The music from storage devices attached to the NUS1000 will be displayed.

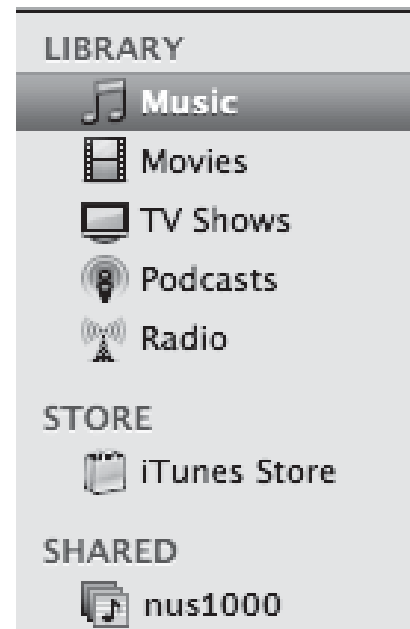

4.5. Media Server

This page allows you to setup the path for the content directories for the Media Server. The Media Server services will scan the disk for the specific file types and associate to the category of Video, Music and Photo. Based on UPnP media streaming protocol, the Media Server can be found by other Digital Media Players on your local network.

Media Server Folders




The Media Server Folders dialog box has a 'Media Server' section with an unchecked 'Enable' checkbox. Below are two radio buttons: 'All Partitions Selected' (selected) and 'Selected Folders'. Under 'Selected Folders' are three 'Media Directory' fields, each with an 'Open' button. At the bottom are 'Apply' and 'Cancel' buttons.

By default, a directory path including all USB drives is selected. However, we recommend using the 3 directory paths to group the content in order to improve the performance of the NUS1000 while scanning media files.

4.6. BitTorrent Client

This page is used to configure the unit to use BitTorrent technology to download files from the Internet. After a file is downloaded, it can be transferred to a computer either by network file sharing or connecting the USB storage device to your computer. The seed will undergo different stage until the data is downloaded.

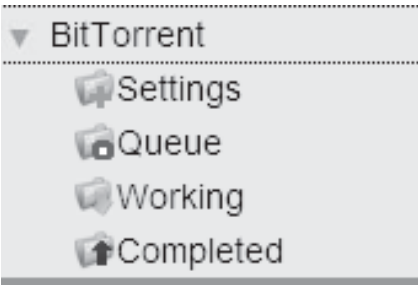

Settings

Select Enable for BT Download and then select the path for the download file. Click “Apply” to save your settings.

BitTorrent Settings

BitTorrent Downloads	<input checked="" type="checkbox"/> Enable
Download Path	<input type="text" value="\usb1-disk1\bt0907\"/> <input type="button" value="Open"/>

Queue

On the BitTorrent -> Queue page, BT seeds can be added. Browse to where the torrent files are located on your local computer, select it, and then click on “Add”. The torrent seed will be queued up in the list. If there is a download slot available, the queued torrent will automatically download and be displayed on the “Working” list.

Add Torrent

Torrent List

Torrents	Top	Delete
ubuntu-10.04-server-i386.iso		

In the torrents queue list, you can click the “Top” or “Delete” icons to move up the torrent so as to prioritize the downloading sequence or to remove the torrents respectively.

Working

The list of current downloads are displayed in this page. The device allows up to a maximum of 4 active downloads at a time. For each torrent, you can see the information and status of the torrents. At the right side of each torrent row, there are round buttons for “pause/resume” and “delete”. Click to highlight the desired torrent and then click on the button to carry out the function.

Torrent Status

The screenshot shows a window titled "Torrent Status" with three entries:

- Fedora-13-x86_64-DVD**: 326.5 MB of 3.38 GB (9.43%) - 3 hr 32 min remaining. Downloading from 10 of 10 peers - DL: 238.9 KB/s UL: 0 bytes/s.
- ubuntu-10.04-desktop-i386.iso**: 4.53 MB of 699.4 MB (0.64%) - 22 hr 56 min remaining. Tracker returned an error: Requested download is not authorized for use with this tracker.
- ubuntu-9.10-server-i386.iso**: 18.1 MB of 640.6 MB (2.83%) - 15 hr 29 min remaining. Downloading from 4 of 5 peers - DL: 13.5 KB/s UL: 0 bytes/s.

After the content has been downloaded, the device will automatically move the content to the subdirectory "Finished" under the Download Directory and the torrent will automatically be removed. The finished downloaded list can be seen under the "Completed" page under BitTorrent submenu. You can manually clear the list or when you select a new Download directory, the list will reset.

Completed

The completed download torrents will list here as shown.

Completed Downloads

The screenshot shows a window titled "Completed Downloads" with a list of three items:

1	ubuntu-9.10-desktop-i386.iso
2	Fedora-13-x86_64-DVD
3	Fedora-12-i686-Live-KDE

Below the list is a "Clear" button.

4.7. Tools

All the utilities are grouped under the TOOLS menu.

The screenshot shows a menu titled "Tools" with four options, each with an icon:

- Unplug (cable icon)
- Storage Tools (hard drive icon)
- Configuration (wrench icon)
- Firmware (chip icon)

Unplug

This allows users to safely unplug a connected USB device. Unlike the physical Unplug / Resume button located on the front panel, the Unplug feature in the web interface can select which USB device to unplug.

Device Connected

USB 1	disk	65 MB	Unplug
USB 2	lp	Officejet 6300 series	
USB 3	disk	15.1 GB	Unplug
USB 4	disk	81.9 GB	Unplug

We recommend using the web interface to unplug any USB devices. This will prevent loss of any data or processes that are in progress on storage devices that are still connected to the NUS1000.

Storage Tools

This tool allows you to view the partitions and format the storage devices in each USB port. The device supports read/write format for FAT32 or EXT2. The device can read NTFS but it cannot write or format a device to NTFS. To format an attached hard disk, select the desired format from the pull down menu and click on "Format".

Please note that formatting a connected hard drive will erase all the data that is on it. Please make sure to back up any important files before formatting your hard drive.

Storage Tools

This page shows the status of all valid partitions of attached storage. Any unformatted space of attached storage will not be displayed here.

Partition Information

Port	Partition	Access	Size	Free	Format	Format To	Operation
1	1	rw	54.0M	53.1M	FAT32	fat32 ▾	Format
3	1	rw	13.9G	12.8G	EXT2	fat32 ▾	Format
4							
	1	rw	30.8G	26.3G	FAT32	fat32 ▾	Format
	2	ro	45.5G	45.4G	NTFS	fat32 ▾	Format

Refresh

NOTE: The device can format an entire uninitialized hard disk. It cannot create multiple partitions. It can however format multiple partitions if they have already been allocated before connecting them to the NUS1000. Using EXT2 formatted disks on a Windows PC may need the installation of additional software on the PC, such as "EXT2FSD" (<http://www.ext2fsd.com/>)

Configure Tools

Click on the SAVE button to backup your NUS1000 settings. You can use this saved file to restore your configuration at a later time. The configuration can also be reset to the factory default setting by clicking the Reset button.

Configuration Tools

Backup your system configuration to your PC	
Backup Settings	<input type="button" value="Save"/>
Restore your system configuration from your PC	
Restore Settings	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Apply"/>
Reset to Default	<input type="button" value="Reset"/>

Firmware

This tool allows you to upgrade the firmware of the NUS1000. Click on Browse to select the firmware file to upload, and then click on Upgrade. The system will prompt you to confirm the upgrade. Please note that the system will reset to factory default settings after the upgrade, so it is advisable to backup your configuration and restore it after any firmware upgrades. However if there are new features in the new firmware, you can modify them and then re-save your configuration.

Firmware Upgrade

This tool allows you to upgrade the system firmware. Enter the path and name of the upgrade file and then click the "Upgrade" button below. You will be prompted to confirm the upgrade.

<input type="text"/>	<input type="button" value="Browse..."/>	<input type="button" value="Upgrade"/>
----------------------	--	--

4.8. Shutdown

You can either shutdown or reboot the NUS1000 from this menu.

- Shutdown: Select the Shutdown button to turn off the NUS1000.
- Reboot: Select the Reboot button to restart the NUS1000.

Shutdown

To protect the storage integrity, shutdown all processes before removing the power supply. Click "Shutdown" and wait until all USB device LEDs turn OFF, then unplug the system's power supply.


Reboot

Click "Reboot" to restart the system. Please refresh your browser after a few minutes to re-enter the webadmin page.

5. Administration with iOS devices



The NUS1000 can also be managed via iPhone or iPad. In iPhone, open Safari and type:
<http://nus1000.local:1010>

The management flow is similar to that of the Web UI, except some functions are not applicable with iPhone, such as BitTorrent. Other options such as the configuration save or restore and the image upgrade are recommended to be handled through a computer.

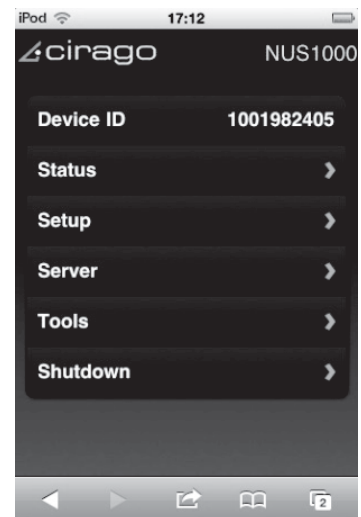


1. Status

Pressing Status will go one level down

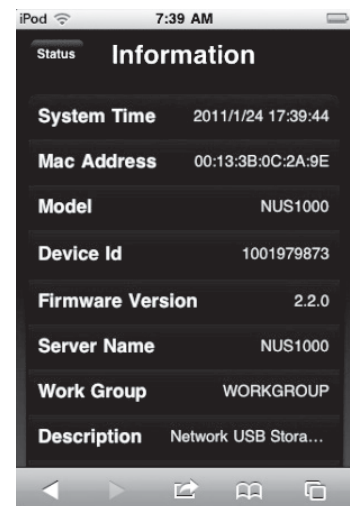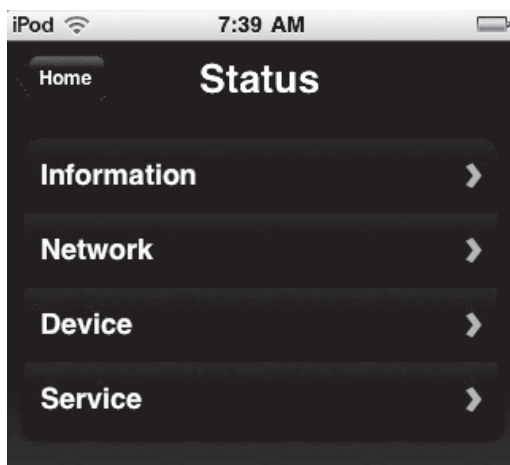


2. Setup

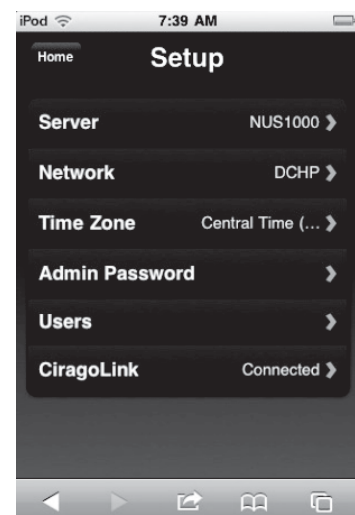


Change server name and description



The screenshots show the add user and CiragoLink control, you can disconnect with the CiragoLink through a touch or associate the box with different user account in Ciragolink.com

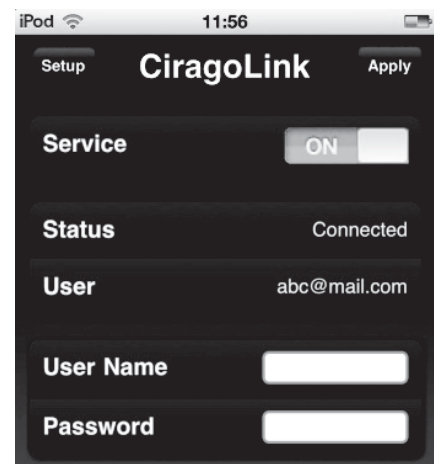

3. Server


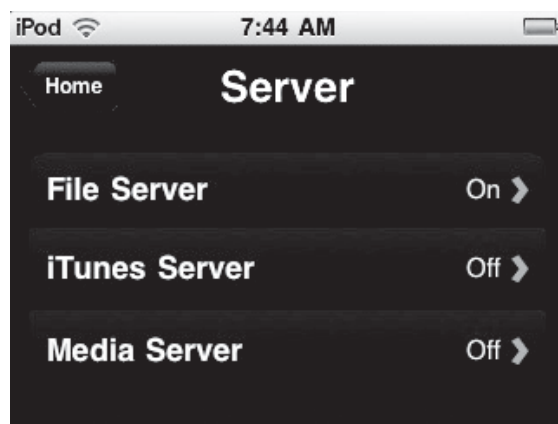


File sharing, assign a different folder path for different users, the default user "admin" has the "/" root path that can access all drives attached.

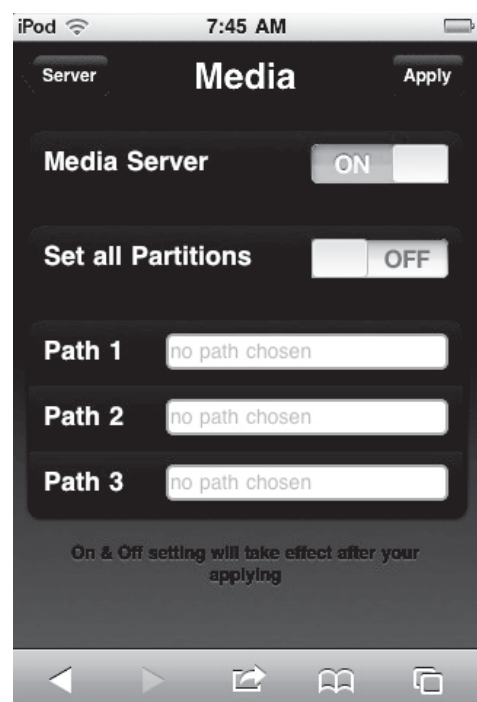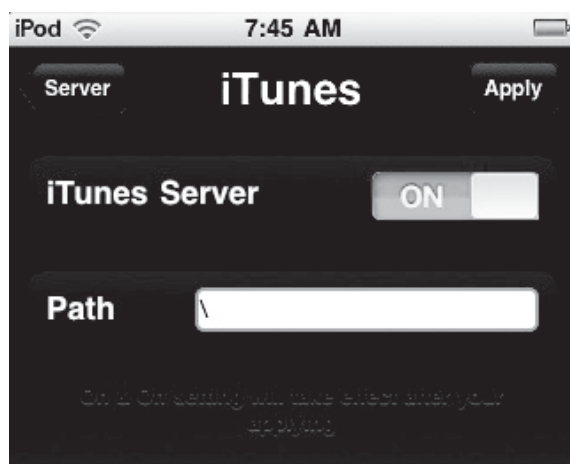

iTunes and media Store setup page allow you to enter the folder path for those iTunes music or media directory. Once set, you player can access them.

4. Tools

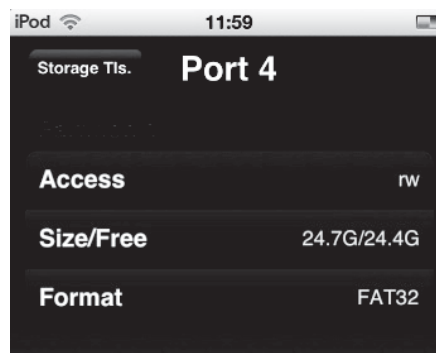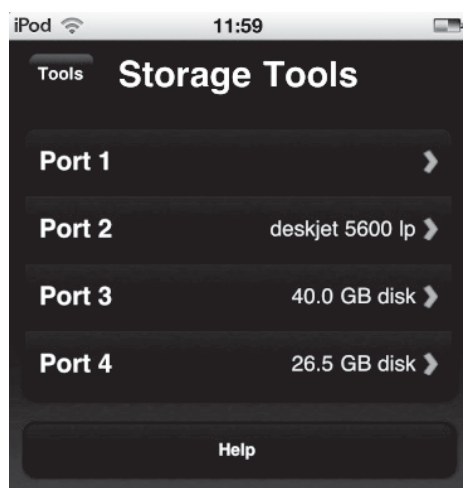

This section is different with the Web UI. It will only allow you to unplug the USB drive and show details of the storage item selected. The configuration and firmware upgrade settings are omitted.

5. Shutdown

Select either to shutdown (when you want to power-off the unit) or reboot the unit.




6. Printer Installation

The NUS1000 can act as USB Print Server. Following are instructions on how to install the printer on different operating systems.


1. Windows XP

From the Start menu, go to Printer & Fax, then select Add Printer, the wizard will start.

Select local printer and unselect the option of “automatically detect and install my Plug and Play printer”. Click Next

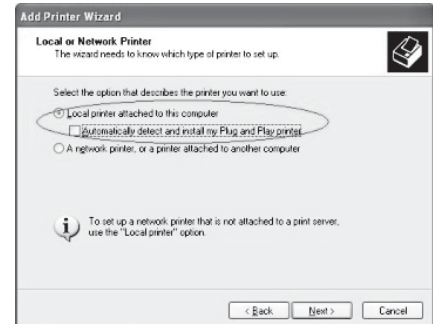


Select “Create a new port” and select the port type “Standard TCP/IP Port”. Click “Next”.

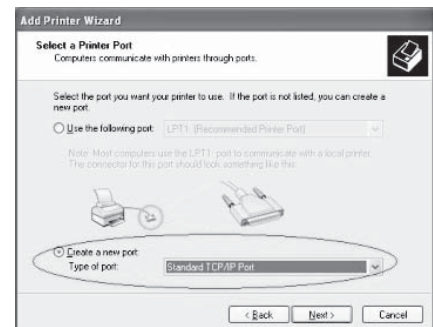


In the “Add Standard TCP/IP Printer Wizard” window, enter the IP address of the printer port. Enter the name of the device as “NUS1000” or if the name of the device was changed during setup, enter the new name assigned to it. If you chose to enter a fixed IP address in the network setup, enter an IP address.

Click “Next” to continue.

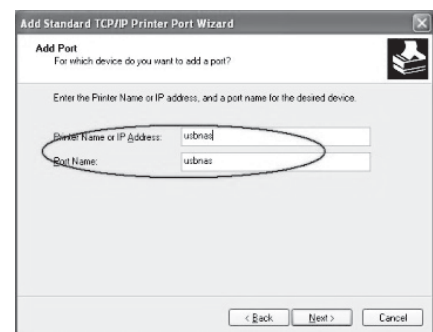


Select the “Custom” option and click on “Settings”

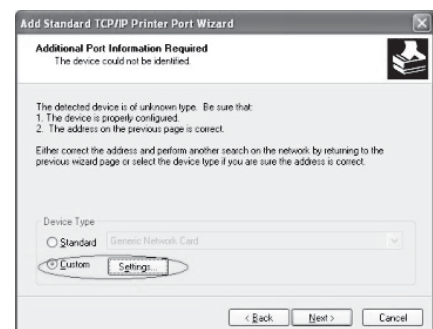


The wizard will lead you to the page “Configure Standard TCP/IP Port Monitor”. Select the “LPR” in the “Protocol” box.

In the LRP Setting box, enter a name for Queue Name, such as “lp” as an example and click to enable the “LPR byte counting”.

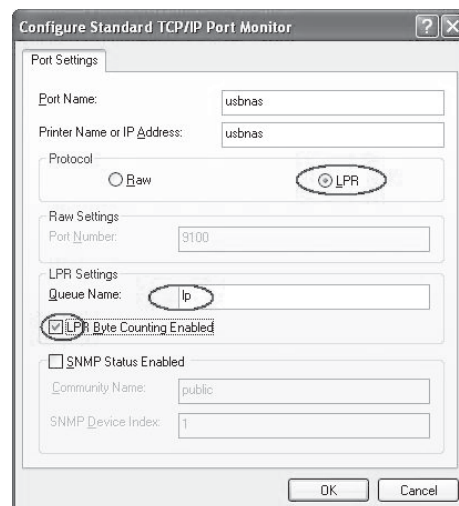


Click “OK”, then “Next” to complete the setup. Then the wizard will prompt you to select the printer driver to associate with this TCP printer port. Choose the printer model accordingly.

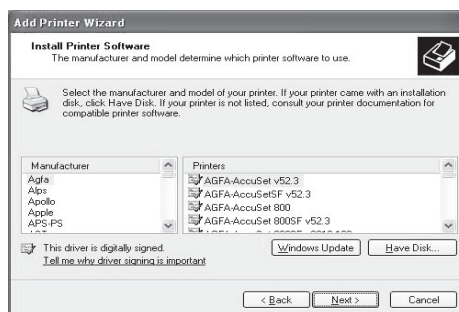


Print a test page to assure the setup is correct.

2. Windows 7


The setup steps in Windows 7 are similar to Windows XP Control Panel -> Hardware and Sound. Further select “Devices and Printers”. Click “Add a printer” in top menu bar.

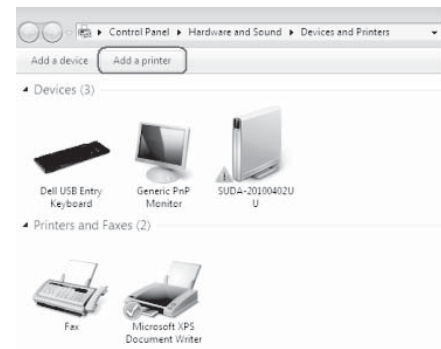


In the Add Printer Box, select to “Add a local printer”. Click “Next”.

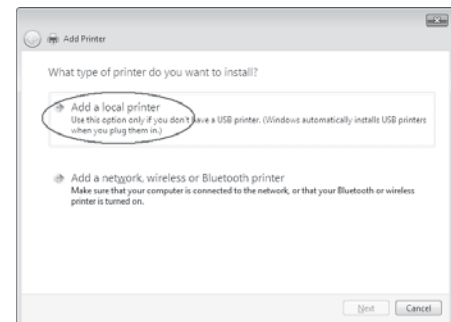

Then in the Add Printer Box, select “Create a new port” and choose the “type of port” as “Standard TCP/IP Port” as shown.

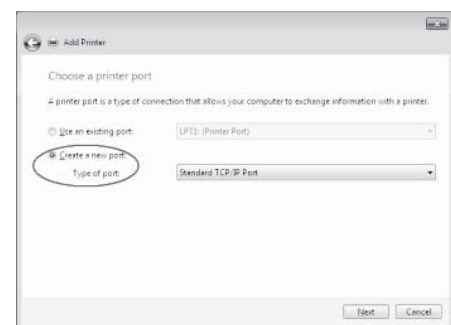


Click “Next” to continue. You will be prompted to enter the IP address for the device. Enter the name of the device “NUS1000” or if the name of the device was changed during setup, enter the new name assigned to it. If you chose to enter a fixed IP address in the network setup, enter an IP address.

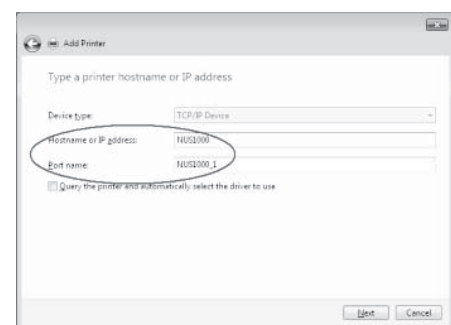


Select the “Query the printer and automatically select the driver to use”


Click “Next” to continue. Under Device, choose “Custom” and click “Settings”.

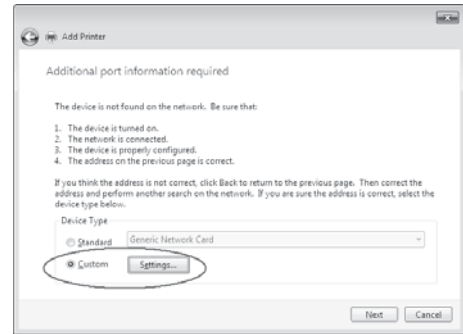

The system will then prompt you to setup the TCP/IP Port Monitor. In the “Protocol” box, choose “LPR”, enter the queue name as “lp” and enable “LPR byte counting”.

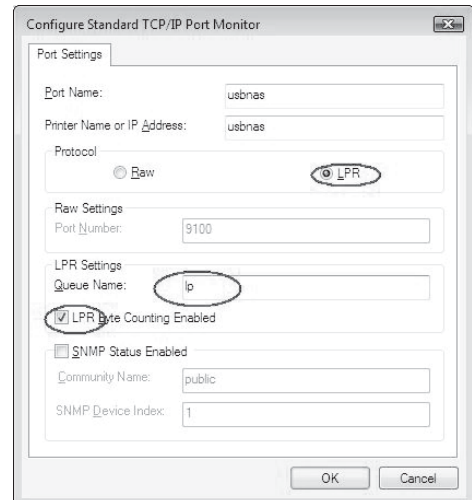

Click “OK” to continue. You will be prompted to select your printer.

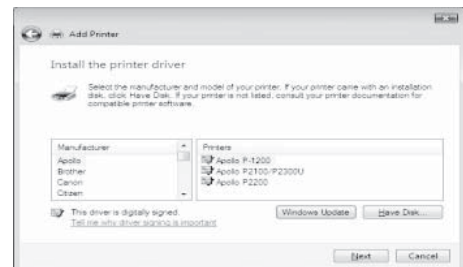


Enter a printer name and print a test page to ensure successful printer setup.

3. Windows Vista


The setup steps in Windows Vista is similar to XP
Enter Control Panel -> Printer

Right click and select "Add Printer"


In the Add Printer Box, select to add "Local Printer",
click "Next"

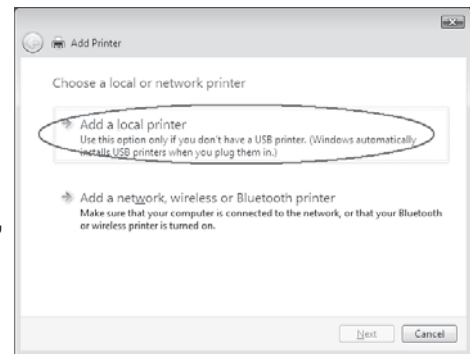


Then in the Add Printer Box, select "Create a new port" and choose the "type of port" as "Standard TCP/IP Port" as shown.

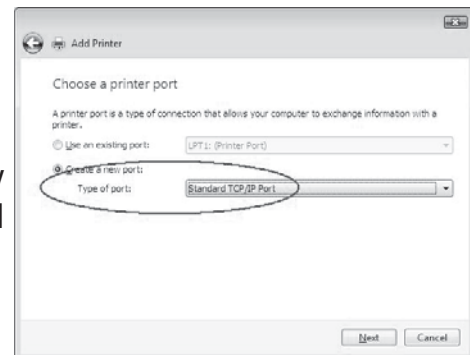


Click "Next" to continue. You will be prompted to enter the IP address for the device. Enter the name of the device "NUS1000" or if the name of the device was changed during setup, enter the new name assigned to it. If you chose to enter a fixed IP address in the network setup, enter an IP address. Select the "Query the printer and automatically select the driver to use"

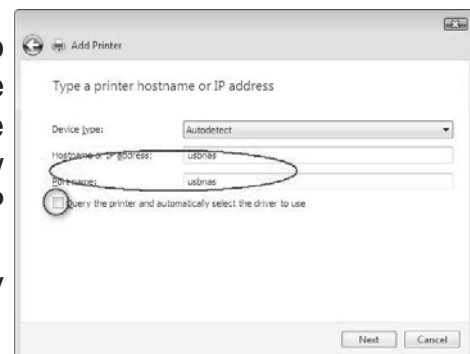


Click "Next" to continue. Under Device, choose "Custom" and click "Settings".

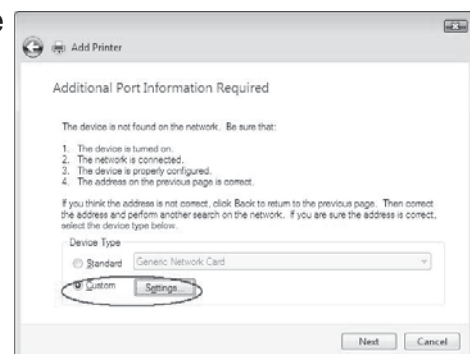

The system will then prompt you to setup the TCP/IP Port Monitor. In the “Protocol” box, choose “LPR”, enter the queue name as “lp” and enable “LPR byte counting”.

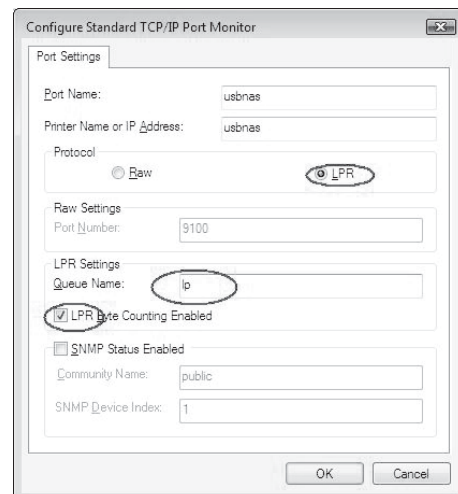

Click “OK” to continue. You will be prompted to select your printer.

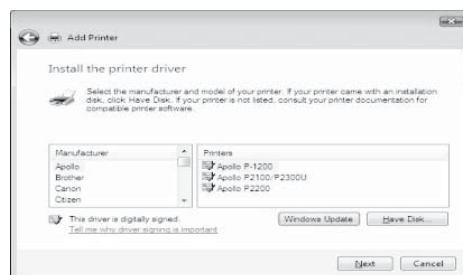


Enter a printer name and print a test page to ensure successful printer setup.

4. Apple OS


From the desktop, enter “System Preferences” and open “Print & Fax”.



Add new printer by clicking “+”.

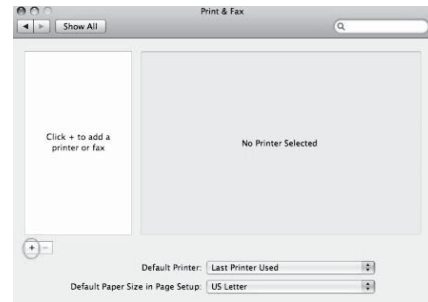

Select Default and locate the print server by Bonjour, then select the correct driver of the printer.

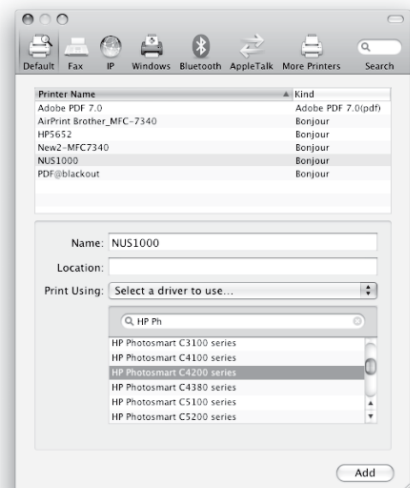

Port Used for Print Server: 515 TCP

7. CiragoLink - (Remote Access)

Remote Access Instructions

The NUS1000 now comes with a new feature – you can remotely access your content from anywhere in the world! You can access files on your iPhones, Android Phones, iPad and other tablet or regular computer using any WebDAV App.

WebDAV (Web-based Distributed Authoring and Versioning) is a set of methods based on the HTTP (Hypertext Transfer Protocol) that allows users in editing and managing documents and files stored on a remote web server. WebDAVclient application is required to work with the CiragoLink.com remote service.

In order for you to access remotely, you need to activate your NUS1000 and configure it as a WebDAV server. Please follow the instruction below.

Furthermore, since WebDAV requires a client application (not included in the package) to be installed in your computer or mobile devices (such as iPad) for remote access, below are instructions that will guide you through on how to obtain the WebDAV application as well.

Here's how to get started:

Register for the CiragoLink Service

1. Launch your web browser and visit www.ciragolink.com and register a user account. An email will sent to your registered email, please reply to confirm your account creation.

The image shows a web browser window displaying the CiragoLink website. At the top, there is a header with the text "CiragoLink". Below the header, a "Welcome to CiragoLink" message is displayed. The main content area features a login section on the left with the heading "login with Email:". This section includes two input fields: "Email:" and "Password:", each followed by a text box. Below these fields is a "Login" button. To the right of the login section is a vertical line. At the bottom of the page, there is a registration link that reads "Don't have an account? Register Now!".

2. Go back to your NUS1000's admin page (Default: <http://nus1000:1010>) and from the menu on the left, click on Setup > CiragoLink

The screenshot shows the 'CiragoLink Activation' page. On the left is a navigation menu with 'CiragoLink' selected. The main area has a header 'NUS1000 Network USB Storage Link' and a 'CiragoLink Activation' section. It includes a link 'Don't have an account?', input fields for 'User' and 'Password', and an 'Activate' button.

*** IMPRORTANT: Make sure to change your admin password before activate the NUS as your storage will be exposed to Internet.

3. Enter the User and Password of the newly created account onto the box, then click "Actiave" The NUS will complete the process, get the unit connecting to the Ciragolink and associate your NUS with the account

The CiragoLink Service box will appear and the Status will show with "Connected" after a while for the NUS box to establish the connection with the CiragoLink cloud.

CiragoLink Service

CiragoLink Service	<input checked="" type="checkbox"/> Enable
Status	Connected
User	abc@mail.com
Remote Access	nus1001987654.ciragolink.org:9880

Apply

CiragoLink Activation

[Don't have an account?](#)

User	<input type="text"/>
Password	<input type="password"/>

Activate

4. Now your NUS storage is ready to be access remotely through any application with WebDAV client.

Remotely Accessing the NUS1000 Admin Page

You can also remotely access the admin page through any desktop or laptop computer with an internet browser by using the below URLs on:

http://nus*****.ciragolink.com:1010 OR <http://alias.ciragolink.com:1010>

This means you can also initiate BitTorrent downloads remotely, create new user accounts and more from any web browser.

Remotely Accessing your Attached Storage Devices

You can access the NUS1000 remotely using the below steps. Please note that you should only use remote access when you are not on your local network. When you are on your local network, you can access the setup page by using <http://nus1000:1010> or the NUS1000's IP address.

Smart Phones or Tablets:

iPhone / iPad / iTouch / Android / Blackberry:

There are free and paid apps for WebDAV on iOS, Android and Blackberry platforms. Paid apps normally give you more features, but if you just want basic access, then the free apps should be just fine. Search the app store for "WebDAV" and a list of applications will come up.

1. Download and install a WebDAV compatible application.
2. Add the URL: http://nus*****.ciragolink.com:9880 (where * indicates the deviceID of the NUS1000). Always make sure to include "http://" in front of the address and port no 9880
3. You will be prompted to enter your User name and password (case sensitive). This will give you access to the shared drives. For further information consult the program's user manual.
4. Transfer speeds will vary depending on your internet connection. CiragoLink allows up to 250KB/s download transfer rate per NUS1000.

★ **WebDAV** applications will allow you to remotely log in to your NUS devices. You will need the following information to set up your remote access through WebDAV:


1. NUS1000 Device name (default is NUS1000)
2. NUS1000's Device ID (located under Status > Information)
3. Username and passwords for users (***Usernames and Passwords are Case Sensitive***)
4. Local Access use: <http://nus1000:9880> (on PC) – <http://nus1000.local:9880> (on Macintosh/Apple)
5. Remote Access use: http://nus*****.ciragolink.com:9880 (where * indicates the device ID of the NUS1000)

Windows XP built-in software:

Windows XP is able to connect to WebDAV server without the additional application to be installed, please follow the steps below to establish the connection:


Setup Remote Access for WinXP

Go to My Network Places, or you can find it from Start Menu.

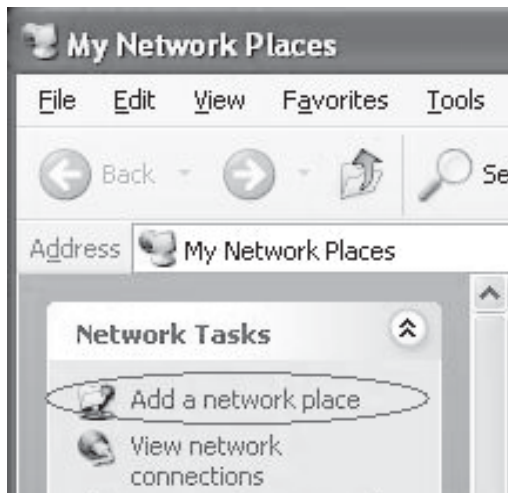


Select “Add a network place” form the left,


or under Tools Menu, select Map Network Drive, and click on “Sign up for online storage or connect to a network server” link.

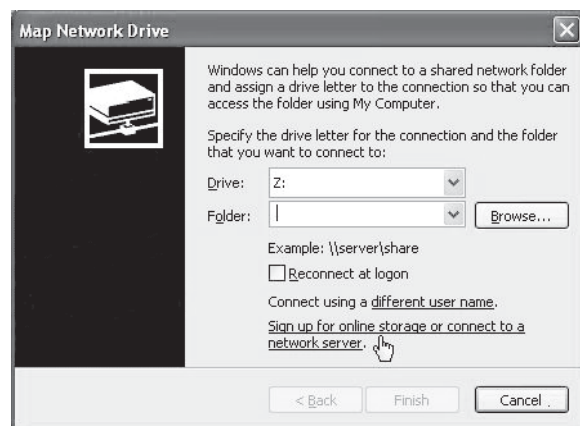

Wizard will appear. Select “Choose another network location” option and click next

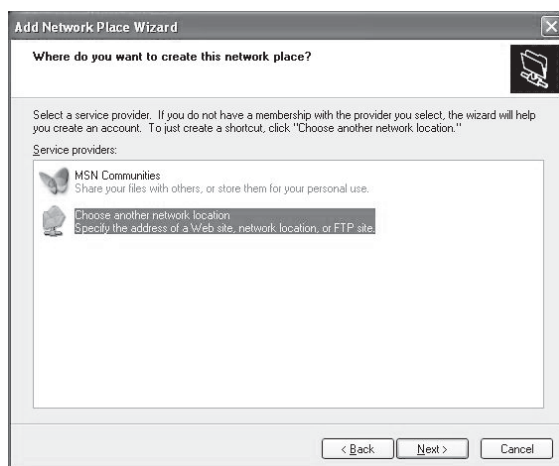


Enter your Ciragolink server address (http://nus****.ciragolink.com:9880), or if you made changes of the server name. For example: http://john.ciragolink.com:9880. (Note: You need to have “http://” included.)

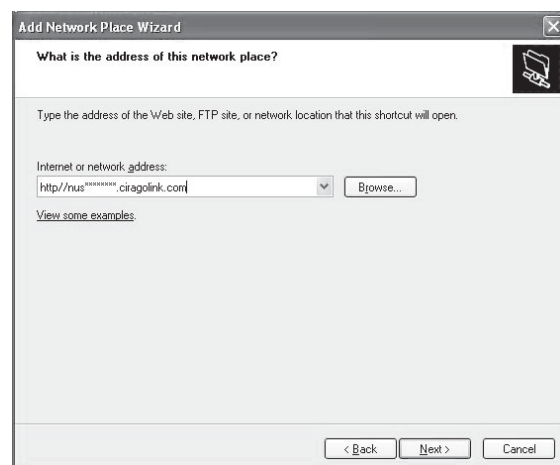

An authentication dialog will appear. You may enter any user name and password that has been registered in NUS1000 setting. (Note: This authentication is case sensitive.)

You can also name the network place when needed.

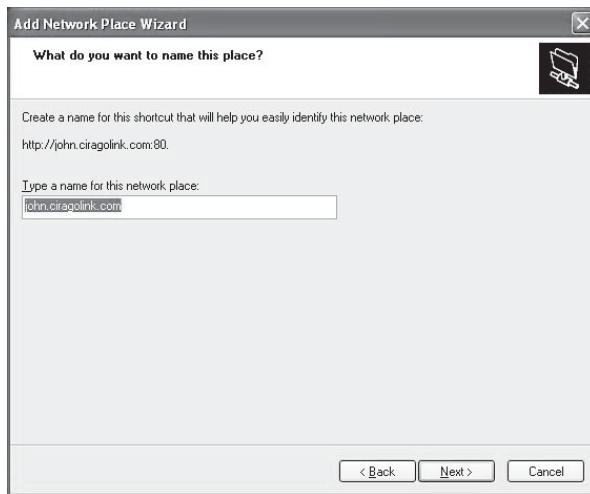

When connected, an icon will be appeared in My Network Places. Now you can remote access your NUS1000 device from anywhere.



Alternative: Download a free WebDAV program named “DataFreeway” <http://www.enginsite.com/Download.htm#Freeware> and configure the server with the device name, URL, User name and Password. This will initiate a connection and allow you to access your shared data.


Windows 7/Vista built-in software:

You will have to install a WebDAV program as the operating system’s built in support for this feature is not currently working. This is Microsoft’s software issue that we have no control over.



Alternative: Download a free WebDAV program named “DataFreeway” <http://www.enginsite.com/Download.htm#Freeware> and configure the server with the device name, URL, User name and Password. This will initiate a connection and allow you to access your shared data.

Mac OSX built-in software:

Mac OSX computer is able to connect to WebDAV server without installing the client application:


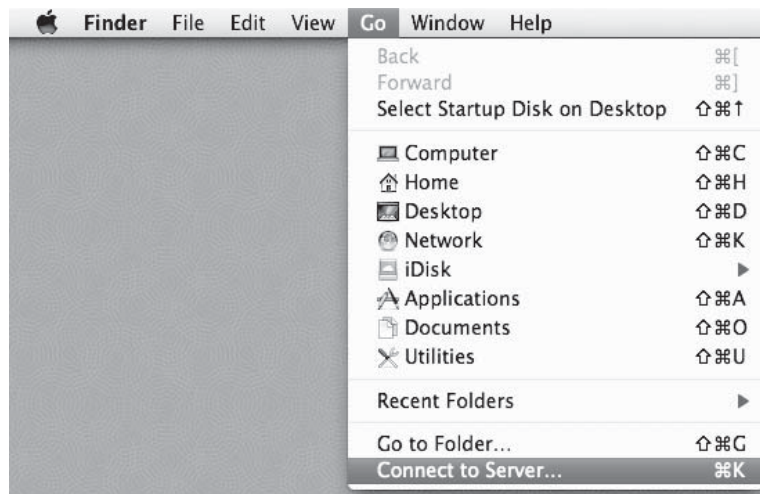


Enter the URL of `http://nus1000.local:9880` for local LAN access
And URL of `http://nus*****.ciragolink.com:9880` for remote access

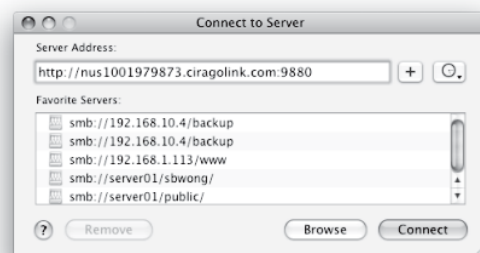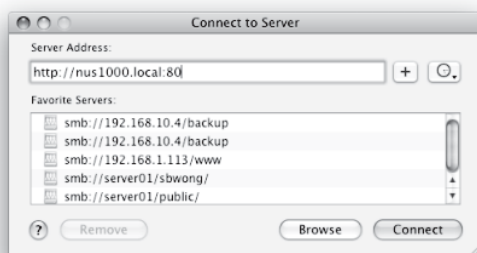

Then enter the User name and the password to get access to the NUS box

And the disk is connected and ready to use.

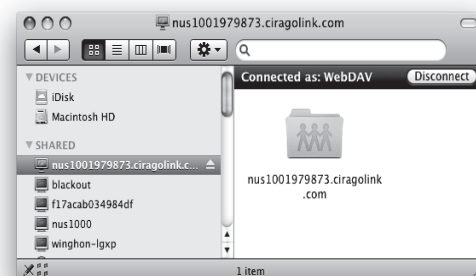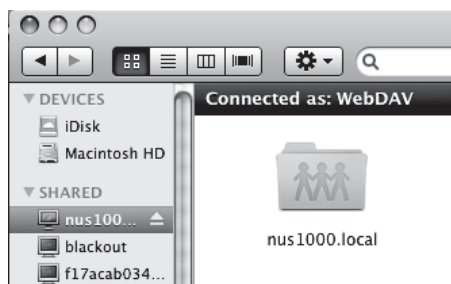

iPhone / iPad

You need to install the app before you can use the WebDAV to communicate with the NUS. There are popular apps that have the built-in support of the WebDAV such as



- Numbers, Keynotes & Pages from Apple Inc
- GoodReader from Good.iWare
- ezShare Pro from Antrecea Inc.
- Onedisk from Readdle

Besides those paid apps, there is also a free app that supports WebDAV, the WebDAV Navigator. After you install the app and start the app, follow the steps to start accessing the NUS WebDAV drive:


Start the WebDAV Navigator app
Press “+” on top right to add a server



Enter the information as shown
for local LAN or remote disk access correspondingly and press “Save”

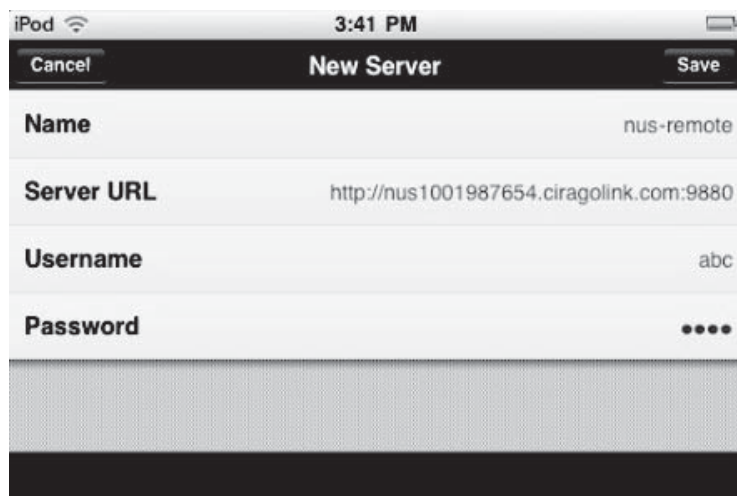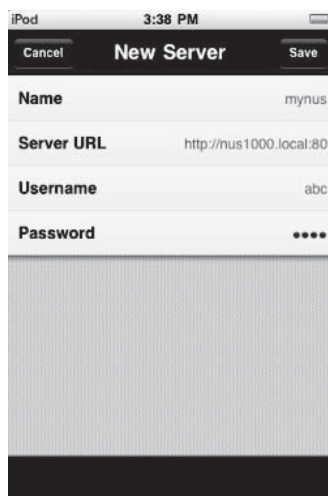

Then you can start to access the WebDAV drive by selecting the corresponding server whether it is on the local LAN or remotely through the Internet.

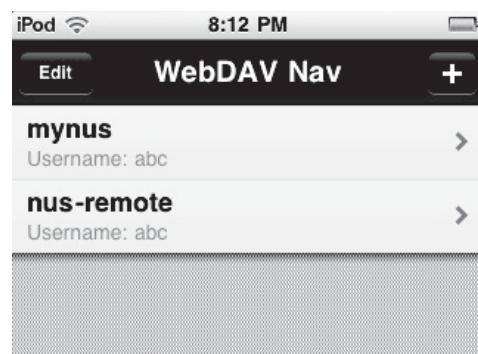

8. Usage Tips

1 Hardware

- 1.1 We do not recommend connecting two units of a 2.5" USB Storage device subject to the limitation of the power adaptor and rating of the USB drives. You may need to insert the auxiliary USB power cord supplied with your USB drive.
- 1.2 Do not unplug the USB storage when the storage LEDs are flashing. Push the Eject button (for 1 sec at least) and wait until the USB LEDs are off. The more efficient way to unplug connected USB devices is to use the "Unplug" command in the Web Interface to select the individual USB port you wish to unplug.
- 1.3 Do not unplug the power. Use the "Shutdown" command in the web interface and wait until all USB LEDs are off. Alternatively, you can use the "Eject" button and unplug the power after all USB LED off.

2 Web Interface

- 2.1 Remember to add the ":1010" after the name or IP address of the NUS1000 zz enter the web interface. The default port 80 is reserved for the WebDAV server access.

3 Naming of NUS box,

The server name of NUS box is broadcast by NetBios in PC environment, so that you can connect to it by just using the server name NUS also support the Bonjour naming service used by Apple devices, the box can be access by using the server name, such as NUS1000.local They are more convenient than using the IP address.

4 File Sharing

- 4.1 In specific user authorization mode, if you want a directory to be accessible by some users as read/write and other users as read only, create two folder names pointing to the same directory and assign different groups of users with different access rights.
- 4.2 The User list is stored in the device configuration, so it is saved when you save the system configuration under "Configure Tools".
- 4.3 Folder lists are associated with each drive, it only works with FAT32 disk not on NTFS

5 iTunes Server

- 5.1 Though the default allows the scanning of all attached drives, it is recommended to limit the scope of the media files scanning by specifying the directory assignment.

6 Media Server

- 6.1 Similar to iTunes Server, specifying the 3 directory entries to group the media files will improve the media file scanning performance.

7 BT Download

- 7.1 Assign an existing directory destination to save your BT downloads. Make sure the drive is not removed from NUS1000 before the download is complete.
- 7.2 You can only have 5 torrent files on the list. Remember to remove the torrent file from the list. Otherwise, it cannot accept any new seed.
- 7.3 As the BT process has a characteristic of allocating file space, it will take time to finish before it can handle new seeding. It is recommended to add your torrent files from small to large in order to get the best response.

9. Specifications

Hardware

Power	100 – 240 AC input, 5V, 2A DC output Typical 3W (not counting USB loads)
Weight	4.4 oz / 125 gm
Network	10 / 100M Fast Ethernet, RJ45
USB Ports	4 USB 2.0 host ports (type A connector)
USB Storage	Maximum capacity of 2 TB hard drive per USB port
LED Indicator	Power, LAN (Link & Activity), USB ports
Buttons	Reset & Eject

Function

File Storage	Samba
Storage Format	FAT32, EXT2 and NTFS (Read Only)
Print Server	LPR, supports one USB printer
Remote Access	WebDAV protocol via CiragoLink
Web Server	HTTP
iTunes	Auto-discovery
Media Server	UPnP, auto-discovery, DLNA compliant
BT Service	BitTorrent protocol, support DHT to enhance peer discovery

Ports Used

Main Configuration	1010 TCP
WebDAV	9880 TCP
BitTorrent	9091 TCP
iTunes	3689 TCP
Print Server	515 TCP

10. Contact Us

Please call or email us if you are having any trouble with the Cirago NUS1000.

Cirago International Ltd.

611 Vaqueros Ave, Sunnyvale, CA 94085

Ph: 408-331-8822

Fax: 408-331-8830

Email: support@cirago.com

www.cirago.com

