


Brookstone®

wireless
music system for iPod®



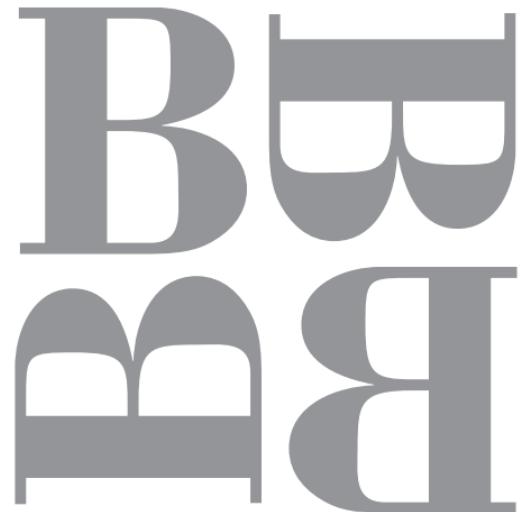

wireless music system for iPod®

BETTER BY BROOKSTONE®

We believe that exacting standards are the core of our success. The Wireless Music System for iPod® has been thoroughly tested to be certain it meets our rigorous quality control criteria.

With our Wireless Music System for iPod®, you'll have portable sound—anywhere you want it. Just dock your iPod, turn on the speakers and take your music with you anywhere—inside or out! The 900 MHz technology transmits through walls, floors, and ceilings up to 100 feet away from the transmitter.

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Do not try to disassemble the speakers.
2. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. Do not place speakers near heat sources such as radiators and heating vents.
4. Do not store speakers in extreme temperatures.
5. Turn the transmitter and speaker power off when not in use.
6. Do not place speakers where there is moisture, rain, vibration, shock or excessive dust.
7. Use only attachments and accessories specified by the manufacturer.
8. Unplug the unit during lightning storms or when unused for long periods of time.

BATTERY PRECAUTIONS

- Dispose of the old battery properly. Do not dispose of the old battery in a fire.
- Do not leave the battery where a child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- The battery may explode if mistreated. Do not attempt to recharge or disassemble the battery.
- Use only a fresh battery of the required size and type.
- Do not expose the battery to extreme heat such as direct sunlight, fire, etc.
- **Caution:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING

1. Do not use the unit near water.
2. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
5. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
6. Only use attachments/accessories specified by the manufacturer.

7. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
8. Do not expose the AC/DC Adapter to rain or moisture.
9. The marking plate is located on bottom enclosure.
10. Disconnect the main plug to shut the power off completely.
11. Place on a level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of at least 2 inches.
12. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any audio or television interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

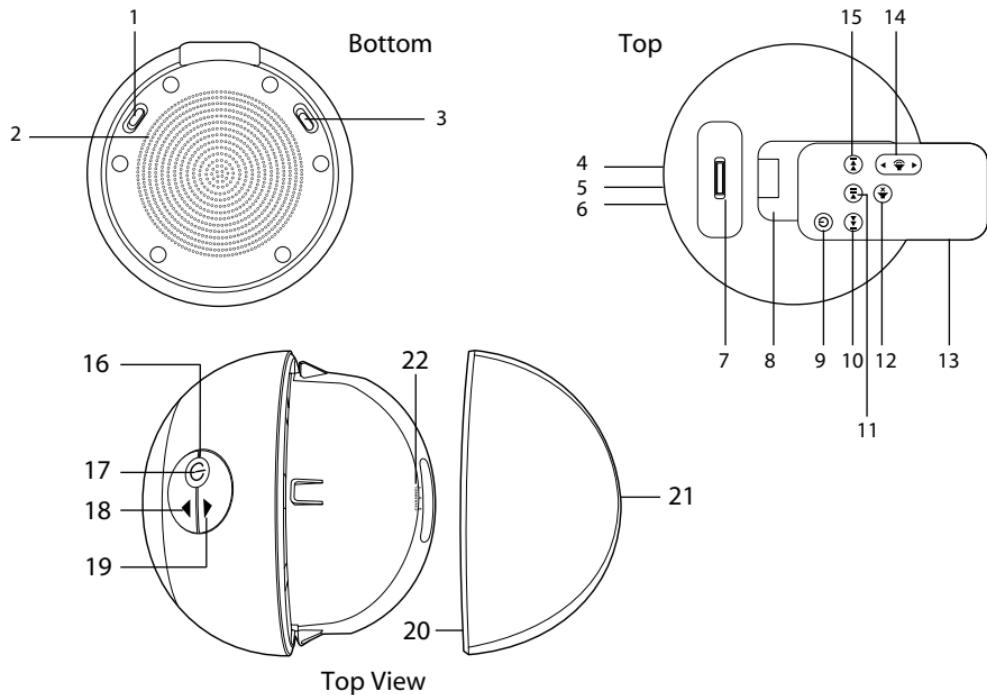




LOCATION OF CONTROLS

DOCK

1. MONO/STEREO
2. RESET
3. CHANNEL 1/2/3
4. AUX IN
5. DC IN
6. AUX OUT
7. iPod JACK
8. REMOTE CONTROL CRADLE
12.  (Mute)
13. BATTERY COMPARTMENT COVER
14.  (Volume Up/Down)
15.  (Fastforward)

SPEAKERS

16. POWER INDICATOR
17.  (On/Off)
18.  (Volume Down)
19.  (Volume Up)
20. SPEAKER BOTTOM
21. REAR COVER
22. CHANNEL 1/2/3

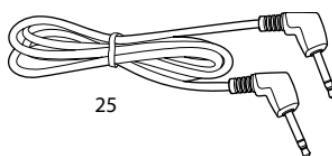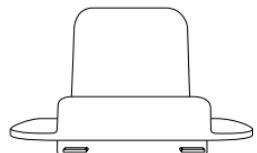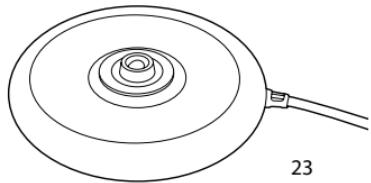

LOCATION OF CONTROLS (CONT.)

ACCESSORIES

- 23. CHARGING BASE (2)
- 24. MP3 CRADLE

POWER ADAPTERS/CABLES

- 25. 3.5MM CABLE
- 26. DOCK POWER ADAPTER
- 27. CHARGING BASE POWER ADAPTER (2)

iPOD DOCK OPERATION

CONNECTING YOUR iPod OR OTHER AUDIO SOURCE TO THE DOCK

1. Insert one end of the DOCK POWER ADAPTER into DC IN and the other end into an electrical outlet.
2. Plug your iPod into the iPod JACK. If you are using another audio source, insert one end of the included 3.5MM CABLE into AUX IN and the other end into your audio source's headphone jack.

Note: The dock charges your iPod when it is connected to the iPod JACK.

INSERTING THE RECHARGEABLE BATTERY PACKS

1. Remove the speaker(s) REAR COVER. See Figure 1.
2. Insert the included rechargeable battery pack(s).
3. Replace the REAR COVER.



Figure 1

CHARGING THE SPEAKERS

Charging time is approximately 12 hours.

1. Insert one end of the CHARGING BASE POWER ADAPTER into the CHARGING BASE's cord and the other end into an electrical outlet.
2. Place the SPEAKER BOTTOM on the CHARGING BASE. A red indicator light illuminates inside the speaker.

USING THE SPEAKERS

You can leave the speakers connected to the CHARGING BASE, or you can remove them and use the rechargeable battery power.


Note: Ensure the dock and speaker(s) are set to the same channel.

1. Slide CHANNEL 1/2/3 on the dock to CHANNEL 1, 2 or 3.
2. Press **①** on the remote control to turn the dock on. The iPod in the jack turns on automatically.

3. Remove the speaker(s) REAR COVER. See Figure 2.
4. Slide CHANNEL 1/2/3 on the speaker(s) to the same channel selected on the dock.
5. Replace the REAR COVER.
6. Press \odot on the speaker(s). The speakers' POWER INDICATOR illuminates.
7. Press \blacktriangle or \blacktriangledown to adjust the speaker(s) volume to your desired listening level.

Note:

- The mono/stereo function maximizes the sound when using multiple speakers with the same dock. To use this function, slide MONO/STEREO to the STEREO position.
- If signal interference occurs, adjust the channel on the dock and speakers.
- When not in use, press \odot on both the speaker and remote control to turn off the power to the speaker and dock. The iPod in the jack will charge.

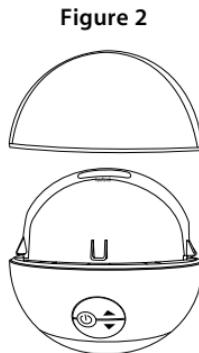**Figure 2****USING THE REMOTE CONTROL**

The remote control allows you to control basic functions on your iPod, and the power and volume on the dock. Place the remote control in the REMOTE CONTROL CRADLE after use.

REPLACING THE REMOTE CONTROL BATTERY

1. Remove the BATTERY COMPARTMENT COVER.
2. Remove the old battery and insert a new CR2032 button cell battery (not included) according to polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER.

RESETTING THE UNIT

Insert a thin, pointed object into RESET if the unit is not working properly.

IPOD® ADAPTERS

IPOD® ADAPTER

	IPOD®
#9	Video 30 GB
#10.....	Video 60 GB
#11.....	Nano 2nd Generation

CARE AND MAINTENANCE

Clean only with a dry cloth.

SPECIFICATIONS

IPOD COMPATIBILITY

- iPod Mini, Version 1.4.1 or later
- iPod 4th Generation, Version 3.1.1 or later
- iPod 5th Generation, Version 1.1.2 or later
- iPod Photo, Version 1.2.1 or later
- iPod Nano, Version 1.2.0 or later
- iPod Nano, 2nd Generation Version 1.0.2 or later

DOCK

Range: 100 feet
Fine Tuning: Automatic
Number of Channels: 3
Dimensions: 6.375" d x 1" h
Power Supply: AC Adapter (included)

REMOTE CONTROL

Batteries: Uses one CR2032 button cell battery (included)

SPEAKERS

Power On/Off: Yes
Volume Control: Yes
Fine Tuning: Automatic
Speaker Unit: 3 1/2"
Frequency Level: 50Hz-20kHz
Dimensions: 6.23" Spherical
Power Supply: AC Adapters (included)
Built-in
Rechargeable Batteries
6V 1600 mAh
Charging Time Approximately 12 hours
Battery Life Approximately 3 hours

ONE (1) YEAR LIMITED WARRANTY

Brookstone warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at **1-800-292-9819**. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and U.S. Virgin Islands.

This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is."

This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; or g) any and all pre-existing conditions that occur prior to the effective date of this Limited Warranty relating to any product sold "as is" including, without limitation, floor demonstration models and refurbished items.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.



BETTER BY BROOKSTONE® WE CREATE PRODUCTS TO MAKE LIFE BETTER. THROUGH INNOVATIVE DESIGN, BEST-IN-CLASS PRODUCT SELECTION AND AN UNYIELDING COMMITMENT TO EXCELLENCE, WE MAXIMIZE THE QUALITY OF OUR PRODUCTS—AND HELP YOU ENHANCE THE QUALITY OF YOUR LIFE.

Merrimack, New Hampshire 03054 • Customer Service 800-846-3000 • www.brookstone.com