

LOREX[®] Door Sensor



AK41TK Series Quick Start Guide

lorex.com

Image: Constraint of the provided mean standard 1-year marks of the provided mean standard 1-year warranty. For more information about Lorex's warranty.	Package Contents		LED Behavior	
Door/Window Sensor Set* Wounting Adhesive* "May include one or mode on the package purchased. To purchase additional sensors visit latex.com and/or authorized reselies (solid for 2 seconds) Powered on. Overview Mounting Adhesive* "May include one or mode on the package purchased. To purchase additional sensors visit latex.com and/or authorized reselies (flashing rapidly) Ready to pair. Battery slot Specifications • (flashing rapidly) Alarm has been triggered. Noverview • Environment: Indoor • Max detection distance: Less than 3/4". • (flashing rapidly) Alarm has been triggered. LED indicator • Operating temperature: 14°F~113°F. • Operating temperature: 14°F~113°F. • Operating humidity: 0-95% RH. Battery: CR1632 • Decided bumidity: CR1632 • Decided bumidity: CR1632 • Decided bumidity: For more information about Lorex's	$\square \square \square \square$			
Pin* Door/Window Sensor Set* Mounting Adhesive* Pin* Mounting Adhesive* May include one or more depending on the package purchased additional sensors. To purchase additional sensors. Text and/or authorized reselets. Pin* Battery slot Specifications Pairing failed. Try repeating the setup. Sensor Specifications Pinvironment: Indoor Alarm has been triggered. Nax detection distance: Less than 3/4". Operating temperature: 14°F~113°F Operating temperature: 14°F~113°F WARNING: CHOKING HAZARD KEEP OUT OF REACH OF CHILDREN LED indicator Battery: CR1632 Destandi Rustath 5.0 Destandi Rustath 5.0	LOREX		Behavior	Meaning
Image: Sensor Magnet LED indicator Magnet LED indicator Magnet Pin insert Pairing successful. Image: Sensor Magnet LED indicator Magnet Pin insert Potencic River Ri			• (solid for 2 seconds)	Powered on.
depending on the package purchased. To purchase additional sensors, visit lorex.com and/or authorized reselies Pairing failed. Try repeating the setup. Overview Specifications (flashing rapidly) Alarm has been triggered. Battery slot Environment: Indoor (flashing) Firmware upgrade in progress. Magnet Magnet Operating temperature: 14°F~113°F (flashing HAZARD KEEP OUT OF REACH OF CHILDREN) Environment: Doperating humidity: 0-95%RH Deretorski Bluutoeth 5.0		Pin*	• (flashing rapidly)	Ready to pair.
Door/Window Sensor Set* Mounting Adhesive* To purchase additional sensors Visit Jorex.com and/or authorized resellers (flashing 3 times) (flashing rapidly) (Alarm has been triggered. (flashing) (flashing)			• (solid for 2 seconds)	Pairing successful.
Specifications Sensor Magnet LED indicator Magnet Pin insert Deratagel: Plustageth 5.0	Door/Window Sensor Set*	Mounting Adhesive* To purchase additional sensors,	• (flashing 3 times)	
 Environment: Indoor Environment: Indoor Magnet Environment: Indoor Max detection distance: Less than ³/₄" Operating temperature: 14°F~113°F Operating humidity: 0-95%RH Battery: CR1632 Dratagel: Plustagth 5.0 	Overview		• (flashing rapidly)	
 Sensor Magnet Max detection distance: Less than ³/₄" Operating temperature: 14°F~113°F Operating humidity: 0-95%RH Battery: CR1632 Dretagel: Plusteeth 5.0 	Battery slot	Specifications	• (flashing)	
Pin insert warranty. For more information about Lorex's	Sensor	 Max detection distance: Less than ³/₄" Operating temperature: 14°F~113°F Operating humidity: 0-95%RH 	CHOKING HAZARD KEEP OUT OF REACH OF CHILDREN	
			warranty. For more inf	ormation about Lorex's

۲

۲

۲


۲

STEP 1: Pairing to Your Device

To connect the sensor to your device:

- 1. Tap the Lorex Home icon to launch the app.
- 2. In the **Devices** tab, press
 - + Add sensor to set up the sensor.

Tap the + icon on the top right of the screen to add more sensors.

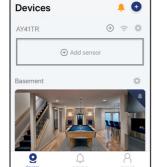

- **NOTE:** the screen to the left is taken from the Sensor Hub.
- 3. Follow the on screen prompts to complete the rest of the setup. The Lorex Home app will walk you through the process, step by step.


Changing the Battery

To change the sensor's battery:

- 1. Make sure your system is disarmed.
- 2. Use the wide part of the pin to open the sensor from the battery slot.
- 3. Slide the old battery out and replace it with the new one.

NOTE: This sensor uses a CR1632 battery.

4. Snap the sensor closed with the battery slot meeting the Lorex logo at the top.

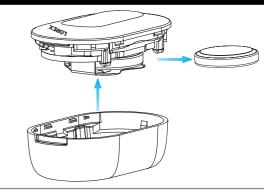


...


STEP 2: Installing the Sensor

Location tips:

۲

- The sensor can be installed indoors, on any door or window.
- If you're using a door, place the sensor at the top of your door to keep safe from being bumped and out of reach from children and pets.
- The sensor and magnet line up together and must be installed that way.
- The sensor and magnet can be no more than ³/₄" apart to send a signal to the hub.

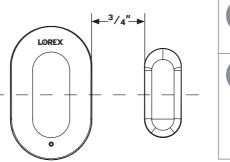

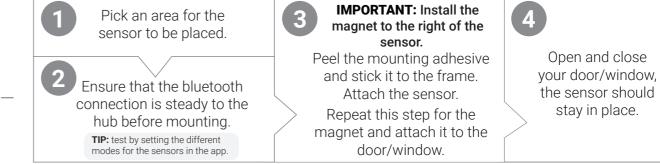

AK41TK_QSG_EN_R1

۲

۲