


PTAB780  
20130826

 
Kids Tablet
Dual-Core + 7" HD Display

# 2 In the box

 


**Quick Start Guide**

 
Model : PTAB780

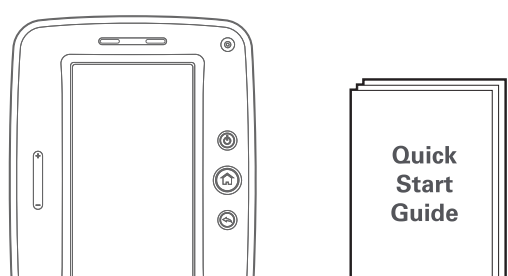 


- ① Power
- ② Home
- ③ Back
- ④ Volume Up
- ⑤ Volume Down
- ⑥ Speaker
- ⑦ Front Camera

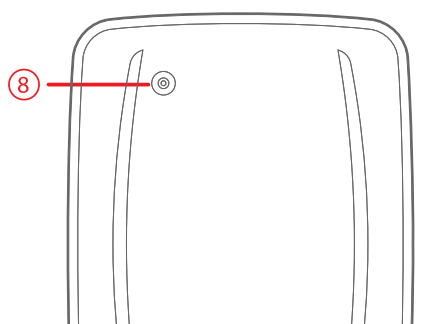

- ⑧ Rear Camera
- ⑨ SD Card Slot
- ⑩ Display Lock
- ⑪ USB Port
- ⑫ Headphone Jack

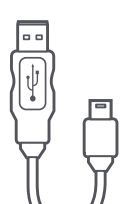  
 USB Cable

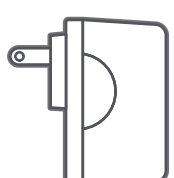  
 AC Adaptor

## Buttons, ports & hardware

## Basic operation

**Power ON**  
Press and hold the ⏻ button until the startup screen appears.

**Power OFF**  
Press & hold the ⏻ button until the "Power off" option appears.

**Lock the tablet (standby)**  
Briefly press the ⏻ button. (Lock the device to conserve the battery).

**Unlock the tablet**  
Slide the "Lock icon" to the right.

**Charging the battery:**  
**The adaptor is not a toy and should be connected to the wall outlet by an adult.**  
Connect the tablet to a wall outlet using the included AC adaptor.

**WARNING:**  
Adaptor cord could be a strangulation hazard.  
Please carefully read "Care & safety precautions" on the other side of the Quick Start Guide before charging / using this tablet.

 
**Battery Tips:**

- Lock the tablet (the display is off) to shorten charging time.
- Turn off Wi-Fi when it's not in use.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in Settings.



## Display lock

Use the Display lock to prevent little ones from interrupting videos or interactive books.

Slide the switch to the "On" position as shown below, the tablet's display and buttons (except for volume) will be disabled.



Bottom View  
Display lock





 
OFF

ON

### Wi-Fi setup


To access the AppShop and download apps, watch videos, and more, you must first connect the tablet to the internet. To set up Wi-Fi:

- Select  on the Home screen (Settings).
- Select "Wi-Fi Setup".



Home screen (Settings)


- Turn Wi-Fi on and select a network.
- If required, enter the correct password and select "Connect".




Wi-Fi connected.



### Parental controls

To control the apps that your children have access to, use the tablet's built-in **Parental Controls**.

- Select  on the top right of the display.
- Select "Parental Controls".
- Create a password and select "ok".
- Select "Restricted Apps".



Home screen 1







*Other options for parents:*

- Online Help
- Settings (offers full settings options)
- Download App Stores (although the tablet includes a kid-safe app store, for your convenience we have provided links to several other app stores that can easily be accessed here).

### Safe browser

Completely control your child's web environment using the Safe Browser.

- Select  on the Main home screen.
- Select the [+] icon on the bottom right of the screen and create a password (we recommend using the same password used in Parental Controls).
- Select "Add more links to safe sites".
- Enter the desired URL and title.
- Select OK.

[illegible]