

## **MD8005 Tablet with 8" Touch Screen**



---

### **User Manual**

## **Safety Precautions**

### **On Battery**

- Charge the battery only in temperature that ranges from 0°C to 35 °C.
- Do not charge Tablet if the battery is found damaged or leaking.

### **On Operation**

- Never subject Tablet to extremes of light, temperature, moisture or vibration.
- Do not use or store Tablet in a location subject:
  - A. Extreme high temperature, such as in a sun-heated car.
  - B. Direct sunlight.
  - C. High humidity or places with corrosive substances.
  - D. Sub-zero condition, especially during winter.

### **On Micro SD card**

- After inserted a Micro SD card, if the device has no response, please take out and insert again.
- Do not remove Micro SD card or turn off Tablet during data writing or reading to prevent damage to data and to the device.
- Make sure the Micro SD card is unlocked before writing or deleting data in the card.
- Backup your files and data before formatting the Micro SD card. Please format the Micro SD card in FAT.

---

---

 
## Contents

<b>SAFETY PRECAUTIONS .....</b>	<b>I</b>
<b>CONTENTS .....</b>	<b>II</b>
<b>CHAPTER 1 BASICS .....</b>	<b>1</b>
PARTS AND CONTROL .....	1
PACKET CONTENTS .....	2
POWER ON AND OFF THE DEVICE .....	2
CHARGING THE DEVICE .....	2
TRANSFERRING CONTENTS .....	3
STAND BY /WAKE UP MODE .....	5
HOME SCREEN .....	5
MAIN MENU .....	7
TOUCH SCREEN OR BUTTONS .....	8
ONSCREEN KEYBOARD .....	9
CONNECTING TO THE INTERNET .....	9
SWITCHING SCREEN ORIENTATION .....	10
<b>CHAPTER 2 GETTING STARTED .....</b>	<b>12</b>
WEB BROWSER .....	12
WATCHING VIDEOS .....	15
PLAYING MUSIC .....	17
VIEWING PHOTOS .....	20
USING CAMERA .....	23
SOUND RECORDING .....	25
GMAIL .....	26
FILE MANAGER .....	28
MANAGING THIRD PARTY APPLICATIONS .....	33
ALARMS .....	34

<b>CHAPTER 3 SETTINGS .....</b>	<b>36</b>
<b>WIRELESS &amp; NETWORKS .....</b>	<b>36</b>
<b>AUDIO PROFILES .....</b>	<b>37</b>
<b>DISPLAY .....</b>	<b>37</b>
<b>STORAGE .....</b>	<b>37</b>
<b>BATTERY .....</b>	<b>38</b>
<b>APPS .....</b>	<b>38</b>
<b>ACCOUNTS &amp; SYNC .....</b>	<b>38</b>
<b>LOCATION SERVICE .....</b>	<b>38</b>
<b>SECURITY .....</b>	<b>38</b>
<b>LANGUAGE &amp; INPUT .....</b>	<b>38</b>
<b>BACKUP &amp; RESET .....</b>	<b>38</b>
<b>DATE &amp; TIME .....</b>	<b>38</b>
<b>SCHEDULE POWER ON/OFF .....</b>	<b>39</b>
<b>ACCESSIBILITY .....</b>	<b>39</b>
<b>DEVELOPER OPTIONS .....</b>	<b>39</b>
<b>ABOUT TABLET .....</b>	<b>39</b>
<b>CHAPTER 4 TROUBLESHOOTING .....</b>	<b>40</b>
<b>CHAPTER 5 APPENDIX .....</b>	<b>41</b>
<b>MAINTENANCE .....</b>	<b>41</b>
<b>PRODUCT SPECIFICATIONS .....</b>	<b>41</b>
<b>CERTIFICATION INFORMATION .....</b>	<b>43</b>
<b>COPYRIGHTS AND TRADEMARK NOTICE .....</b>	<b>44</b>
<b>DISPOSAL AND RECYCLING INFORMATION .....</b>	<b>45</b>
<b>DISCLAIMER .....</b>	<b>46</b>

MD8005 is a Tablet with touch screen. It supports Wi-Fi, bluetooth, camera function and third party software, Users can get access to over 450,000 apps and enjoy TV shows, movies, music and much more.

### Parts and Control

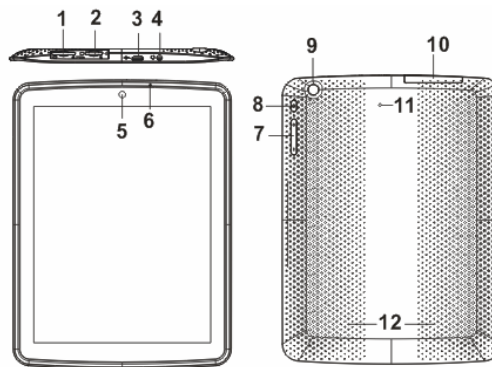

1. **Reserve**
2. **Memory card slot**
3. **USB jack-** for charging or data transfer.
4. **Earphone jack**
5. **Front Camera**
6. **Microphone**
7. **Volume +/- button** - Press to adjust volume level.
8. **Power button** - Press and hold for 3 seconds to turn on.

- 9. Rear Camera
- 10. Card door
- 11. Reset button
- 12. Speaker

### Packet Contents

- 1x MD8005 Tablet
- 1x USB cable
- 1x User Manual

### Power On and Off the device

- Press and hold the Power button for 3 seconds to turn the device on.
- It may take a moment for the device to turn on and load.
- Press and hold the Power button for 3 seconds, then it will appear a **Power off** confirmation window, tap **OK** to turn off the device.

### Charging the device

- You need to charge the device prior to use it for the first time or when battery power is low.
- Charge the device using AC adapter with output 5V, 1.5A.
- Charging through PC may not be able to fully charge the device due to the low output charging current from PC USB port.

- Please turn the device to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the device in standby mode (LCD off).
- When the power cable is connected to the device for charging, the device will enter into standby mode after remains idle for 60s. Press the [Power] button to wake up the device.
- The battery status is displayed at the top of the screen.



### Transferring Contents

#### From Computer

- The device supports USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the device, connect the device to PC via the supplied USB cable.
- Upon successful connection to PC, turn to the MD8005, on the status bar, flick upwards to display an ongoing list.
- Select **"USB connected"**, then tap on **"Turn on USB storage"** to enter USB mode and all operation will be halted.
- Go to **[My Computer]**, double click on the device's disk to open.
- Perform normal file management operation like

 
other USB device.

### From memory card

This unit supports Micro SD card up to 32 GB. **To Insert a Memory card**

Firstly open the card door, insert the micro SD card correctly with the contact pin facing downwards as illustrated below. Pushing the card into the memory card slot, then you should hear a click when the card is seated correctly. You may damage the card and the device if Micro SD card is not inserted correctly.

To remove Micro SD card, push the card once again until it clicks.

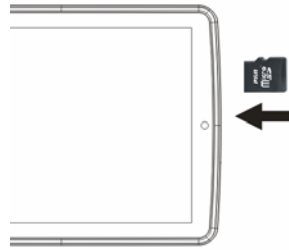

When a Micro SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content. Please avoid inserting or ejecting Micro SD card when other operation is

running as this may cause the system hang.

- Do not remove the card if the content inside the card is being played. This will halt the operation of the device and cause the device to restart.
- If the system is not responding, press **Reset** button to reset.



### Stand by /Wake up mode

 
Press **Power** button to enter Standby mode, then the device locks automatically.

Locking the device turns off the display to save your battery and to prevent unintended operation of the device.

To wake up the device, press **Power** button again, then press the Lock button and drag the slider.

### Home screen

When the device is turned on, it will enter into the Home screen.

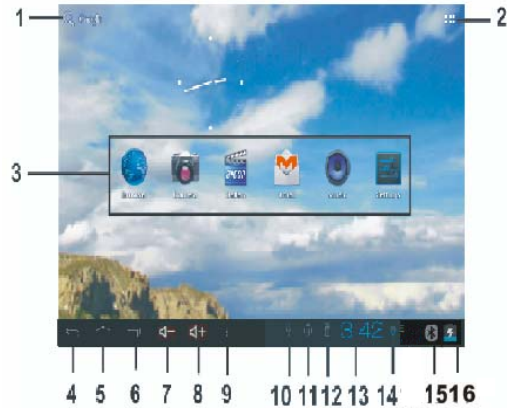


### Menu bar

1. Search bar for web browser
2. Main menu button
3. Widget & Shortcut button
4. Return button
5. Home button
6. Running application
7. Volume - button
8. Volume + button
9. Option Menu button

### Status bar


10. USB connection
11. USB debugging
12. Memory card indication
13. Time Display
14. Wi-Fi connection
15. Bluetooth indication
16. Battery indicator

Flick upwards at the status bar to display an ongoing list, tap  to display more status information.

### Customizing Home screen

#### Adding icons on homescreen

You can add shortcuts, widgets or folders to home screen.

To add icons on screen, tap  to enter Main menu, press and hold on the desired options to go to homescreen, then drag the icon to the desired place.


### Moving icons on the home screen

1. Touch and hold the icon to be moved until you see a shadow of the icon.
2. Drag the icon to the desired place.

### Removing icons on home screen.

Touch and hold the desired icon to be removed until it appear a “X” at the top screen, then drag the icon on “X”, when the icon turns red, release it to remove.

### Setting wallpaper for homescreen

Tap  → **Wallpaper**, select the desired picture as wallpaper.

### About the additional home screen

You can use up to five screens. Flick left or right to go to other home screen.

Go to the first Home screen: press the **Home** button.

### Main menu

All application icons are on the Main menu.







- On homescreen, tap  to show the Main menu.
- Tap **APPS** or **WIDGETS** tab to enter APPS or

Widgets list.

- Tap an icon on the Main menu to open the desired application.



### Touch screen or buttons

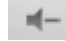- Tap an icon to open an application.
- Tap at the bottom of the screen to display the menu bar.
- At the Menu bar, tap  anytime to return to previous screen, press and hold to return to Home screen.
- Tap  anytime to return to Home screen.
- Tap  on the screen anytime to display the option menu.
- Tap  to show the running application.
- Tap  /  to adjust volume level.

### Scrolling

- Drag your finger up and down to scroll file list.
- Flick to scroll quickly.
- On webpage, drag up and down to scroll around the page (be careful for so as not to click the link) .
- Tap or touch anywhere on the screen to stop it immediately.

### Onscreen keyboard

Use the onscreen keyboard to enter text, such as text messages, or web addresses.

- Tap a text field to bring up the keyboard.
- Touch and hold on the text field to select an input method.



Uppercase key



Backspace key



Enter key



Input options



 
Numeric/punctuation/symbol key

### Connecting to the internet

#### Using Wi-Fi

**Turn on Wi-Fi:** From Main menu choose **Settings→Wireless&networks→Wi-Fi**, and tap the other end next to “OFF”. Then “ON” will appear when you have turn on the Wi-Fi.

**Join a Wi-Fi network:** From the detected network list, select a network, if necessary, enter a password and tap "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

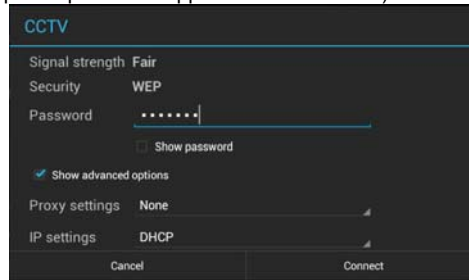

Select "**show advanced option**" to show more options.

Once you've joined a Wi-Fi network manually, it automatically connects to it whenever the network is in range.

### Switching Screen orientation

Screen orientation can be set to vertical or horizontal via the built-in G sensor.

- From Main menu, tap **Settings** → **Accessibility**, select **Auto-rotate screen**.



- Rotate the unit and the screen rotates too, automatically adjusting to fit the screen.

### Web browser



#### Voice search

Voice search enables you to speak instead of typing for the web searching.


- From **Main menu** or **Home screen**, tap on  to display voice search box.
- Say your search term when it appear “speak now”(If not, tap  on the top right), it will automatically recognize the voice and search the internet.
- The search results show up just as if you had typed the search term.

**Note:** Voice Search is not available in all languages.

#### View a webpage

- From **Main menu**, tap **Browser** to open web browser.
- Tap the address bar at the top of the screen.
- On address bar, type the web address and tap **Enter**.




- Tap the link on the webpage to open a new webpage.
- Drag up and down to scroll around the webpage.
- Double tap or pinch on the webpage to zoom in or zoom out.
- In zoom mode, drag left, right, up, down to move the webpage.
- The multiple webpage windows opened at a time are shown on the top screen. Tap on the desired window to enlarge to full screen mode.
- To return to the previous page, tap the  button.


**Notice:**

- To switch screen orientation, rotate the unit.
- Browser start page always defaults to Google home page.


**Add bookmark**

Tap  to add the current visited webpage as bookmark.


**Bookmarks List**

Tap  to show bookmarks list, tap a bookmark to open the webpage. Touch and hold the bookmark to display the option menu for bookmark.


- History

Access to view history lists. To remove these lists, tap , then select **Clear history**.


- Settings

Tap  to use more available function, including Privacy & security, Accessibility and so on.


### Refresh/Stop


Tap  to refresh on the current page, tap **X** to stop loading the current page.

### Forward

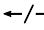
Tap  go to previous/next webpage screen.

### Using the option menu

  Tap  to display the browser option menu. Tap on the desired item to use webpage viewing control.

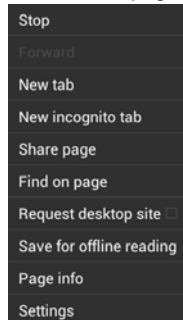


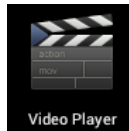

### Watching Videos





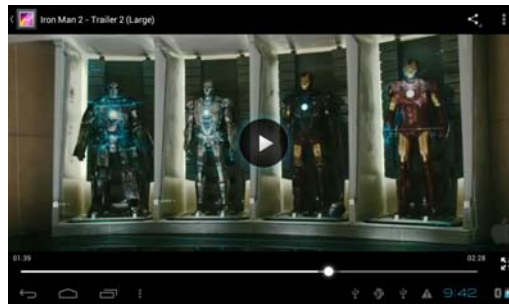 




#### Playing videos

- On the **Home screen** or **Main menu**, tap **Gallery**→**Video folder** to open video player.
- Drag up and down to scroll through the file list.
- Touch and hold on the selected video file to delete it.
- Tap to select a video file for playback.



 
Play or Pause a video	Tap  /  .
-----------------------	---

Skip to any point in a video	Drag the playhead on the progress bar.
Adjust the volume level.	Tap  /  or use the buttons on the side of MD8005.
Set display screen ratio	Tap  or  .
Share the video with others.	Tap  .
Display video menu	Tap  .
Return to the video browser screen	Tap  .

**Notices:**


- Video player supports subtitle file, please load the subtitle file to be displayed on the current video, unless the subtitle is integrated into the video itself.
- The Tablet supports subtitle of sub, ssa, srt, lrc format, encoded in UTF8 format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

### Playing Music



#### About music library

 From **Main menu**, tap **Music** to enter into music library.

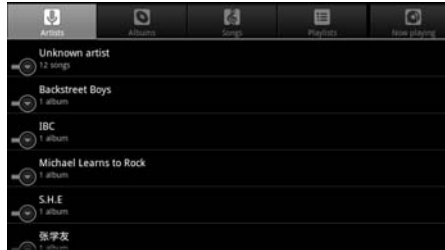

Sorting by artist  
album



Sorting by



All songs  
Playlist






Sorting by




Return to Now playing screen



### Playing songs





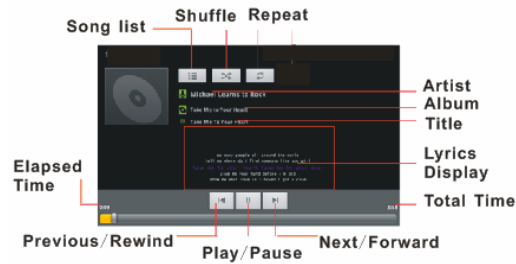 







1. From Home screen or **Main menu**, tap **Music** to enter music library.
2. Tap on a desired tab to enter song list.
3. Drag up and down to scroll the song list.
4. Tap the desired songs to start playing.


**Note:** If you want to exit music mode, tap  to pause, then tap  or .

### Controlling Song Playback



Pause	or	play	Tap  / 
-------	----	------	---


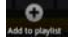
songs.	
Play previous or next song.	Tap  /  .
Fast rewind or fast forward	Touch  and hold  .
Skip to any point in a song	Tap anywhere or Drag the playhead on the progress bar.
Adjust the volume level.	Tap  /  button or use the volume buttons on the unit.
Display the current song list	Tap  .
Set shuffle mode	Tap  .
Set Repeat mode	Tap  .
Display the music playback menu	Tap  .
add the current playing song to playlist	Tap  → <b>Add to playlist.</b>
Delete the current song	Tap  → <b>Delete.</b>

To return to the Media Library	Tap  .
--------------------------------	---


### Using the playlist

Use the playlist to manage the songs in the library


#### Creating a new playlist

In the music playback screen, tap  →  → **New**, and enter the name for the new playlist, then tap **Save**.

#### Adding the current song into playlist

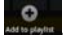In the music playback screen, tap .  
Tap on a desired playlist, then the current song has been added into the selected playlist.

### Viewing photos

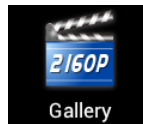 




On the **Home screen** or **Main menu**, tap **Gallery** → **Photo folder** to view photo.

#### Thumbnail View

 Thumbnail view displays the catalog as a table of thumbnail images in adjustable sizes.

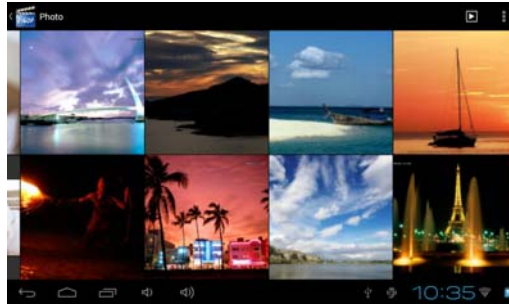






- Tap on the desired photo to full screen view.
- Press  to start photo slide show, press anywhere on the screen to stop the slide show.
- Press and hold the desired photo to select it and press again to deselect.
- In thumbnail view mode, press  to use the option menu.










**Select item:** select multiple photos

**Group by :** sort the photo list

- To delete photo files, press and hold the desired photo, or press  → **Select item** to select the photo to be deleted, then press .
- In full screen mode, press  to return to thumbnail view mode.

### Start to view photo

 
In full screen view, tap on the screen to show / hide the control bar.

View the previous / next photo.	Flick Left/Right on the screen.
Zoom in or zoom out	Use two fingers to pinch on the viewing screen.
Set slide show effect	Tap  → <b>Slideshow</b>
Edit the picture	Tap  → <b>Edit</b>
Rotate the photo by 90 degrees clockwise, counterclockwise	Tap  → Rotate left/Rotate right
Crop the picture	Tap  → <b>Crop.</b>
Set the photo as wallpaper	Tap  → <b>Set as picture wallpaper.</b>
Display photo information	Tap  → <b>Details</b>
Share the photo with others.	Tap  .
Delete or save photo	Tap  .
Return to thumbnail mode.	Tap  .





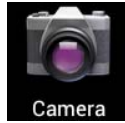

### Notes:


- In zoom in /out mode, drag your finger up, down, left or right to move photo.
- Rotate the unit to switch screen orientation.

### Using Camera






From **Main menu**, tap **Camera** to enter camera mode.






- Tap  to select Camera mode, tap  to switch to Camcorder mode.
- Tap  to switch between Front camera and Rear camera.
- Press the shutter button  to take photo or record video, and photo/video file will be saved automatically.
- Tap , then press the shutter button to take the first image and move the camera in one direction to overlay focus area to the blue square.
- Tap , then press the shutter button and move the camera to the right.

- Tap  to display setting menu.
- Tap the thumbnail icon at top right to view the photo or play back the video.
- Press the **Return** button to exit from the camera mode.

### Camera settings

- Tap  to set White balance.
- Tap  to set color effect.
- Tap **SCN** to set scene mode.
- Tap  to set Store location, Exposure, Self timer, Picture size, Anti-flicker.

 
### Camcorder settings

- Tap  to set White balance.
- Tap  to set color effect.
- Tap  to set background effect.
- Tap  to set time lapse interval.
- Tap  to set Store location, Video quality, Exposure, Scene mode, Video duration, Microphone, Anti-flicker, Audio mode.






### Sound Recording

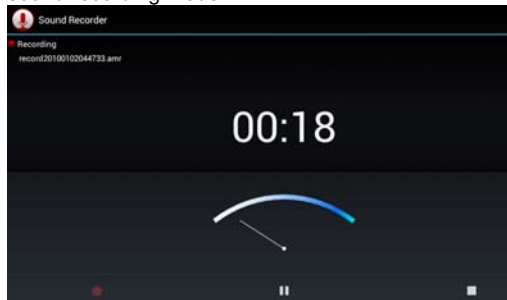

From **Main menu**, tap **Sound Recorder** to enter sound recording mode.



#### Recording a voice file

- Press  to start recording a voice file.
- Press  to pause the recording, tap  to resume recording.
- Press  to stop recording.
- Press  to play back the current recorded voice file.

- It will display a message window to choose “**Save**” or “**Discard**”, choose “**Save**” to save the voice file; choose “**Discard**” to discard the voice file.
- A recording time indicator will appear during the recording.
- Repeat the above steps to record more voice files.

### Play back the voice file

- The record is saved in Record folder, open “Explore”, then open Record folder, tap on the desired recorded file to be played .

### Gmail



### Setting up Gmail Accounts

Prior to the use of e-mail, you need to set up the mailbox account.

1. From **Main menu**, tap **Gmail→Sign In**.

2. Enter your user name and password, tap **Sign In** to continue.
3. Set P03/IMAP server (If necessary, obtain the required information from your network administrator, then tap **Next** to check server setting.

### Using the mailbox

- In the mailbox, drag up and down to scroll the mail list.
- Tap to open the mail you want to read.
- On the mail list, touch and hold on the mail to display option menu.
- Use the option menu, the available options are: Read, Archive, Mute, Mark read, Delete, Add bar, Change labels.


#### • About the Mail menu

In the mail list, tap  to display a mail menu.

- Refresh: Refresh Mail
- Compose: Write a new mail
- Account: View all e-mail accounts
- Go to labels: go to home screen of the Gmail
- Search: Search for the desired mail
- Setting: Set email account

### Delete mail account

1. In the mail list, tap  to display a mail menu.

2. Tap **Accounts** to display email account.
3. Tap  to display a option menu, select **Account settings**.
4. Tap on the mail to be deleted to go to next screen, then tap on **Remove account**.

**Notice:**

- You can set multiple mail accounts, tap Add account.
- Each time you use mail, the system will automatically jump to the default account.

### File Manager



- From **Main menu**, tap **File Manager**.
- Tap to select **Internal / TF card** at the top bar to enter.





- Drag up and down to scroll through the file list to select the desired folder or file.
- Touch and hold the selected file or folder show the edit menu.
- To open a file or folder, tap on the file or folder.

### About the tool bar and the Edit menu

#### Tool bar



Create a New folder





Edit menu



Sort by file type, name, size, time.

### Edit menu

Tap  to show an edit menu, then tap  or touch and hold on the selected file or folder to show more available options.



**Select all**



 
**Deselect**



**Copy**



**Delete**

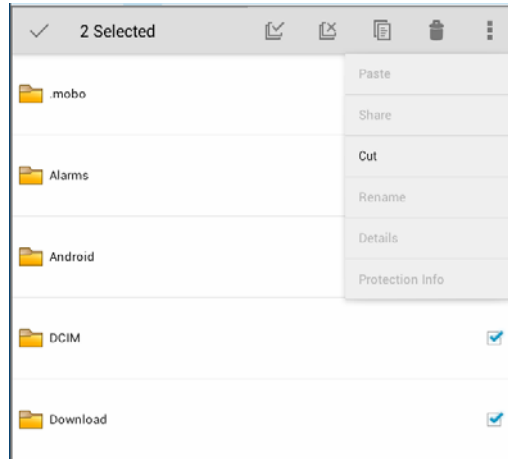

### Creating a new folder

1. Go to the desired mother directory.

2. Tap  .


3. In file name field, use Onscreen keyboard to enter a new folder name.


4. Tap **OK** to confirm.


### Select multiple files or folders

You can select multiple files or folders at the same time.

1. Go to the desired file or folder.


2. On the tool bar, tap  .



3. Tap the desired files/folders to be selected, then they will be marked with a “√” (Tap  to select all file or folders.). To cancel the selected items, tap on

them again or tap  .

### Copy files or folders



1. From the file list, select the desired files/folders

to be copied or moved, then tap  .

2. Go to the target folder that you want to put the selected file or folder, tap  →  → **Paste**.

Note: it may take longer time to paste files/folder with big file size.

### Move files or folders


1. From the file list, select the desired files/folders to be copied or moved, then tap  → **Cut**.
2. Go to the target folder that you want to put the selected file or folder, tap  → **Paste**.

Note: it may take longer time to paste files/folder with big file size.

### Rename the file or folder



1. From the file list, touch and hold the desired file or folder to show the edit menu, select **Rename**.
2. In file name field, use Onscreen keyboard to enter a new file name.
3. Tap **Done** to confirm.

### Delete files or folders

1. From the file list, select the desired files/folders to be deleted, then they will be marked with a “√”.
2. Select **Delete**  to display a message window..
3. Select **OK** to confirm the deletion.

Note: if only copy/move/delete one file/folder, you can touch and hold the desired file or folder to show the Edit Menu, then follow the above steps to do.

### Share file via email

From the file list, select the desired files/folders to be shared, then tap  →  → **Share**.

### Managing third party applications

This unit support third party applications (such as MSN, etc.), you can install or uninstall applications for the system.

#### Download and install the application

1. Download the desired applications into your computer.
2. Copy the downloaded applications to the unit (you can also download the desired applications from the browser in your MD8005 Tablet.).
3. Disconnect this unit from the computer.

**Note:** The system only supports XXX.apk format applications to be installed.

4. From **Main menu**, tap

**Settings**→**Security**→**unknown source**.


5. In Explorer, find the directory where the application is placed to tap to start the installation.
6. After finishing the installation, you will see the Applications on the Main menu.

### Uninstall application

1. From the **Main menu**, then tap **Settings→ Apps**.
2. Select the application you desire to uninstall, then tap **Uninstall**.

Note: The default applications can't be uninstalled from the unit.



From Main menu, tap **Clock** →  **Set alarm** to start clock alarm setting.

### Set an alarm:


On clock setting screen, tap "**Add alarm**" to start to alarm setting.

Note: You can set multiple alarms.

Adjust any of the following settings:

 
- Tap **Time** to set the alarm time, tap + or - button to adjust the desired hours and minutes. then tap **Set** to confirm.
- Tap **Ringtone** to choose the ringtone that sounds when the alarm goes off.
- Tap **Vibrate** to enable vibrate mode.
- Tap **Repeat** and choose the days to set the alarm to repeat on certain days.
- Tap **Label** to give the alarm a description. It displays the label when the alarm sounds.

If at least one alarm is set and turned on, it will appear “**Alarm set:Time**” on home clock screen.

**Turn an alarm on or off:** tap the  next to the desired alarm to turn the alarm on or off. If an alarm is set to sound only once, it turns off automatically after it sounds. You can turn it on again to reenale it.

**Change settings for an alarm:** tap the time of the desired alarm to be changed.

**Delete an alarm:** tap the time of the desired alarm to be deleted, select **Delete** to delete the alarm.



From Home screen or Main menu, choose **Settings**, then tap the desired items to be configured to start the Setting.

### **Wireless & networks**

#### **Wi-Fi**

The Wi-Fi settings allow you manage networks, such as turn Wi-Fi on and join Wi-Fi networks.

**Turn on Wi-Fi:** From Main menu choose **Settings**→**Wireless & networks**→**Wi-Fi**, and tap the other end next to **"OFF"**. Then **"ON"** will appear when you have turned on the Wi-Fi.

**Join a Wi-Fi network:** From the detected network list, select a network, if necessary, enter a password and tap **"Connect"** to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

Select **"show advanced option"** to show more network control options.

If more than one previously used network is in range, MD8005 joins the one last used.

When MD8005 is connected to a Wi-Fi network, the Wi-Fi icon at the top of the screen shows connection strength.



### Bluetooth

**Turn on Blue tooth:** From Main menu, choose **Settings→ Wireless & networks→Bluetooth**, and tap the other end next to “**OFF**”. Then “**ON**” will appear when you have turned on the bluetooth.

**Join the desired bluetooth network:** From the detected bluetooth device list, select the desired bluetooth device name for pairing with MD8005..

### More

Tap **More** to use more wireless network control including setting Tethering & Portable hotspot, Wi-Fi direct.

### Audio profiles

Choose the appropriate profile for your incoming calls. You can choose between "General," "Silent," "Meeting," "Outdoor," or your own custom profile.

To customize your audio profile, Tap **ADD** on the top right.

### Display

Customize the display settings, including the settings for Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size.

### Storage

View the memory status of Micro SD card and internal storage, Erase internal storage.

### **Battery**

View the battery status of MD8005.

### **Apps**

Allows you to manage the applications sorted by Download, On SD card, Running and All.

### **Accounts & sync**

Allows you to add new account and sync all the accounts.

### **Location service**

Let apps use data from sources such as Wi-Fi to determine your approximate location. Moreover, let Google use your location to improve search results and so on.

### **Security**

Allows you to set Screen security, Encryption, Passwords, Device administration and Credential storage.

### **Language & Input**

Set region and language, keyboard, text input methods, speech, Mouse/Track pad.

### **Backup & reset**

Allows you to backup account, app data, Wi-Fi passwords, and other settings to Google servers. Additionally, you can erase all data on MD8005 and reboot into the system in Recovery mode.

### **Date & Time**

Set date, time, time zone and display format.

### **Schedule power on/off**

Set the time and repeat for auto power on/off. Flick up and down to adjust the hour and minute, then tap **Set** and **Done** to confirm the setting.

### **Accessibility**

Allows you to install web scripts, set large text, power button ends call, auto-rotate screen feature, speak passwords, touch and hold delay.

### **Developer options**

Helps you manage the MD8005 system, such as USB debugging, Stay awake, HDCP checking and so on.

### **About tablet**

Display the information about MD8005, such as product status, model number, firmware version, Build number and so on.

If the device does not function as it is expected, please try the following steps.

21

**The device is not responding or can't be turned on.**

- Reset the device by pressing the **Reset** button. The device will be forced shutdown if it is on and you are required to restart the device again.
- Battery has been fully depleted. Please charge the device via USB or USB AC Adapter.

**Battery Life seems short**

- The operating temperature is below 5°C, this is due to the characteristics of battery and not a malfunction.
- The battery is not used for prolonged period. Please recharge the battery of the device again
- The battery is not fully charged. Please charge the device for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

**The device can not be operated during USB connection**

- The device cannot be operated while it is connected to PC.
- At status bar, flick upwards to display a Ongoing list, then select "**Turn off USB storage**" to resume operation.

### **Maintenance**

- If Tablet does get wet, turn off Tablet immediately. Wait for Tablet to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Tablet in bag, keep Tablet in the protecting case to avoid scratches.
- If Tablet needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

### **Product Specifications**

#### **Display**

8 inch TFT-LCD Display, 1024x768 pixels  
High resolution capacitive multi-touch screen

#### **Wifi**

802.11 b/g/n

#### **System Properties**

Processor : MTK 8377  
Architecture :Cortex A9 (1GHz)  
RAM Memory :DDR3 1GB  
Operating System:Android 4.0

**Storage memory**

Built in memory: Up to 32GB

Supports Micro SD card up to 32GB.

**Media File Format supported**

Ebook: PDF, TXT, CHM, DOC, DOC, Exel, Epub, RTF, FB2

Audio: MP3, WMA, APE, FLAC, AAC, WAV, OGG

Photo: JPG, PNG, BMP, GIF

Video: Support up to 1080 p 720 p: AVI, MKV, MP4, MOV, 3 gp. 1080 p decoder. Part of the special format in player can support

**Connectivity**

Data transfer: Micro USB 2.0 High Speed

Audio: 3.5mm audio jack

Record : Microphone

Storage: Micro SD Card

**Miscellaneous**

Built in speaker

G sensor

Web Camera(Front camera-0.3 megapixel,Rear camera-2.0 megapixel)

Voice recording

Vibration actuator

Clock / Date

Real time battery indication

**Battery life**

Reading – more than 9 hours

Music – up to 16 hours( with backlight off)

Video- more than 8 hours

Web browsing : more than 4.5 hours

Standby time : 7 days

**Charging**

Power: DC 5.0V, 1.5A

Duration: 4 hours (approx)

**Physical properties**

Dimension: 200.35\*155\*10.7mm

Weight: 400g (approx)

※ Design and specifications are subject to change without prior notice.

**Certification information**

**On FCC**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### On CE



The symbol means that the unit complies with European safety and electrical interference directives.

### Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations,



related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.

All the brand and product names are trademarks of their respective companies.

### **Disposal and Recycling Information**

Your Tablet must be disposed of properly according to local laws and regulations.

Because this product contains a battery, the product must be disposed of separately from household waste. When your Tablet reaches its end of life, contact your local authorities to learn about recycling options.

#### **Battery Replacement:**

The rechargeable battery in it should be replaced only by an authorized service provider.



This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

**Disclaimer**

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.