


## **RC03 Motion Remote Control**

### **Quick Start Guide**

## Parts and Control

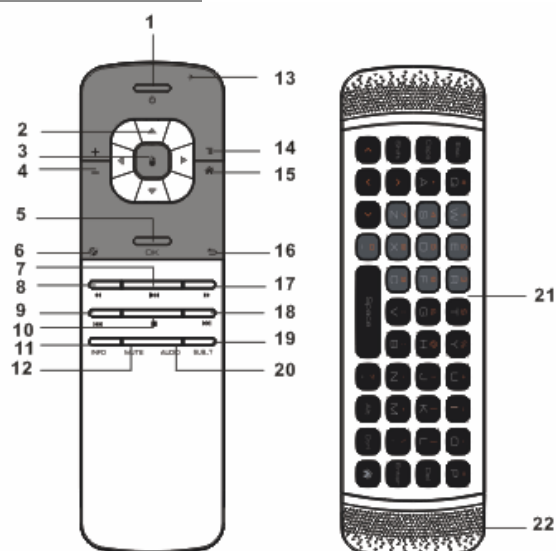

- 1. STANDBY button**  
– press to go to standby/wake-up mode
- 2. Directional buttons**  
– press to move the cursor left/right/up/down
- 3. Wireless Mouse key**  
– press to confirm the selection of mouse
- 4. Volume button**

– press to increase or decrease the volume.

**5. OK button**

– press to confirm the selection

**6. Web Browser button**

– press to launch the web browser.

**7. PLAY/PAUSE button**

– press to play or pause the playback

**8,17. Skip button**

– press to fast rewind/ fast forward

**9,18. PG.UP/DN button**

– press to go to previous/next song/video

**10. STOP button**

– press to stop the playback

**11. INFO button**

– press to display the media file information.

**12. MUTE button**

– press to mute the TV box.

**13. LED indicator**

– When the button on the unit is pressed, the LED indicator will blink in blue.

**14. MENU button**

– press to display the option menu

**15. HOME button**

– press to return to home screen

**16. Return button**

– press to return the previous screen

### 19. SUBTITLE button

– press to change subtitle

### 20. AUDIO button

– press to select Audio mode

### 21. Wireless Keyboard

– press on the text field to use the keyboard



### 22. Battery door

## Using the remote control

- Insert the supplied USB receiver into the USB port in TV or PC.



USB Receiver

- When you use the Remote control for the first time, press the  Home button and  Web browser button to enable the function of the remote control.
- To use the remote control, point the remote control on the display screen and press the buttons.
- Move the Remote control and the mouse cursor moves

too, press **Mouse key** to confirm the selection of mouse.

- When the unit is not operated for 30 seconds, then the wireless mouse will go to standby mode. Do any operation of the unit to wake it up.
- When the button on the remote control is pressed, the LED indicator will blink in blue.
- The recommended effective distance for remote operation is about 5 meters.

### **Batteries Replacement**

When the batteries become weak, the operating distance is greatly reduced and you will need to replace them.

1. Open the battery door at the bottom of the unit.
2. Take out the two “AAA” size batteries.
3. Insert two new equivalent batteries.

### **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Quick Start Guide

---

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.