

EASYCAR

We promise you to offer our best products with high quality.


We sincerely appreciate your purchasing our Car Alarm Systems. Our car alarm systems are produced with strict quality control and international standards, and with all the tests including extreme temperature, shocks, vibration and dropping.

We are sure of satisfying your requirements through the above process.

We wish you will read this manual very carefully to use our car alarm system properly. please keep this manual at your hand to use it, if needed.



Remote Outside Name

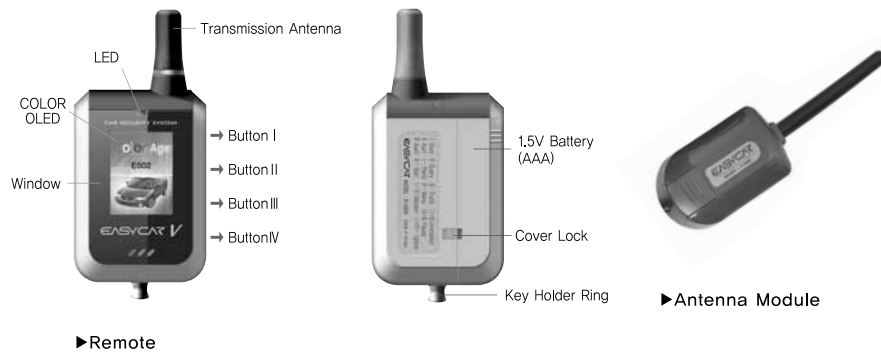

Safety Information

※ Please take these safety precautions.

1. We are not responsible for any injuries or damages resulting from your wrong use of our system.
2. When remote start, place the gear in Parked or Neutral position and set Emergency brake or Foot brake.
3. In case of manual transmission vehicle, please do not remote start in any other position of gear except Neutral or Parked position.
We shall not be responsible for any damages or consequences resulting from this.
4. The transmitting(TX) and receiving(RX) distance may be different in accordance with radio signal environment.
5. When you find any defectives, do not open, repair and remodel the system, but ask the seller to repair it.
6. We shall not be responsible for any theft and damages of your vehicle, since this is a subsidiary and convenient system only.
7. The installation shop that installed our system to your vehicle shall be responsible for any damages and accidents resulting from incorrect installation.

CONTENTS










Greeting	1	3-2, Trunk sensing (option setting)	13
Remote Outside Name	2	4. Query function	14
Safety Information	3	5. Panic mode	14
Contents	4	6. Real time remote paging function.	15
COLOR OLED	6	6-1, Owner call mode	15
Remote ButtonFunction	8	6-2, Shock sensing report mode	16
		6-3, Theft report mode	16
FUNCTION		7. Auxiliary output (option installation)	17
1. Arm/ Disarm	10	7-1, Aux 1	17
1) Door Lock (Rearm)	10	7-2, Aux 2	17
2) Door Unlock (Disarm)	11	8. Vibration On/Off	18
2. Auto Start(E502AS Only)	11	9. Adjusting the sensitivity of shock sensor	18
2-3, Emergency Brake(Option setting)	12	10. Reservation mode(Manual transmission only) 19 (E502AS Only)	
2-4, Prevent from auto start for your safety	12	10-1, What reservation mode is:	19
2-5, Diagnose problems with auto start	13	10-2, Automatic Reservation mode(Basic setting)	20
3. Trunk open	13	10-3, Manual reservation mode(option setting)	20
3-1, Trunk open	13	11. Easy door lock(Basic setting)	21
		11-2, How to input the password	21


 

11-3, Door Lock(arming)/Unlock(disarming)	22	2. Option setting(E502AS Only)	33
11-4, LED Display	22	1) Length of starting	33
12. Knock sensor (option setting)	23	2) Length of turbo	33
13. LED indicator	23	3) Reservation method	34
14. Battery capacity	23	4) Siren	35
15. No Communication	24	3. Carkeeping book(Option setting)	35
		1) Engine oil	35
		2) Air filter	36
		3) Gearbox oil	37
		4) Brake pad	38
		4. Factory setting	39
		1) Setting current time	40
		2) Reservation time(E502AS Only)	40
		3) Distance confirmation, running distance	41





MENU









1. Setting up the functions	26
1) Silent siren mode (On/Off)	26
2) Valet function	27
3) Passive mode	27
4) Auto door	28
5) Driving door lock(Ignition Lock)	30
6) Shock sensing	30
7) Timer start mode	31
8) Turbo mode	31
9) Owner call	32

ICOLOR OLED

S Icon	OLED Function
	Transmitting
	Reservation On/Off(Manual Vehicle)
	Door Lock(Arm)
	Door Unlock(Disarm)
	Car Siren is turned ON
	Timer Start On/Off
	Turbo Timer Mode On/Off
	Remote Battery status.
	Remote Vibration

S Icon	OLED Function
	Clock
	Auto Door
	Valet Mode On/Off

O Icon	OLED Function
	Confirmation for Engine Start
	Arm
	Disarm
	Knock paging mode

  
O Icon	OLED Function
	Fail
	Theft
	Shock sensor has been triggered
	Panic
	Parking Light
	Trunk is Open
	Temperature
	Option Mode

! CAUTION

NEVER use our systems except for car start and alarm purpose!!!
 Since our system is a precise instrument that is so weak in external shock, do not drop it to the ground and keep it away from the children.
 Do not keep the Remote near humid place and water, as it is not water-proof.

Remote Button Functions

2WAY BUTTON		1WAY BUTTON	Press(sec)		Function	2WAY BUTTON		1WAY BUTTON	Press(sec)		Function
OLED	LCD		2way	1way		OLED	LCD		2way	1way	
I	II		0.5	0.5	Door Lock(Arm)/Door Unlock(Disarm)		I+II		0.5	0.5	Silent Siren Mode ON/OFF
II	III		0.5	0.5	AUX1		I+III		0.5	0.5	Valet Function ON/OFF
III	IV		0.5	0.5	AUX2		I+IV		0.5	0.5	Driving Door Lock ON/OFF
IV	I		0.5	2	Query Function		II+III		0.5	0.5	Passive ON/OFF
I-	I-		2	2	Panic		II+IV		0.5		Owner Call ON/OFF
II-	III-		2	2	Auto Start ON/OFF		III+IV		0.5		Shock Detect ON/OFF
III-	IV-		2	2	Trunk Release		(I+II)-		2		Change of Current time
IV-			2		Menu		(I+III)-		2		Change of Reserved timer
II+II	II-		0.5/2		Vibration ON/OFF		(II+IV)-		2	2	Timer ON/OFF
II+III			0.5		Animation		(III+IV)-		2	2	Turbo ON/OFF
II+III			0.5		Auto Door Pause						
II+IV-	(II+IV)-		2	2	Option Mode						

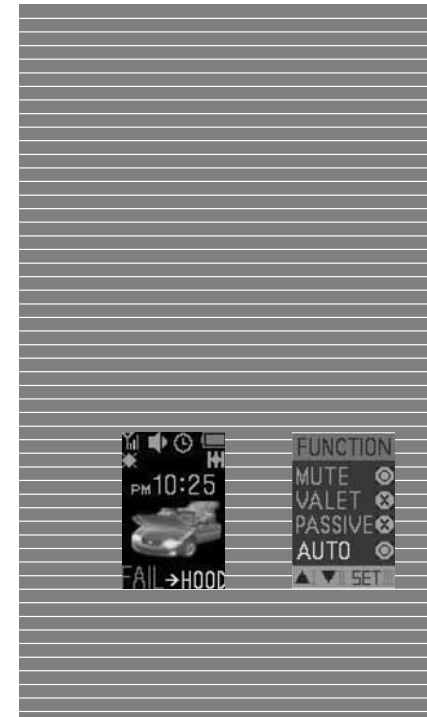

FUNCTION




FUNCTIONS

1. Arm/Disarm

1) Door Lock(Arm)

You can lock and arm your vehicle by pressing button 1 for 0.5 second.
The siren chirps and the parking lights flash once each.
LED which is the front side of remote controller blinks every 3 seconds during Arm.
If [FAIL] is displayed, try again after closing all the doors when 'DOOR' appears.
If 'HOOD' displayed, close hood, or 'TRUNK' displayed, close trunk and try again.

Note

The remote chirps 7 times and blink  on the remote OLED to warn that battery of your vehicle discharges, if you lock the doors while the tail lights are turned on during arming.

2) Door Unlock (Disarm)

You can open and disarm your vehicle by pressing button 1 for 0.5 second.
The siren chirps and the parking lights flash twice each.
The numbers of remote chirps and flashes of parking lights indicate you the status of your vehicle during parking. LED which is the front side of remote controller keeps off-state during Disarm.
-Twice of chirps and flashes of parking lights & [DISARM] is displayed on OLED: There was no problem during parking.
-Four times of chirps and flashes of parking lights & [MEMORY] is displayed on OLED: There were shock, door open, hood open and trunk open during parking.
※ When [AUTO DOOR], [PASSIVE MODE] are off, doors are locked and armed automatically if you don't open the door within 1 minute after disarming by pressing button 1.

2. Auto Start (E502AS Only)

2-1 2-1. Press button 11 for 2 seconds, [START] appears, then remote chirps and parking lights flash once each.
If it fails, the system tries auto start maximum 3 times automatically.

When it works, [SUCCESS] appears for 5 seconds, and the remnant time of auto start is displayed on OLED for 5 seconds.

The engine running time will run for 15 minutes basically. You can change it to 25 minutes by option setting. You can press button II for 2 seconds to turn it off.

- 2-2 Open the door, insert the key, turn it to On position after auto start.
If you want to stop the auto starting, press the foot brake.

2-3 Emergency Brake(Option setting)

Manual transmission vehicle needs Reservation mode for auto start.
In this case, Emergency brake should be ON.

2-4 Prevent from auto start for your safety.

The following cases prevent your vehicle from auto starting for your safety.

- ❶ If trunk is open.

Vehicle		Remote
Number of times	Cause of error	Reason of fail
1	Engine on	Start
2	Key On	Start
3	Door open	Door
4	Trunk open	Trunk
5	Foot brake on(export)	
6	Hood open	Hood
7	Reservation Off (Manual transmission only)	Reservation
8	Emergency brake off (Manual transmission only)	Brake

- ❷ If hood is open.
- ❸ If emergency brake is off. (for manual transmission vehicle only)
- ❹ If panic mode is activated.
- ❺ If valet mode is activated. (refer to 'menu')

2-5 Diagnose problems with auto start

If there is a problem in auto start, [FAIL] is displayed and the cause for the error will be indicated on remote. And you will hear 3 times of chirps and the cause for the error will be indicated by the number of times parking lights flash in 2-3 seconds when you try auto start.

3. Trunk open

3-1 Trunk open

Press button III for 2 seconds to unlock the doors and open the trunk with twice of chirps and parking lights flashes.

3-2 Trunk sensing (option setting)

If trunk is open, arming(door lock) your vehicle by pressing button I is impossible and