


Beautiful™

Kitchenware

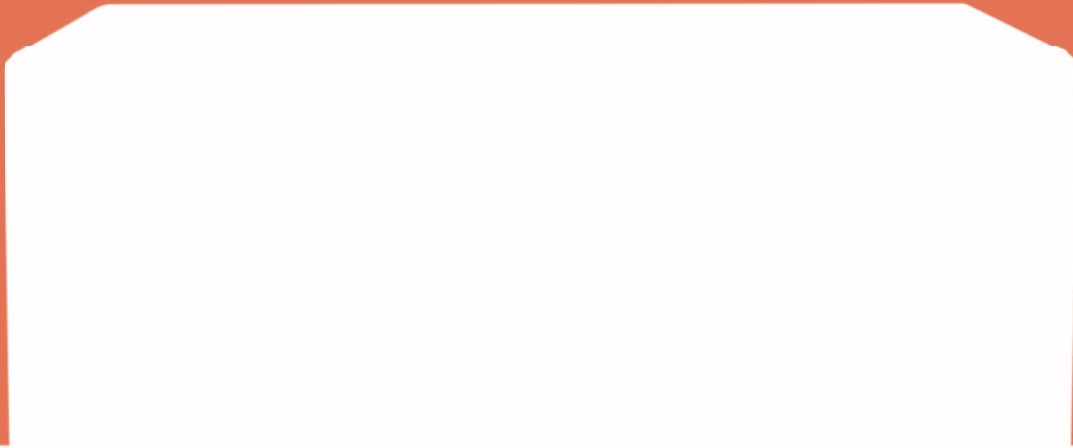

Sensor Microwave Oven with Touch-Activated Display
Instruction Manual

Horno de microondas con sensor y pantalla táctil
Manual de instrucciones

Table of Contents

Section 1: Safety

Precautions to Avoid Possible Exposure to Excessive Microwave Energy	4
CALIFORNIA PROPOSITION 65 WARNING	5
Important Safety Instructions.....	5-10
Grounding Instructions.....	10
Electrical Requirements.....	11
Power Cord	11
Installation Guide	12
Cooking Utensils Guide	13-15

Section 2: Instructions

Getting to Know Your Sensor Microwave oven.....	17
Touch-Activated Display Control Panel	18-19
Before Using for the First Time	20
Setting the Clock	20-21
Timer	21
Express Cooking.....	21
Microwave Cooking.....	21-22
Time Defrost	22-23
Weight Defrost.....	23
Sensor Cook	24
Sensor Reheat.....	24-25
Auto Cook	26
Child Lock.....	27
Mute Function.....	27
Clean and Care.....	27-28
Product Warranty.....	28-29
Warranty Registration	30

Section 1

Safety




Precautions to Avoid Possible Exposure to Excessive Microwave Energy

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any bent),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

SAVE THESE INSTRUCTIONS


California Proposition 65 Warning

CALIFORNIA RESIDENTS ONLY-

 WARNING: This product can expose you to chemicals including styrene, which are known to the State of California to cause cancer, and bisphenol A (BPA), which are known to the State of California to cause birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov

SOLO RESIDENTES DE CALIFORNIA

 ADVERTENCIA: Este producto puede exponerlo a productos químicos, incluido el estireno, que en el estado de California es cancerígeno, y al bisfenol A (BPA), que el estado de California considera que causan defectos de nacimiento u otros daños reproductivos.

Para obtener más información, vaya a www.P65Warnings.ca.gov

Important Safety Instructions

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "Precautions to Avoid Possible Exposure to Excessive Microwave Energy" on page 4.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "Grounding Instructions" on page 10.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Do not operate the oven when empty.
6. Some products such as whole eggs and sealed containers- for example, closed glass jars- could explode and should not be heated in this oven.
7. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
8. As with any appliance, close supervision is necessary when used by children.
9. To reduce the risk of fire in the oven cavity:
 - a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.

- c) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
10. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
 11. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when a spoon or other utensil is inserted into the liquid. To reduce the risk of injury to person:
 - a) Do not overheat the liquid.
 - b) Stir the liquid both before and halfway through heating it.
 - c) Do not use straight-sided containers with narrow necks.
 - d) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - e) Use extreme care when inserting a spoon or other utensil into the container.
 12. Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.

13. Do not cover or block any openings on the appliance.
14. Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
15. Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
16. Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
17. This appliance should be serviced only by qualified service personnel, contact nearest authorized service facility for examination, repair, or adjustment.
18. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
19. This equipment has been tested and found to comply with Part 18 of the FCC Rules. Operation is subject to the following two conditions:
 - a) This device may not cause harmful interference.
 - b) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

20. As with any appliance, close supervision is necessary when the microwave oven is used by children.
21. If material inside of the oven should ignite, the oven door should be kept closed, the appliance turned off, the power cord disconnected, or the power shut off at the fuse or circuit breaker panel.
22. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - a) Reorient or relocate the receiving antenna.
 - b) Increase the separation between the equipment and receiver.
 - c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - d) Consult the dealer or an experienced radio/TV technician for help.

23. The microwave should be serviced only by qualified service personnel. For service and repair, please contact our Customer Support Center at 1-877-358-2387.

Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING!-- Improper use of the grounding plug can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded, and if it is necessary to use an extension cord, use only a 3-wire extensioncord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

NOTES ON ELECTRICAL REQUIREMENTS


The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and grounded.

NOTES ON THE POWER CORD

1. A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If long cord or extension cord is used:
 - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord must be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

Installation Guide

1. Make sure that all the packing materials are removed from the inside of the door.
2. The microwave oven must be placed on a flat, stable surface.
3. For correct operation, the oven must have sufficient airflow. Allow minimum 8 inch (20.32cm) of free space necessary above the top surface of the oven and 2 inch (5.08cm) at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
4. The appliance should only be used on a countertop over 3 feet (91.6cm) above the floor.
5. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
6. Make sure that the power cord is undamaged and do not run under the oven or over any hot or sharp surface.
7. The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.

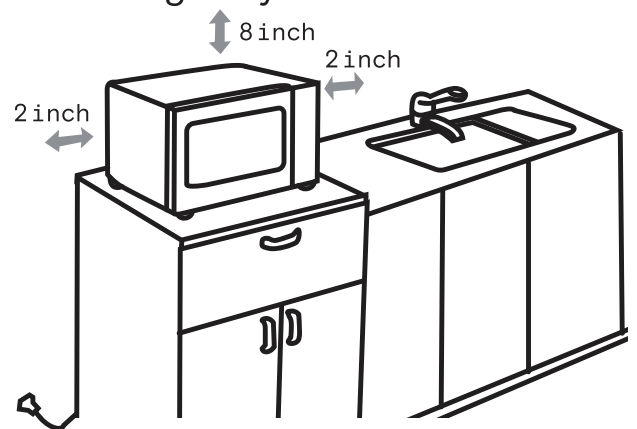

Cooking Utensils Guide

This section lists which utensils can be used in this microwave, which have limited use for short periods, and which should not be used in this microwave.

RECOMMENDED

Microwave browning dish – Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

Microwavable plastic wrap – Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

Paper towels and napkins – Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

Glass and glass ceramic bowls and dishes – Use for heating or cooking.

Paper plates and cups – Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

Wax paper – Use as a cover to prevent spattering.

Thermometers – Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

LIMITED USE

Aluminum foil – Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful. You should keep distance of 1 inch (2.54cm) between aluminum foil and cavity.

Ceramic, porcelain and stoneware – Use these if they are labeled "Microwave Safe". If they are not labeled, test them to make sure they can be used safely.

Plastic – Use only if labeled "Microwave Safe". Other plastics can melt.

NOT RECOMMENDED

Glass jars and bottles – Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

Paper bags – These are a fire hazard, except for popcorn bags that are designed for microwave use.

Styrofoam plates and cups – These can melt and leave an unhealthy residue on food.

Plastic storage and food containers – Containers such as margarine tubs can melt in the microwave.

Metal utensils – These can damage your oven. Remove all metal before cooking.


Note:

Should you wish to check if a dish is safe for microwaving, place the empty dish in the oven and microwave at high power level for 30 seconds. A dish which becomes very hot should not be used.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS


Section 2

Instructions

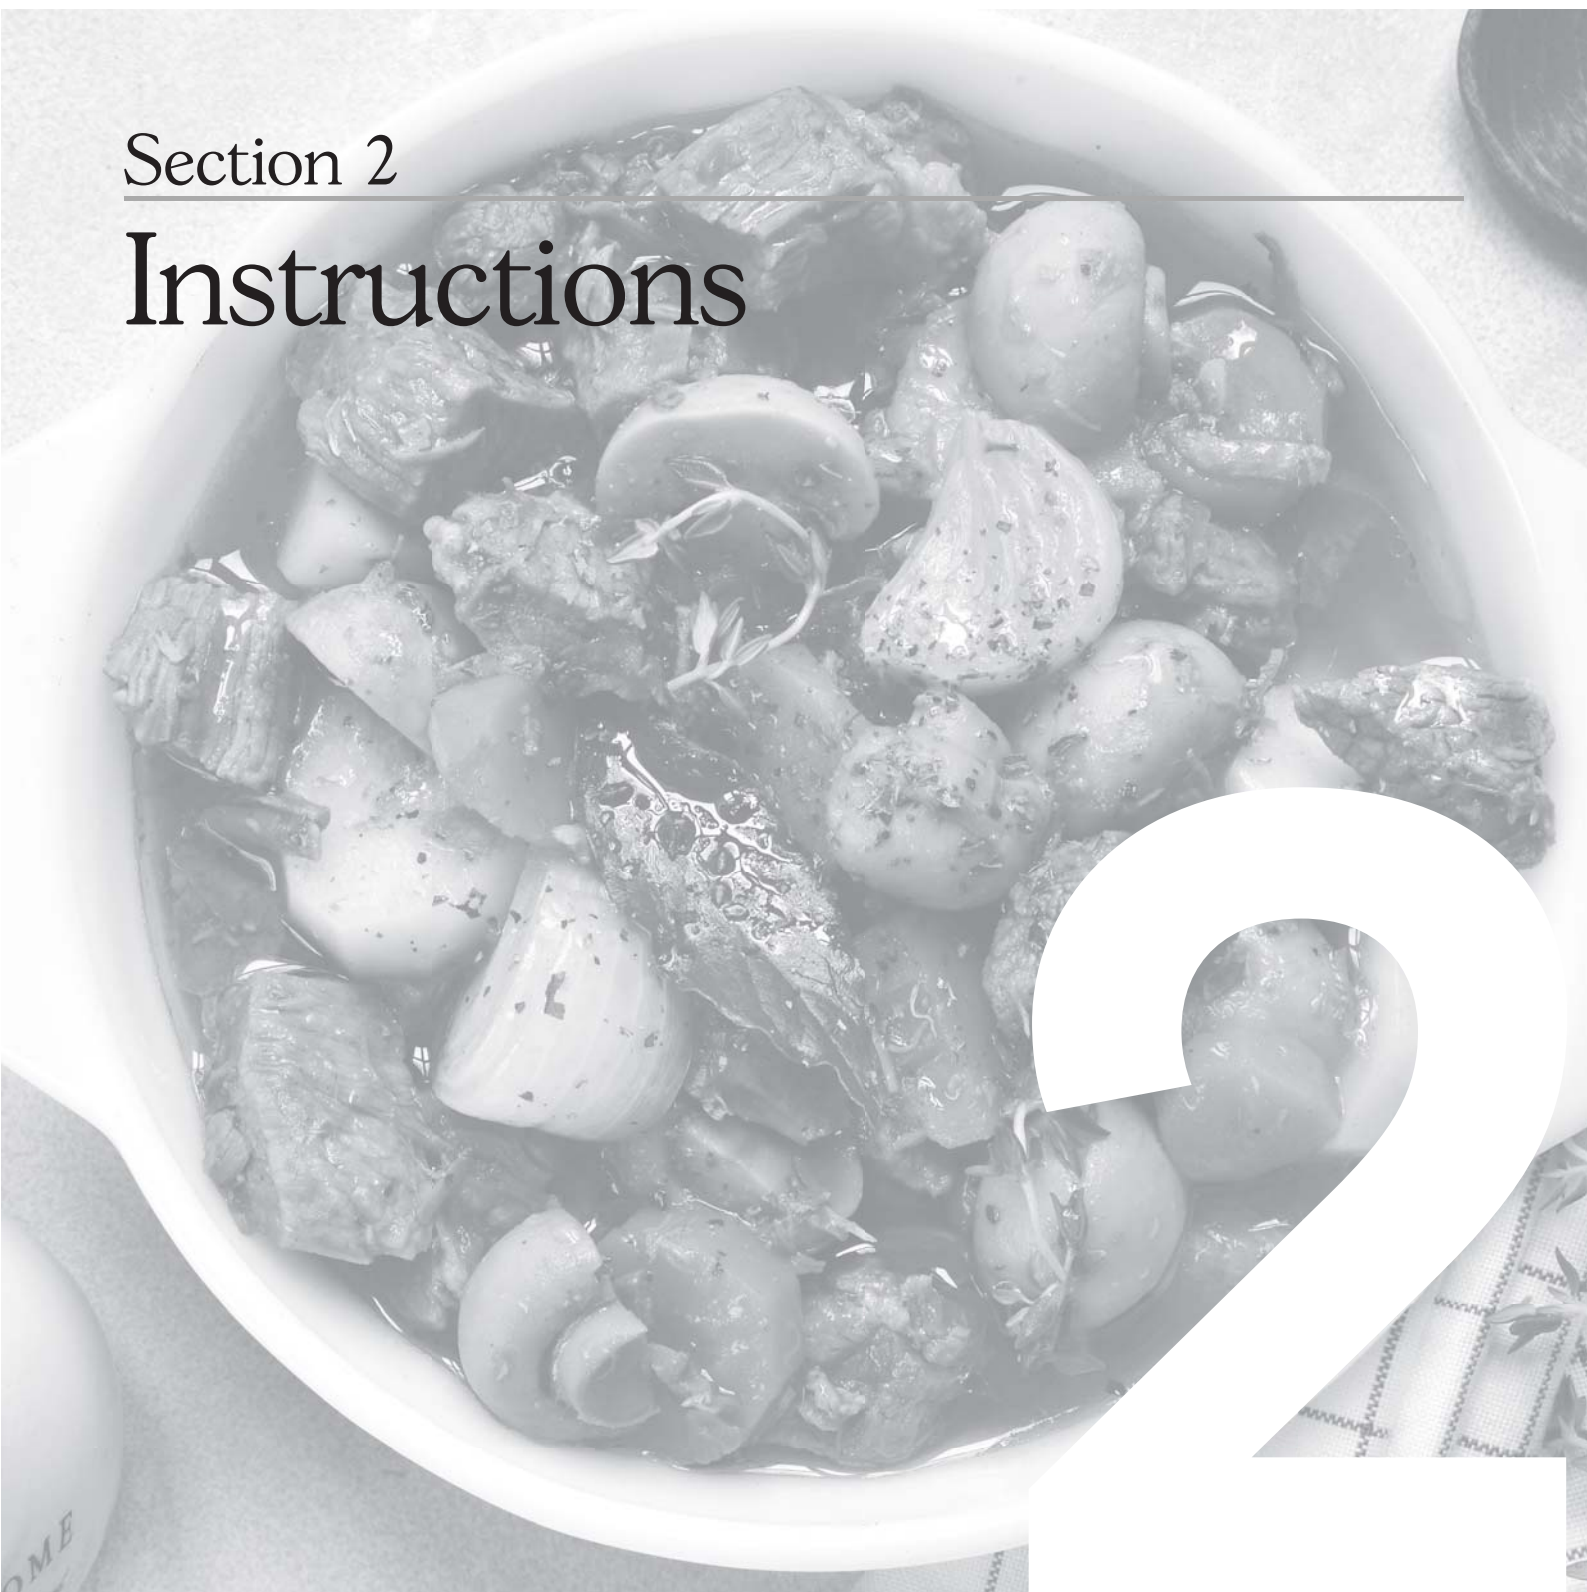

Getting To Know Your Sensor Microwave oven


Product may vary slightly from illustrations.

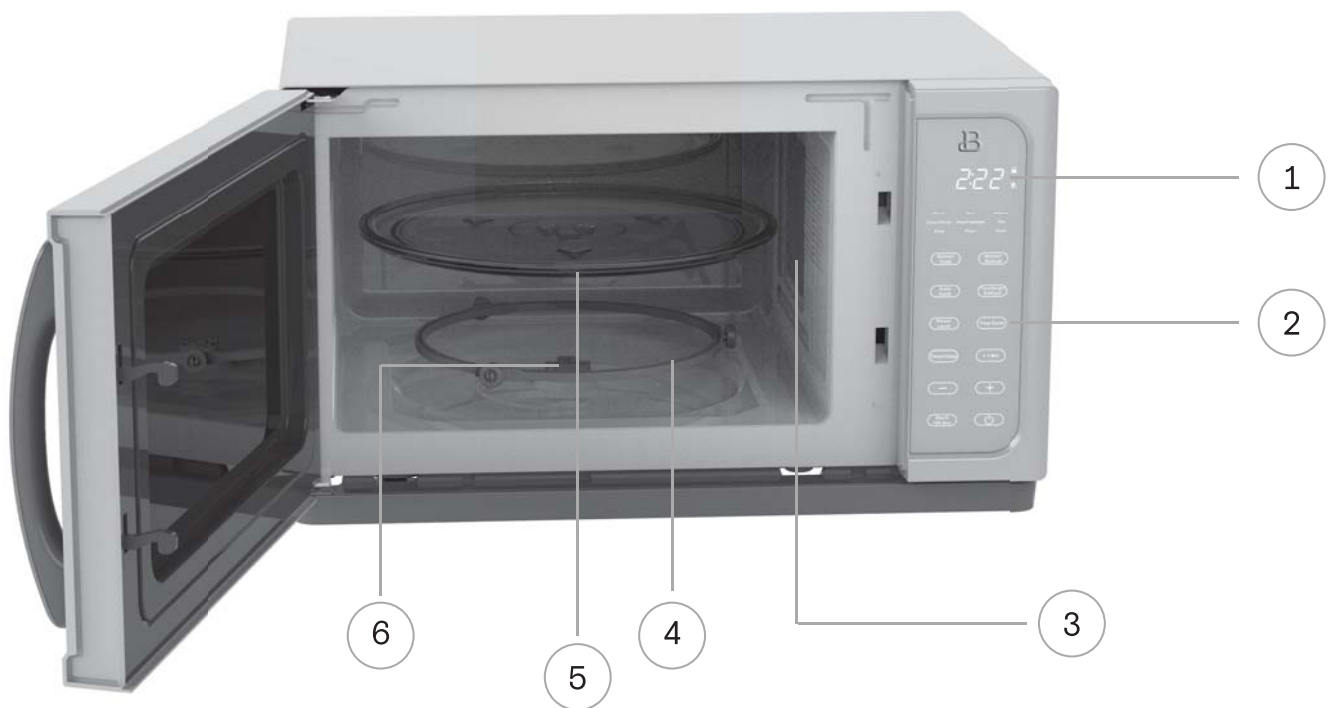

1. Display screen
2. Control Panel
3. Wave Guide (Please don't remove the mica plate covering the wave guide)
4. Roller Ring
5. Glass Turntable
6. Shaft

Touch-Activated Display Control Panel

A screen that only shows up when you need it.

The  and any functions will illuminate when active and vanish when not in use. Besides, this Beautiful Sensor Microwave Oven offers 15 preset cooking menus. No need to hover in the kitchen. When time expires, the Microwave Oven turns off automatically.

1. Sensor Cook

Use to set sensor cook menus:

- a) Potato
- b) Rice
- c) Oatmeal
- d) Frozen Dinner
- e) Frozen Vegetable
- f) Fish

2. Sensor Reheat

Use to set sensor reheat menus:

- a) Soup
- b) Pizza
- c) Pasta

3. Auto Cook

Use to set auto cook menus (not shown on the control panel):

- a) Popcorn
- b) Beverage
- c) Dinner Plate
- d) Fresh Vegetable
- e) Mashed Potatoes
- f) Mac and Cheese

4. Time/Weight Defrost

Use to set Time/Weight program based on time/weight.

5. Power Level

Use to cook food with selected power level.



6. Time Cook

Use to set the microwave cook program.

7. Timer/Clock

Use to set the clock and timer.

8. +1 Min

Use to add 1 Min to the cook time.

9. +

Use to select cooking menus, time, food weight, portion, or power level.

10. -

Use to select cooking menus, time, food weight, portion, or power level.

11. Start/+ 30 Sec

Use to start the program or add time during the cooking.

Note:

Start/+ 30 Sec and +1 Min can add cook time during express cooking and microwave cooking. For preset menus such as sensor cook and time defrost, you can not add time by these two button.







12. ⏻

Use to activate the control panel when it's in standby mode.
Use to clear all the previous settings before cooking starts.
Press once to pause current cooking program or twice to cancel the program.



Before Using for the First Time

If you are using your microwave oven for the first time, please be sure to:


1. Clean the glass turntable with hot water, a small amount of dishwashing liquid and a nonabrasive cleaning pad.
2. Do not immerse the body of the unit in water.
3. When the Microwave Oven is plugged in, "Beep" will sound, the clock will show "12:00".  will illuminate and then pulse slowly on and off.
4. Press the pulsing . "Beep" will sound as the control panel illuminates and remains active for 30 seconds.
5. There will be operation sound "Beep" once when you press the button, and if the button is invalid, there will be sound "Beep" twice.
6. During the cooking program setting, if you don't have any operation within 30 seconds, it will turn back to standby mode. If the timer is still running, it will turn back to activated mode, and you can press  or Timer/Clock to check the timer for 5 seconds.
7. In the process of cooking program, you can press  once to pause the program, and if you want to continue, press Start/+ 30 Sec. If you want to cancel the cooking program, you need to press  twice.
8. When the cooking program completes, the display screen will show "End" with sound "Beep" for 4 times. And this sound will happen every 2 minutes until you open the door or press .

Setting the Clock

You can set the clock in 12-hour or 24-hour by pressing Timer/Clock.

- In activated mode, press and hold Timer/Clock for 3 seconds to select 12-hour clock, press + or - to select 24-hour clock.
- Press Start/+ 30 Sec or Timer/Clock to confirm the time system.
- The hour begins to flash, press + or - to set the correct hour. Press Start/+ 30 Sec or Timer/Clock to confirm the hour.
The minute begins to flash, press "+" or "-" to set the correct minute. Press Start/+ 30 Sec or Timer/Clock to confirm the minute.


NOTE:

- a) While in the process of cooking program, you can check the clock for 5 seconds by pressing and holding Timer/Clock for 3 seconds.
- b) While in the process of setting the clock, you can cancel the settings by pressing the .

Timer

You can use the timer to count down a specific amount of time when it's in activated mode or cooking process.

- In activated mode or cooking process, press Timer/Clock once.
- Press + , - or +1Min to enter the time. (The maximum time you can set is 95 minutes)
- Press Start/+ 30 Sec to confirm and the timer starts countdown.

NOTE: When the countdown ends, the buzzer will "Beep" to remind you. You can check the countdown time for 5 seconds by pressing Timer/Clock, if  is pressed within these 5 seconds, the function can be cancelled.

Express Cooking

You can quick start the microwave oven to cook food.

- In activated mode, press Start/+ 30 Sec to start cooking process with maximum power for 30 seconds.
- You can also use + , - or +1Min to set the express cooking time and then press Start/+ 30 Sec to start cooking process with maximum power.
- You can add time by pressing Start/+ 30 Sec or +1 Min. (The maximum time you can set is 95 minutes)

Microwave Cooking

You can start microwave cooking with desired time and power level, and you can set two stage cooking program.

1. One stage microwave cooking
 - In activated mode, press Time Cook and use +,- or +1 Min to enter the time. (The maximum time you can set is 95 minutes)

- Time input reference table as below:

Time scope	0:10-5:00	5:00-10:00	10:00-30:00	30:00-95:00
+ / -	10s	30s	1Min	5Min

- Press Power Level and use + , - to choose power level.
- Power level chart as below:

Power Level	Display	Power Level	Display
100%	PL10	50%	PL-5
90%	PL-9	40%	PL-4
80%	PL-8	30%	PL-3
70%	PL-7	20%	PL-2
60%	PL-6	10%	PL-1

- Press Start/+ 30 Sec to start the cooking program.
 - During cooking, you can press Power Level to check the current cooking power level for 5 seconds.
2. Two-stage microwave cooking
- Input the first microwave cooking program. Press Time Cook once.
 - Input the second microwave cooking program.
 - Press Start/+ 30 Sec to start the two-stage microwave cooking program.
 - When the first stage cooking finishes, it will sound "Beep" and the second stage cooking begins.

Time Defrost

You can set the defrost program with desired time.

- In activated mode, press Time/Weight Defrost once and use + , - or +1 Min to enter the time. (The maximum time you can set is 95 minutes)

- Press Start/+ 30 Sec to start the defrost program.

NOTE:

During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press Start/+ 30 Sec to resume the defrosting.

Weight Defrost

You can set the defrost program base on the food category and weight.

- In activated mode, press Time/Weight Defrost twice and use + , - to select the food category(Meat/Poultry/Seafood).
- Press Start/+ 30 Sec to confirm and select the defrost weight by using + , -.

NOTE:

You can long press + , - to enter the weight until the correct weight shows.

- Weight Defrost Food Chart as below:

Food	Code	Weight	Time
Meat	dEF1	1oz -32oz	36s/oz
		33oz -80oz	32s/oz
Poultry	dEF2	1oz -32oz	32s/oz
		33oz -80oz	30s/oz
Seafood	dEF3	1oz -32oz	28s/oz

- Press Start/+ 30 Sec to start the defrost program.

NOTE:

During the defrosting program, the system will pause and alert the user to turn the food over when 1/3 of the defrosting time remains. After turning food over, close the door and press Start/+ 30 Sec to resume the defrosting.

Sensor Cook

You can use the sensor function to cook the menus listed on the control panel. (Potato/Rice/Oatmeal/Frozen Dinner/Frozen Vegetable/Fish).

- In activated mode, press Sensor Cook, the display screen will show "SC-1", and the corresponding menu will light up on the control panel.
- Sensor cook chart as below:

Food	Code	Weight Range
Potato	SC -1	One/6-8oz
Rice	SC -2	5oz-16oz
Oatmeal	SC -3	5oz-16oz
Frozen Dinner	SC -4	7oz-1LB8oz
Frozen Vegetable	SC -5	7oz-1LB5oz
Fish	SC -6	7oz-1LB5oz

- Use + , - to choose the sensor cook menu.
- Press Start/+ 30 Sec to start the program. The appliance will start countdown after detecting the moisture. Before countdown, the food code will flash.

Sensor Reheat

You can use the sensor function to reheat the menus listed on the control panel (Soup/Pizza/Pasta).

- In activated mode, press Sensor Reheat, the display screen will show "SH-1", and the corresponding menu will light up on the control panel.
- Sensor reheat chart as below:

Food	Code	Weight Range
Soup	SH -1	5oz-1LB
Pizza	SH -2	5oz-1LB
Pasta	SH -3	5oz-1LB8oz

- Use + , - to choose the sensor reheat menu.
- Press Start/+ 30 Sec to start the program. The appliance will start countdown after detecting the moisture. Before countdown, the food code will display.

NOTE:

- Make sure the outside of the cooking container and the inside of the microwave oven are dry before the food is placed in the microwave oven. Beads of moisture turning into steam can mislead the sensor.
- After cooking for a period of time, the system will detect whether there is an error. For example, if the sensor short circuit or open circuit, the system will stop automatically with the display showing "E-5", "Beep" will sound every 2 seconds, after pressing (⏻), the oven will return to standby mode.
- If there is no error, the system will judge corresponding cooking time based on the steam generated by the food, after detection is completed, "Beep" will sound and the countdown will display on the screen.
- During sensor program, if press (⏻) once or open the door, the program will stop and turn back to standby mode.
- If the oven cannot judge the cooking time according the steam produced by food in the cavity, the cooking will auto-end based on the longest preset detection time of the food category.

Auto Cook




You can select the auto cook menu to cook your meal automatically.
(Popcorn/Beverage/Dinner Plate/Fresh Vegetable/Mashed Potatoes/Mac and Cheese)

- In activated mode, press Auto Cook, the display screen will show "A-01".
- Use + , - to choose the auto menu.
- Press Start/+ 30 Sec to confirm the menu. And the display screen will show the default weight/serving.
- Use + , - to choose the weight/serving.
- Press Start/+ 30 Sec to start the program.
- Auto cook chart as below:

Food	Code	Weight/Serving
Popcorn	A -01	3.5oz
Beverage	A -02	1/2/3 (8oz/Cup)
Dinner Plate	A -03	S(0-8oz)/L(8-16oz)
Fresh Vegetable	A -04	8oz/12oz/16oz/20oz
Mashed Potatoes	A -05	8oz/12oz/16oz/20oz/24oz
Mac and Cheese	A -06	8oz/12oz/16oz/20oz/24oz


Child Lock

The child proof lock prevents unsupervised operation by children.

- In standby mode, press  and hold for 3 seconds, then "Beep" will sound.
- The display screen will show the clock and the  will light up.
- If you want to cancel the child lock, you need to press  and hold for 3 seconds.

Mute Function

You can turn sound off if needed.

- In activated mode, press + and - at the same time.
- The display screen will show the clock and the  will light up.
- If you want to cancel the mute mode, you need to press + and - at the same time in activated mode.

Clean and Care

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
5. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. It is normal.

6. It is occasionally necessary to remove the glass turntable for cleaning. Wash it in warm sudsy water.
7. If the light bulb burns out, please contact customer service to have it replaced.
8. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
9. Please do not dispose of this appliance into normal trash bins; It should be disposed through local municipalities disposal centers.

Product Warranty

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warranted for one year following purchase for defects in material and workmanship from the date of original purchase or date of delivery, whichever is later. **Please save your receipt as proof of purchase is required to make a warranty claim.** During this period, we will provide the replacement cost of this product, a replacement or the equivalent, or repair per our discretion.

The warranty can not be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer.

This warranty does not cover and excludes damage or defects caused by:

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Accident
- Use in a manner not intended and outlined in the user manual

Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any:

- Retail offered extended warranties
- Tax
- Other charges (including postage to send required materials)
- Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-877-358-2387.

For faster service, please have the model number (from rating label), serial number(rear of the cavity), and receipt ready for the operator to assist you.

Warranty Registration

Please mail this warranty card to the address below within 30 days of purchase.

Galanz Americas, 55 Challenger Road, Suite 503,
Ridgefield Park, NJ 07660.

PLEASE PRINT CLEARLY.

Name

Address

City State ZIP

Phone Email

Model Number Serial Number

Purchase Location

You must attach a copy of your purchase receipt to validate your registration.