

OPERATION INSTRUCTIONS

Auto Reheat


Accessory Guide: : Glass Turntable



For auto reheat function, you can select the type of food you want to cook from the programs listed on the cooking label located on the interior panel of the appliance.

Auto Program: How to Reheat soup.

1 In standby mode, press the **AUTO REHEAT** once.



88:88

2 Press +/- to select food code 'AH-8' (Soup).


-

or

+

88:88

3 Press START once to confirm the food type.



88:88

4 After selecting the food type, press +/- to select portion of food.


-

or

+

88:08

4 Press START to start cooking.



88:30

Auto Reheat Food Chart (Auto Program):

Code	Food	Weight
AH-1	Chili	4-24 oz
AH-2	Dinner Plate	8-24 oz
AH-3	Frozen Entrée	8-24 oz
AH-4	Mac and Cheese	4-24 oz
AH-5	Mashed Potatoes	4-24 oz
AH-6	Pasta	4-24 oz
AH-7	Rice	4-28 oz
AH-8	Soup/ Sauce	4-24 oz

OPERATION INSTRUCTIONS

Popcorn



Accessory Guide: Glass Turntable



Example: How to cook popcorn for 3 minutes and 30 seconds.

<p>1 In standby mode, press the POPCORN. The default time is 2 minutes and 40 seconds (For one bag around 3.5 oz).</p>	

<p>2 Press + / - to select the cooking time.</p>	
or	

<p>3 Press START once to confirm and start cooking.</p>	

NOTE:
The default time is 2 minutes and 40 seconds. For default time, you can skip step 2, directly press the dial to start if you prefer.

+30 Sec Function



In standby mode, press +30 SEC, the microwave program will start at 100% power level and cook for 30 seconds. During cooking, you can add cooking time by touching **+30 SEC** pad repeatedly. The longest cooking time is 95 minutes.

Example: During microwave cooking, add the cooking time by 2 minutes by utilizing the +30 SEC button.

<p>1 During cooking, suppose the display is showing 3:50.</p>	

<p>2 Press the +30 SEC 4 times.</p>	
x 4	

NOTE:

■ All preset programs cannot use **+30 SEC** during cooking, which includes:

- **POPCORN**
- **TIME / WEIGHT DEFROST**
- **AUTO COOK**
- **AUTO REHEAT**

OPERATION INSTRUCTIONS

Child lock



The child proof lock prevents unsupervised operation by children.

Example1: How to set/cancel the child lock.

1 In standby mode, suppose the display is showing 11:58.	

2 Press and hold STOP/CANCEL for 3 seconds, then 'Loc' appears.	
Press and hold for 3 seconds.	

3 Press and hold STOP/CANCEL for 3 seconds, then 'Loc' disappears.	
Press and hold for 3 seconds.	

TROUBLE SHOOTING

Automatic Protection Mechanism

LOW TEMPERATURE PROTECTION - The display may show Er03 which means the appliance has entered into low temperature protection mode which will protect the appliance from further damage. Audible alert will be heard until **STOP/CANCEL** is pressed or the appliance is unplugged.

 
OVERHEATING PROTECTION - The display may show Er04 which means the appliance has entered into high temperature overheat mode which will protect the appliance from further damage. Audible alert will be heard until **STOP/CANCEL** is pressed or the appliance is unplugged.

CIRCUIT PROTECTION - The display may show Er05 which means the appliance's thermostats are under open circuit protection which will protect the appliance from further damage. Audible alert will be heard until **STOP/CANCEL** is pressed or the appliance is unplugged.

CIRCUIT PROTECTION - The display may show Er06 which means the appliance's thermostats are under short circuit protection which will protect the appliance from further damage. Audible alert will be heard until **STOP/CANCEL** is pressed or the appliance is unplugged.

CLEANING AND CARE


- Turn off the oven and unplug the power cord from the wall when cleaning.

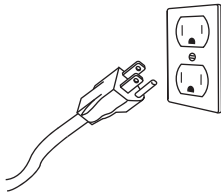


- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.



 - The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.

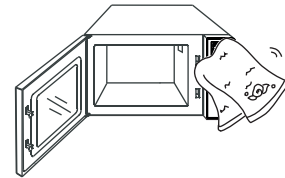

 - If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. It is normal.
- It is occasionally necessary to remove the glass turntable, baking and roasting pan, air fry kit for cleaning. Wash them in warm sudsy water.

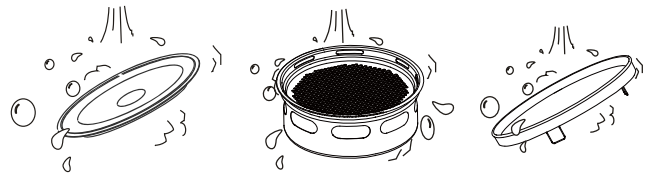

- If the light bulb burns out, please contact customer service to have it replaced.
- The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
- Please do not dispose of this appliance into normal trash bins; it should be disposed through local municipalities disposal centers.

PRODUCT WARRANTY

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warranted for one year following purchase for defects in material and workmanship. **Please save your receipt as proof of purchase is required to make a warranty claim.** During this period, we will provide the replacement cost of this product, a replacement or the equivalent, or repair per our discretion.

The warranty can not be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer.

■ **This warranty does not cover and excludes damage or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Accident
- Use in a manner not intended and outlined in the user manual.

■ Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any:

- Retail offered extended warranties
- Tax
- Other charges (including postage to send required materials)
- Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damaged, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number (from rating label), serial number (rear of the cavity), and receipt ready for the operator to assist you.

WARRANTY REGISTRATION

Please mail this warranty card to the address below within 30 days of purchase.
Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.

PLEASE PRINT CLEARLY.

Name _____

Address _____

City _____ State _____ ZIP _____

Phone _____ Email _____

Model Number _____ Serial Number _____

Purchase Location _____

You must attach a copy of your purchase receipt to validate your registration.

Galanz

©2020 Galanz Americas Limited Company