


802.11a - Ant 0

Channel 185 (6875MHz)

The Reference Level

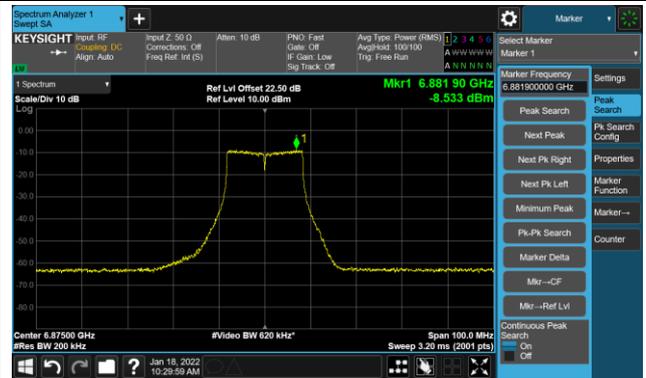


The Mask Data




Channel 189 (6895MHz)

The Reference Level

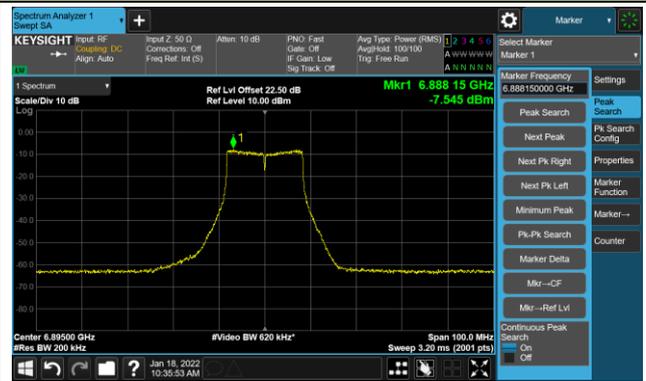


The Mask Data

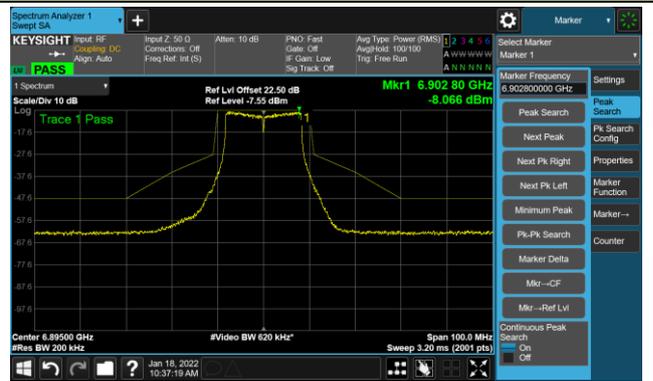


Channel 213 (7015MHz)

The Reference Level

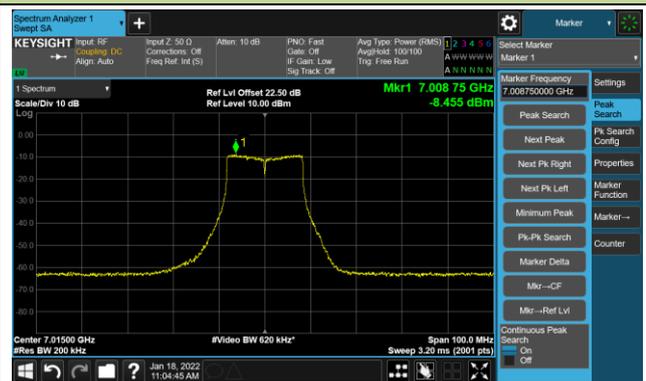


The Mask Data

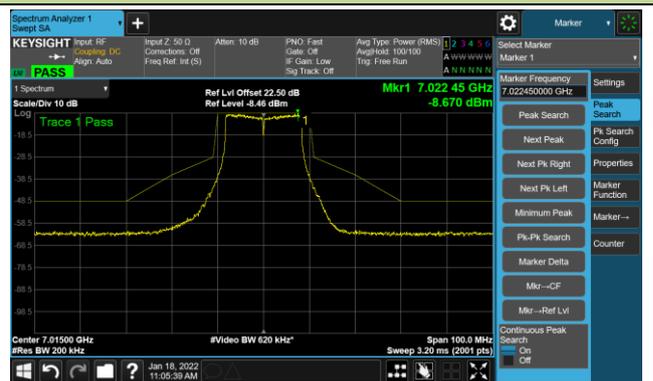


802.11a - Ant 0

Channel 229 (7095MHz)

The Reference Level

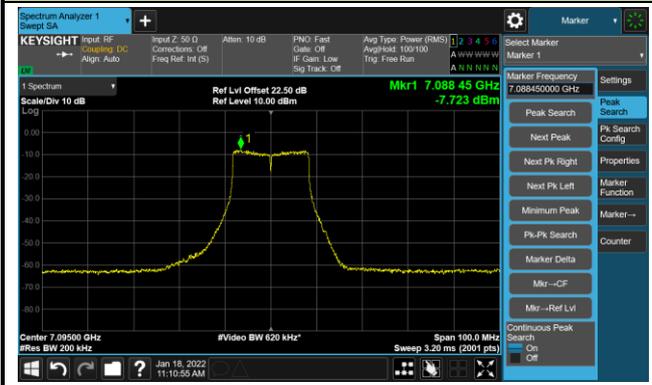


The Mask Data

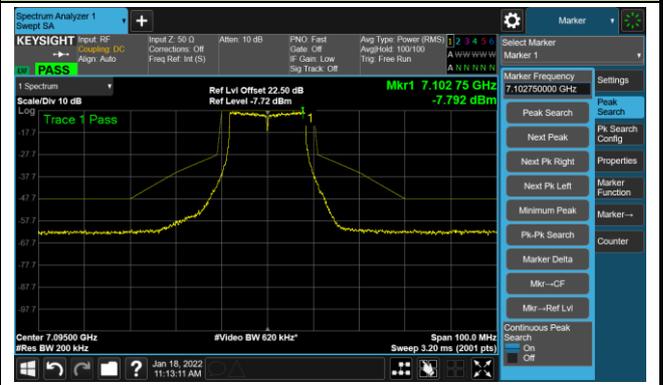


802.11ax-HE20 - Ant 0

Channel 01 (5955MHz)

The Reference Level

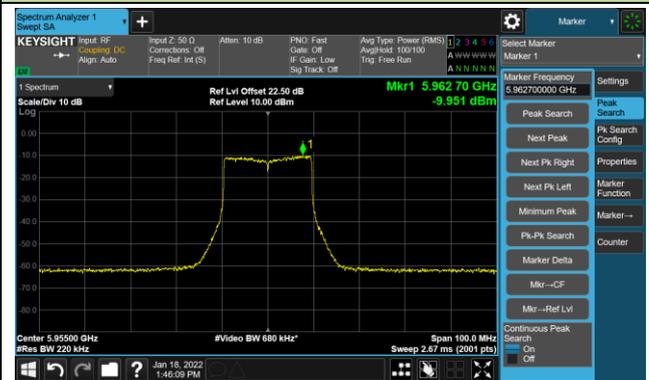


The Mask Data

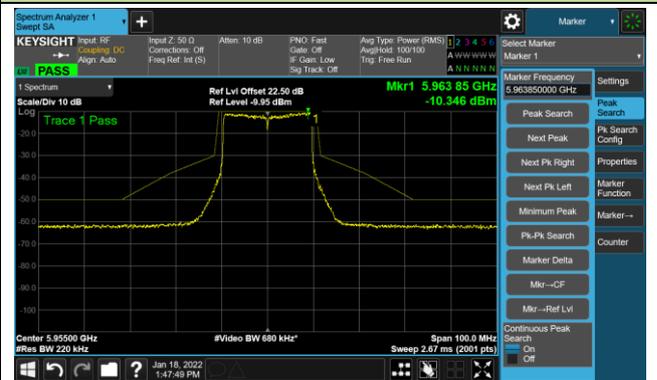


Channel 49 (6195MHz)

The Reference Level

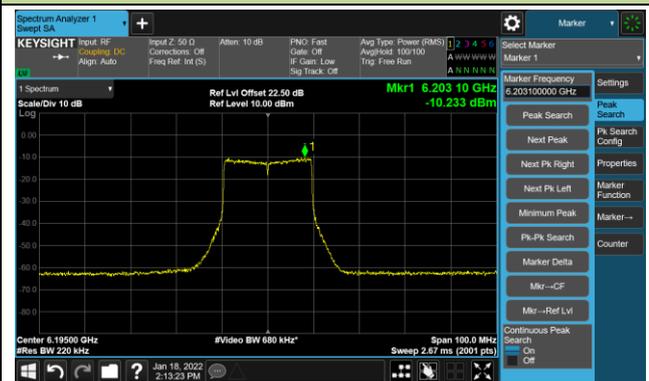


The Mask Data

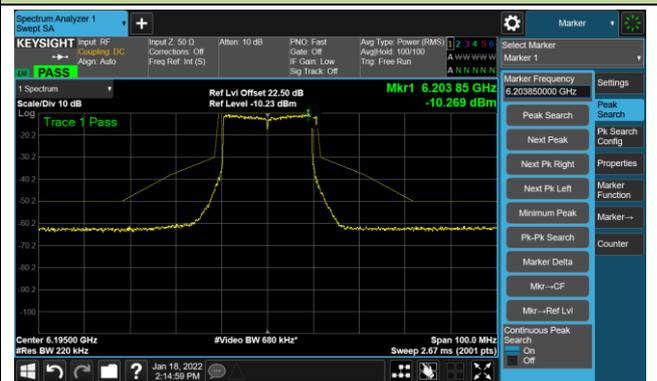


Channel 93 (6415MHz)

The Reference Level

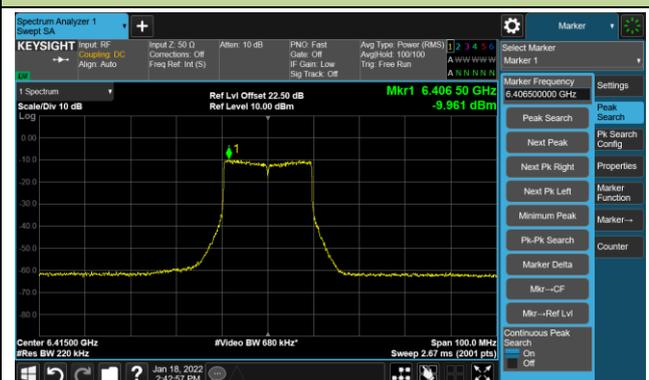

The Mask Data

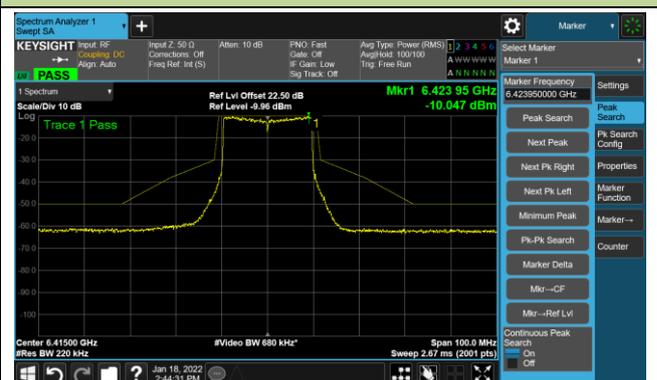


802.11ax-HE20 - Ant 0

Channel 97 (6435MHz)

The Reference Level



The Mask Data

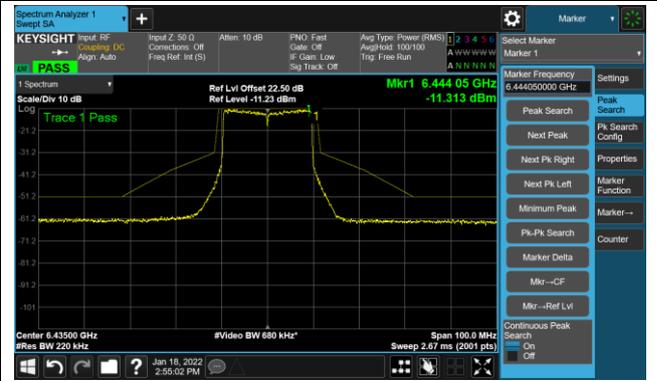

Channel 105 (6475MHz)

The Reference Level




The Mask Data



Channel 113 (6515MHz)

The Reference Level

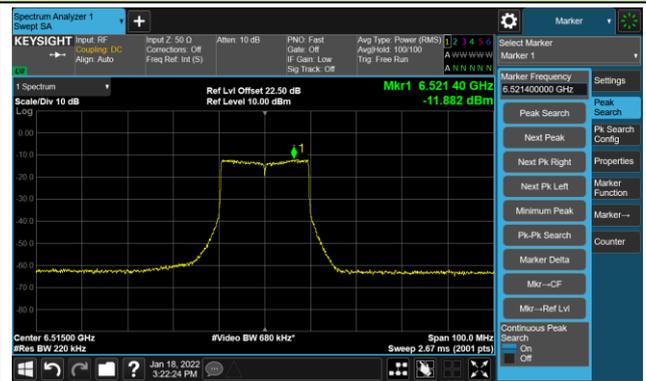


The Mask Data




802.11ax-HE20 - Ant 0

Channel 117 (6535MHz)

The Reference Level

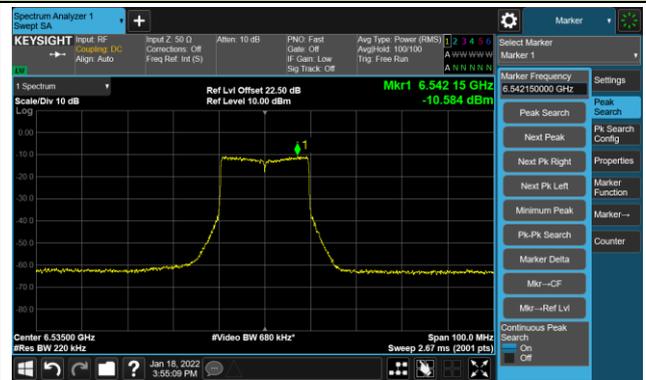

The Mask Data

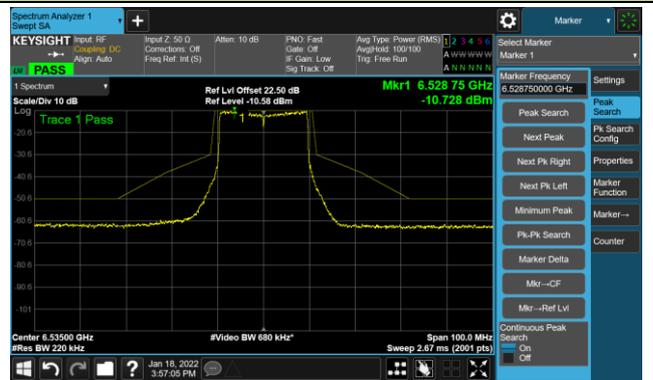

Channel 153 (6715MHz)

The Reference Level




The Mask Data




Channel 181 (6855MHz)

The Reference Level

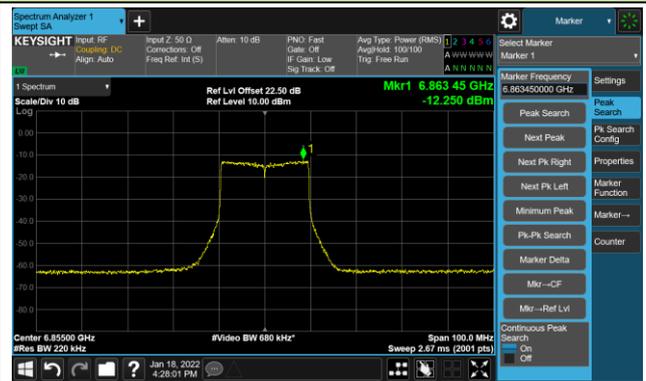


The Mask Data

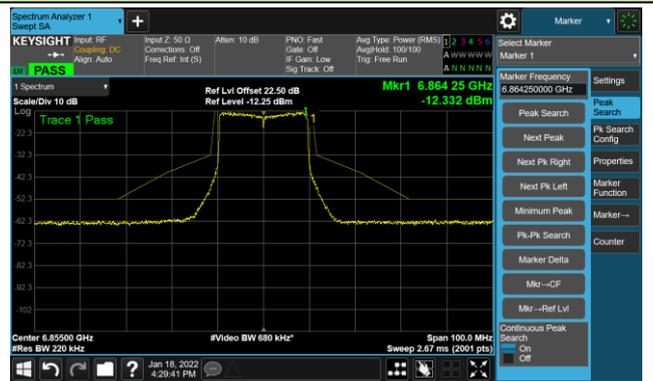


802.11ax-HE20 - Ant 0

Channel 185 (6875MHz)

The Reference Level

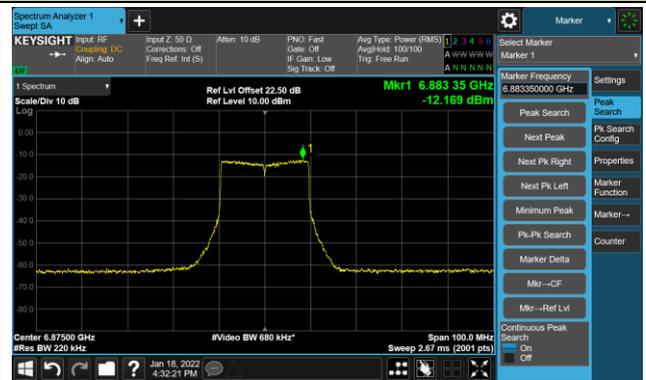


The Mask Data

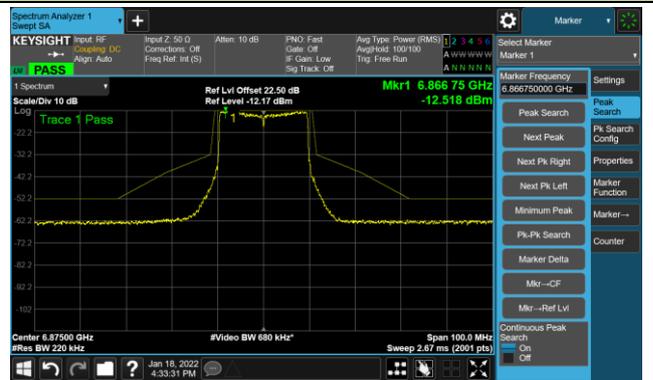

Channel 189 (6895MHz)

The Reference Level

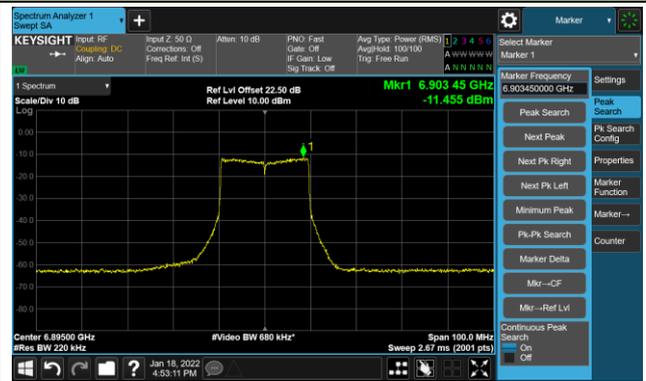


The Mask Data




Channel 213 (7015MHz)

The Reference Level

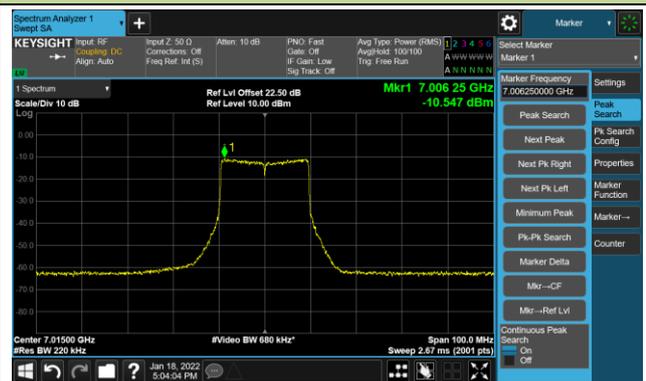


The Mask Data

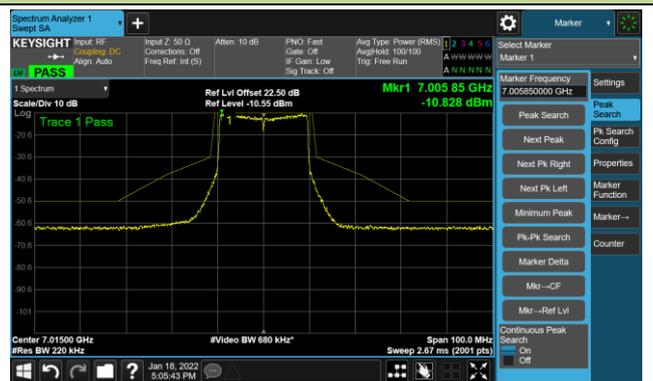

802.11ax-HE20 - Ant 0

Channel 229 (7095MHz)

The Reference Level

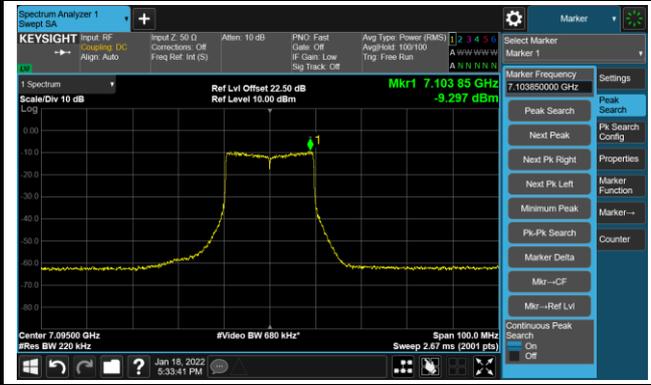


The Mask Data



802.11ax-HE40 - Ant 0

Channel 03 (5965MHz)

The Reference Level

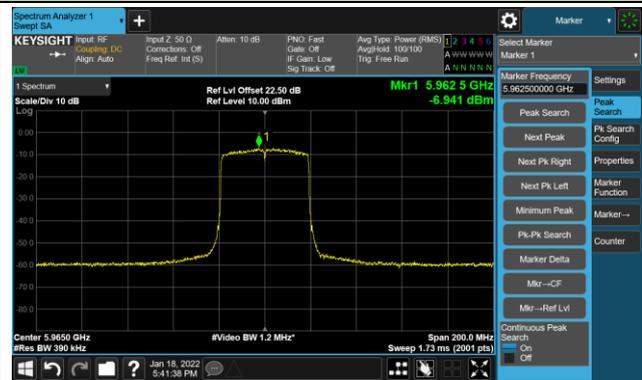


The Mask Data



Channel 51 (6205MHz)

The Reference Level

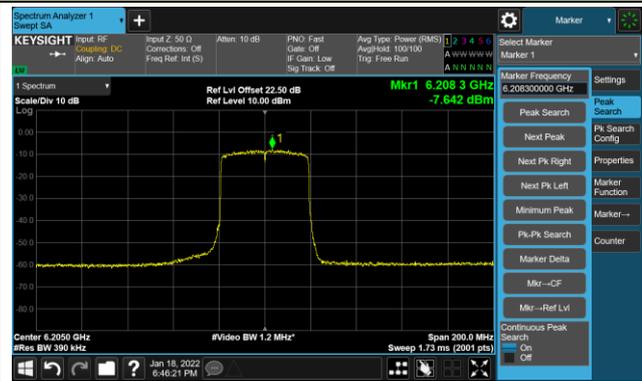


The Mask Data




Channel 91 (6405MHz)

The Reference Level

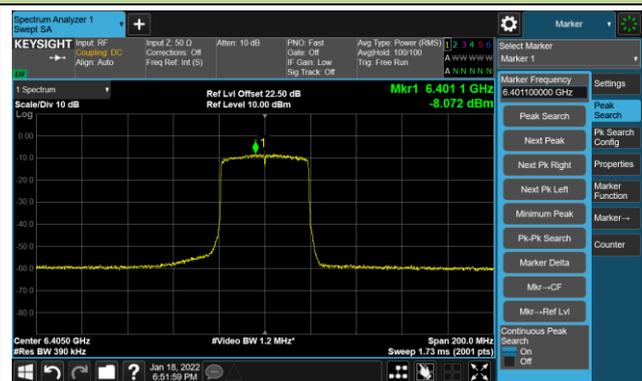


The Mask Data

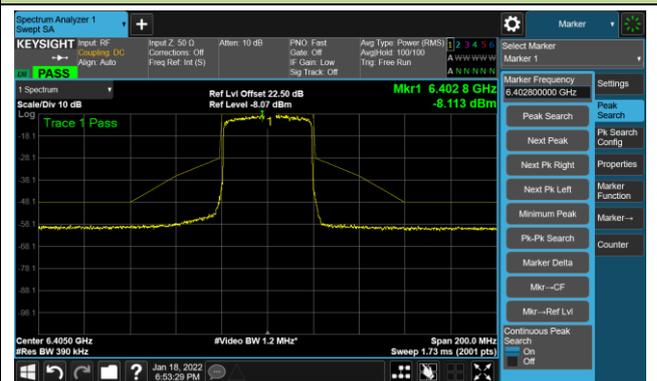


802.11ax-HE40 - Ant 0

Channel 99 (6445MHz)

The Reference Level

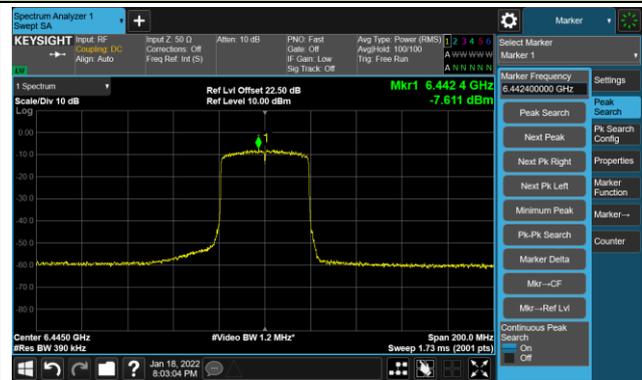


The Mask Data

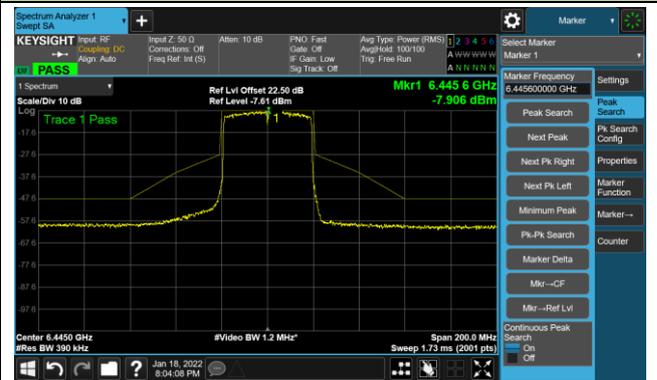


Channel 107 (6485MHz)

The Reference Level

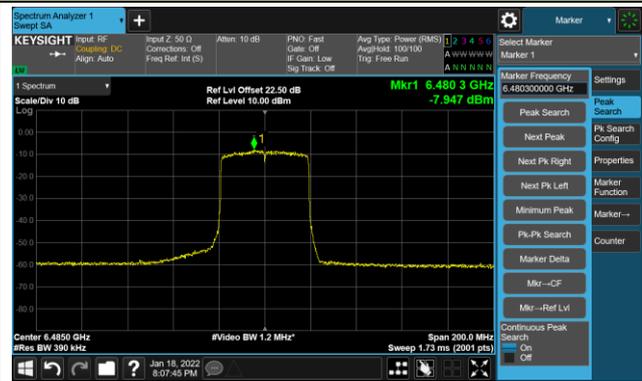

The Mask Data

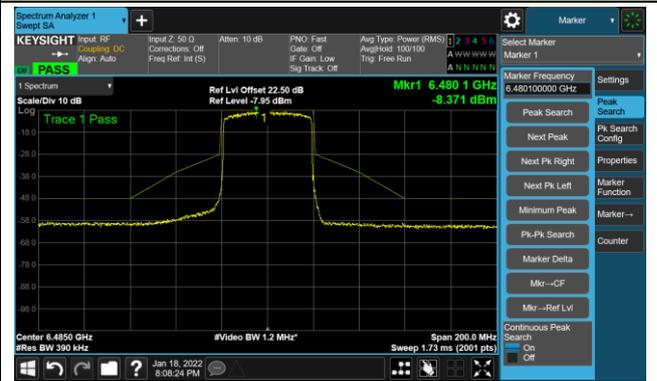


Channel 115 (6525MHz)

The Reference Level




The Mask Data

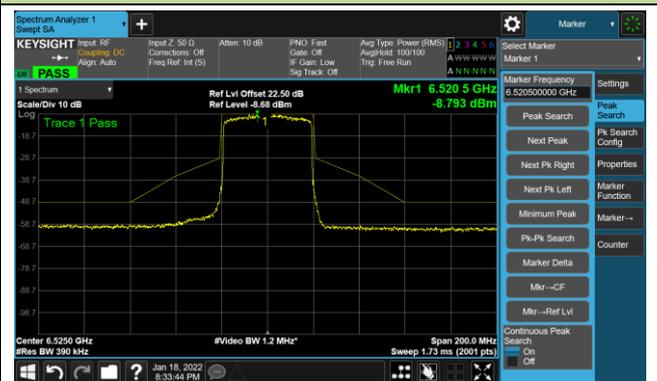


802.11ax-HE40 - Ant 0

Channel 123 (6565MHz)

The Reference Level

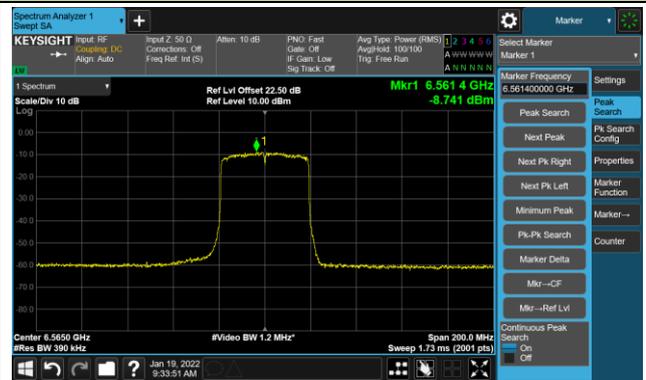

The Mask Data

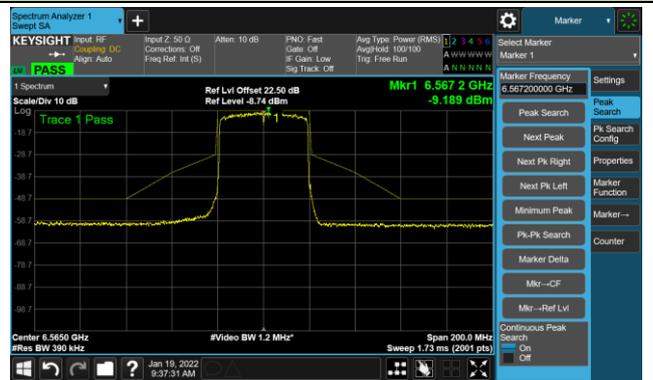

Channel 147 (6685MHz)

The Reference Level




The Mask Data



Channel 179 (6845MHz)

The Reference Level

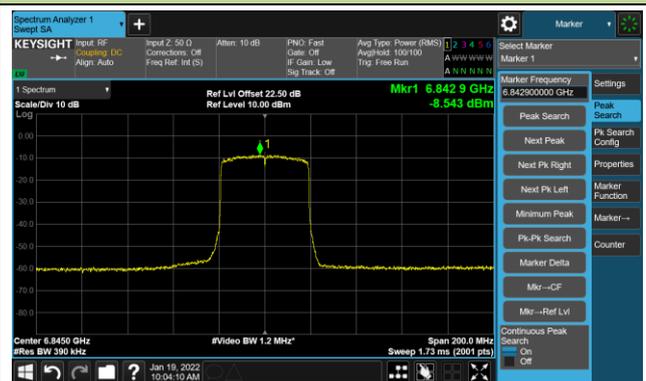

The Mask Data




802.11ax-HE40 - Ant 0

Channel 187 (6885MHz)

The Reference Level




The Mask Data

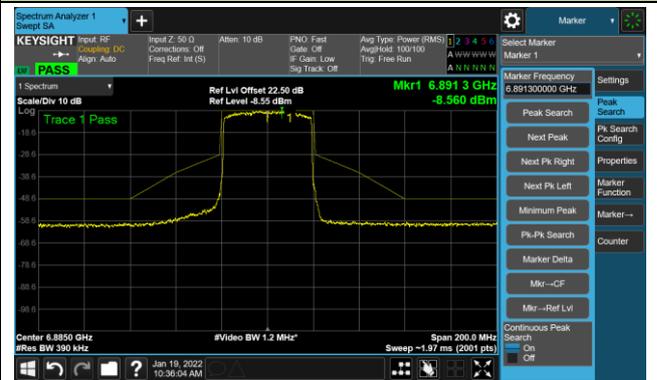

Channel 195 (6925MHz)

The Reference Level

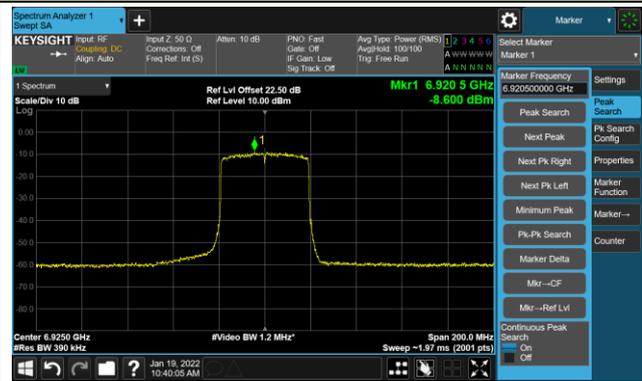

The Mask Data




Channel 211 (7005MHz)

The Reference Level




The Mask Data

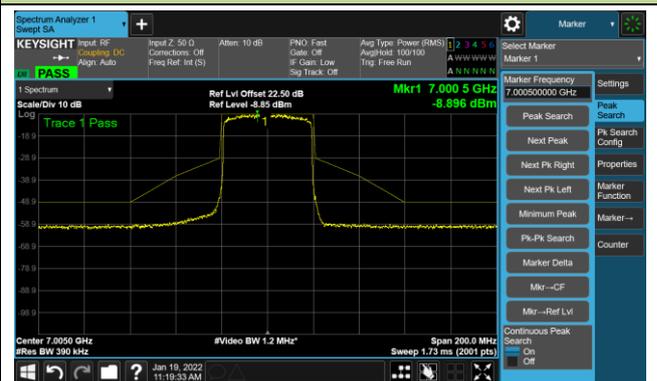


802.11ax-HE40 - Ant 0

Channel 227 (7085MHz)

The Reference Level

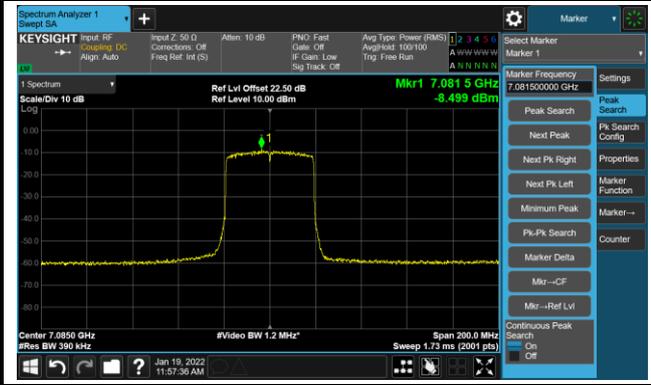


The Mask Data

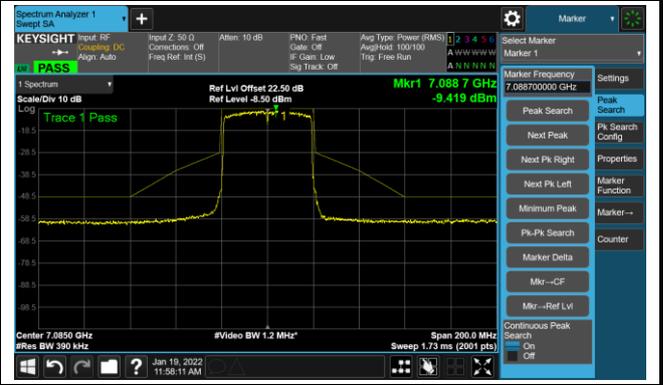


802.11ax-HE80 - Ant 0

Channel 07 (5985MHz)

The Reference Level

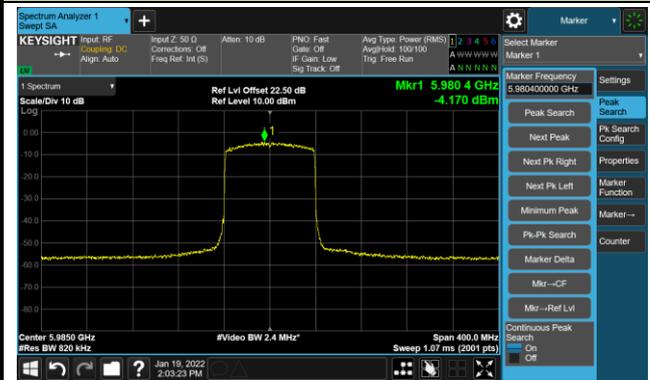

The Mask Data

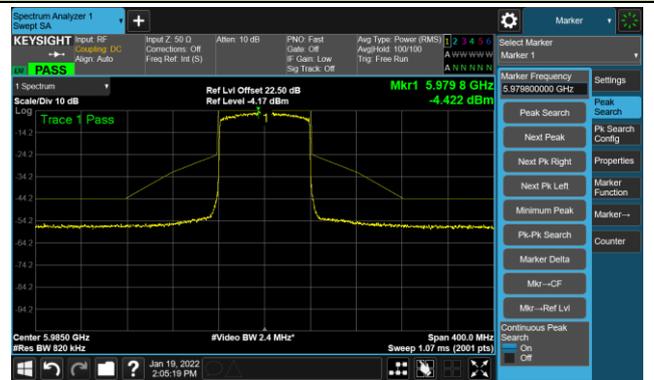

Channel 55 (6225MHz)

The Reference Level




The Mask Data



Channel 87 (6385MHz)

The Reference Level

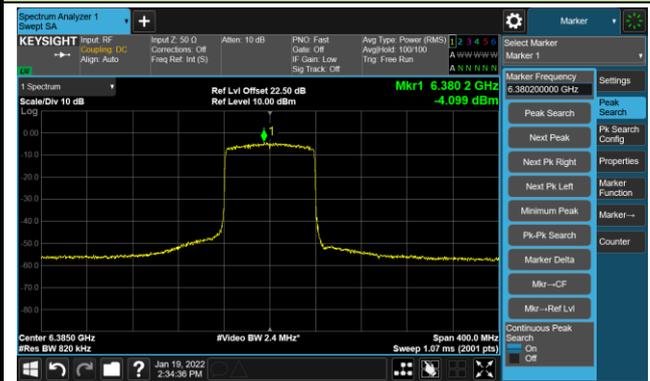


The Mask Data



802.11ax-HE80 - Ant 0

Channel 103 (6465MHz)

The Reference Level

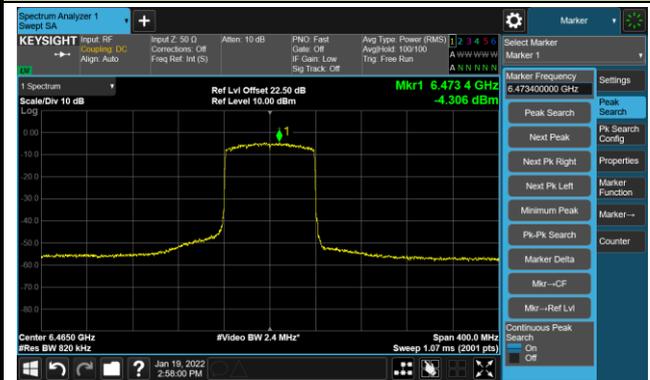


The Mask Data



Channel 119 (6545MHz)

The Reference Level

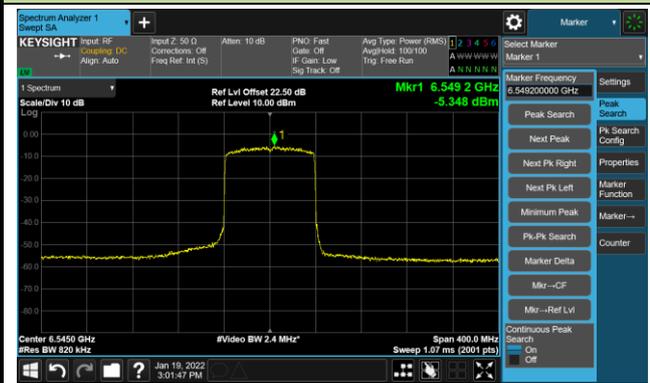


The Mask Data




Channel 135 (6625MHz)

The Reference Level

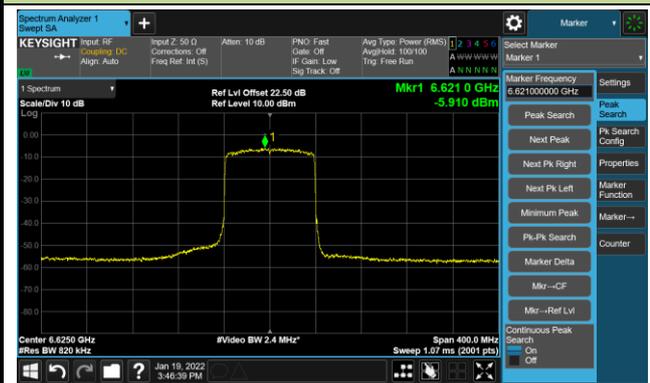


The Mask Data

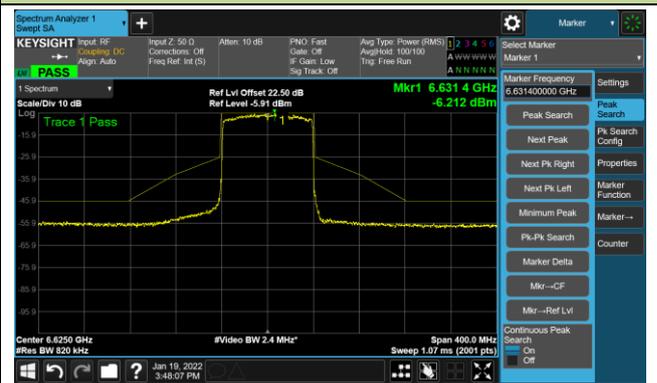


802.11ax-HE80 - Ant 0

Channel 151 (6705MHz)

The Reference Level

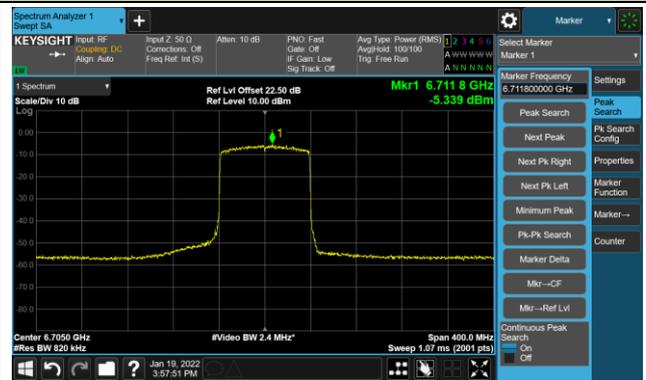


The Mask Data

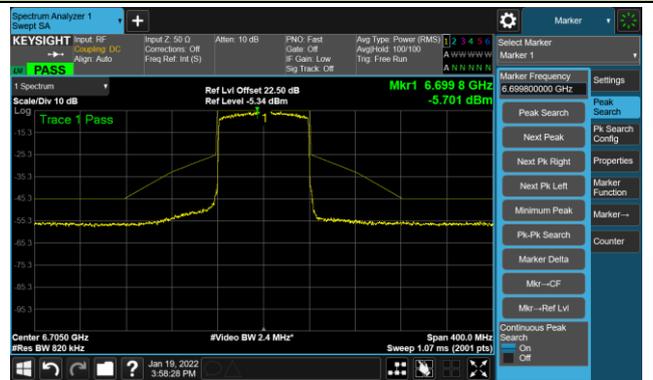

Channel 183 (6865MHz)

The Reference Level

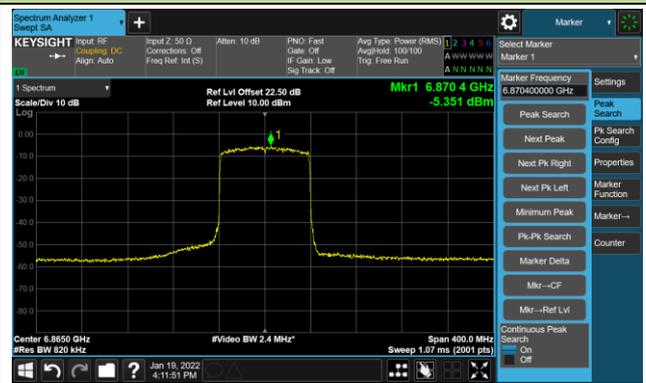

The Mask Data



Channel 199 (6945MHz)

The Reference Level




The Mask Data



802.11ax-HE80 - Ant 0

Channel 215 (7025MHz)

The Reference Level

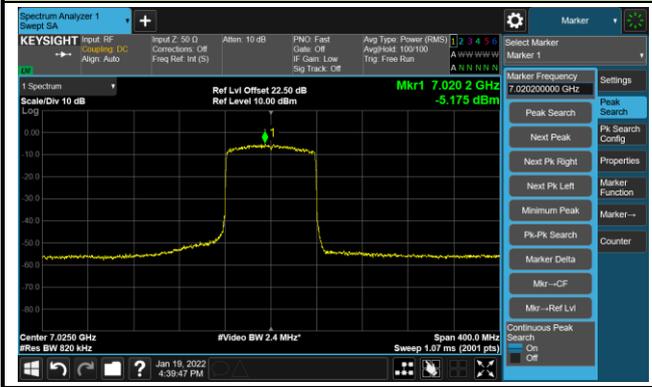

The Mask Data

