 



802.11ax-HE160 - Ant 2

Channel 111 (6505MHz)

The Reference Level

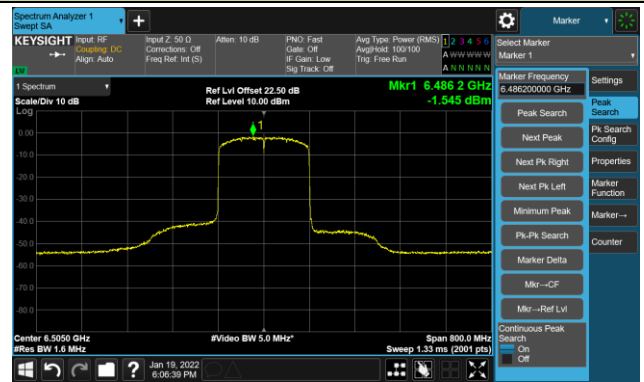

 The Mask Data

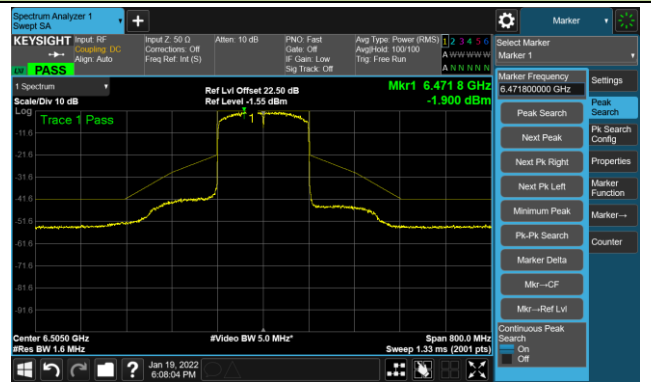


Channel 143 (6665MHz)

The Reference Level




 The Mask Data

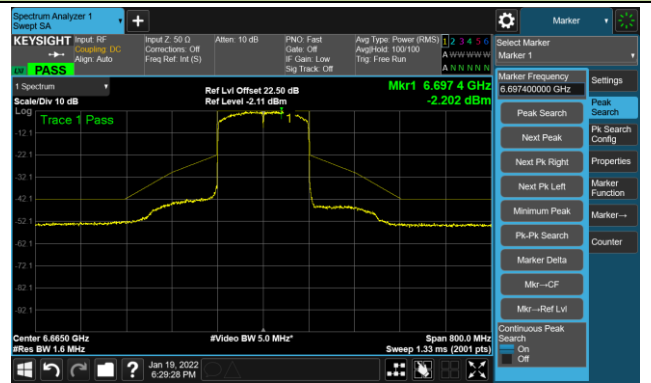


Channel 175 (6825MHz)

 The Reference Level

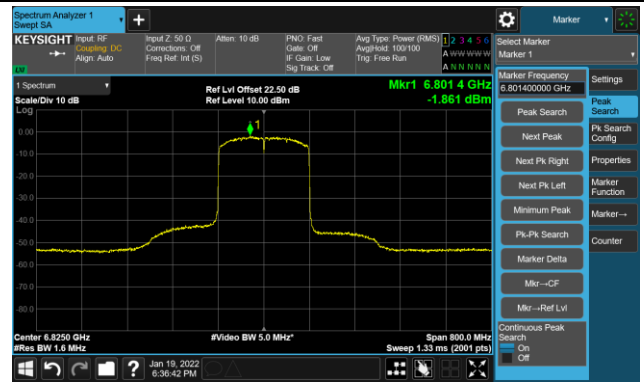


The Mask Data

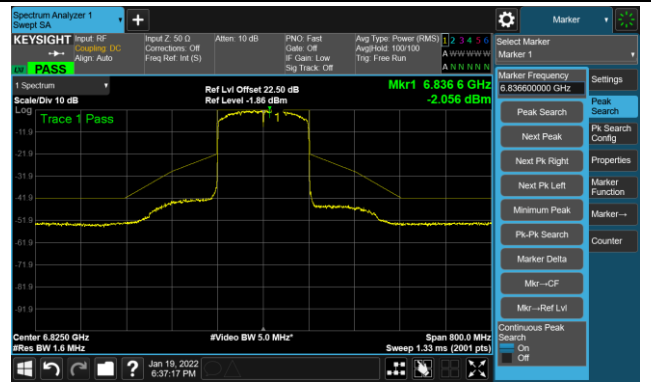 


802.11ax-HE160 - Ant 2

Channel 207 (6985MHz)

 The Reference Level

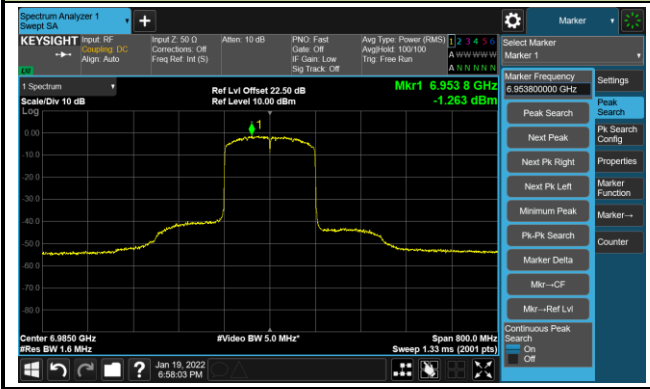


The Mask Data

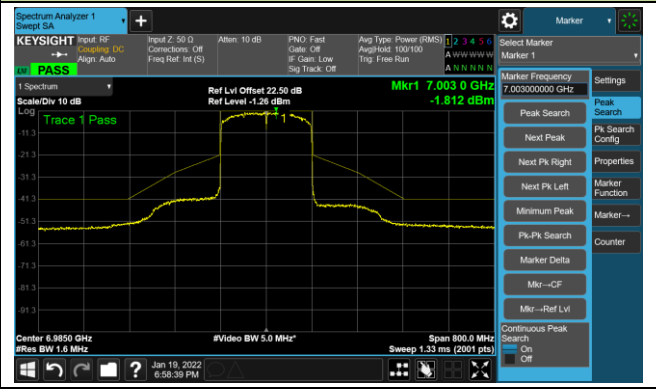 


802.11a - Ant 3

Channel 01 (5955MHz)

 The Reference Level

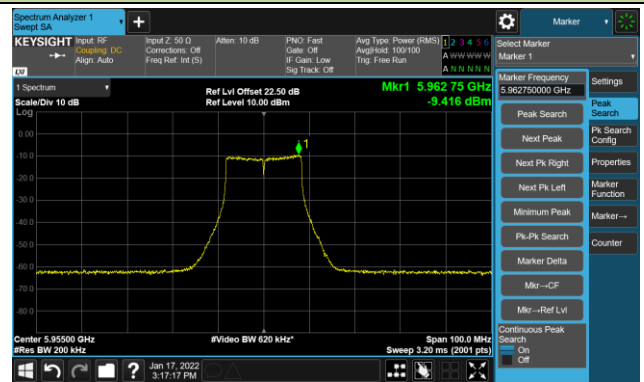


The Mask Data

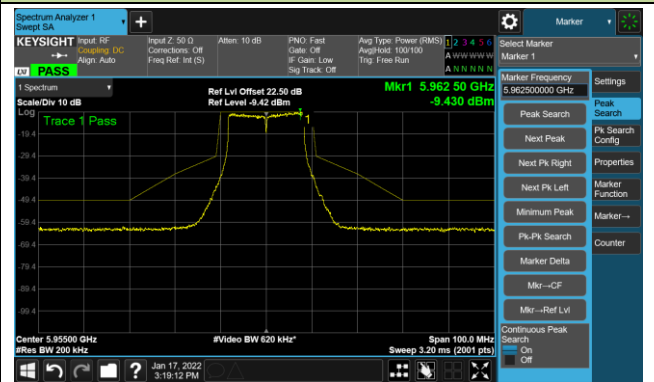 


Channel 49 (6195MHz)

 The Reference Level

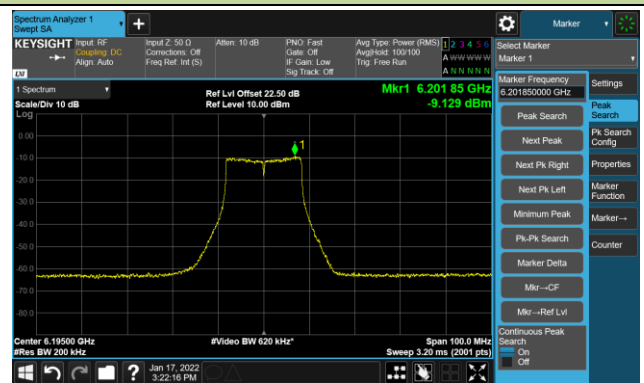


The Mask Data

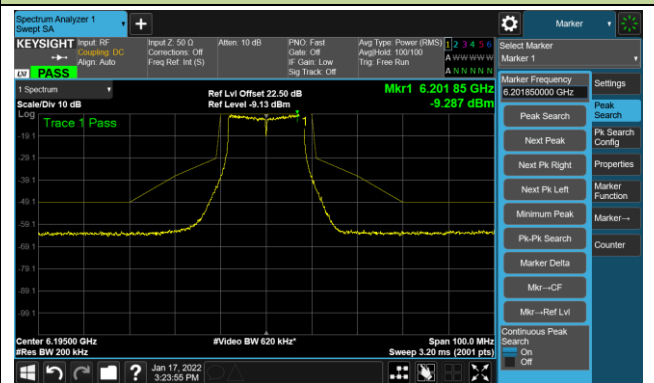 


Channel 93 (6415MHz)

 The Reference Level

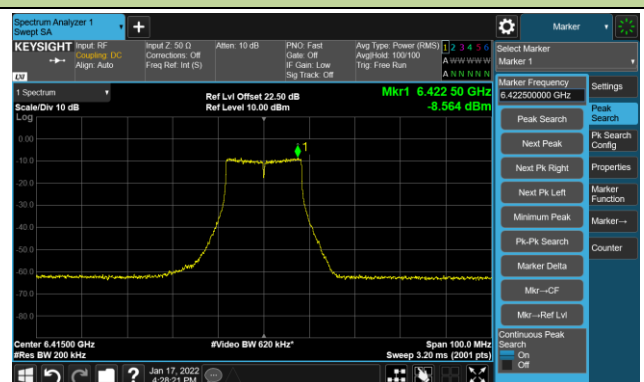


The Mask Data

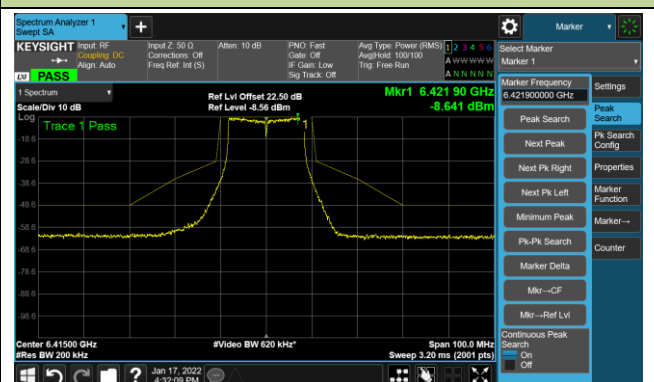 


802.11a - Ant 3

Channel 97 (6435MHz)

 The Reference Level

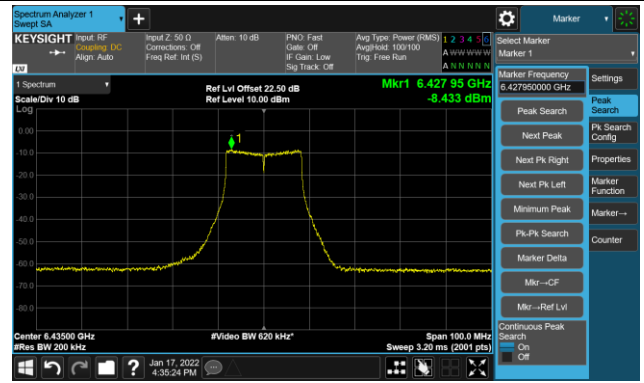


The Mask Data

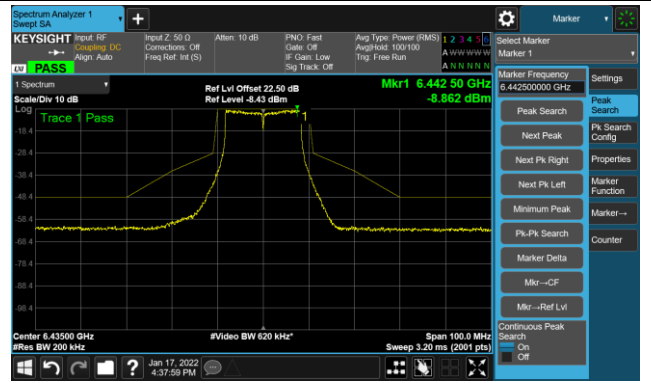 


Channel 105 (6475MHz)

 The Reference Level

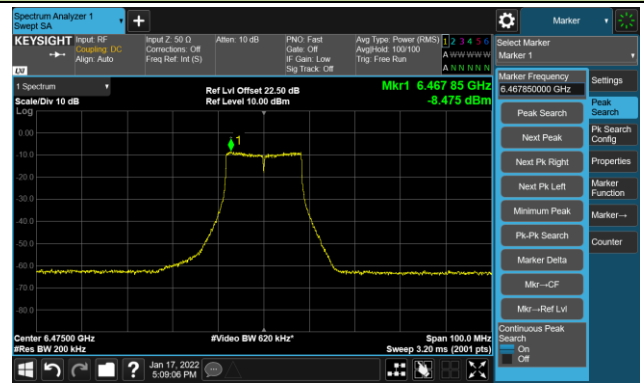


The Mask Data

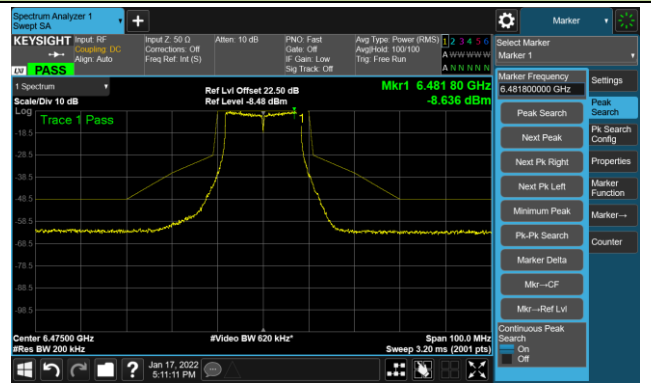 


Channel 113 (6515MHz)

 The Reference Level

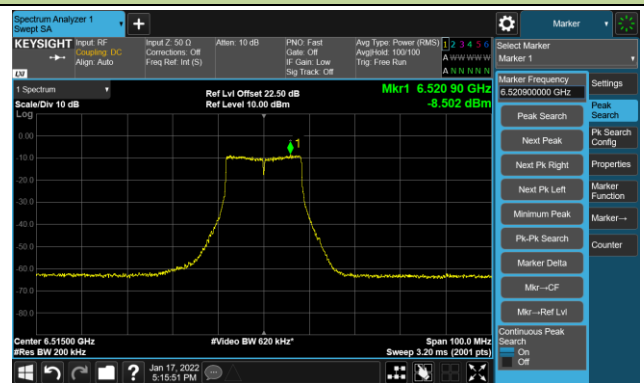


The Mask Data

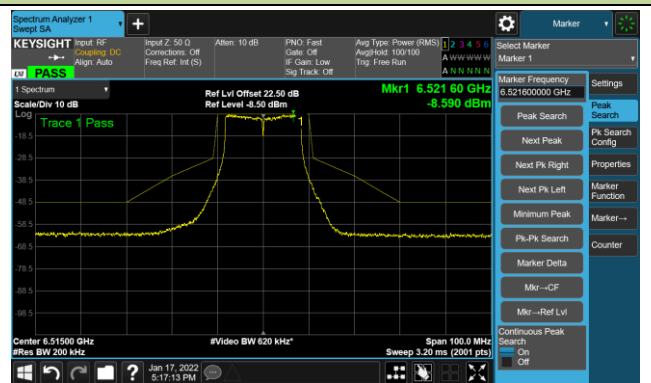 


802.11a - Ant 3

Channel 117 (6535MHz)

 The Reference Level

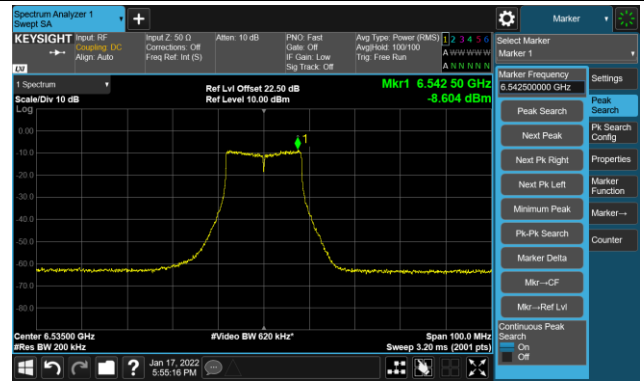


The Mask Data

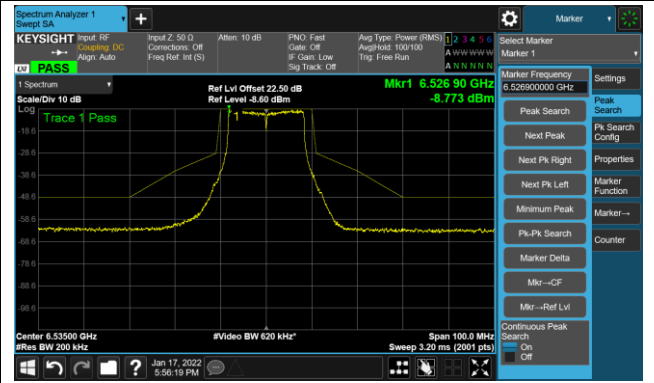 


Channel 153 (6715MHz)

 The Reference Level

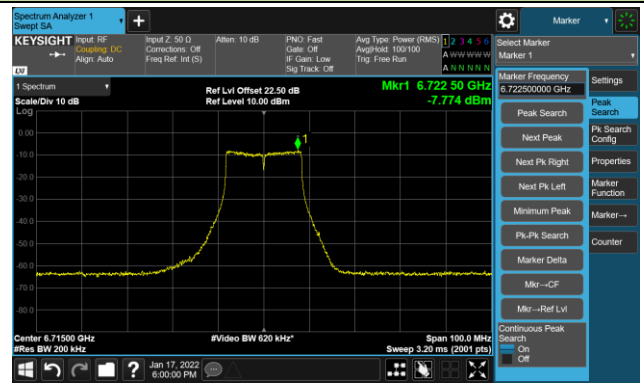


The Mask Data

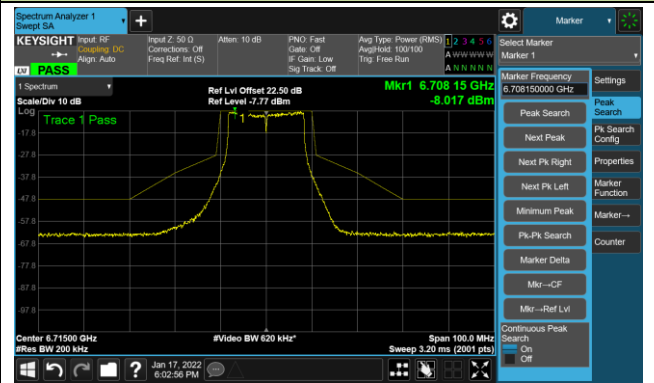 


Channel 181 (6855MHz)

 The Reference Level

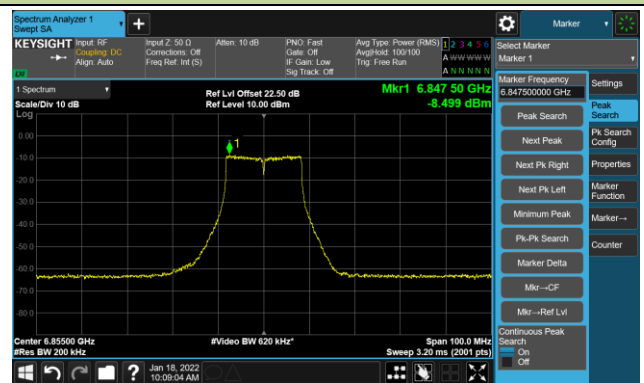


The Mask Data

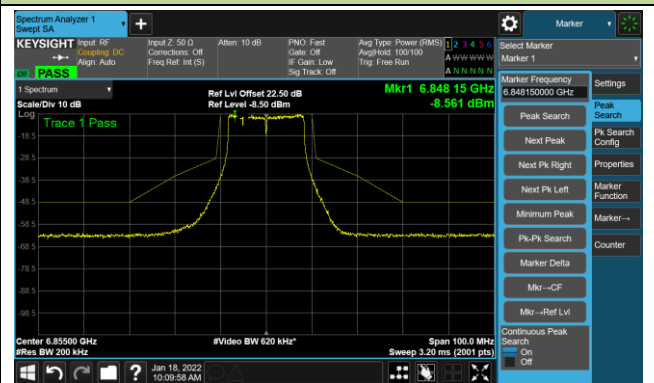 


802.11a - Ant 3

Channel 185 (6875MHz)

 The Reference Level

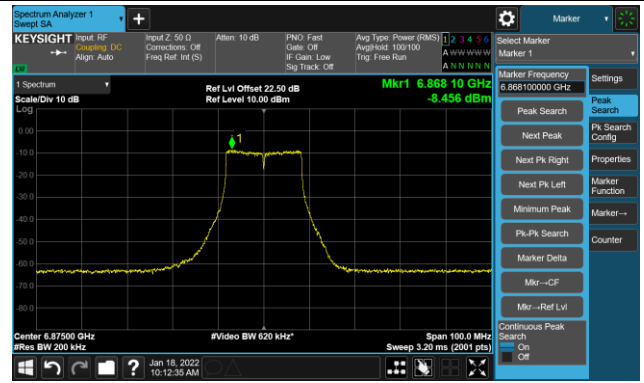


The Mask Data

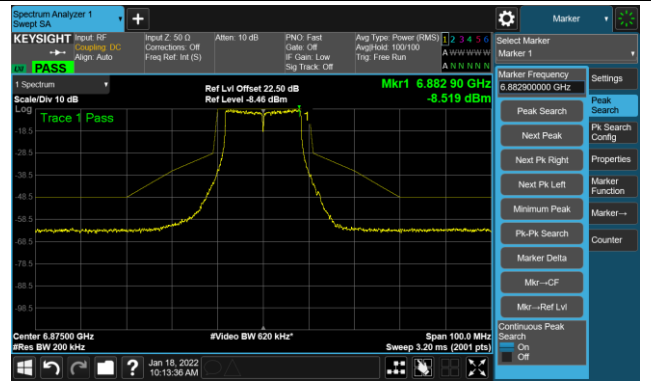 


Channel 189 (6895MHz)

 The Reference Level

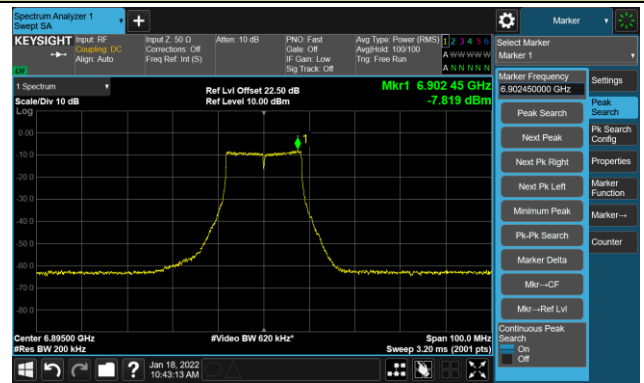


The Mask Data

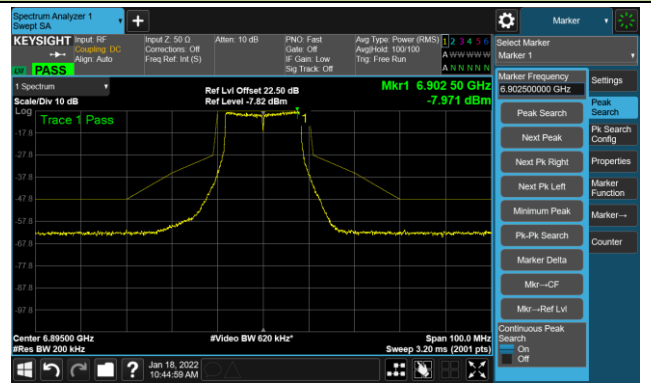 


Channel 213 (7015MHz)

 The Reference Level

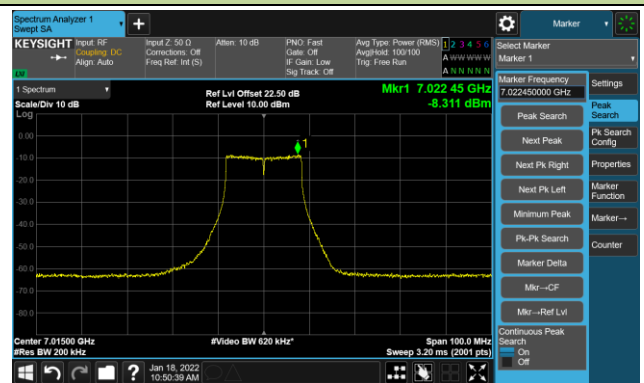


The Mask Data

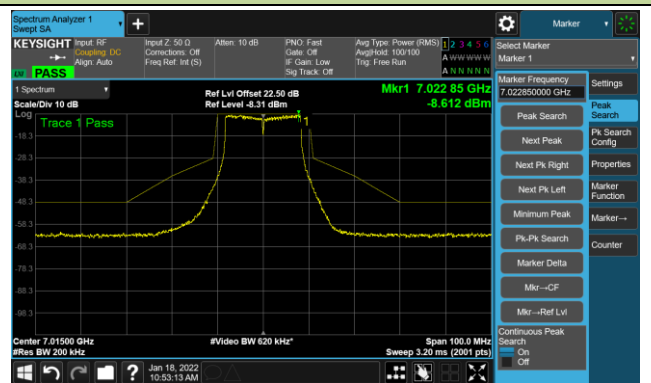 


802.11a - Ant 3

Channel 229 (7095MHz)

 The Reference Level

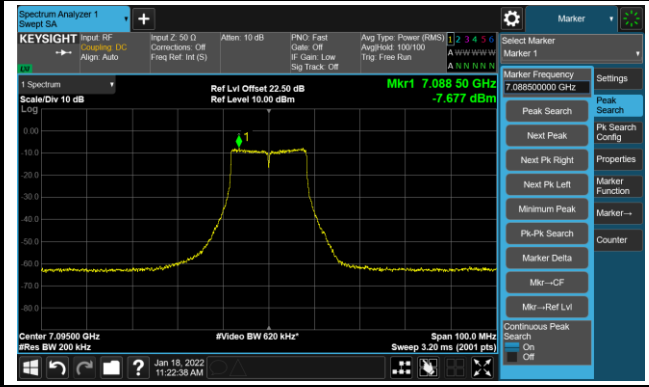


The Mask Data

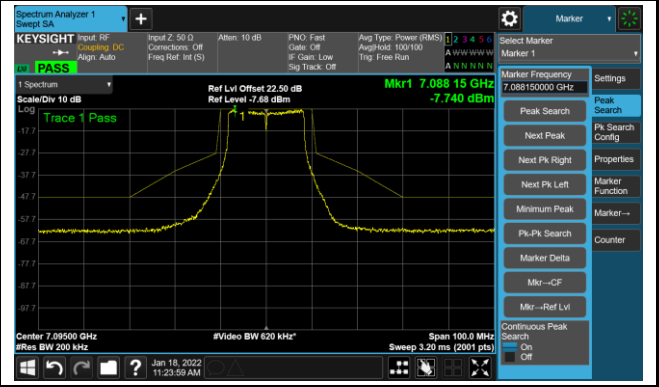 


802.11ax-HE20 - Ant 3

Channel 01 (5955MHz)

 The Reference Level

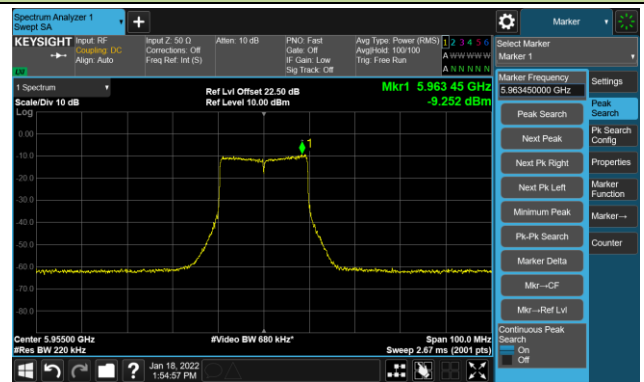


The Mask Data

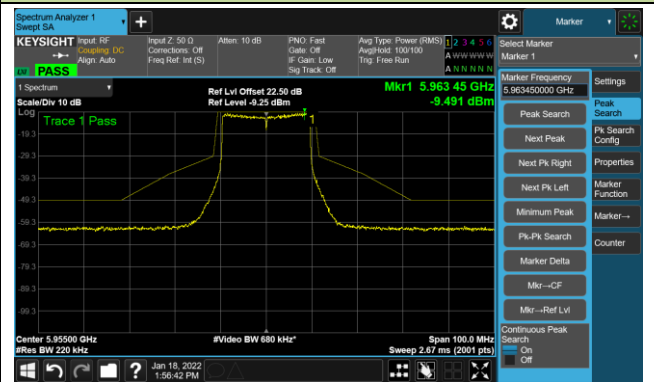 


Channel 49 (6195MHz)

 The Reference Level

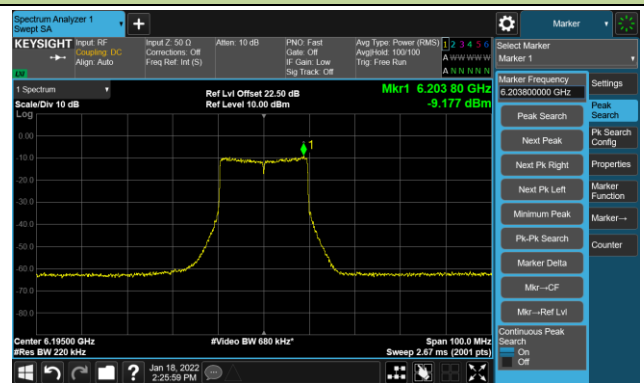


The Mask Data

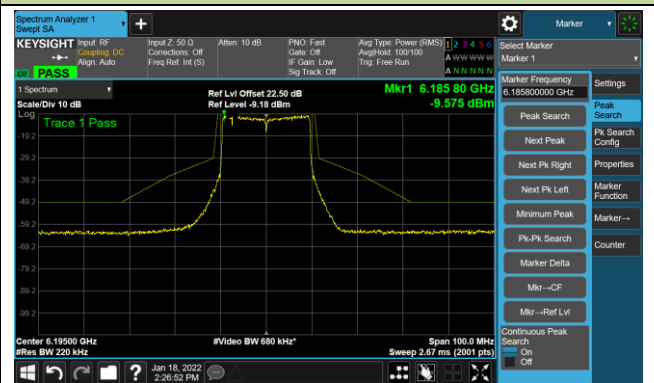 


Channel 93 (6415MHz)

 The Reference Level

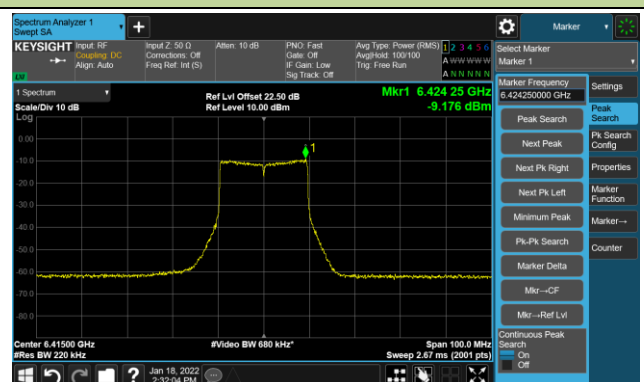

The Mask Data

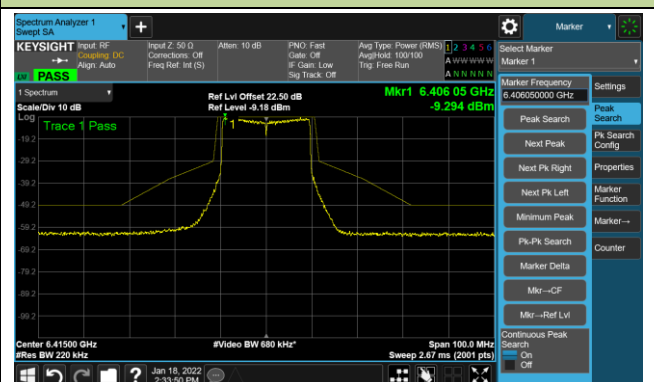 





802.11ax-HE20 - Ant 3

Channel 97 (6435MHz)

 The Reference Level

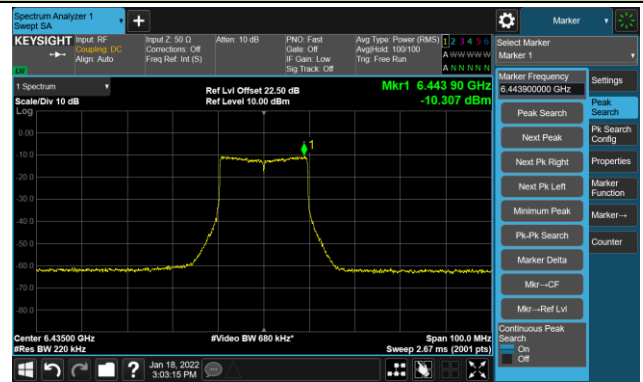


The Mask Data

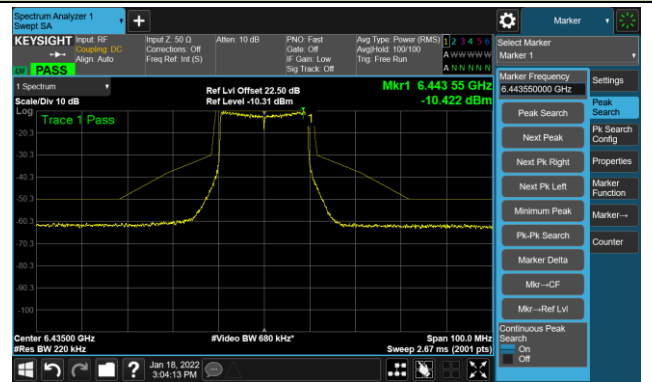 


Channel 105 (6475MHz)

 The Reference Level

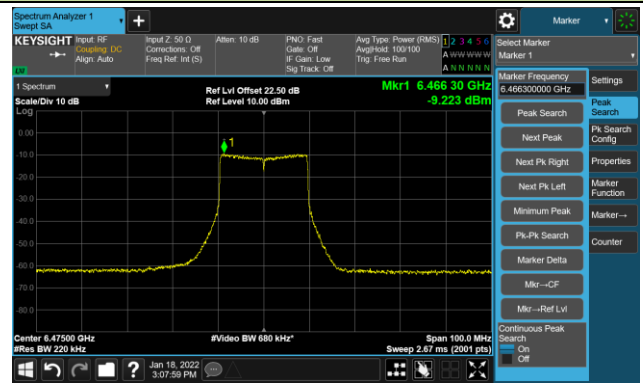


The Mask Data

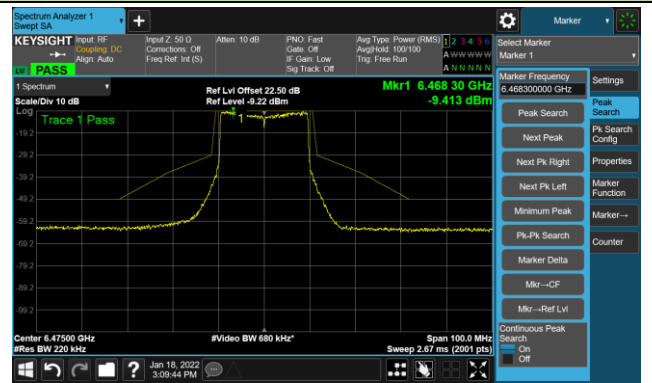 


Channel 113 (6515MHz)

 The Reference Level

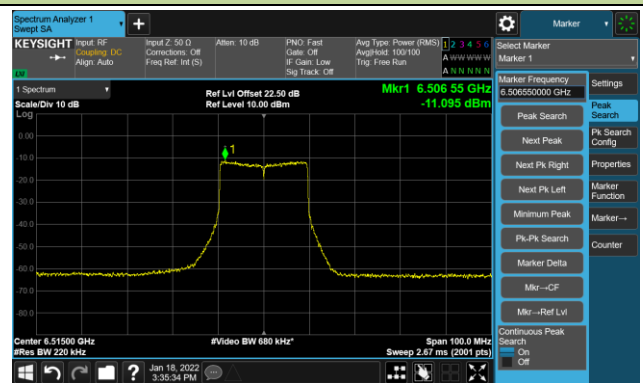


The Mask Data

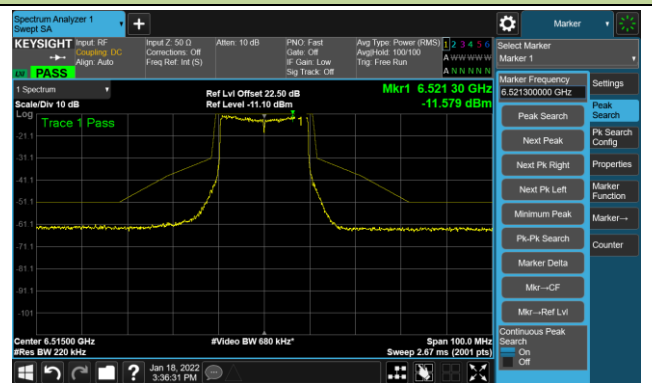 


802.11ax-HE20 - Ant 3

Channel 117 (6535MHz)

 The Reference Level

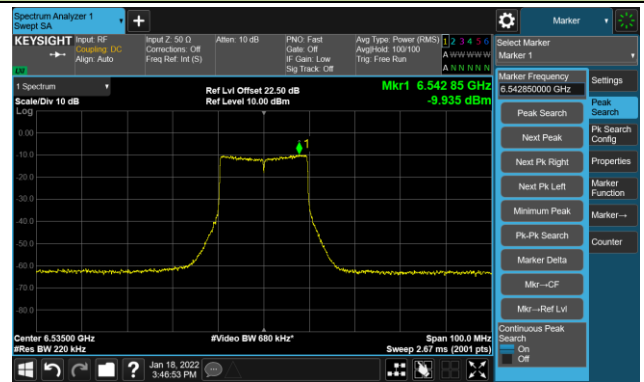


The Mask Data

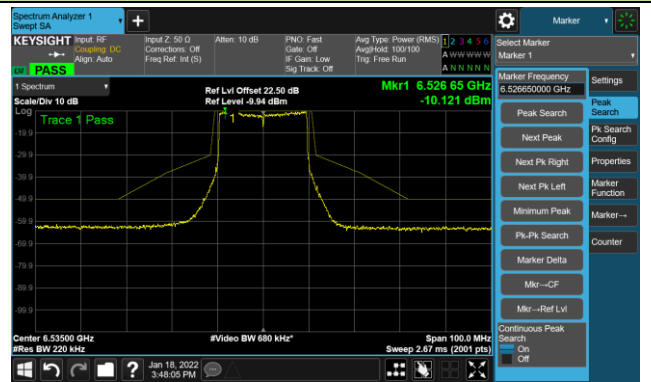 


Channel 153 (6715MHz)

 The Reference Level

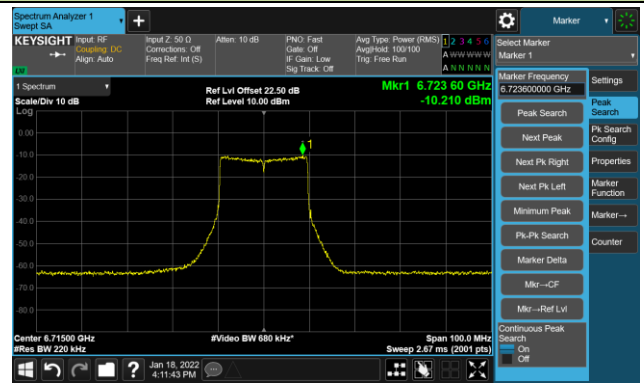


The Mask Data

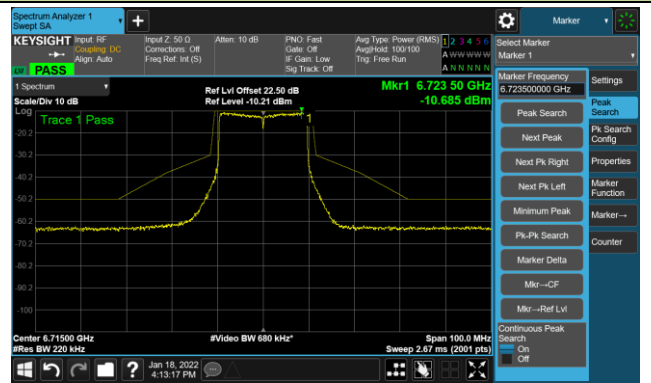 


Channel 181 (6855MHz)

 The Reference Level

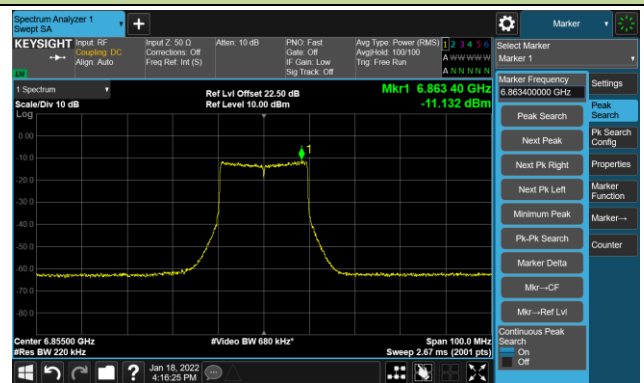


The Mask Data

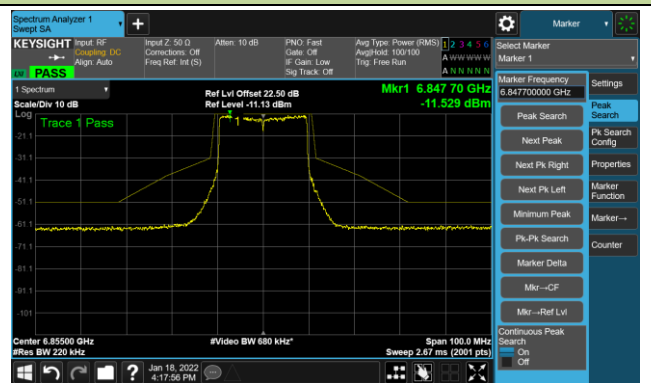 


802.11ax-HE20 - Ant 3

Channel 185 (6875MHz)

 The Reference Level

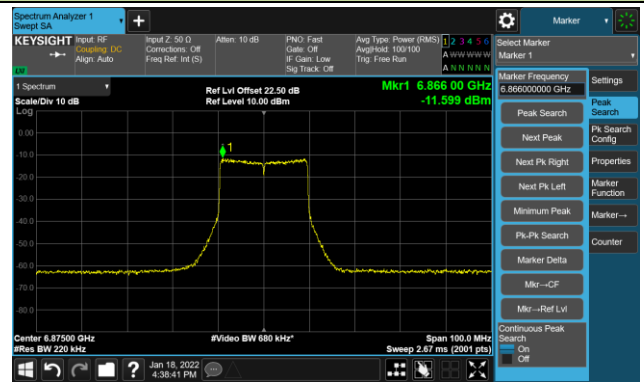


The Mask Data

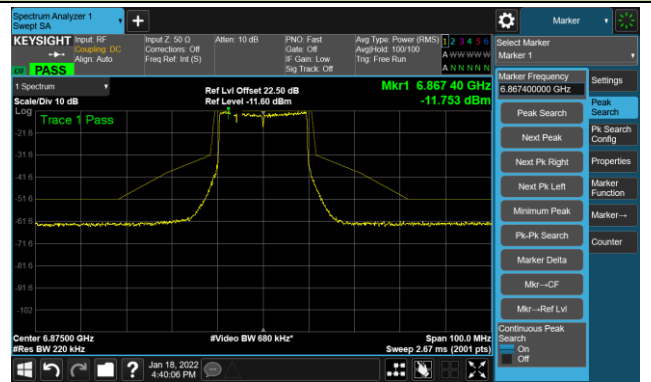 


Channel 189 (6895MHz)

 The Reference Level

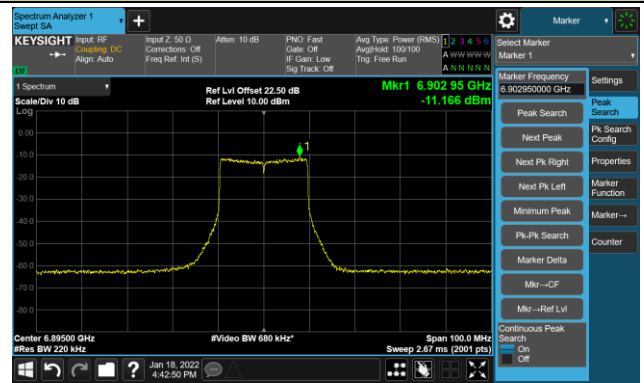


The Mask Data

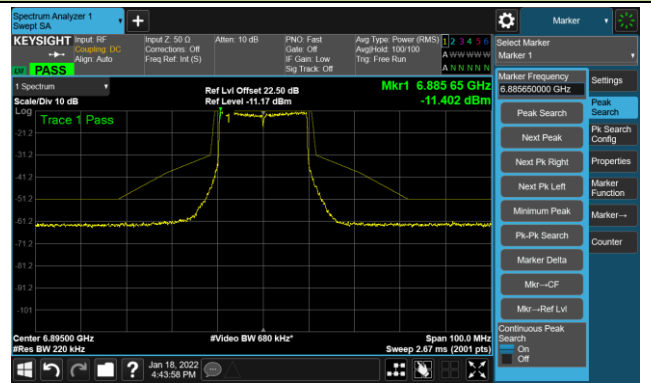 


Channel 213 (7015MHz)

 The Reference Level

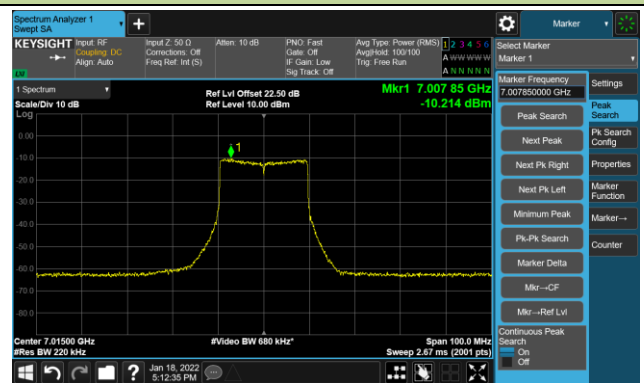


The Mask Data

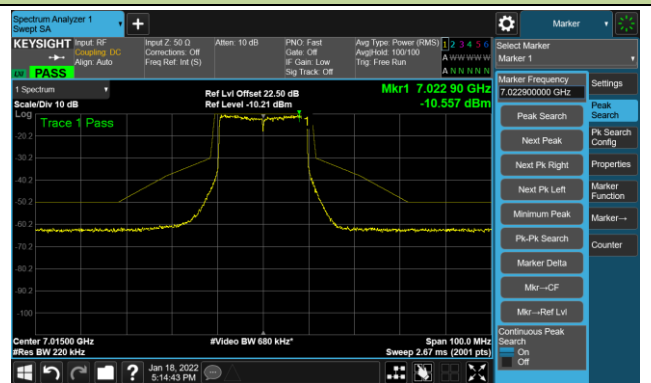 


802.11ax-HE20 - Ant 3

Channel 229 (7095MHz)

 The Reference Level

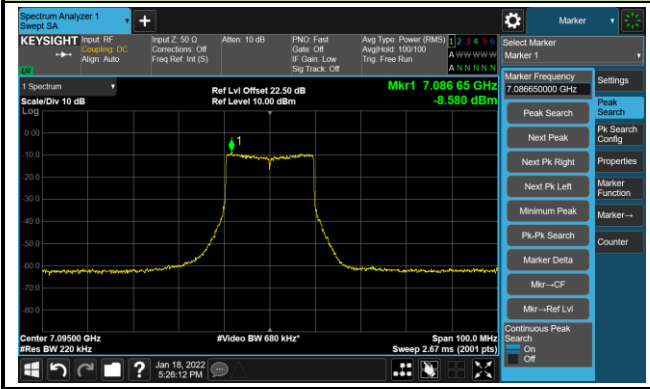


The Mask Data

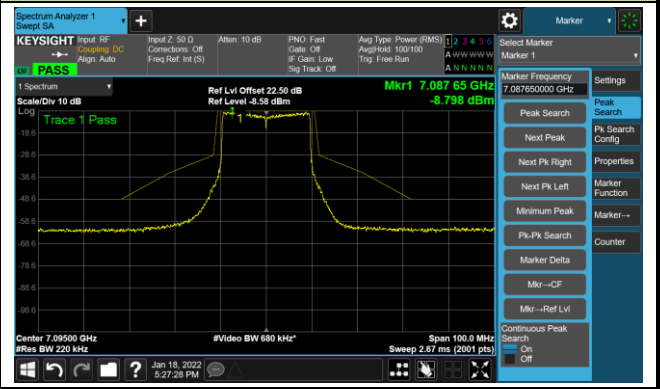 


802.11ax-HE40 - Ant 3

Channel 03 (5965MHz)

 The Reference Level

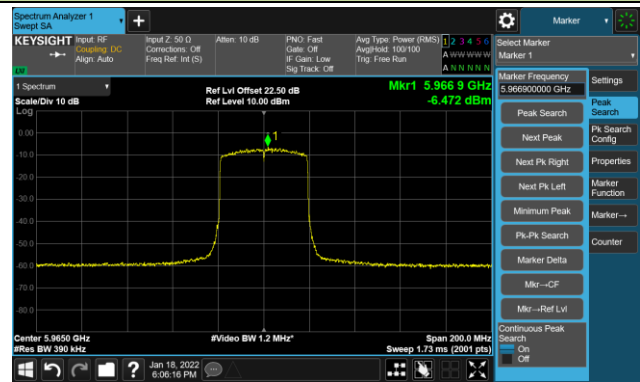


The Mask Data

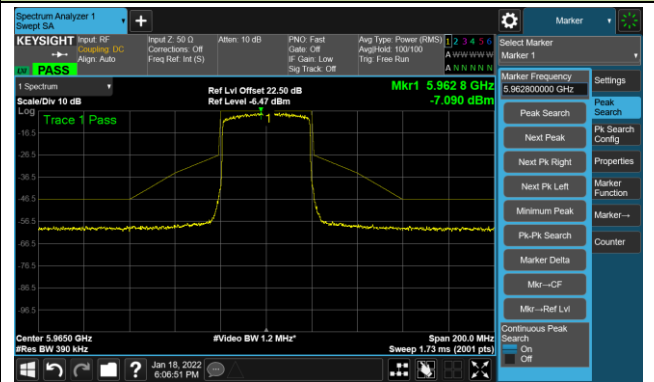 


Channel 51 (6205MHz)

 The Reference Level

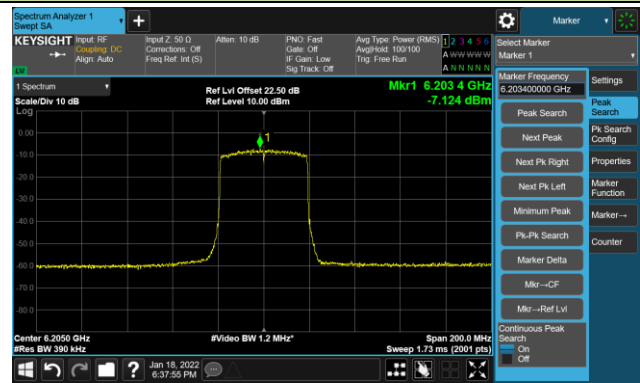


The Mask Data

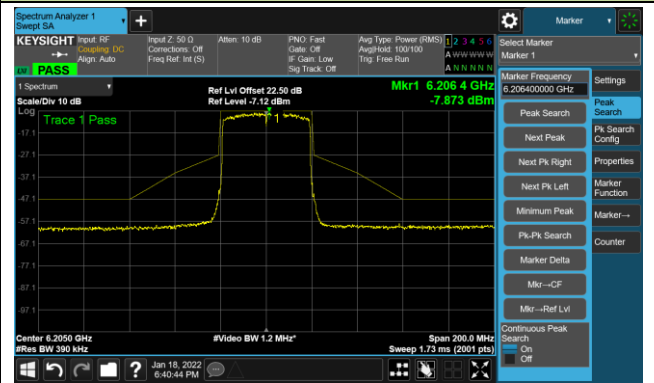 


Channel 91 (6405MHz)

 The Reference Level

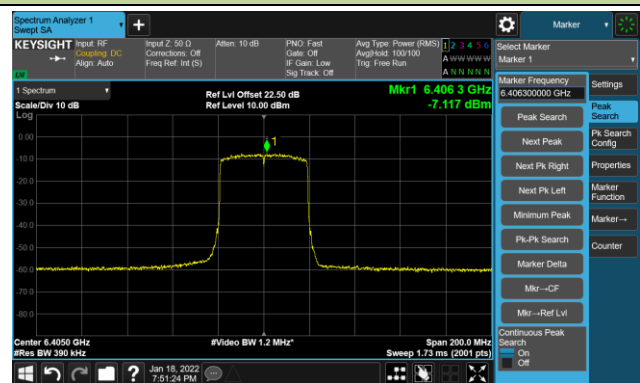


The Mask Data

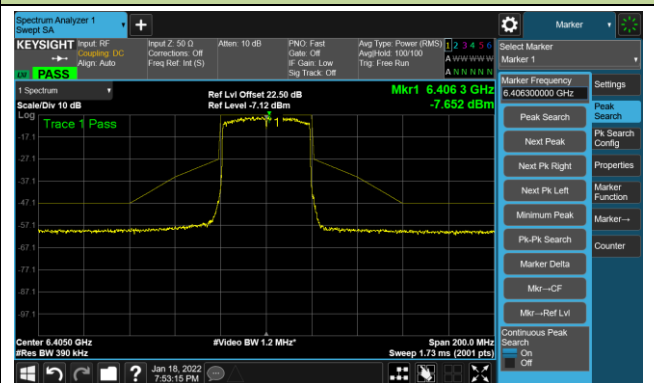 


802.11ax-HE40 - Ant 3

Channel 99 (6445MHz)

 The Reference Level

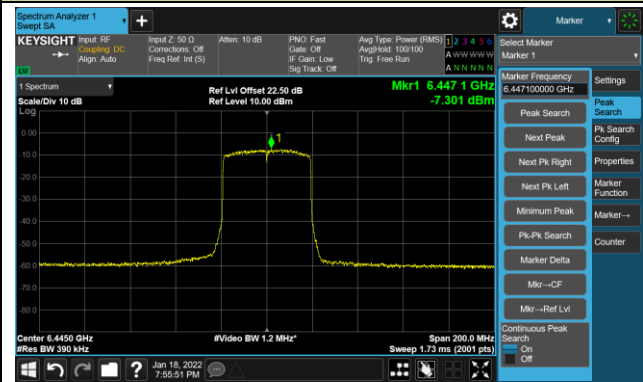


The Mask Data

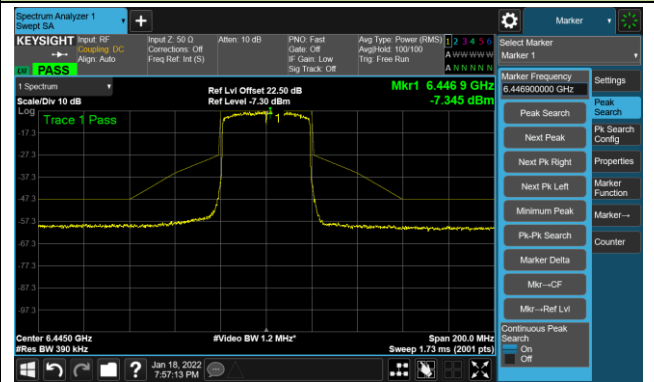 


Channel 107 (6485MHz)

 The Reference Level

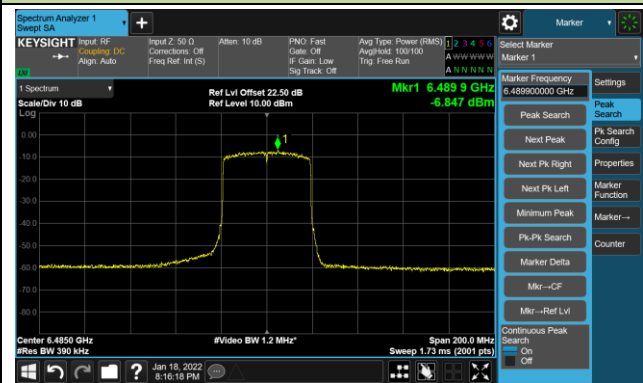


The Mask Data

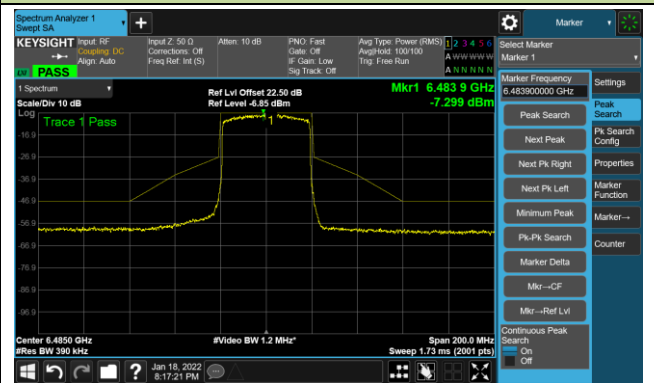 


Channel 115 (6525MHz)

 The Reference Level

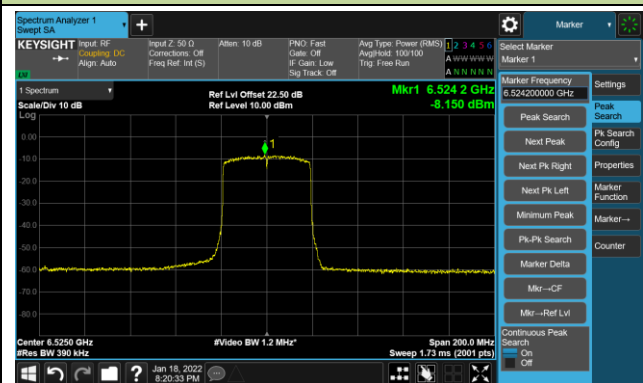


The Mask Data

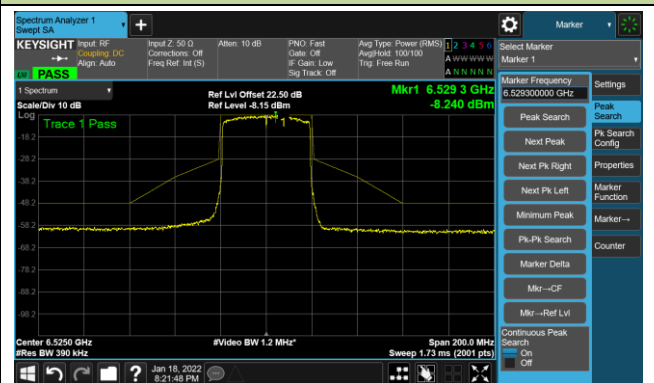 


802.11ax-HE40 - Ant 3

Channel 123 (6565MHz)

 The Reference Level

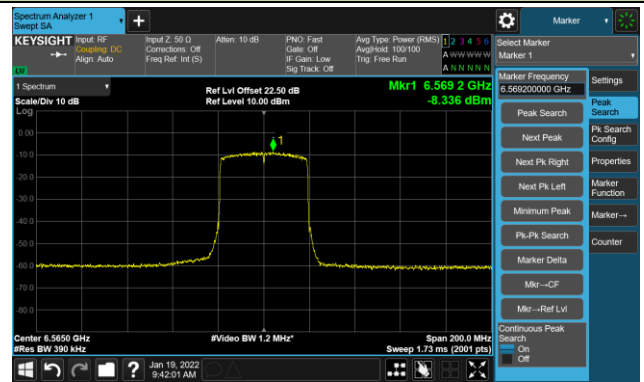


The Mask Data

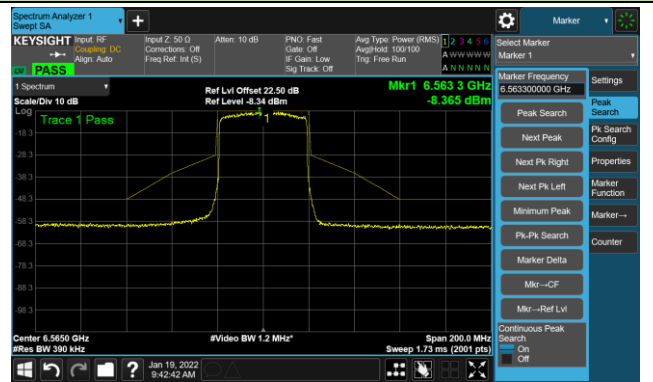 


Channel 147 (6685MHz)

 The Reference Level

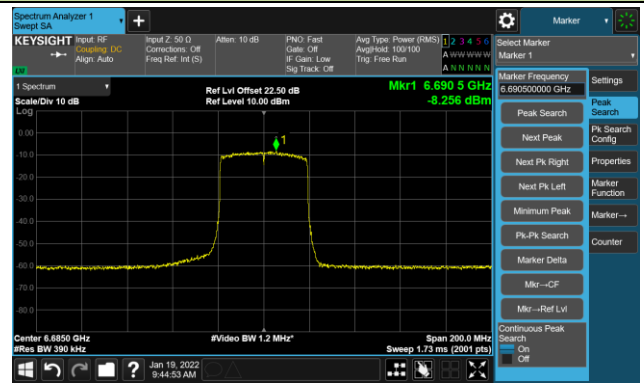


The Mask Data

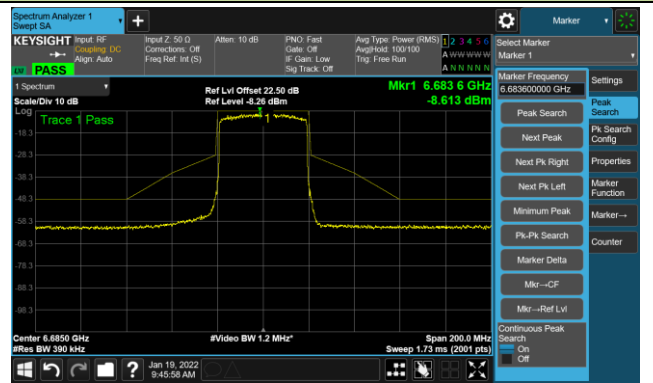 

Channel 179 (6845MHz)

 The Reference Level

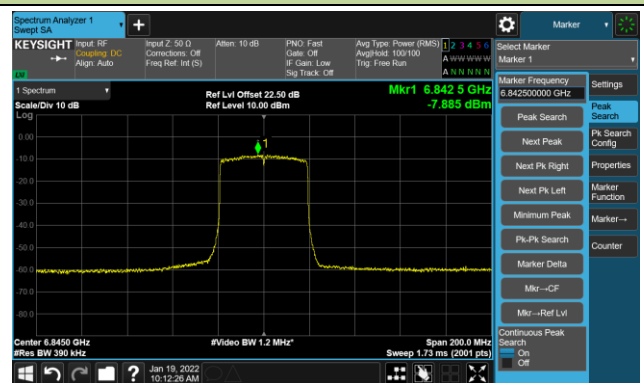

The Mask Data

