



QUICK START GUIDE

WELCOME TO THE WORLD OF FOOSBALL!



FOR MORE INFORMATION

WWW.NEWPOTATOTECH.COM

OR SEND US AN EMAIL AT

FOOSBALL@NEWPOTATOTECH.COM

One Year Limited Warranty. New Potato is committed to the quality of its products and great service to our customers. We provide the original purchaser of this product with an uncomplicated one year warranty. Using this product signifies your acceptance of the terms of this warranty, so please read our complete warranty details at www.newpotatotech.com/foosball/warranty before using this product.

©2012 New Potato Technologies, Inc. New Potato Technologies, Inc., New Potato, the New Potato logo, and Classic Match Foosball are trademarks of New Potato Technologies, Inc. All rights reserved. iPad is a trademark of Apple Inc., Registered in the U.S. and other countries.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





PACKAGE INCLUDES

8x FOOSBALL RODS

FOOS TABLE UNIT

4x TABLE LEGS

2x BUMPER PADS


For use with newer gen iPad

2x AAA BATTERIES



INSTALL TABLE LEGS

REMOVE LEGS FROM PACKAGING;
INSERT EACH LEG INTO MATCHING
HOLE ON THE BACK SIDE OF THE
FOOS TABLE UNTIL FLUSH.

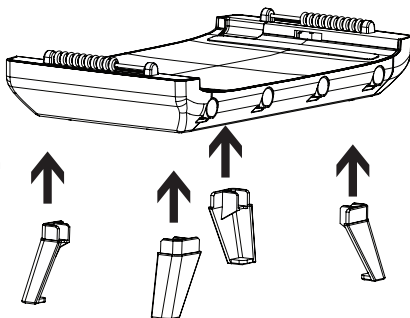





INSTALL FOOSBALL RODS

REMOVE THE FOOSBALL RODS FROM PACKAGING AND GENTLY INSERT EACH ROD INTO HOLES ON THE SIDES OF THE FOOS TABLE.

TIP:

 ALIGN THE SNAP FEATURE WITH THE GROOVE ON THE FOOS TABLE UNIT KEEPING THE ROD EXTENDED SLIGHTLY AND PUSHING THE PLASTIC SHELL GENTLY UNTIL IT SNAPS IN.

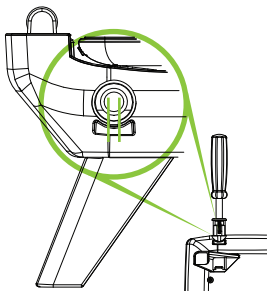

OPERATION

DOWNLOAD THE FREE APP!

CLICK ON THE APP TO BEGIN PLAY.

TO CONNECT:


SIMPLY LAUNCH THE APP, AND IT WILL FIND YOUR FOOS TABLE AND CONNECT AUTOMATICALLY. NO NEED TO PAIR!

TIP:

SYNC THE FOOSBALL RODS BY MOVING EACH ONE ALL THE WAY IN AND OUT, THEN TAP THE BOUNCING ICON OR THE FOOSBALLS TO SERVE!



Available on the
App Store

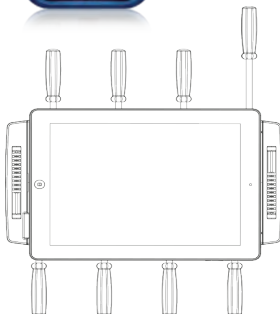




OTHER FEATURES


CLASSIC MATCH FOOSBALL IS A WIRELESS DEVICE FOR YOUR iPad!

REMOVE BATTERY BOX COVER (SLIDE OFF,) INSTALL TWO (2x) AAA BATTERIES (INCLUDED) INTO BATTERY BOX, SLIDE COVER BACK INTO PLACE.

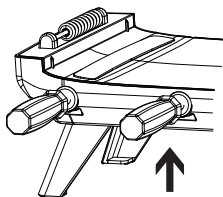


NEWER GENERATION iPad USERS

FOR RIGOROUS PLAY, ATTACH BUMPER PADS:
PEEL OFF THE BACKING OF THE BUMPER PADS
AND APPLY THEM TO TOP OF TABLE TO KEEP
iPad SNUG AND SECURE DURING
EVEN THE WILDEST MOMENTS!

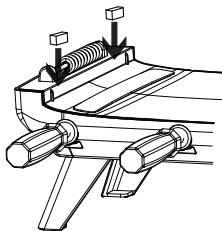

DISASSEMBLY

YOUR FOOSBALL TABLE CAN BE DISASSEMBLED FOR STORAGE OR TRAVEL!

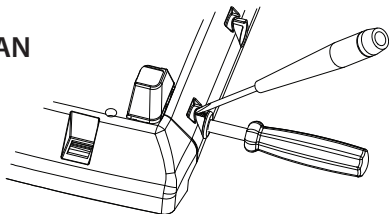

TIP:

TO UNLOCK FOOSBALL RODS PLACE
A FLATHEAD SCREWDRIVER AGAINST
THE RELEASE POINT. APPLY PRESSURE
AND PULL THE FOOSBALL ROD OUT.

