

# TANDY®

## WIRELESS KEYBOARD



2604586  
User's Guide

We hope you enjoy your Tandy Wireless Keyboard. Please read this user's guide before using your new keyboard.

### Package Contents

- Wireless Keyboard
- USB Nano Receiver
- User's Guide

### Specifications

System Requirements ..... Windows® 10, Windows 8, Windows 7  
Power ..... 2 × AAA Batteries  
USB ..... 2.0 Version  
Operation Distance ..... Up to 32.8ft (10m)  
Frequency ..... 2.4 GHz

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

### Setup

1. Install two AAA alkaline batteries (not supplied), matching the polarity symbols (+ and -) marked inside.
2. Plug the receiver into your computer's USB port.



### Notes

- Operate the keyboard within 32.8ft (10m) of the receiver.
- Your keyboard enters power saving mode when it is idle for 5 minutes. Press any key to activate the keyboard.



2

### Multimedia Hot Keys

Press **Fn** and the hot key at the same time to access each function.

#### Media Controls

- 🎵 - Open media player
- 🔊 - Volume down
- 🔊+ - Volume up
- 🔊x - Mute

#### LED Indicators

- 1 - Lights when Num lock is on
- A - Lights when Caps lock is on
- 🔋 - Lights when battery is low



#### Music Controls

- ⏮ - Previous track
- ⏭ - Next track
- ⏸ - Play/Pause
- - Stop

#### Internet Controls

- 🌐 - Web browser
- ✉ - E-mail
- 💻 - My Computer
- ★ - My Favorites in Internet Explorer

- 🧮 - Calculator

3

### Battery Notes:

- Replace the batteries when the low battery indicator lights.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the keyboard for some time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

### Pairing

If your keyboard is not working properly, try pairing to the receiver again.

1. Unplug and plug the receiver.
2. Move your keyboard within 30cm of the receiver. Press **Esc** and **K** to start pairing. It takes approximately 4 to 8 seconds to pair.

### Care and Service

- Handle the keyboard carefully; do not drop it.
- Do not modify or tamper with your keyboard's internal components. It may cause a malfunction and invalidate the warranty.
- Use and store the keyboard only in room-temperature environments.
- Keep the keyboard dry; if it gets wet, wipe it dry immediately.
- Avoid dust and dirt. To clean your keyboard, wipe with a damp cloth occasionally.

4

### FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product	Wireless Keyboard
Model	2604586
Responsible Party	General Wireless Operations Inc. dba RadioShack 300 RadioShack Circle Fort Worth, TX 76102 817-415-3200

5

### 1-Year Limited Warranty

Go to [www.radioshack.com/help](http://www.radioshack.com/help) for details.  
RadioShack Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76104

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

**RoHS** Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.  
[www.radioshack.com](http://www.radioshack.com)

© 2016 General Wireless Operations Inc. All rights reserved. Tandy is a registered trademark used under license by General Wireless Operations Inc. dba RadioShack.



04A16  
2604586  
Printed  
in China

6