

1

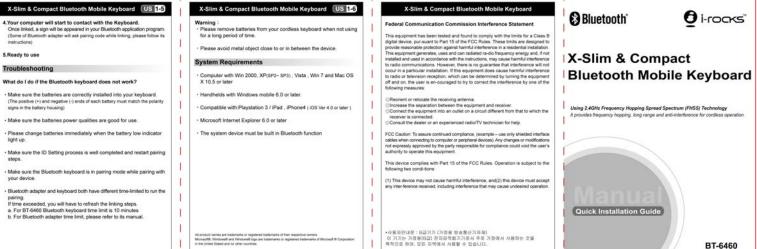

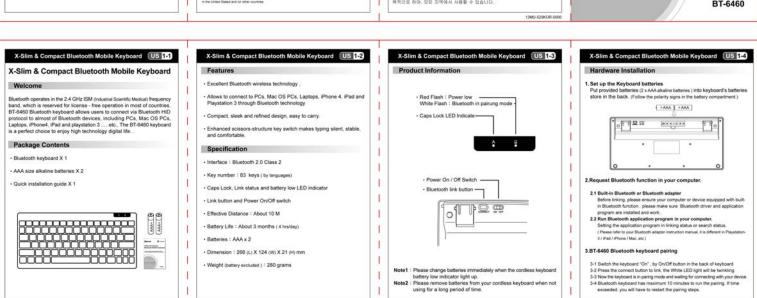

1

Note1 : Please change batteries immediately when the cordless keyboard battery low indicator light up.

Note2 : Please remove batteries from your cordless keyboard when not using for a long period of time.

١

正面