

TANDY

WIRELESS KEYBOARD AND MOUSE COMBO



2604602
User's Guide

We hope you enjoy your Tandy Wireless Keyboard and Mouse Combo. Please read this user's guide before using your new keyboard and mouse.

Package Contents

- Wireless Mouse
- Wireless Keyboard
- USB Nano Receiver
- User's Guide

Specifications

System Requirements Windows® 10, Windows 8, Windows 7
 USB 2.0 Version
 Operation Distance Up to 32.8ft (10m)
 Frequency 2.4 GHz
 Power Mouse: 2 x AAA Batteries
 Keyboard: 2 x AAA Batteries
 Mouse Resolution 800 / 1200 / 1600 dpi
 Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

2

Setup

1. Install two AAA alkaline batteries (not supplied), matching the polarity symbols (+ and -) marked inside the keyboard and mouse.



2. Remove the receiver from the bottom of the mouse.



4. Turn on your mouse.
5. Press **DPI** repeatedly to select 800, 1200 or 1600 dpi. The LED indicator flashes once for 800, twice for 1200 and three times for 1600.



3

Battery Notes:

- When the low battery indicator lights on your mouse or keyboard, replace the batteries.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh battery of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the keyboard or mouse for some time, remove the battery. Batteries can leak chemicals that can damage electronic parts.



Low Battery and DPI Indicator
 Lights when battery is low
 Flashes once - 800 dpi, twice - 1200 dpi, three times - 1600 dpi

4

Multimedia Hot Keys

- ◀ - Previous track
- ▶ - Next track
- ⏸ - Play/Pause
- - Stop
- 🔊 - Volume down
- 🔊+ - Volume up
- 🌐 - Web browser
- ✉ - E-mail
- 🔍 - Search



LED Indicators

- 🔋 - Battery low
- Ⓐ - Lights when Caps lock is on
- 1 - Lights when Num lock is on
- ★ - My Favorites in Internet Explorer
- 🎵 - Media player
- 💻 - My Computer
- 🧮 - Calculator

Notes

- Operate the keyboard and mouse within 32.8ft (10m) of the receiver.
- Your keyboard will enter power saving mode when it is idle for 5 minutes. Press any key to activate the keyboard.
- Place the receiver into the mouse's receiver slot when not in use.
- Turn off the mouse to conserve battery life.

5

- See your operating system's online help for additional mouse configuration information.

Pairing

If your mouse or keyboard is not working properly, pair them to the receiver again.

1. Turn off your mouse. Unplug and plug the receiver into the USB port.
2. **On your mouse:** Turn on your mouse then press and hold down the scroll wheel and the right button for about 5 seconds.
3. **On your keyboard:** Press and hold **Esc** and **K** for about 5 seconds.

Care and Service

- Glass, black velvet, or mirrored surfaces can disrupt the optical sensor on your mouse.
- Handle the keyboard and mouse carefully; do not drop it.
- Do not modify or tamper with your keyboard and mouse's internal components. It may cause a malfunction and invalidate the warranty.
- Use and store the mouse only in room-temperature environments.
- Keep the keyboard and mouse dry; if it gets wet, wipe it dry immediately.
- Avoid dust and dirt. To clean your keyboard and mouse, wipe with a damp cloth occasionally.

6

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product	Wireless Keyboard and Mouse Combo
Model	2604602
Responsible Party	General Wireless Operations Inc. dba RadioShack 300 RadioShack Circle Fort Worth, TX 76102 817-415-3200

7

1-Year Limited Warranty

Go to www.radioshack.com/help for details.
 RadioShack Customer Relations
 300 RadioShack Circle, Fort Worth, TX 76102

RoHS Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

www.radioshack.com

© 2016 General Wireless Operations Inc.
 All rights reserved. Tandy is a registered trademark used under license by General Wireless Operations Inc. dba RadioShack.

8



04A16
 2604602
 Printed in China