

Operation Description

1. Link the portable DVD to the input terminal of EUT.
2. Connect the RF output terminal of EUT to the spectrum analyzer or put the EUT into the semi-anechoic chamber according to the test item.
3. Turn on the EUT.
4. Make the DVD generate 1kHz audio signal.
5. Set the lowest channel of EUT according to the test requirements.
6. Test as the standard needs.
7. Repeat above test at middle channel and highest channel.
8. Test complete.
9. Turn off the EUT.