

THANK YOU FOR CHOOSING LENNTEK

Lenntek is here to HELP You		
If you have any problems with this product, please contact one of the following.		
	U.S.A/CANADA	Other Countries
Customer Support	Lenntek	Please contact the Store/Dealer where purchased.
Service location for product repair	Lenntek	
URL	http://www.lenntek.com	http://www.lenntek.com
If for any reason this product is to be returned to the store where purchased, it MUST be placed in the original carton/package.		
US residents may register their product online at www.lenntek.com/support .		

WARRANTY CARD
MODEL _____
DATE OF PURCHASE _____
CUSTOMER'S NAME _____
OFFICIAL DEALER STAMP
LENNTEK 1610 Lockness Place, Torrance, CA 90501



lenntek

hookup[®]
lanyard

*listen to your iPod[®]
answer your calls*

User's Guide

Table of Contents

1.	Introduction	2
2.	Attaching your Hookup Lanyard	3
3.	Listening to your music	4
3.	Adjusting the volume	4
4.	Pairing with your mobile phone	5
5.	Receiving mobile phone calls	6
6.	Dialing your last outgoing number	7
7.	Detaching your Hookup Lanyard	7
8.	Resetting your iPod	7
9.	Troubleshooting	8
10.	Warranty Coverage	10

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.



FCC ID: UJC9020101

Assembled in Taiwan

Warranty

THIS WARRANTY IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.

This product, except the case and battery, is warranted by Lenitek and its distributors to the original purchaser to be free from defects in material and workmanship under normal use for a period of one year from the date of purchase. During the warranty period, and upon proof of purchase, the product will be repaired using Lenitek reconditioned/replacement parts or the product will be replaced with the same or a similar reconditioned/replacement model at Lenitek's discretion. To obtain warranty service, please take or send the product postage paid, with a copy of your sales receipt or other proof of purchase that shows the date of purchase, to a Service location listed in the "Lenitek is here to HELP you" page. There will be no parts or labor charge to you. Due to the possibility of damage or loss during shipping, it is recommended when sending the product for service that you package the product securely and send it insured, return receipt requested.

The customer shall NOT have any claim under the warranty to repair or adjustment expenses if:

- 1) The problem is caused by improper, rough or careless treatment.
- 2) The problem is caused by a fire or other natural calamity.
- 3) The problem is caused by improper repair or adjustment made by anyone other than a Lenitek service center.
- 4) The problem is caused by battery leakage, bending of the unit, broken display or key.
- 5) The case or battery is damaged or worn.
- 6) Maintenance requested consists of repair or replacement of options, accessories, or consumables.
- 7) The proof of purchase is not presented when requesting service.
- 8) The warranty period has expired.

NEITHER THIS WARRANTY NOR ANY OTHER WARRANTY OR GUARANTEE, EXPRESS OR IMPLIED STATUTORY OR OTHERWISE, INCLUDING ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXTEND BEYOND THE WARRANTY PERIOD. NO RESPONSIBILITY IS ASSUMED FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION DAMAGES RESULTING FROM INACCURACY OR MATHEMATICAL INACCURACY OF THE PRODUCT OR LOSS OF STORED DATA. SOME STATES OR JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR THE EXCLUSION OR LIMITATION BY A PARTY OF LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY THAT PARTY'S NEGLIGENCE. SO THE ABOVE LIMITATIONS OR EXCLUSIONS SHALL NOT IN SUCH CASES APPLY. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE, JURISDICTION TO JURISDICTION, OR COUNTRY TO COUNTRY. NOTHING IN THIS WARRANTY AFFECTS YOUR STATUTORY RIGHTS.

Trouble Shooting

Q: Which mobile handsets will work with my hookup?

A: *hookup Lanyard* supports standard Bluetooth Handsfree and Headset profiles. Most mobile phones with Bluetooth supports either or both of these profiles. But there are specific cases of phones that will not operate. Please check our website (www.Lenntek.com) for more details about your specific phone issues.

Introduction


Congratulations on purchasing your new Lenntek™ *hookup*™ Lanyard, featuring high quality audio and Bluetooth technology. The convenience of listening to music and receiving mobile phone calls all within the same device.

Lenntek Hookup is a unique system that offers comfort and versatility for use with your iPod nano and Bluetooth-enabled mobile phone. Just plug the Hookup Lanyard into your iPod nano's dock connector, pair your Bluetooth-enabled phone with the Hookup, and you're all set for your mobile life while the Hookup Lanyard's built-in Bluetooth receiver monitors your cell phone. Hookup is a "made for iPod" cultural accessory that gives you the freedom to work and play seamlessly.

Copyright 2007 Lenntek Corporation, All rights reserved.
iPod is a registered trademark of Apple Computer, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners.

Attaching your Hookup Lanyard

To attach your Hookup Lanyard to your iPod nano, line up the dock connectors as shown in the diagram and plug in.

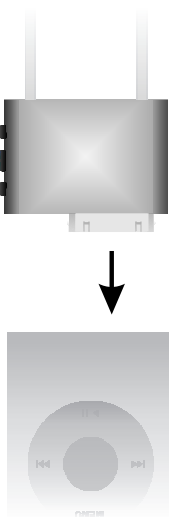

Trouble Shooting

Q: Why can't I adjust the volume using my Nano?

A: The Nano transmits music through the dock connector at a set volume. To adjust the volume, you need to use the *hookup Lanyard's* volume controls.

Q: Why does the backlight on my Nano turn on every minute?

A: The backlight on your Nano turns on whenever the *hookup Lanyard* communicates with the Nano in order to prevent your Nano from going into sleep mode. We suggest you turn the backlight function off in order to save battery power while using *hookup Lanyard*.

Q: Why can't I hear the ring tone when a call comes in?

A: Make sure your Bluetooth phone has the ring alarm function enabled and that your phone is paired correctly with *hookup Lanyard*.

Q: Why can't I hear or answer my phone calls through my earphones?

A: Make sure your mobile phone has Bluetooth and that the Bluetooth functionality is turned on. Then verify that your mobile phone is correctly paired with your *hookup Lanyard*.

Q: Why does my music stop after I hang up a call?

A: You may be accidentally dialing the last number called. This can happen when you long-press the middle button to hang up your call; but, the other side has already hung up before you.

Dialing your last outgoing number

To dial the last number you called, press and hold the Hookup Lanyard's blue indicator light button until you hear a beep.

Detaching your Hookup Lanyard

To detach your Hookup Lanyard, grasp the Hookup Lanyard's connector firmly and pull directly away from your iPod nano.

Resetting your iPod

In some instances, you may need to first reset your iPod. To reset your iPod, toggle the Hold switch on and off (slide it to hold, then off hold again). Press and hold the Menu and Select buttons on the iPod until the Apple logo appears, about 6 to 10 seconds. This step may need to be repeated.


If you are having trouble with resetting your iPod, please refer to your iPod manual for further instructions.

Listening to your music

To listen to your iPod nano, press the play/pause button on your iPod to unpause and power up your Hookup Lanyard to begin playing music. You will see the blue indicator light slowly blink as the Hookup streams music.

Adjusting the volume

To control the volume, press the triangular buttons on the side of your Hookup Lanyard.

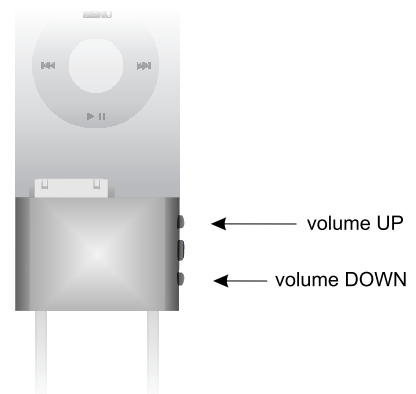

Pairing with your mobile phone

Note: For help activating your mobile phone's Bluetooth functions, please refer to your phone's manual.


To pair your Hookup Lanyard with your mobile phone:

1. Check that:

- your Hookup Lanyard is attached securely
- the Hookup Lanyard's blue indicator light is slowly blinking
- you can hear music through the headphones

2. Press and hold the Hookup Lanyard's blue indicator light button until you hear a beep. You will see the blue indicator light blinking rapidly to show you are currently in Bluetooth pairing mode.

Press and hold the blue indicator light button

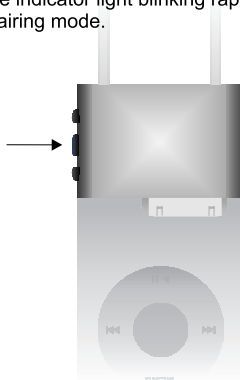

Pairing with your mobile phone

3. Set your mobile phone to search for nearby Bluetooth devices.

4. Your phone will discover a new device named *Hookup Lanyard*.

5. Select your Hookup Lanyard from the list of devices and confirm that you want to pair with it.

6. Enter the code "0000" when prompted for a pin code.

7. If your phone has not automatically established a Bluetooth connection with your Hookup, connect manually from your phone's list of devices and set your Hookup Lanyard as the preferred handsfree device (or headset device if handsfree is not available) for your mobile phone.

Receiving phone calls

When you receive a phone call, you will hear a ring tone interrupting your music.

To answer your call, press and release either of the three buttons on your Hookup Lanyard.

To reject your call, press and hold the blue indicator light button on your Hookup Lanyard until your Hookup returns to playing music.